

INSTALLATION

 
Product Manual

Version: 150323US-01-26A-XD




IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

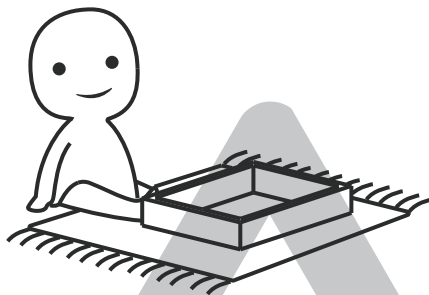



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

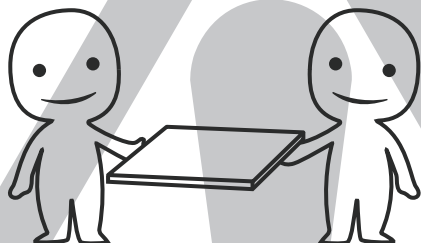

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

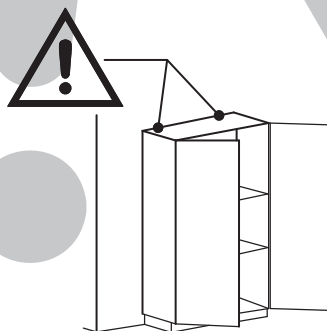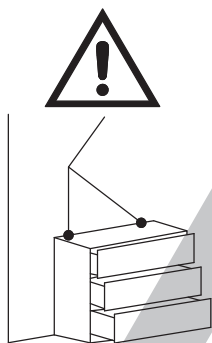

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !





It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

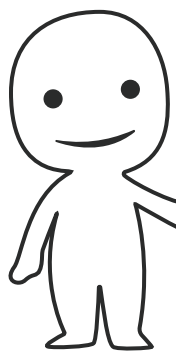


Please prepare the following tools

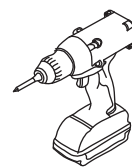    

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 83+4 Ø 6 x 35 mm	B x 83+4 Ø 15 x 10 mm	C x 52+4 Ø 6 x 30 mm	D x 38+4 Ø 4 x 35 mm	E x 64+4 Ø 3.5 x 12 mm
F x 12+1 Ø 7 x 70 mm	G x 1 M4 mm	H x 36+4 Ø 3 x 14 mm	J x 36+4 Ø 3 x 14 mm	K x 9 Ø 4 x 10 mm
L x 3	M x 3	N x 20	P x 2	Q x 2 Ø 4 x 12 mm
R x 2	CL x 5	CR x 5	DL x 5	DR x 5

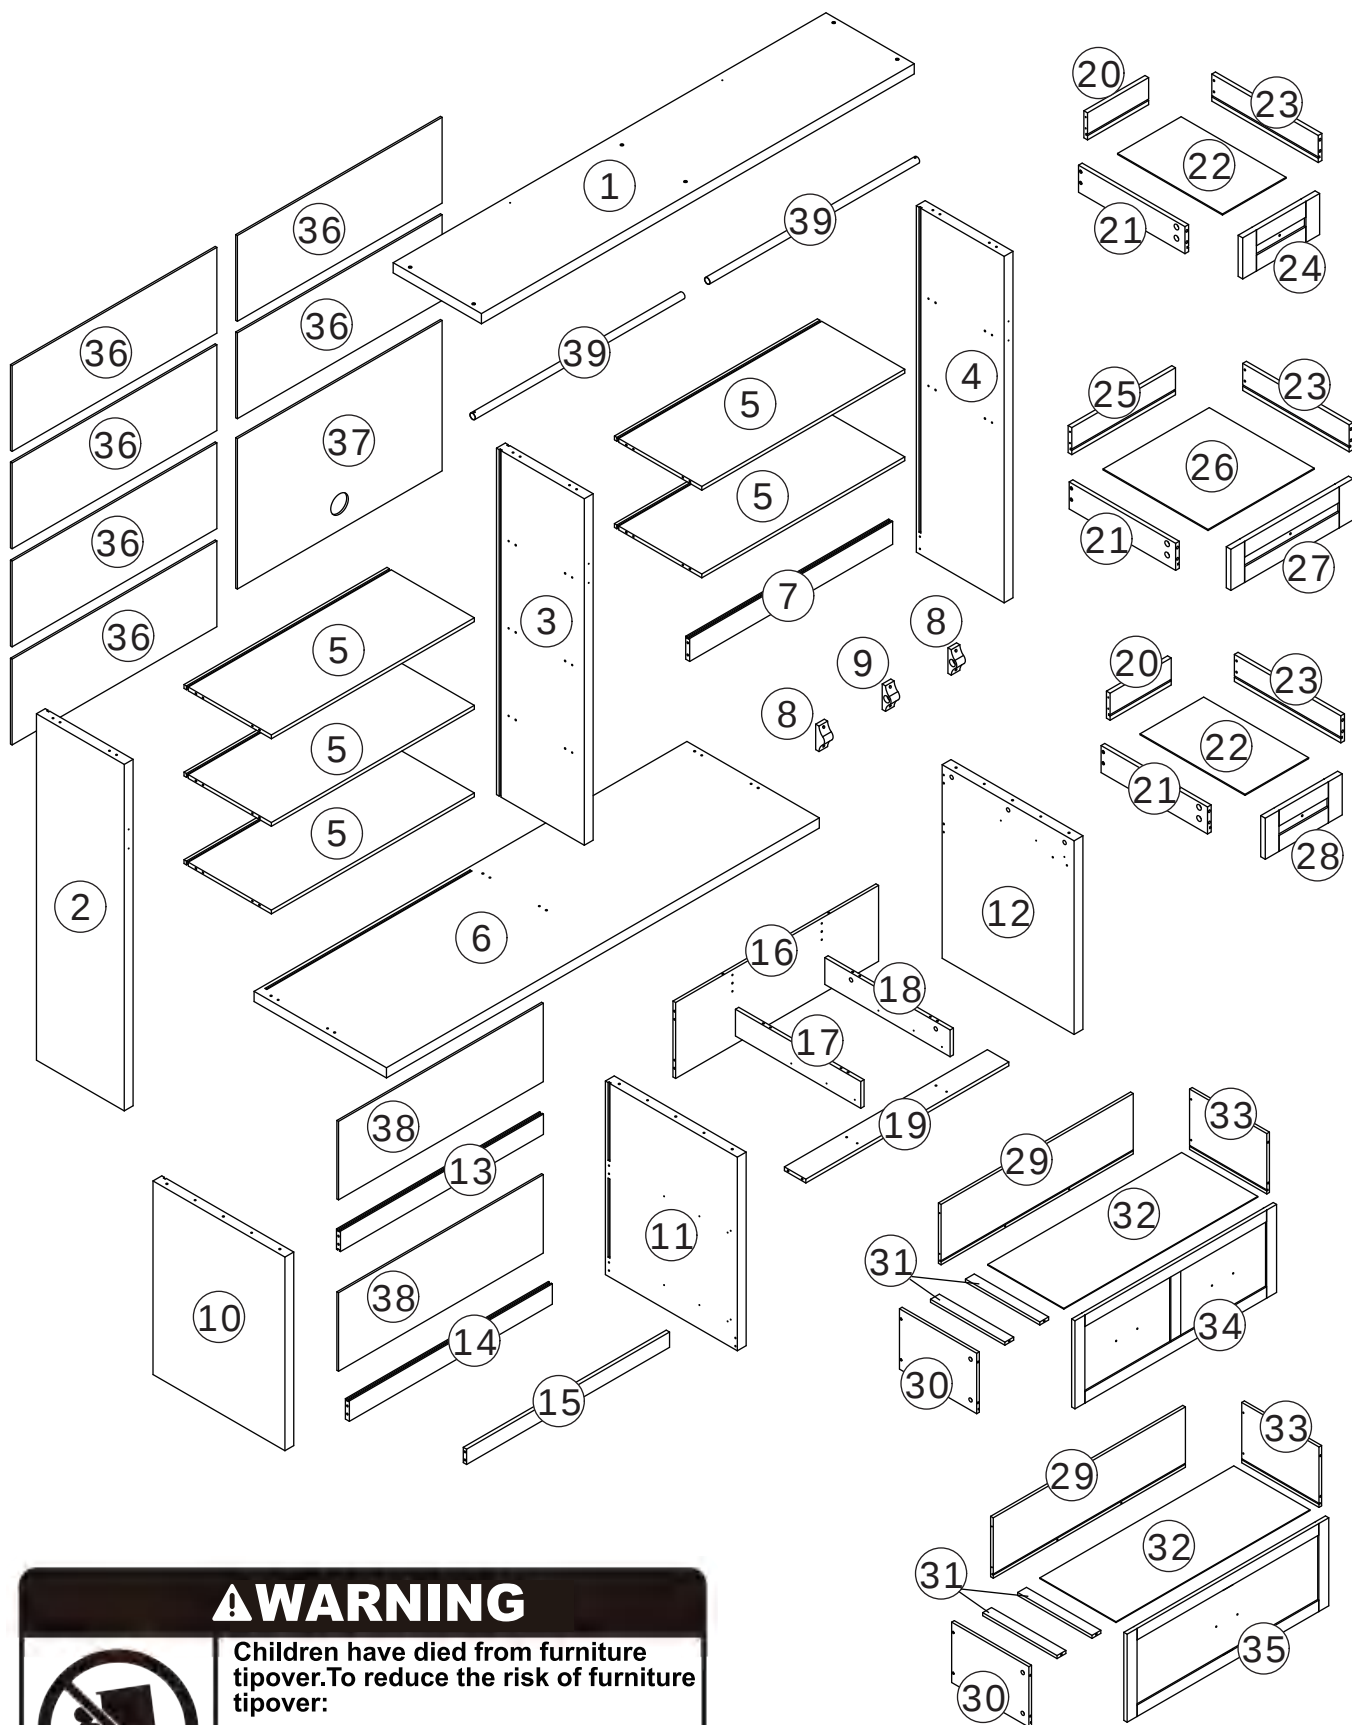 


⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:


- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 *This is a permanent label.
Do not remove!*

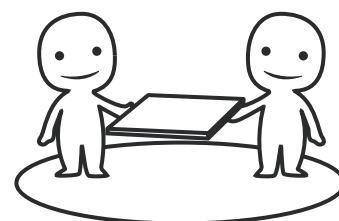

ASSEMBLED BY 2 ADULTS

 ① x 1

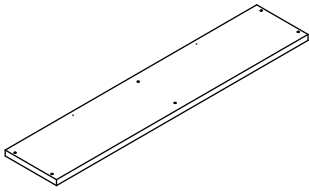

② x 1



 
③ x 1




④ x 1




⑤ x 5

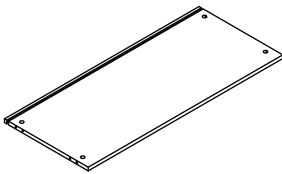


⑥ x 1

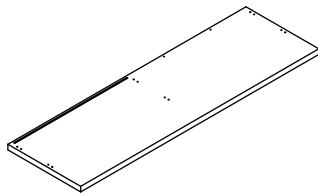 


⑦ x 1

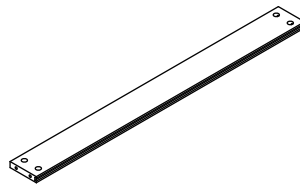 


⑧ x 2

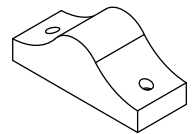 


⑨ x 1

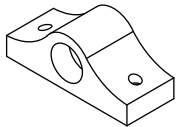 


⑩ x 1

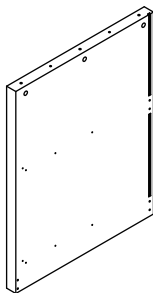 


⑪ x 1

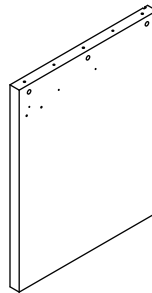 


⑫ x 1

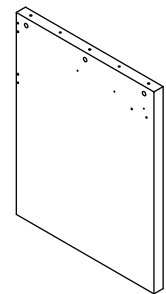 


⑬ x 1

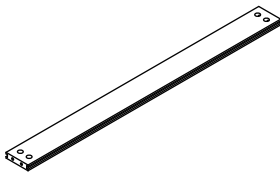 


⑭ x 1

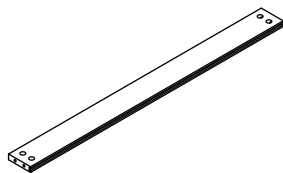 


⑮ x 1

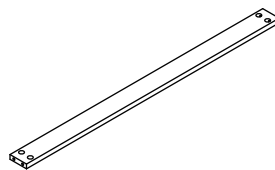 


⑯ x 1

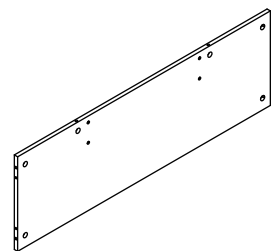 


⑰ x 1

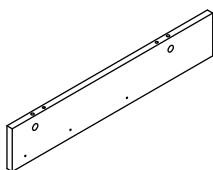 


⑱ x 1

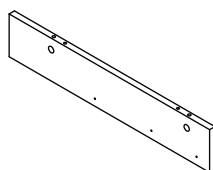 


⑲ x 1

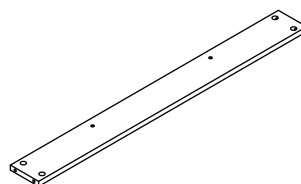 


⑳ x 2

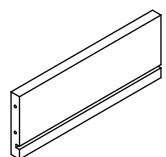 


21 x 3

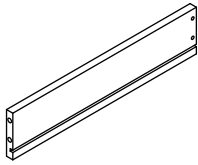 


22 x 2

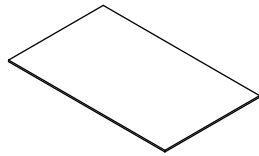 


23 x 3

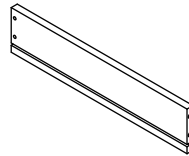 


24 x 1

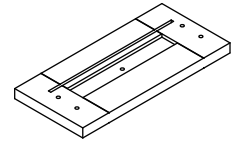 


25 x 1

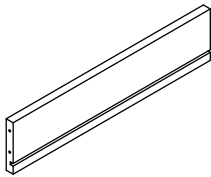 


26 x 1

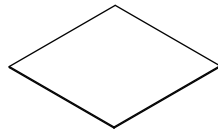 


27 x 1

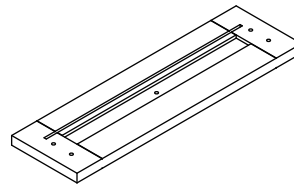 


28 x 1

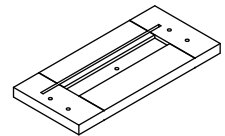 


29 x 2

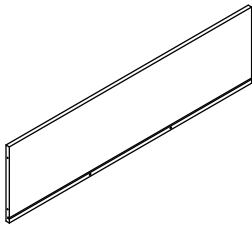 


30 x 2

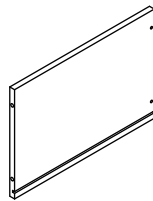 


31 x 4

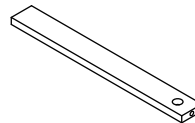 


32 x 2

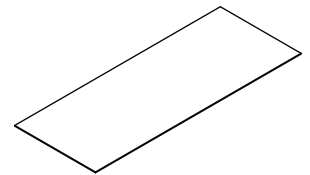 


33 x 2

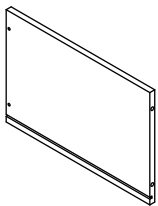 


34 x 1

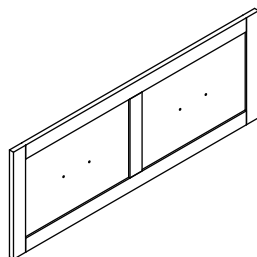 


35 x 1

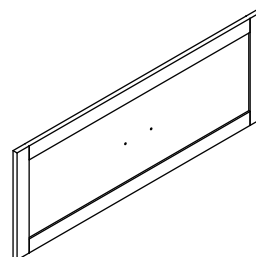 


36 x 6

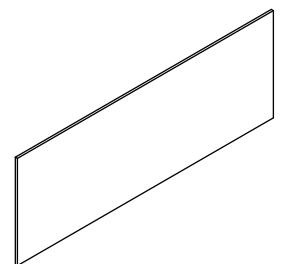 


37 x 1

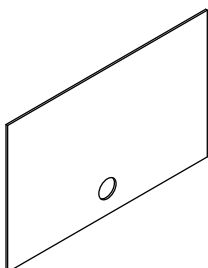 





38 x 2

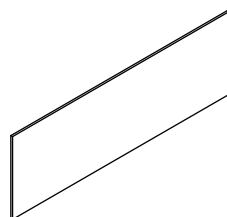 


39 x 2

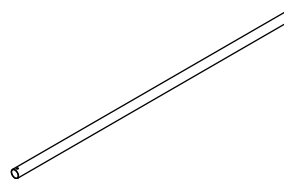 


1

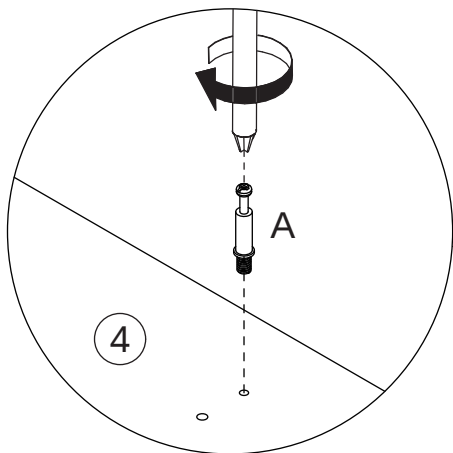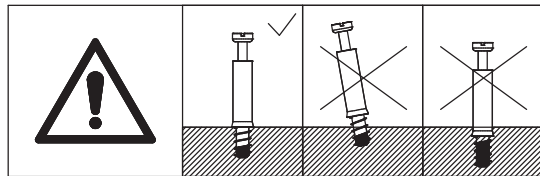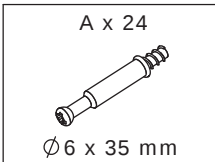    

 Screw eccentric rod A onto part 2, 3, and 4.





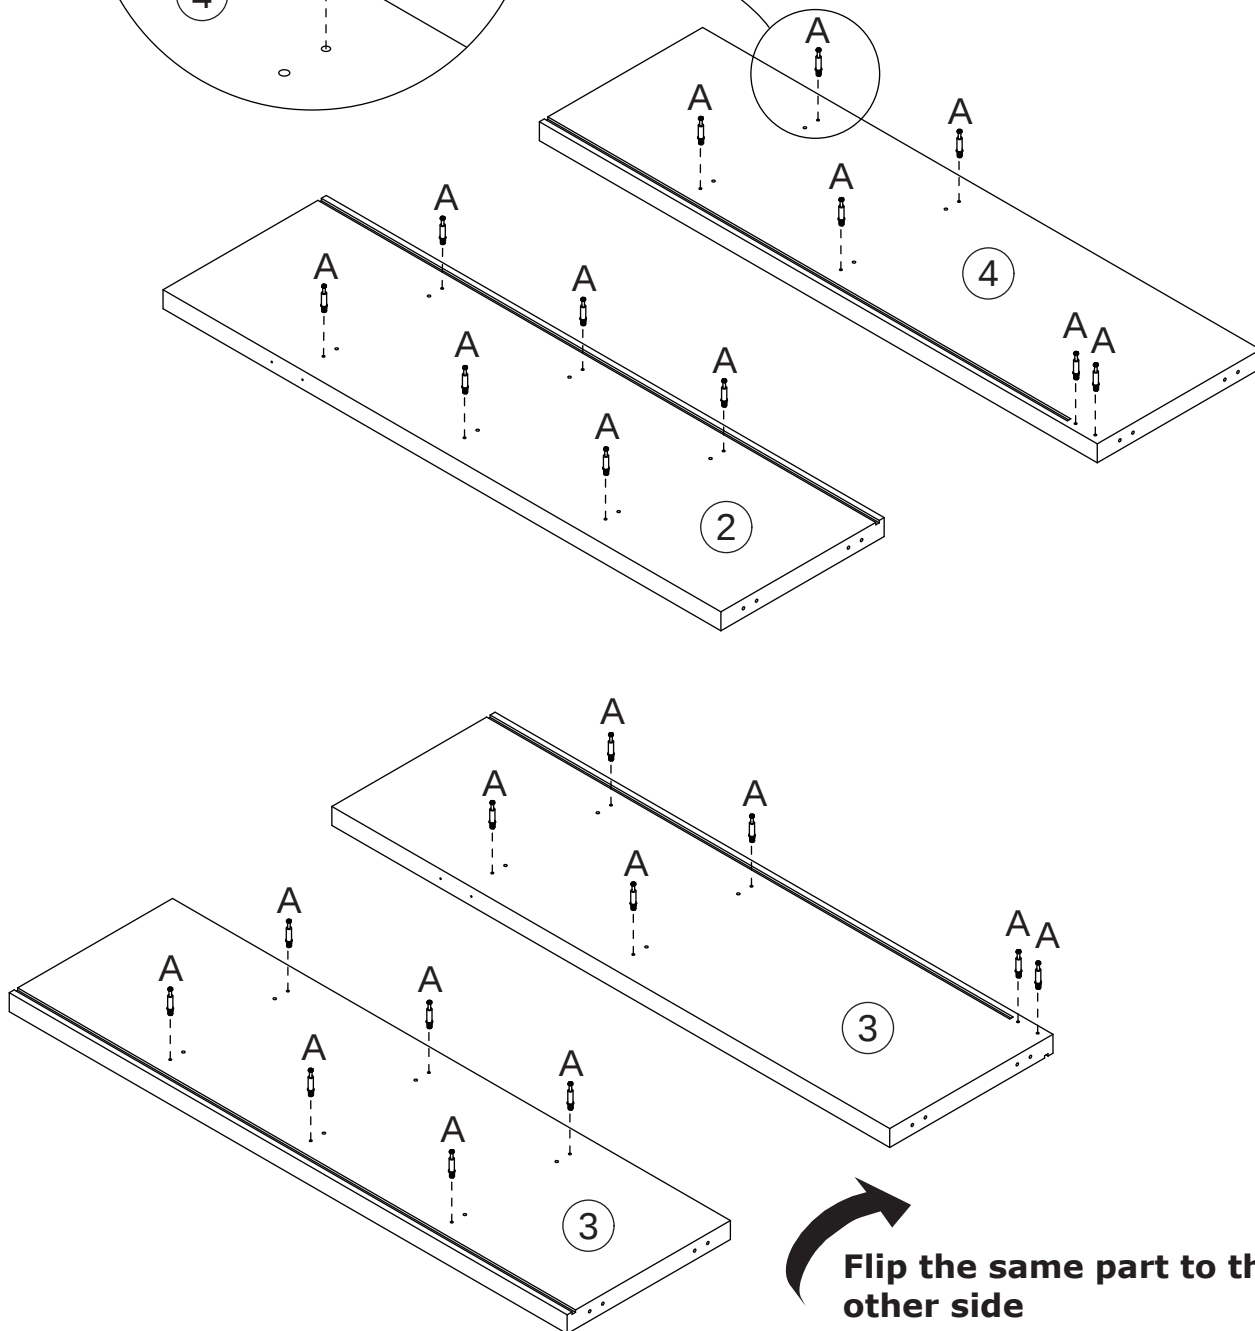


2

 B x 6  Ø 15 x 10 mm	C x 6  Ø 6 x 30 mm	N x 6 	
--	---	--	---


Connect part 5 to part 2 using dowel C, then tighten by turning cam lock B clockwise as shown.

     Cover the cam lock holes using sticker N.

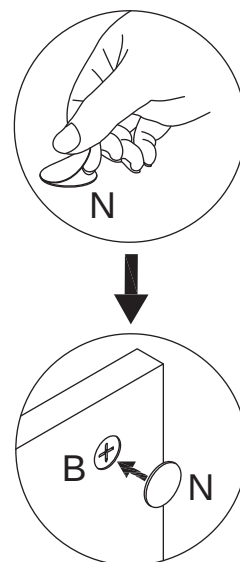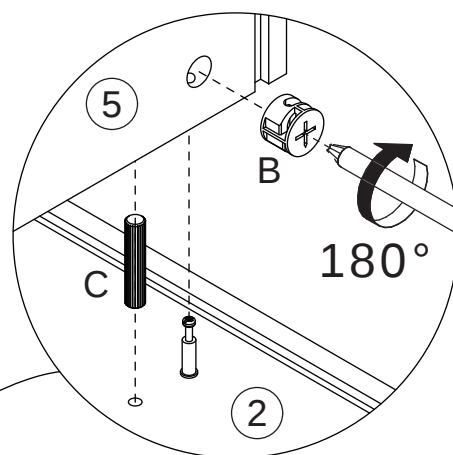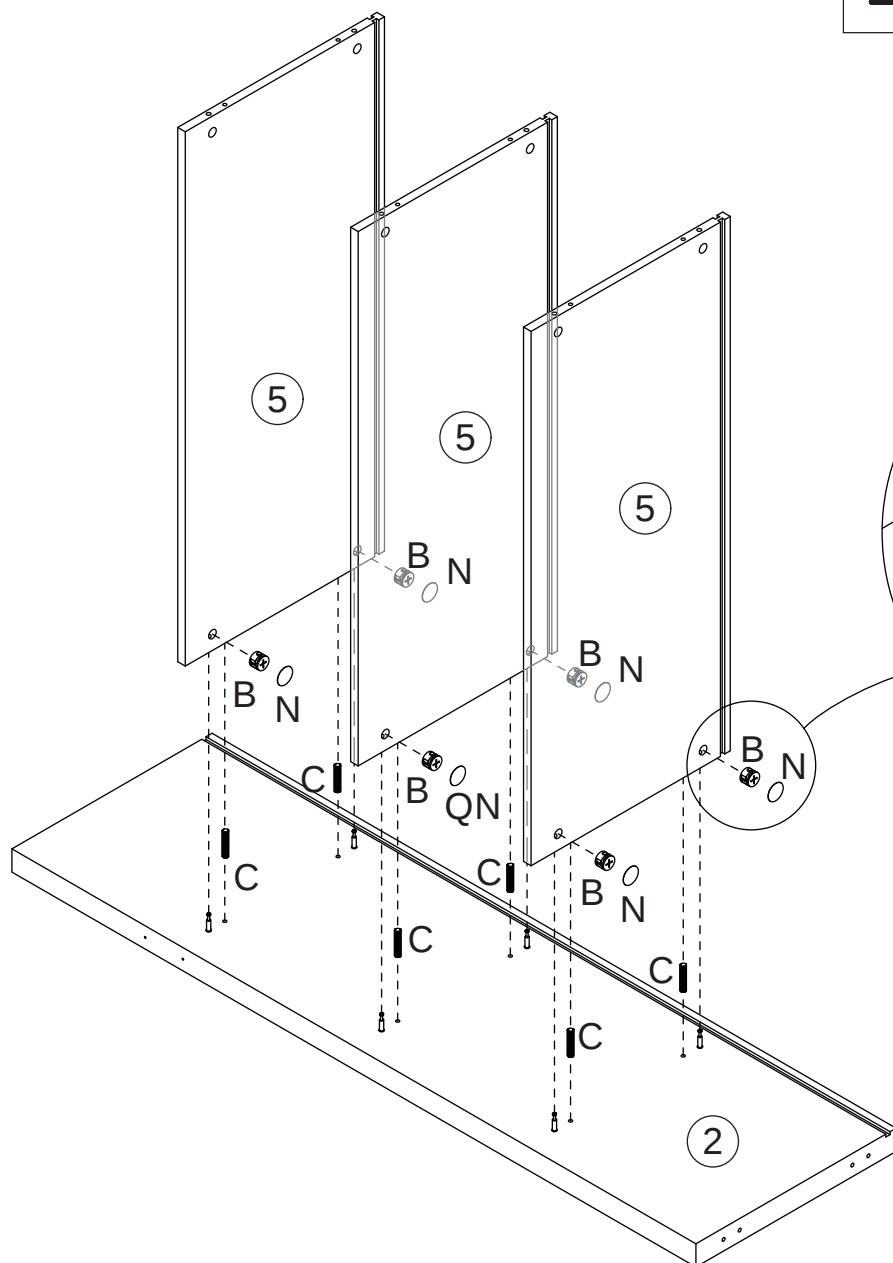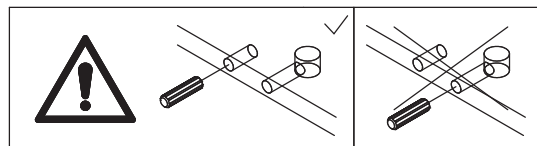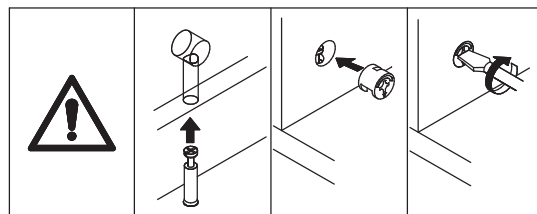


3

 Insert part 36 along the available grooves.



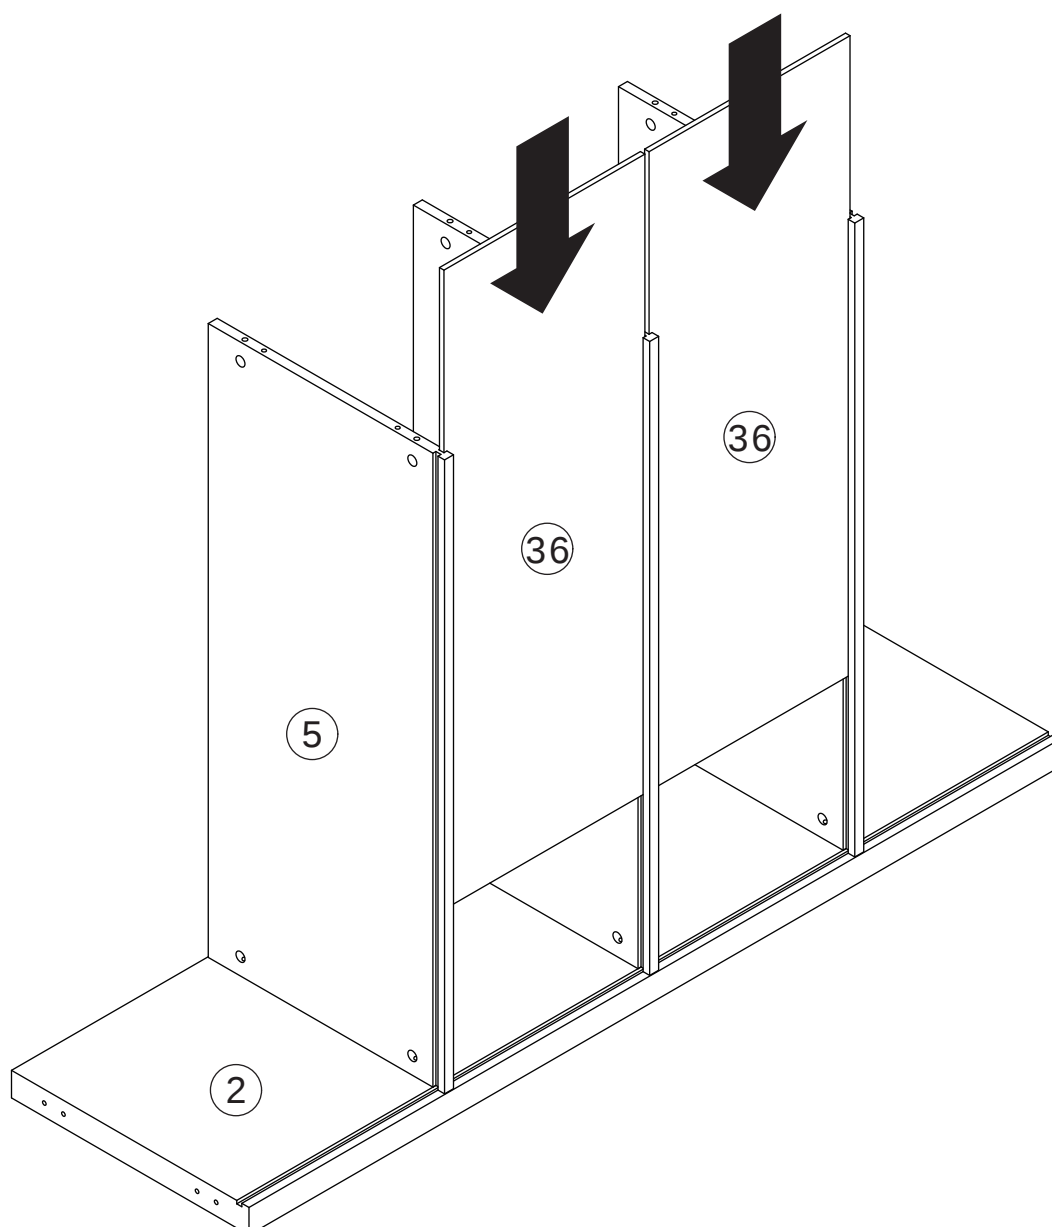


4

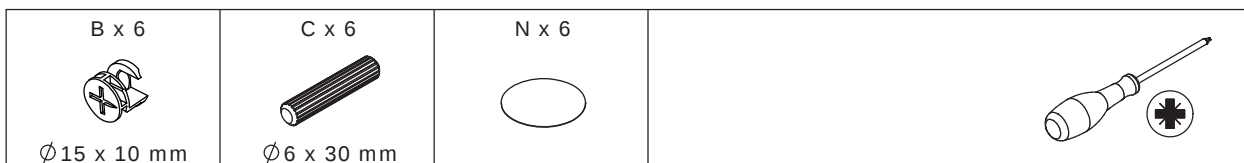 


Connect part 3 to part 5 using dowel C, then tighten by turning cam lock B clockwise as shown.

   Cover the cam lock holes using sticker N.

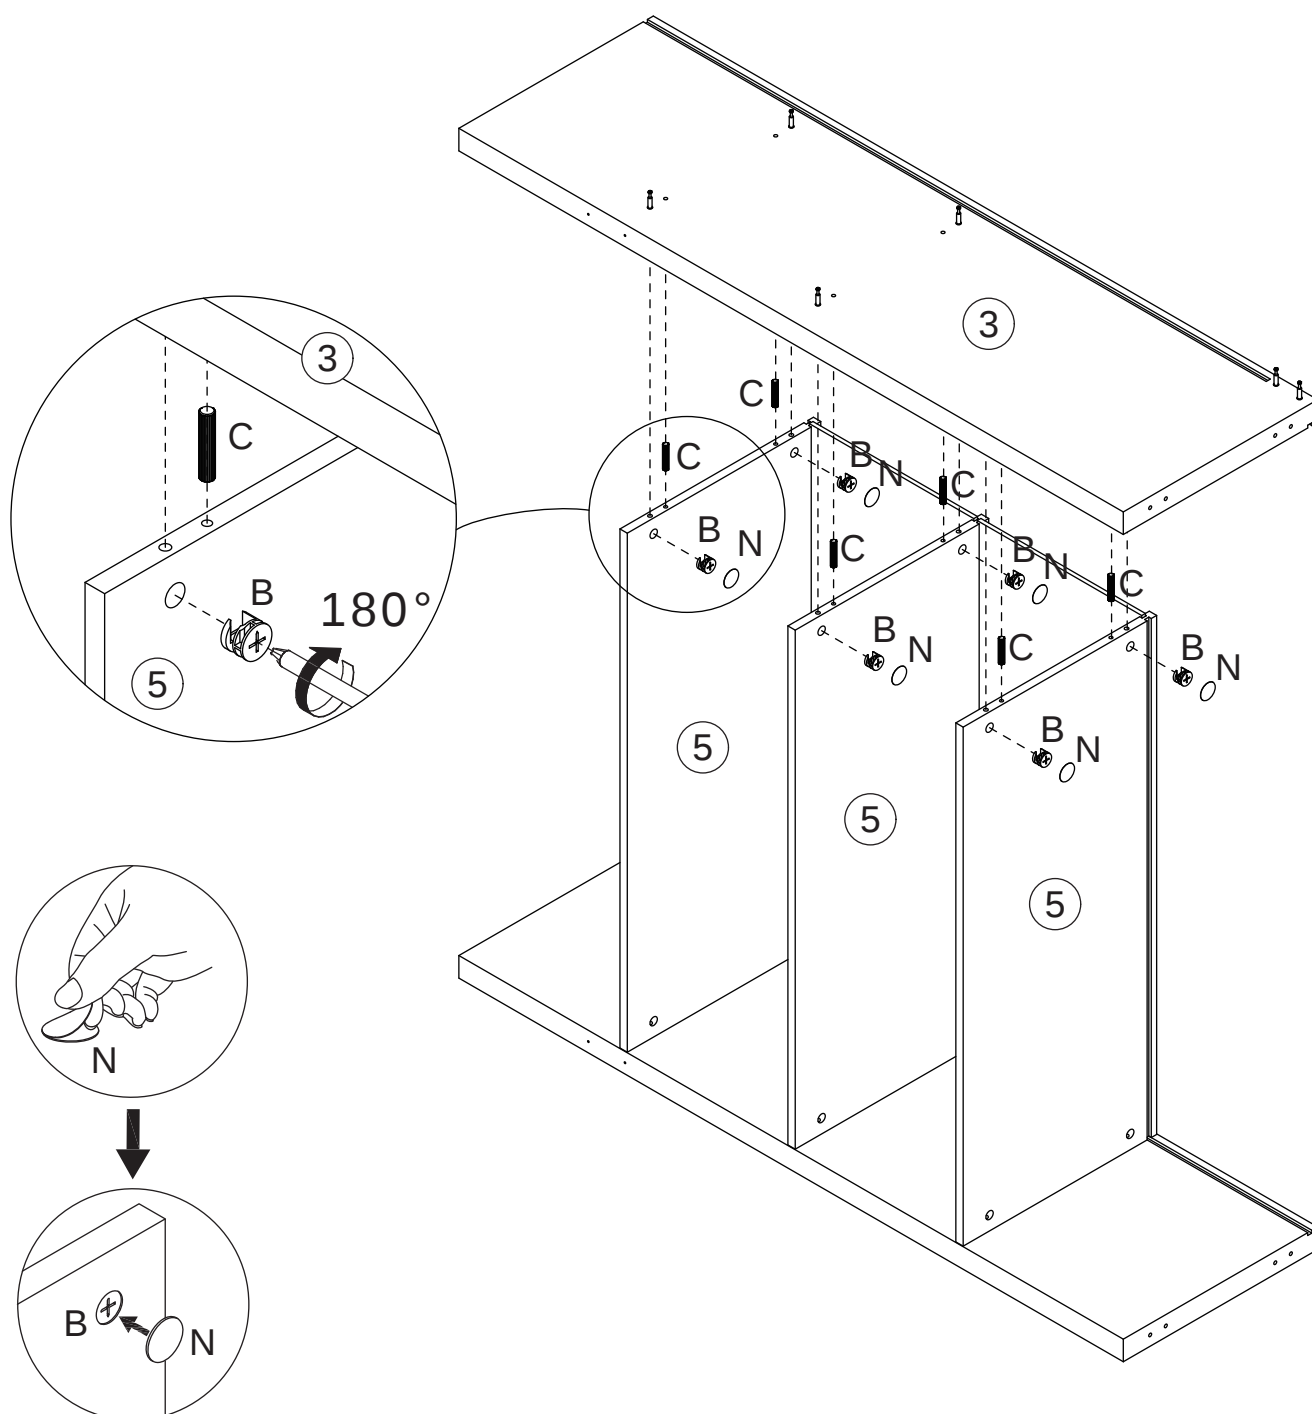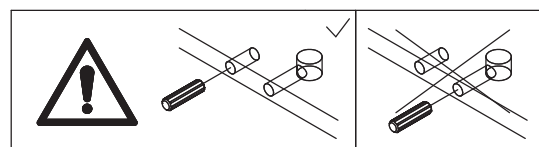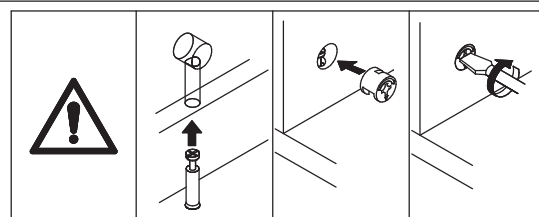


5

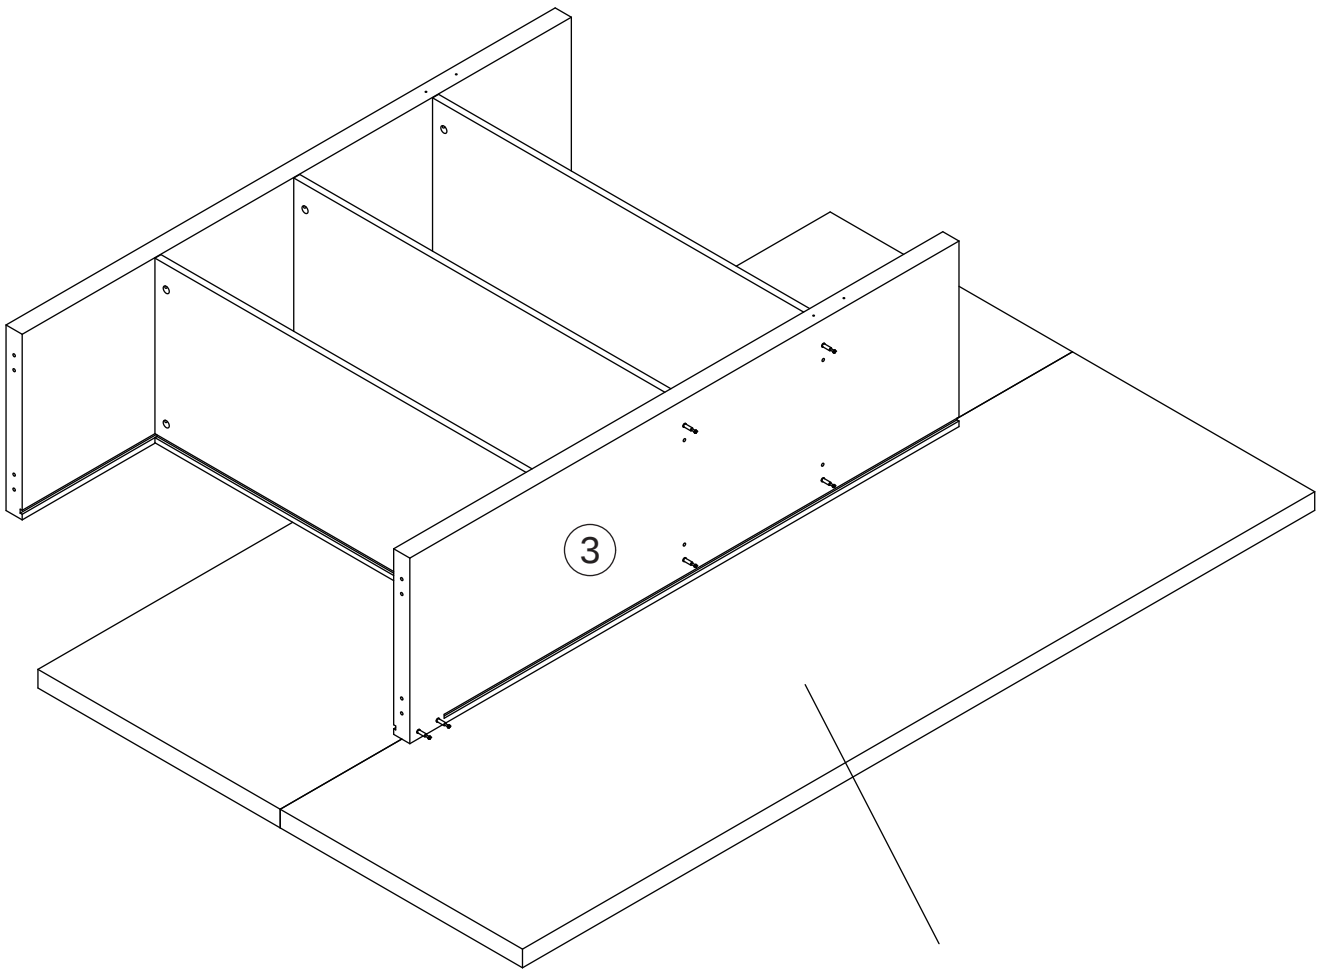 

Note: Place the foam board from the packaging box under the unit as shown.



 
6

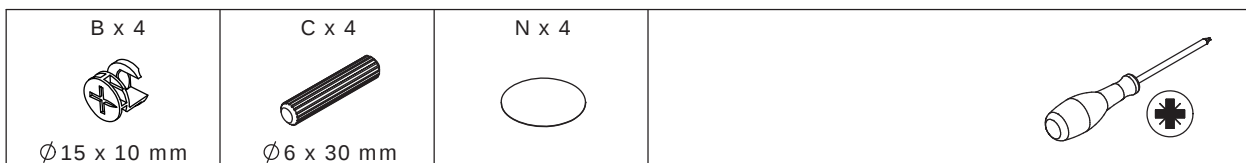

Connect part 5 to part 3 using dowel C, then tighten by turning cam lock B clockwise as shown.


Connect part 7 to part 3.

   Cover the cam lock holes using sticker N.

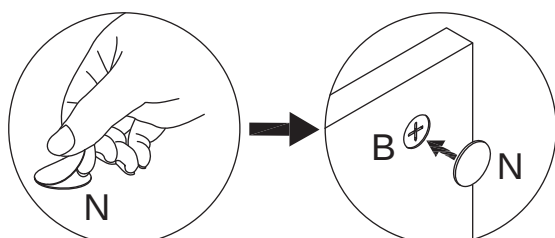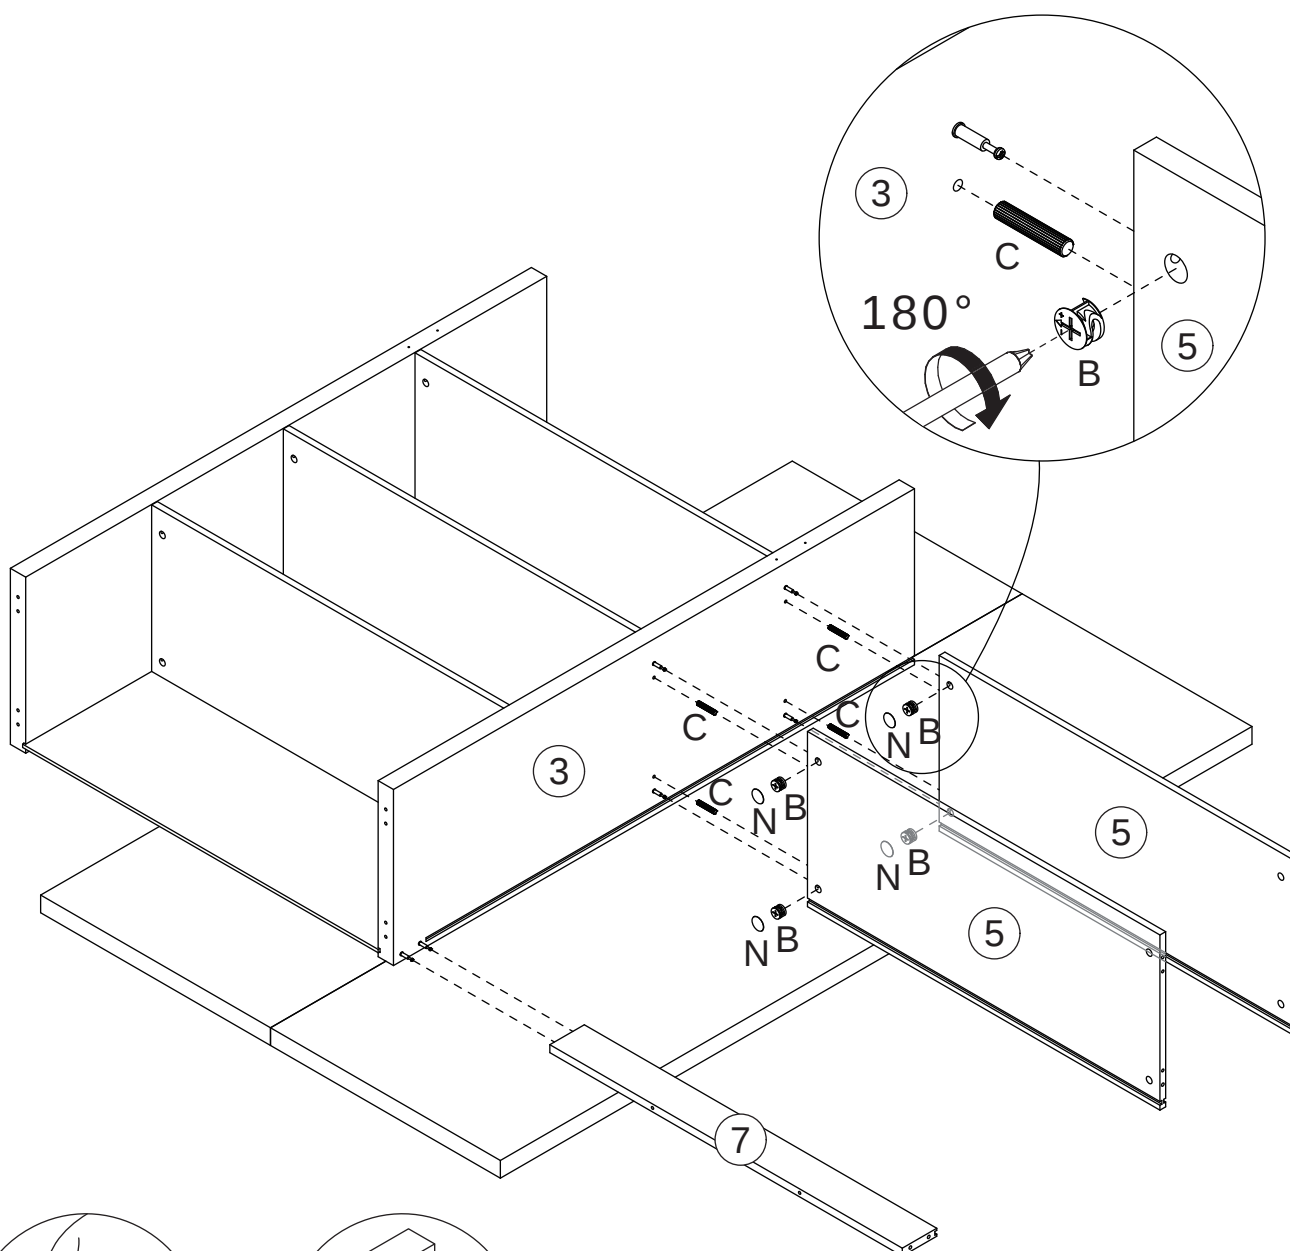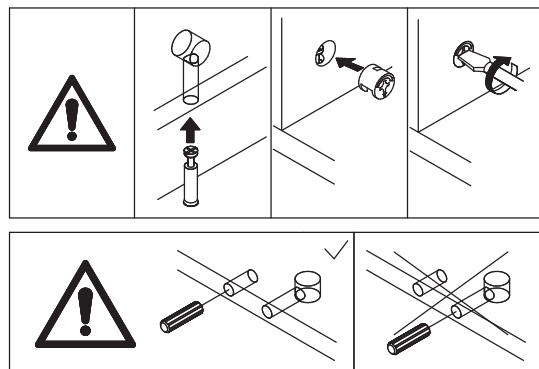


7

 Insert part 36 and 37 along the available grooves.

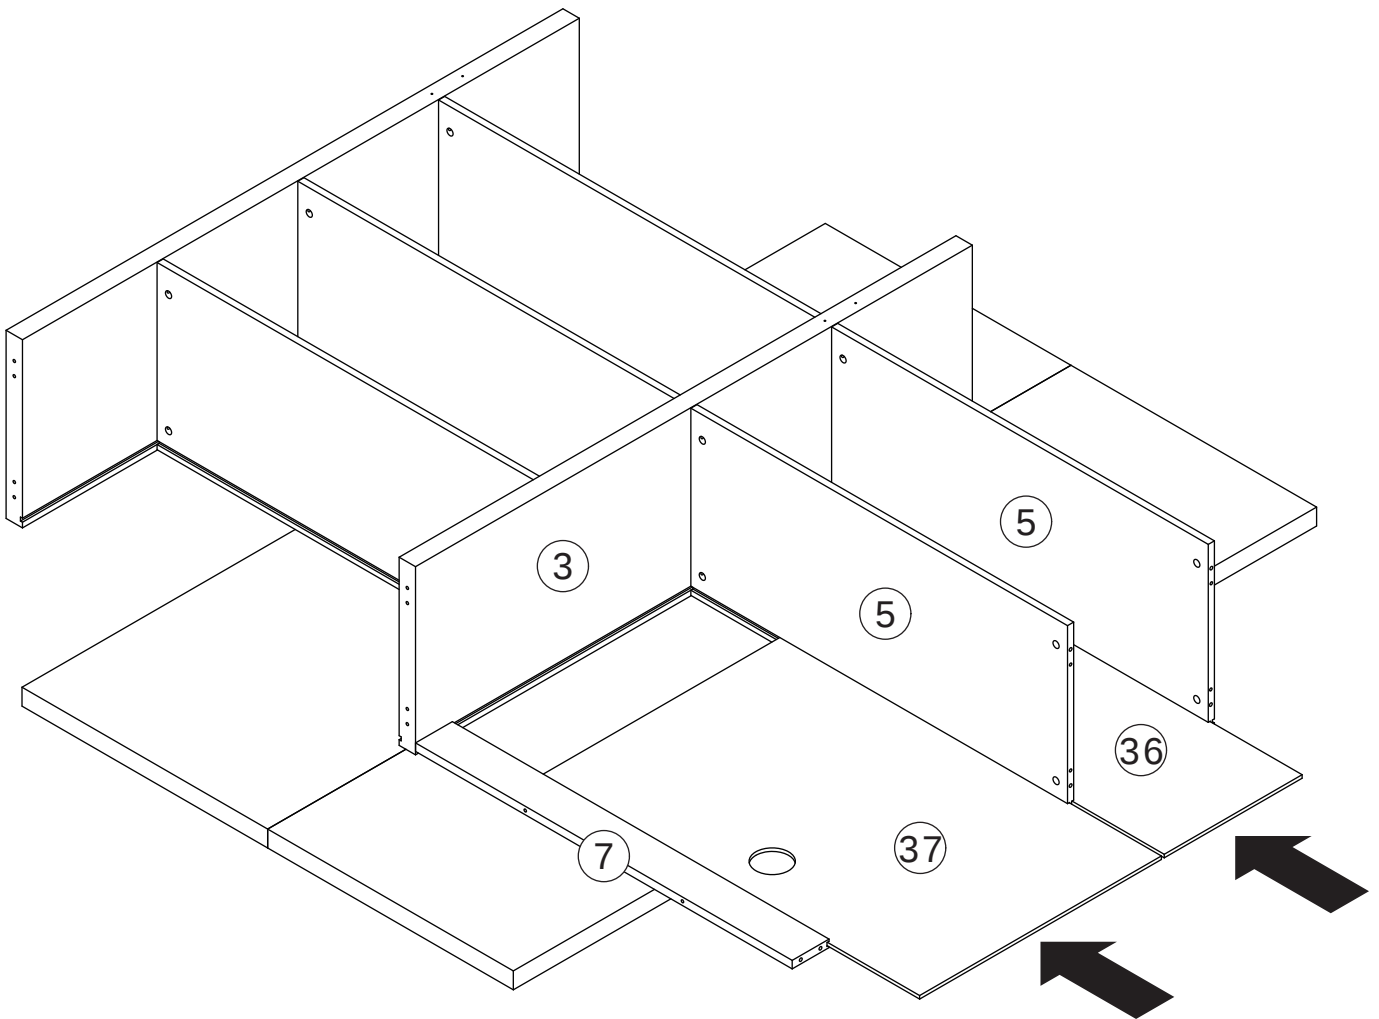






8

 B x 4  Ø 15 x 10 mm	C x 4  Ø 6 x 30 mm	N x 4 	
--	---	--	---

Connect part 4 to part 5 using dowel C, then tighten by turning cam lock B clockwise as shown.


Connect part 4 to part 7.

     Cover the cam lock holes using sticker N.

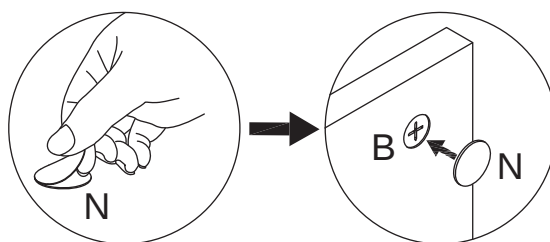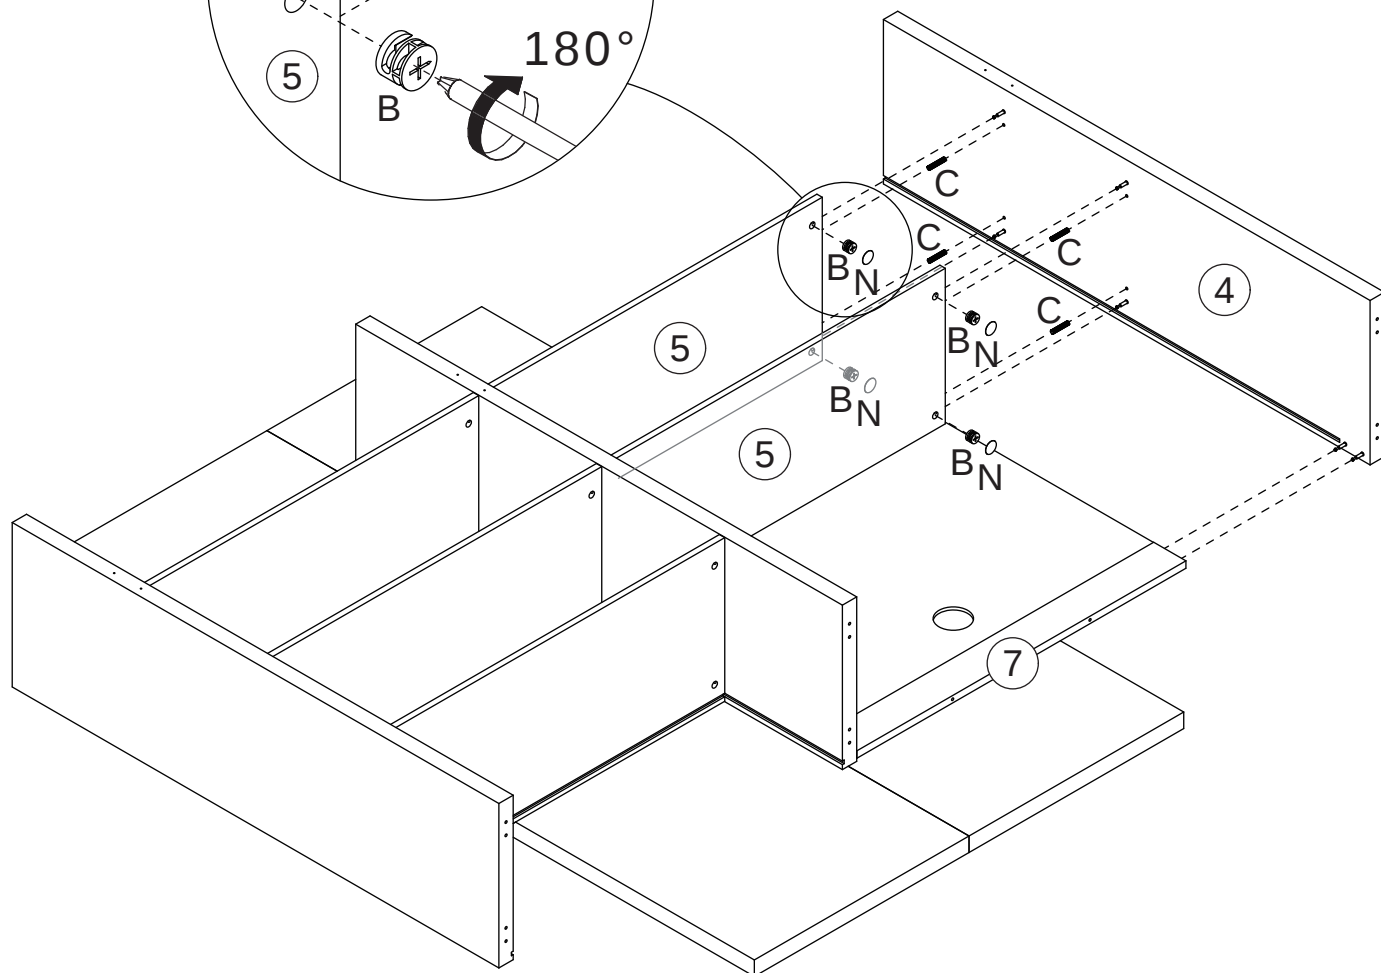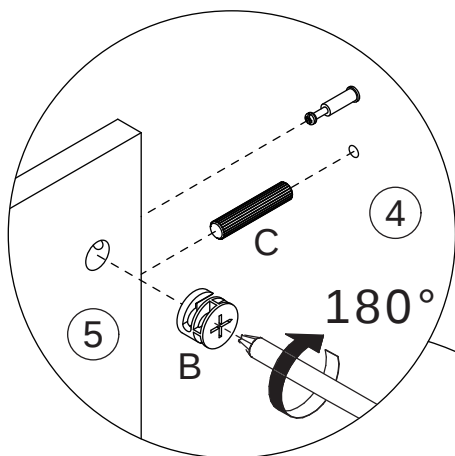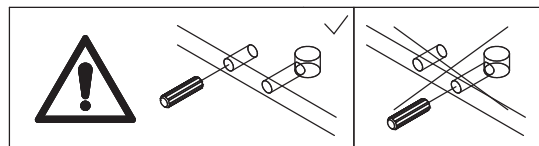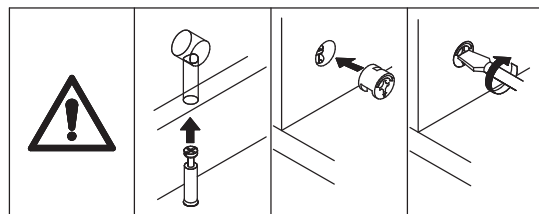


9

 
Insert part 36 along the available grooves.

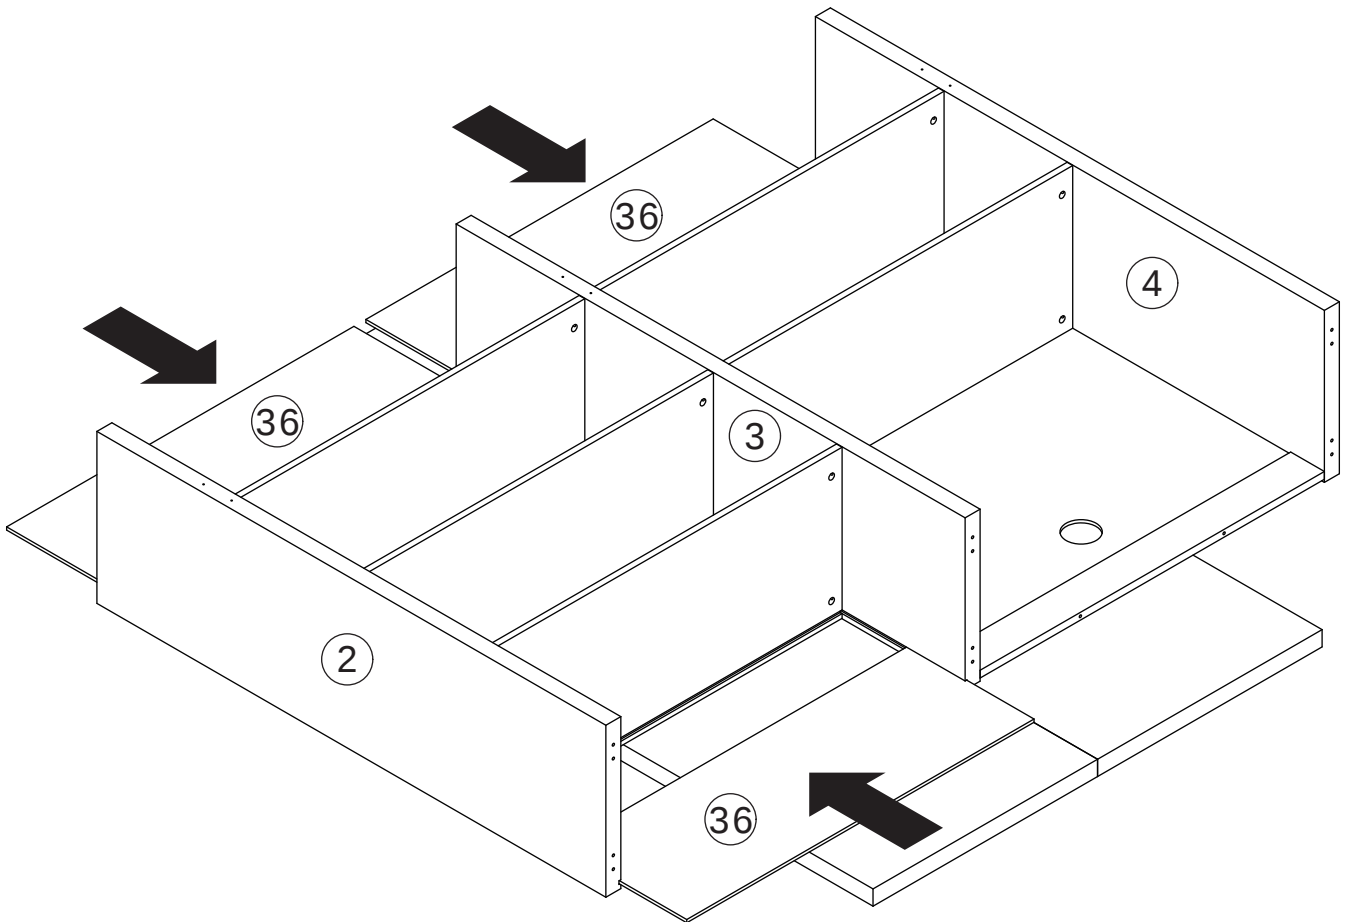




10

 C x 6  Ø6 x 30 mm	F x 6  Ø7 x 70 mm	G x 1  M4 mm	
--	--	---	---

 
Connect part 1 to part 2, 3, and 4 using dowel C, then secure them with screw F.

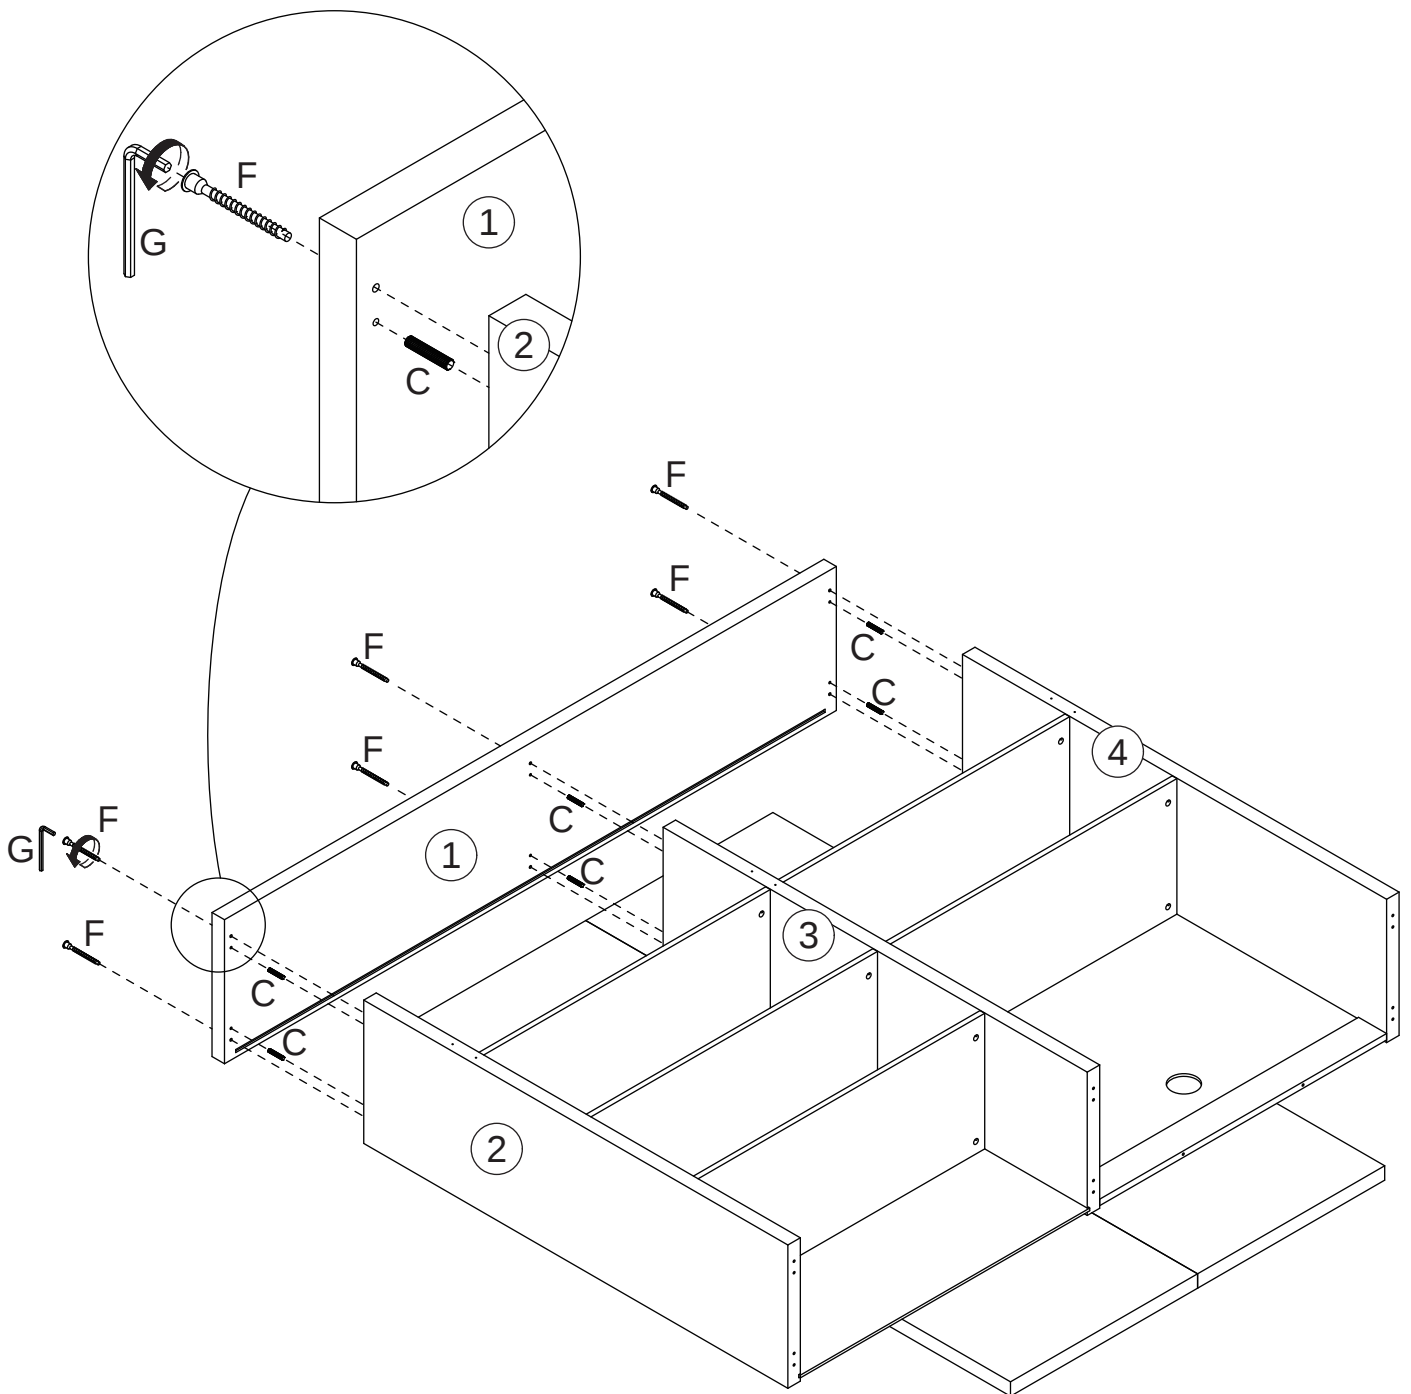

11

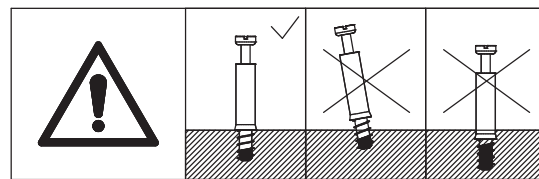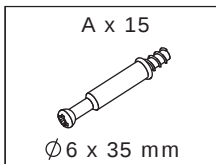   


Screw eccentric rod A onto part 6.

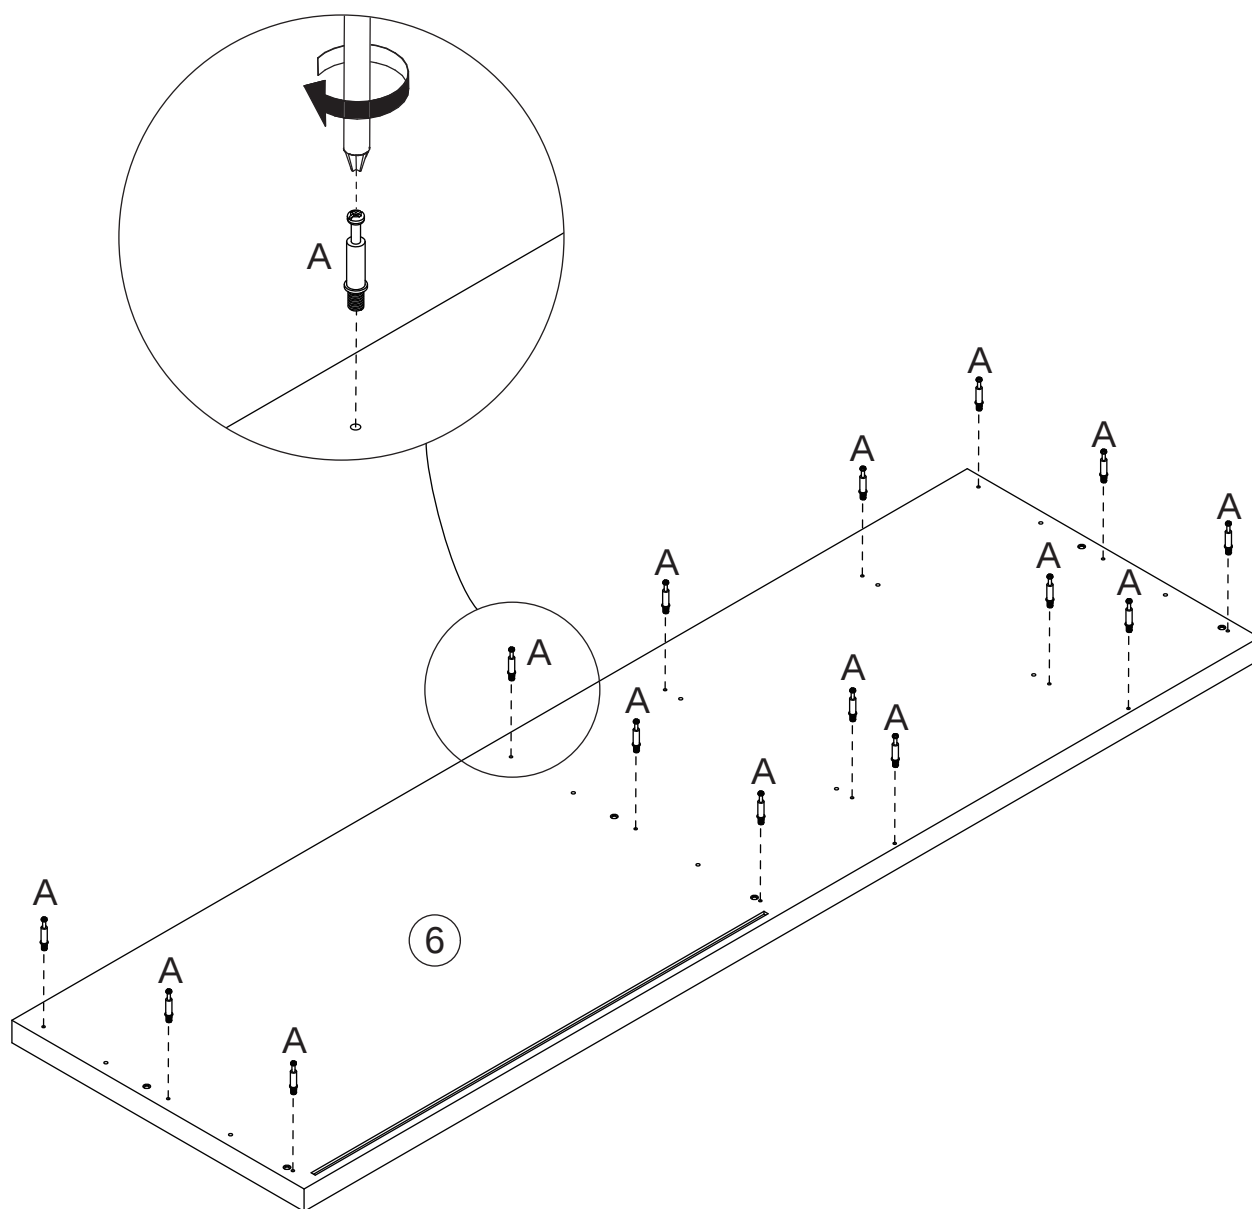 

12


 
C x 8

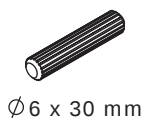

F x 6





  G x 1

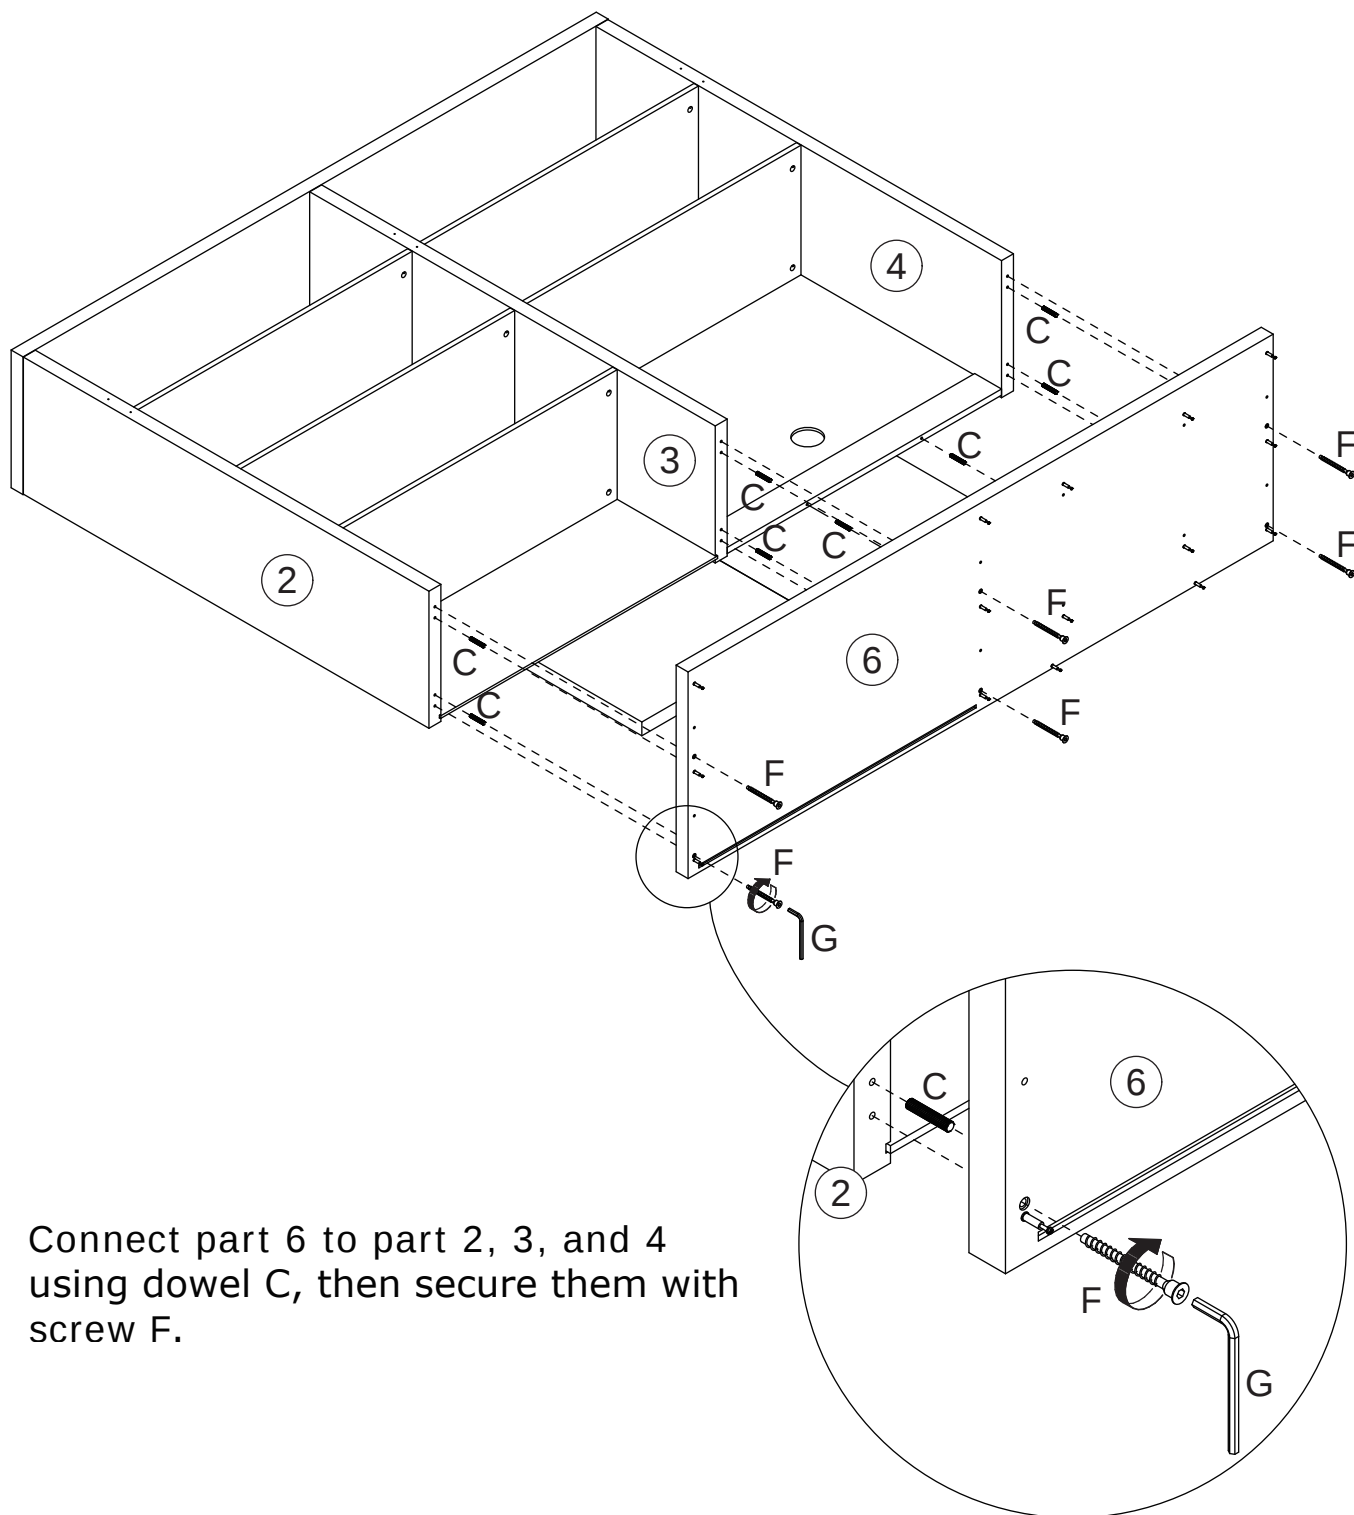


Connect part 6 to part 2, 3, and 4 using dowel C, then secure them with screw F.

  13

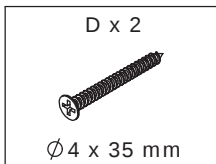

Secure part 9 to part 3 using screw D.

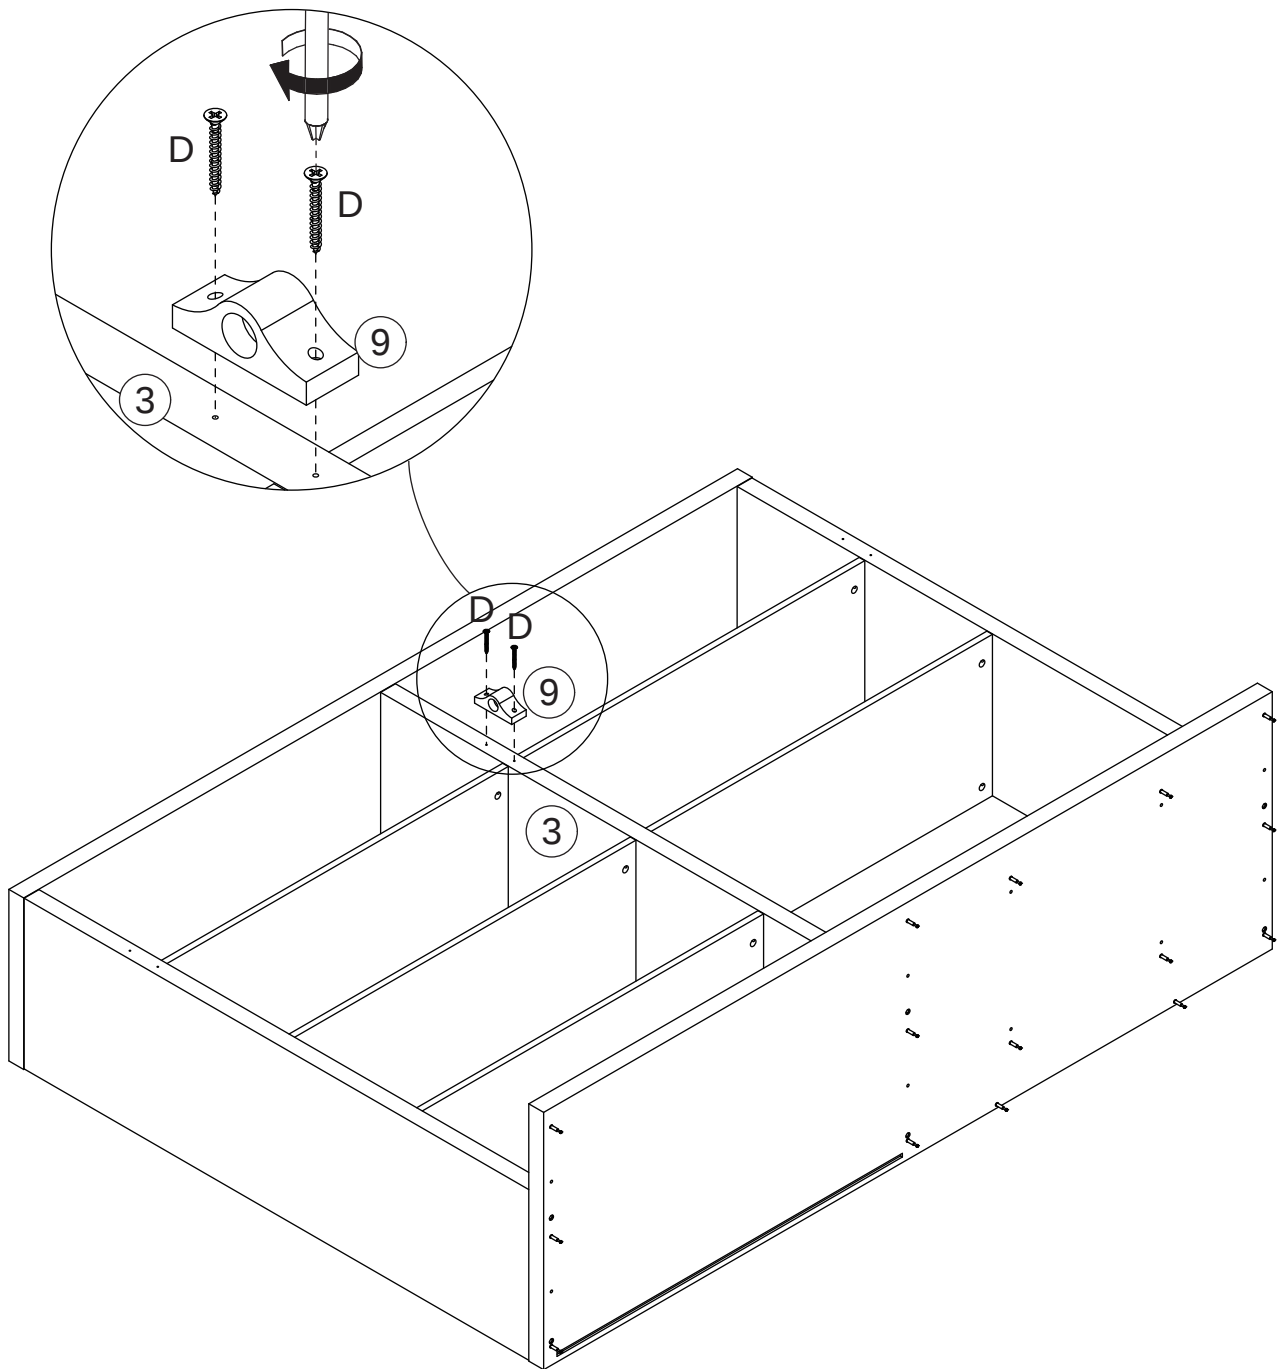 


14

D x 4




 Ø 4 x 35 mm



Insert part 39 into part 9 and 8 first.

 Then secure part 8 to part 2 and 4 respectively using screw D.

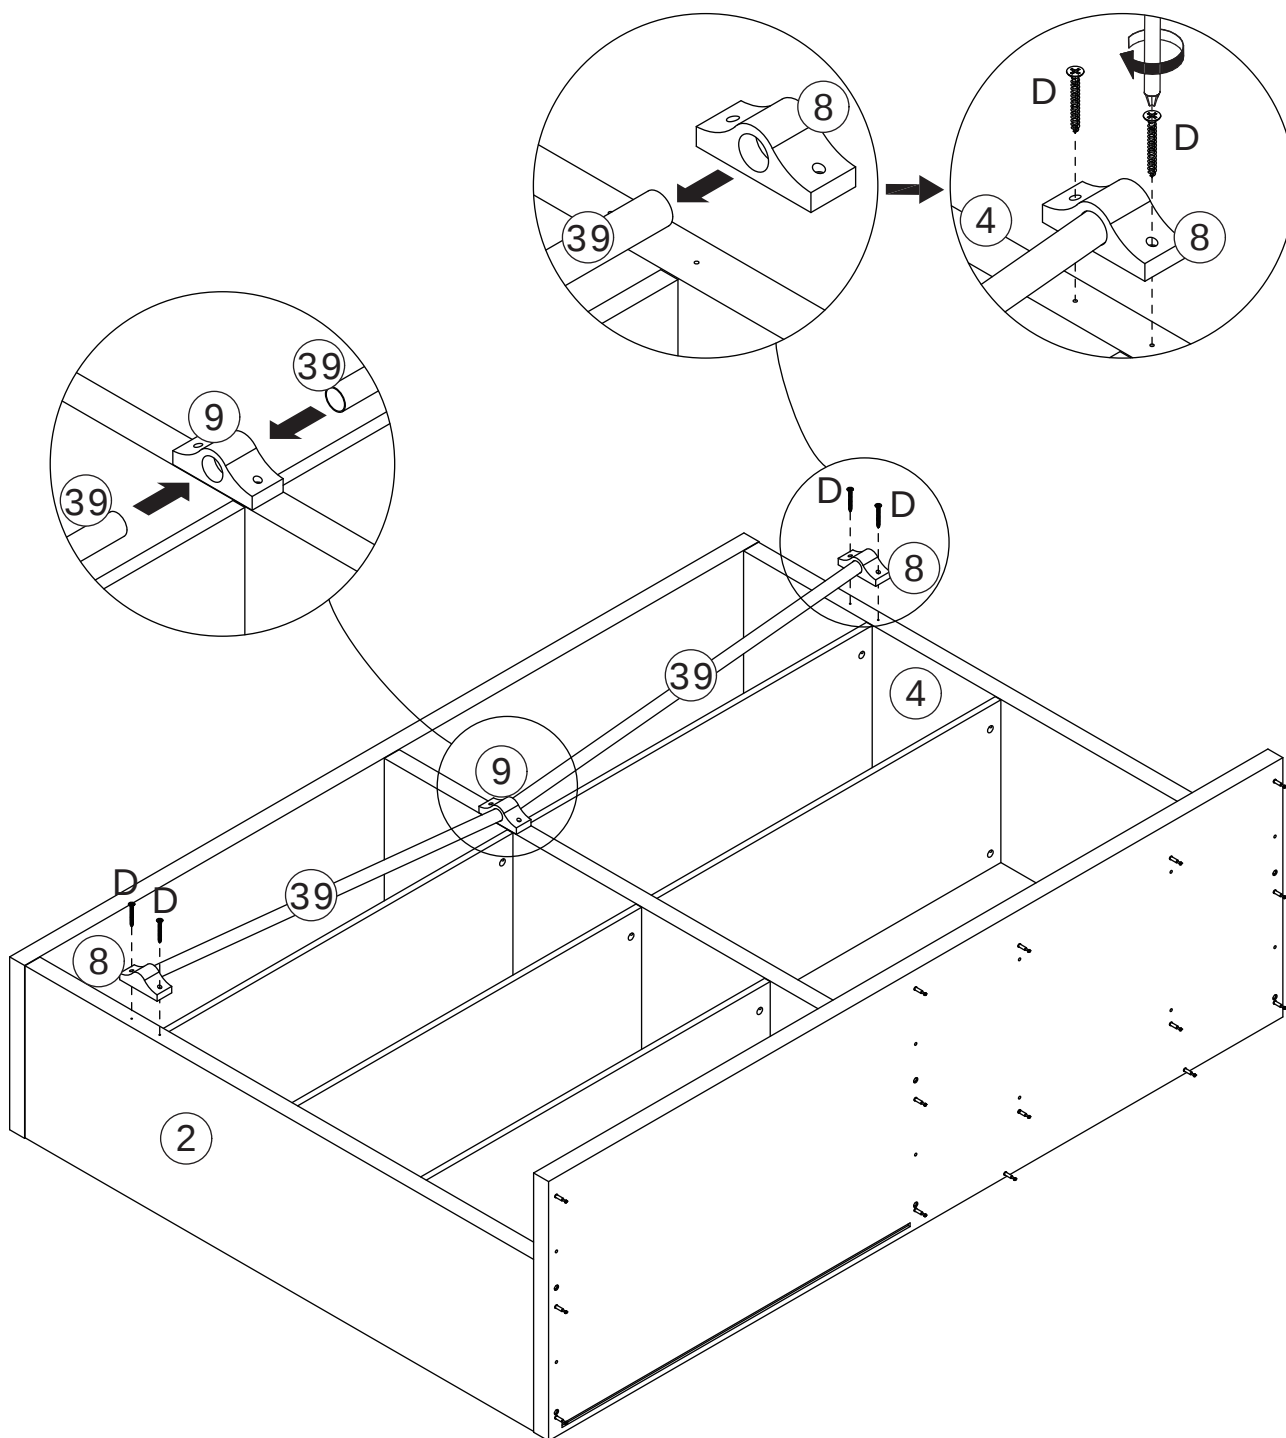

15

E x 12

 


Ø 3.5 x 12 mm

CL x 2




CR x 2




Secure guide rail CL to part 17 and 18 using screw E.

 Flip the same panels to the other side and fix guide rail CR as shown.

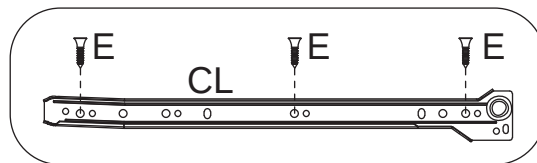


 - Please note that in this step, the screw positions for installing the CL and CR slide rails are different.

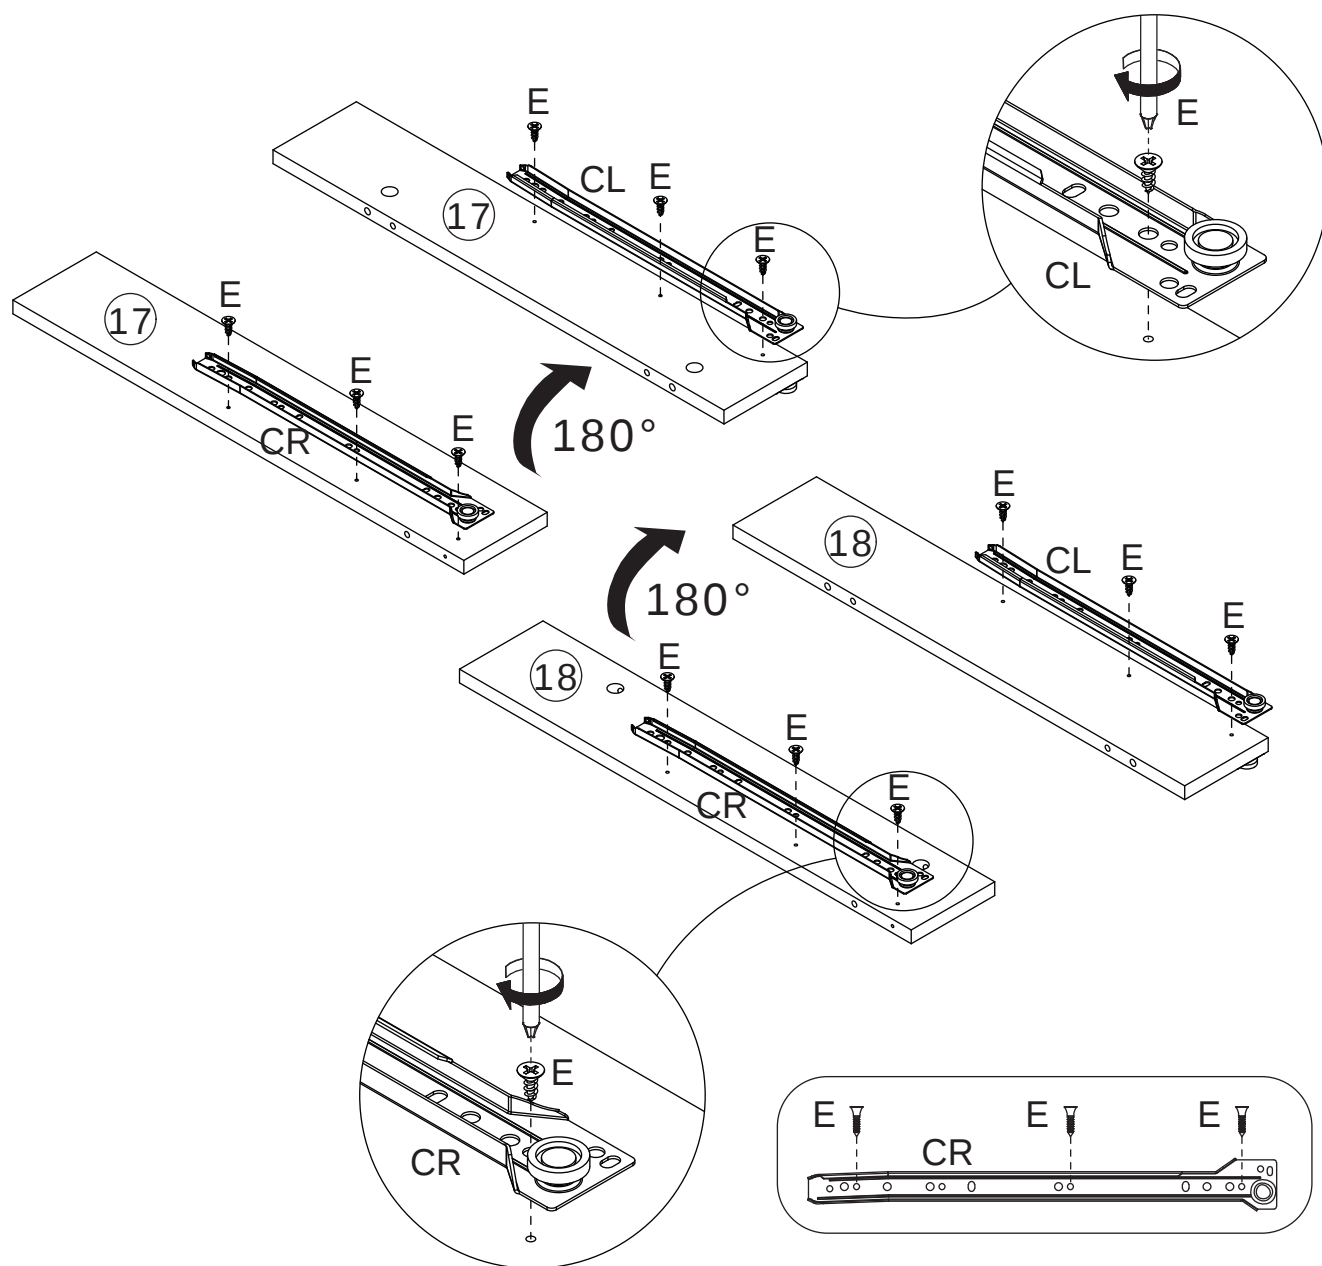


16

 
C x 2

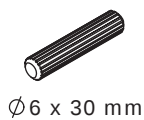

D x 4

 


 Connect part 16 to part 17 and 18 using dowel C, and secure them with screw D as shown.

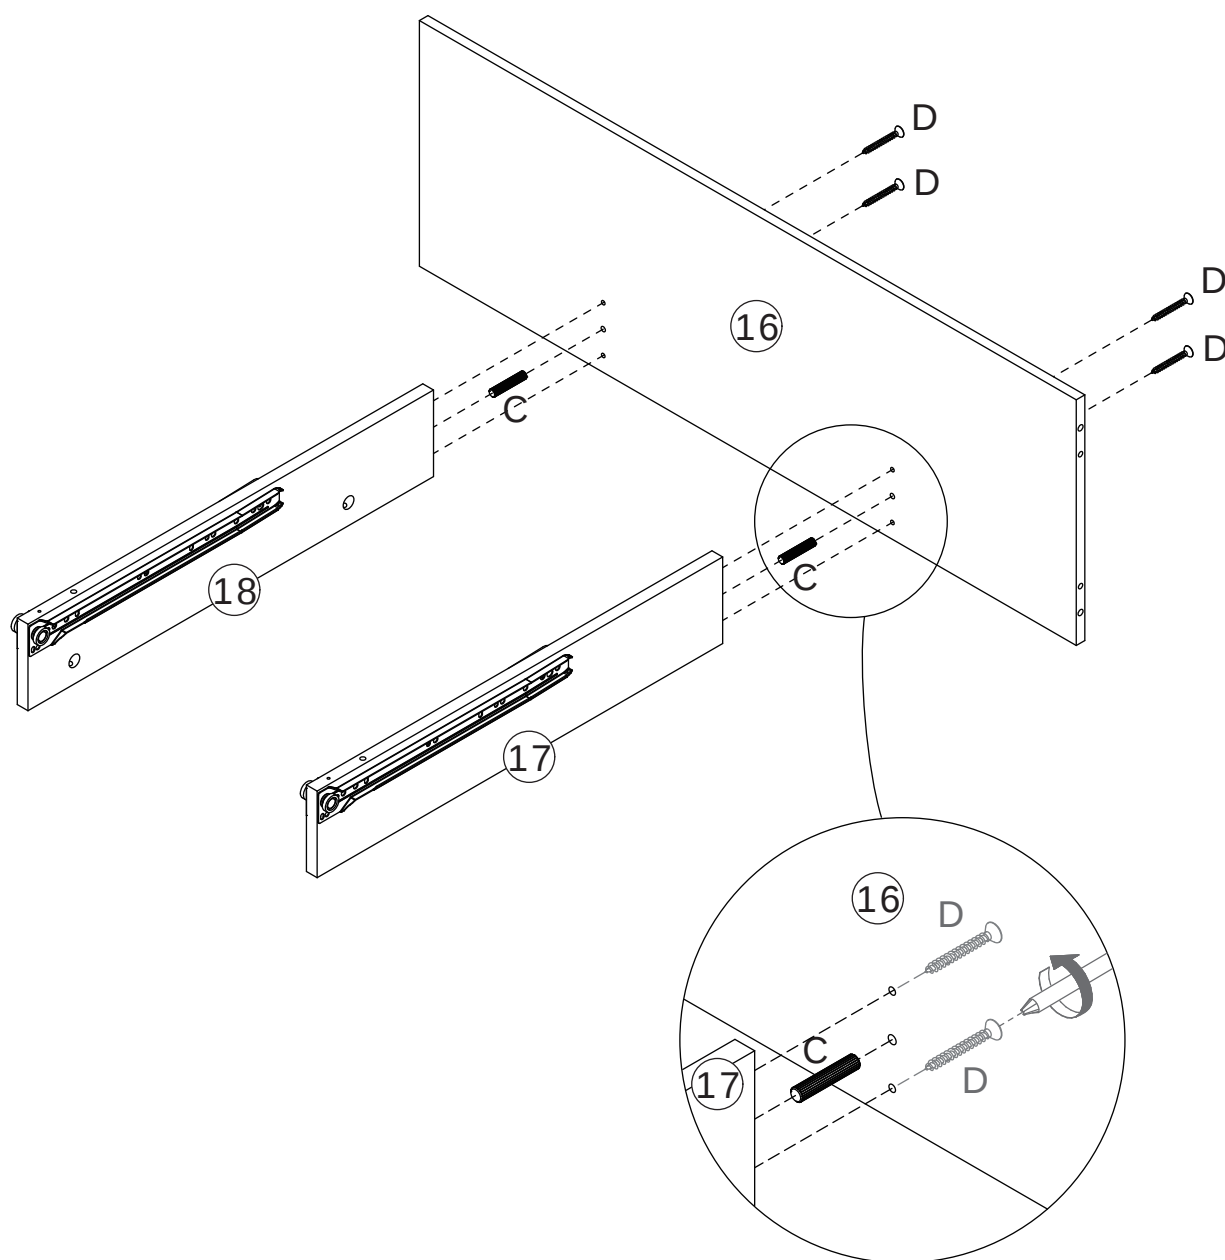


17


 
C x 2

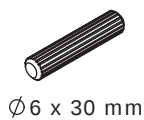



D x 2

 

  Connect part 19 to part 17 and 18 using dowel C, and secure them with screw D as shown.







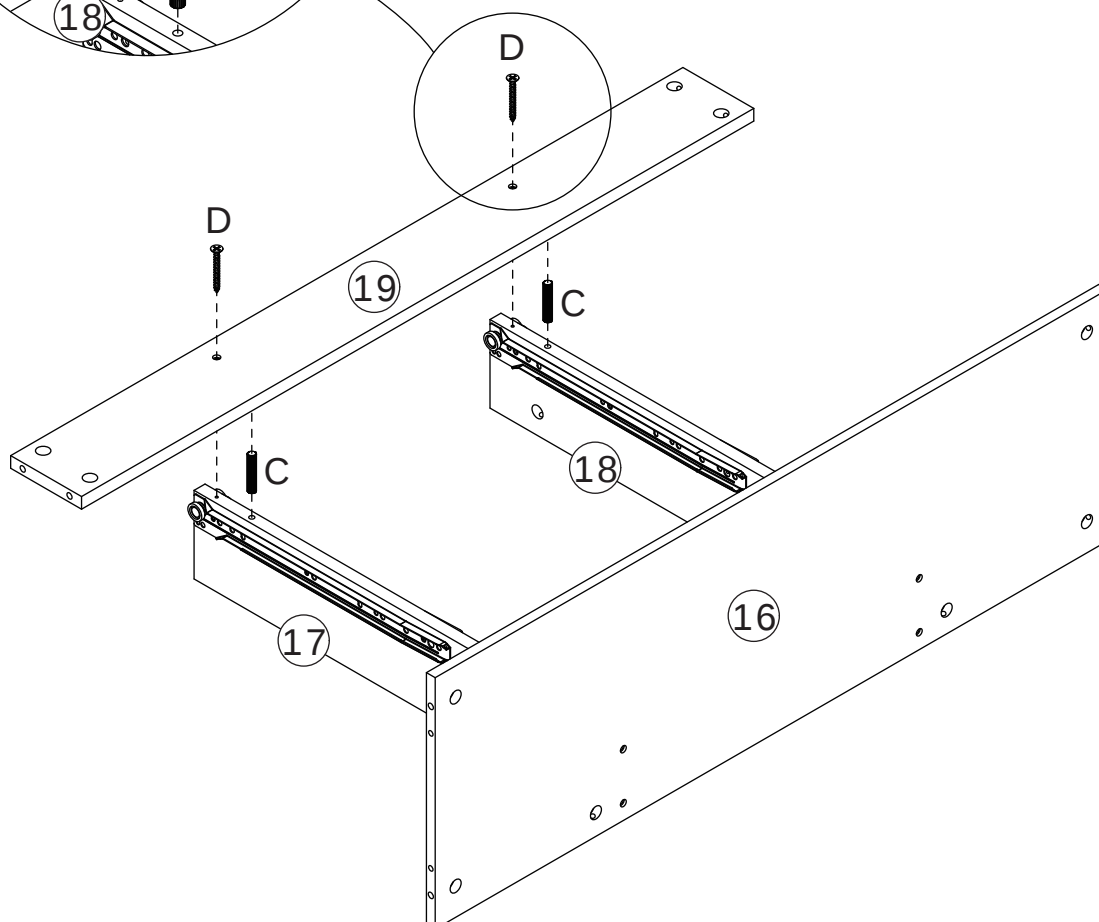
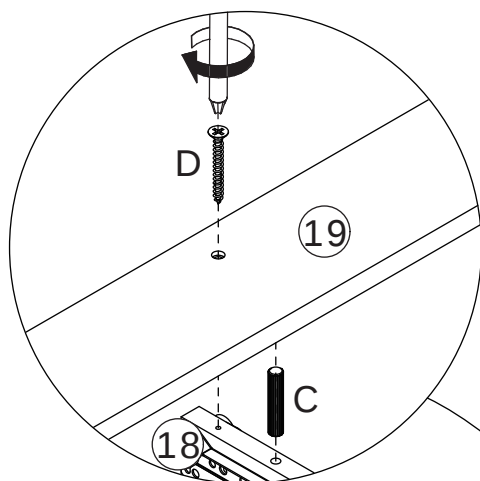


18

  A x 8  Ø 6 x 35 mm	E x 6  Ø 3.5 x 12 mm	CL x 1 	CR x 1 	
---	---	---	--	---

Screw eccentric rod A onto part 11 and 12.

        Secure guide rail CL and CR to part 11 and 12, respectively, using screw E.

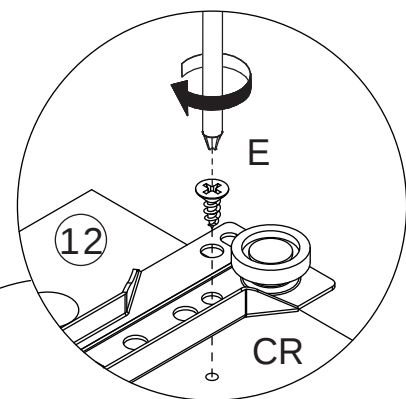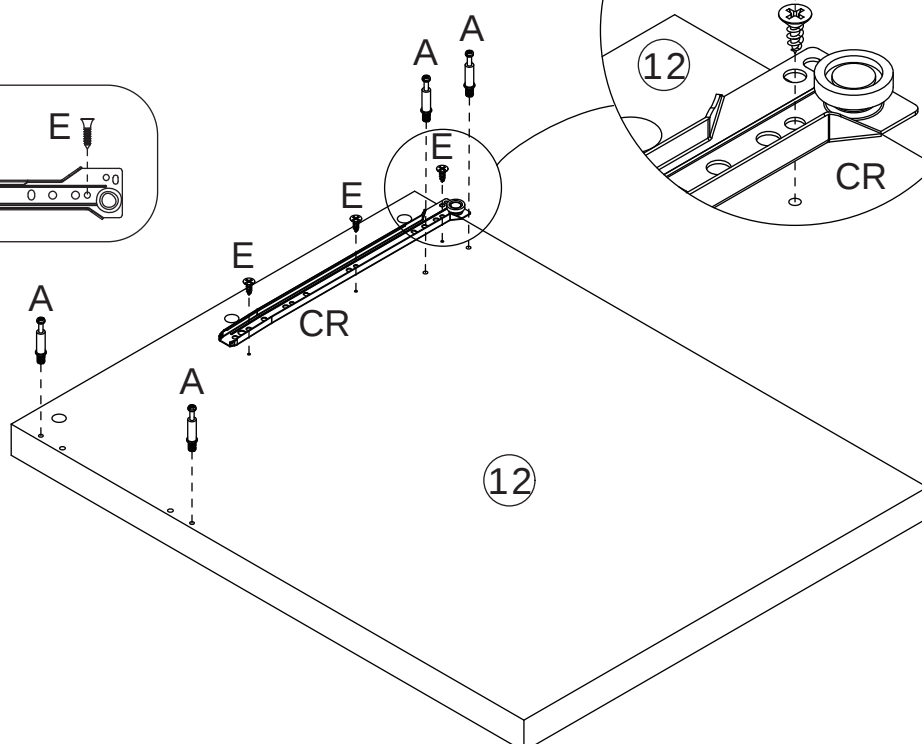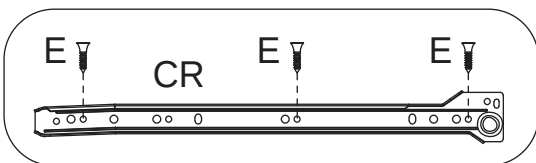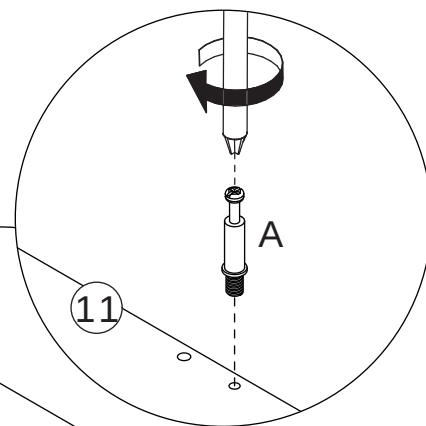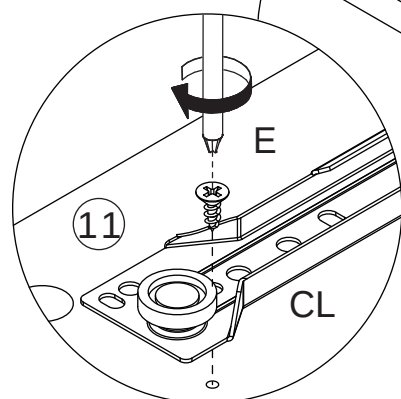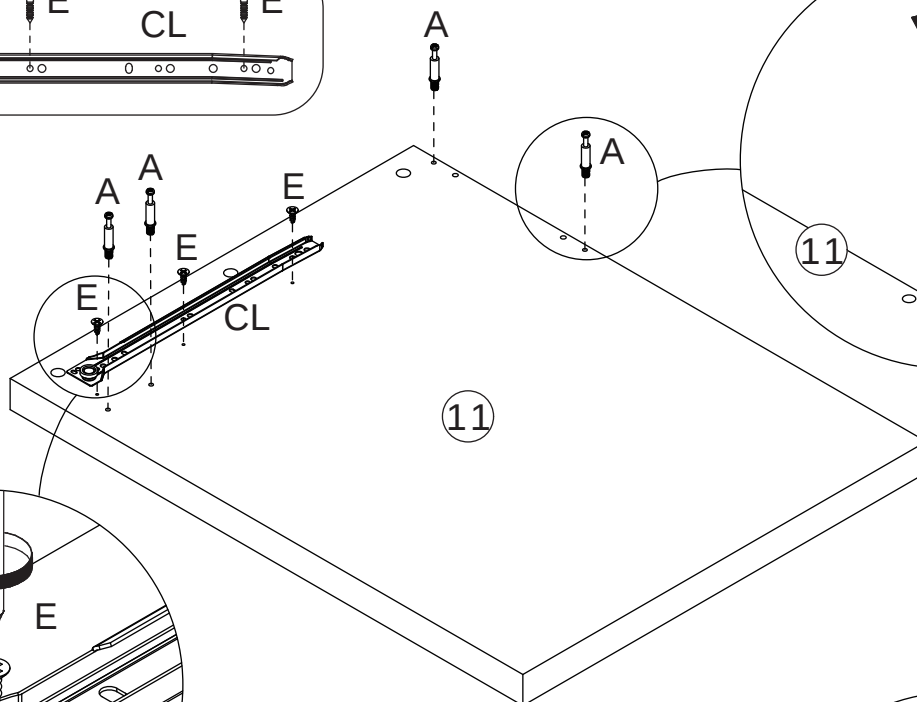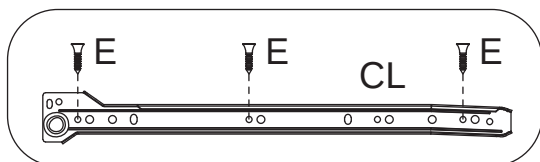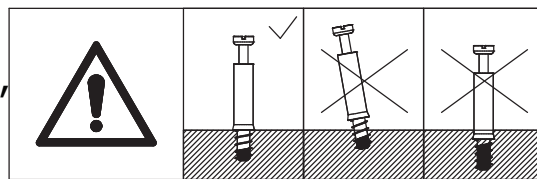

19

B x 8

 


Ø 15 x 10 mm



C x 4



Ø 6 x 30 mm




  Connect part 11 and 12 to part 16 and 19 using dowel C, then tighten by turning cam lock B clockwise as shown.

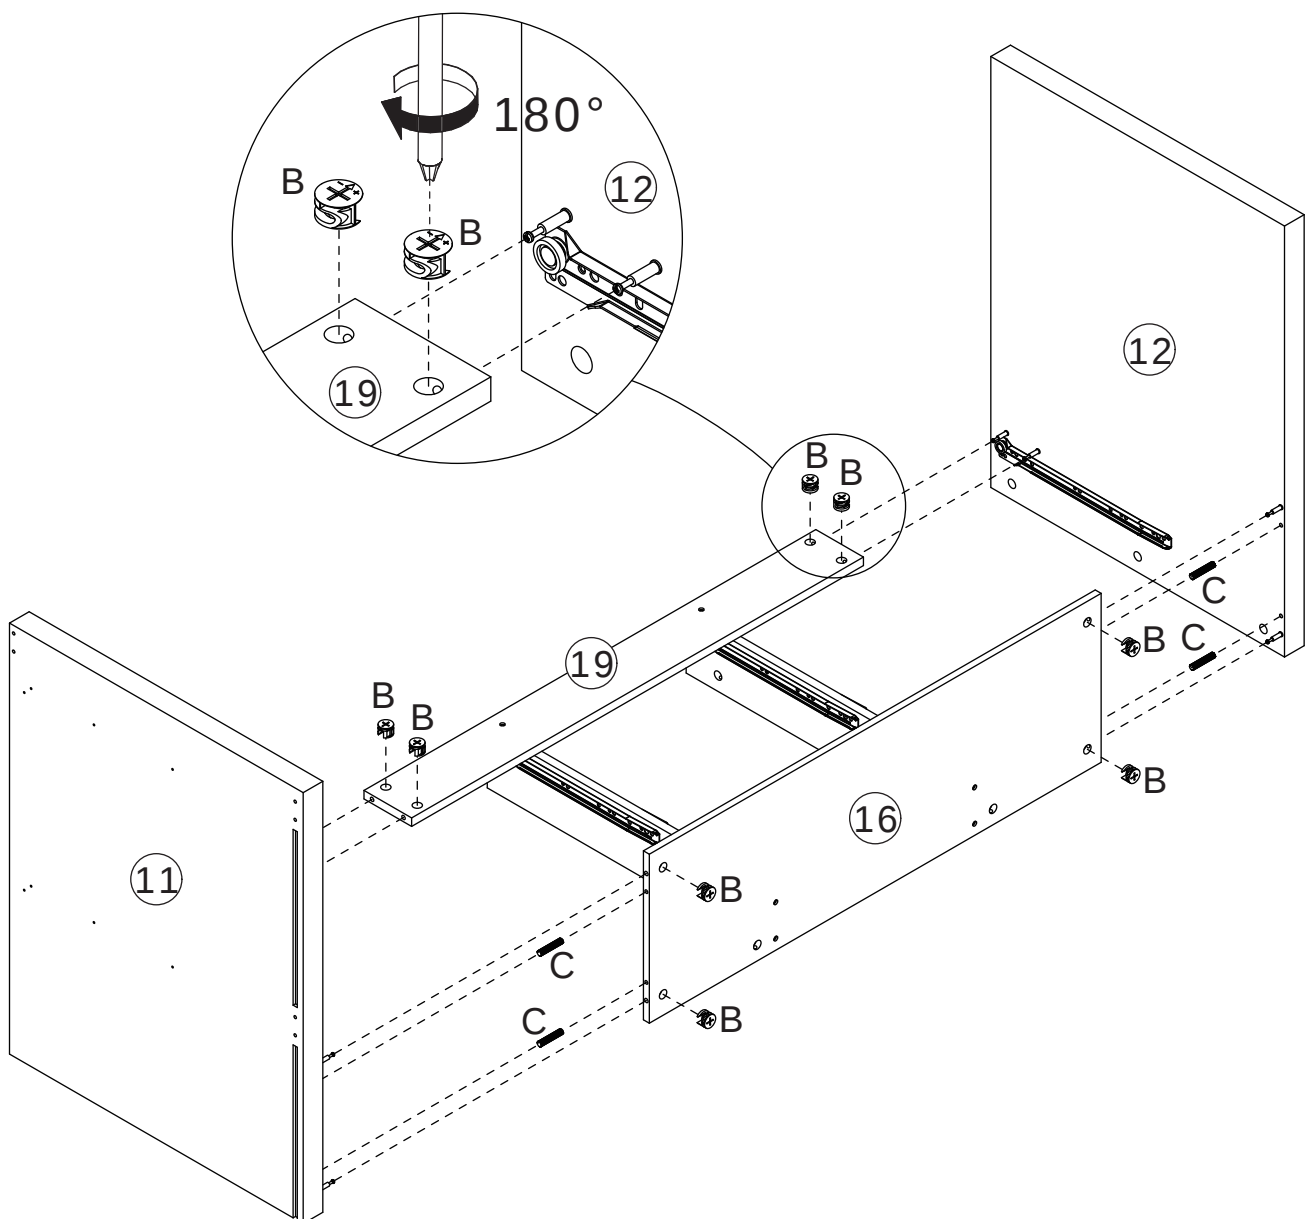
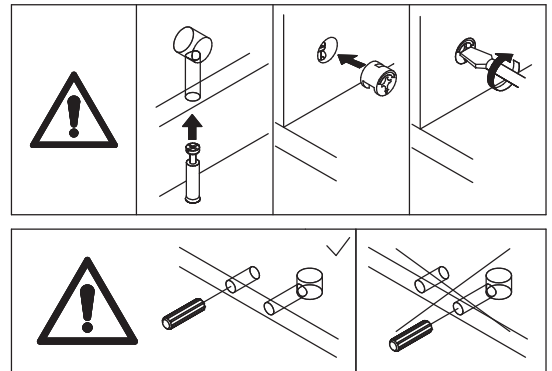


20






 
Rotate the unit 180 degrees.

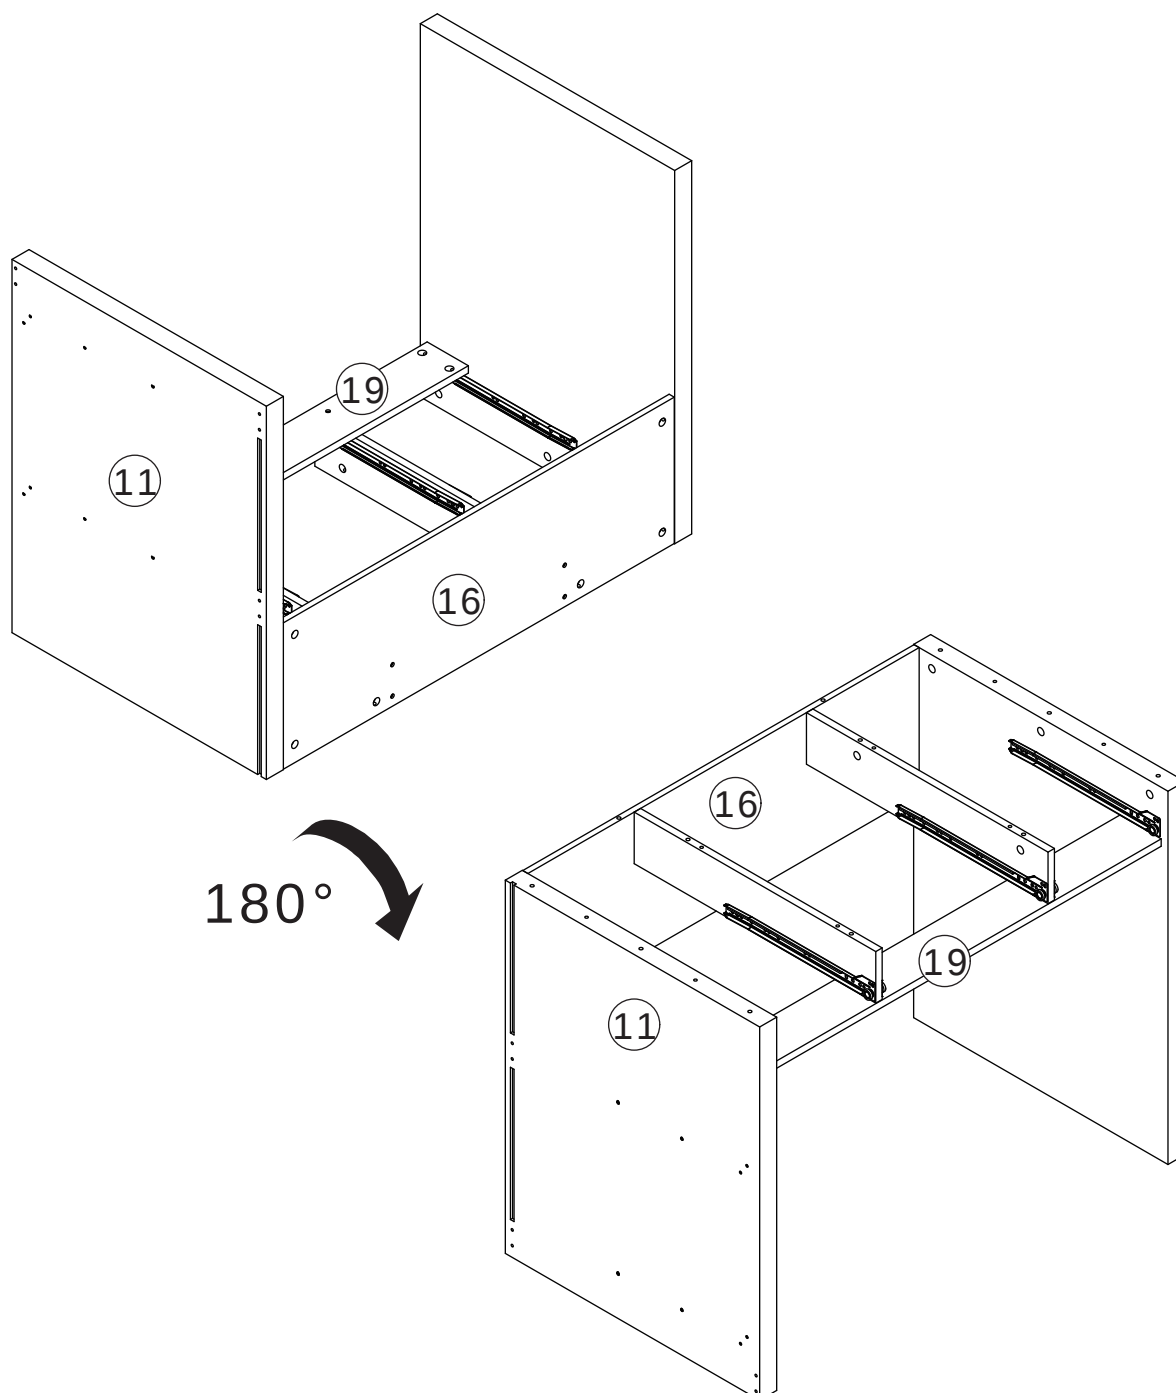

21

  A x 6  Ø6 x 35 mm	E x 8  Ø3.5 x 12 mm	CR x 2 	
--	--	---	---

      Screw eccentric rod A onto part 11.
Secure guide rail CR to part 11 using
screw E as shown.

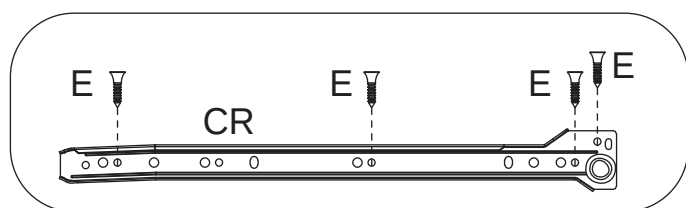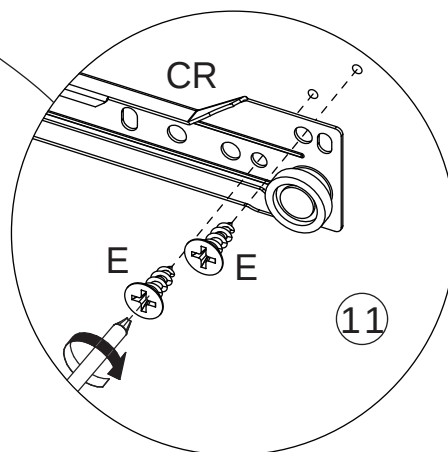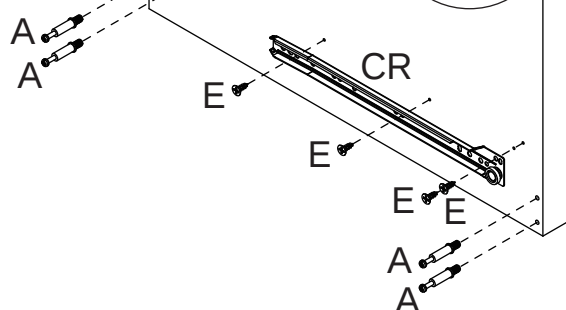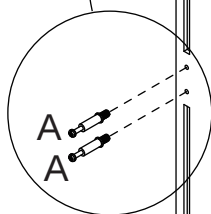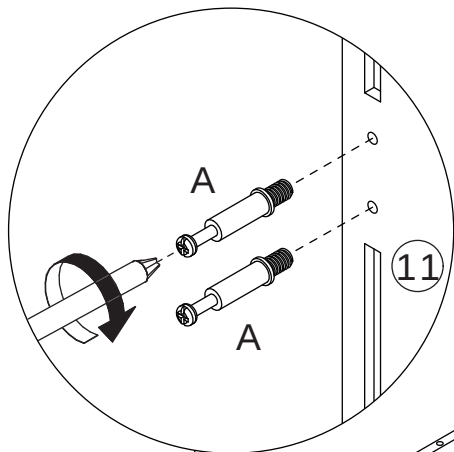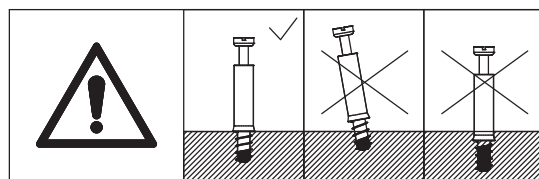


22



B x 4



 Ø 15 x 10 mm



  Connect part 14 and 15 to part 11, then tighten by turning cam lock B clockwise as shown.

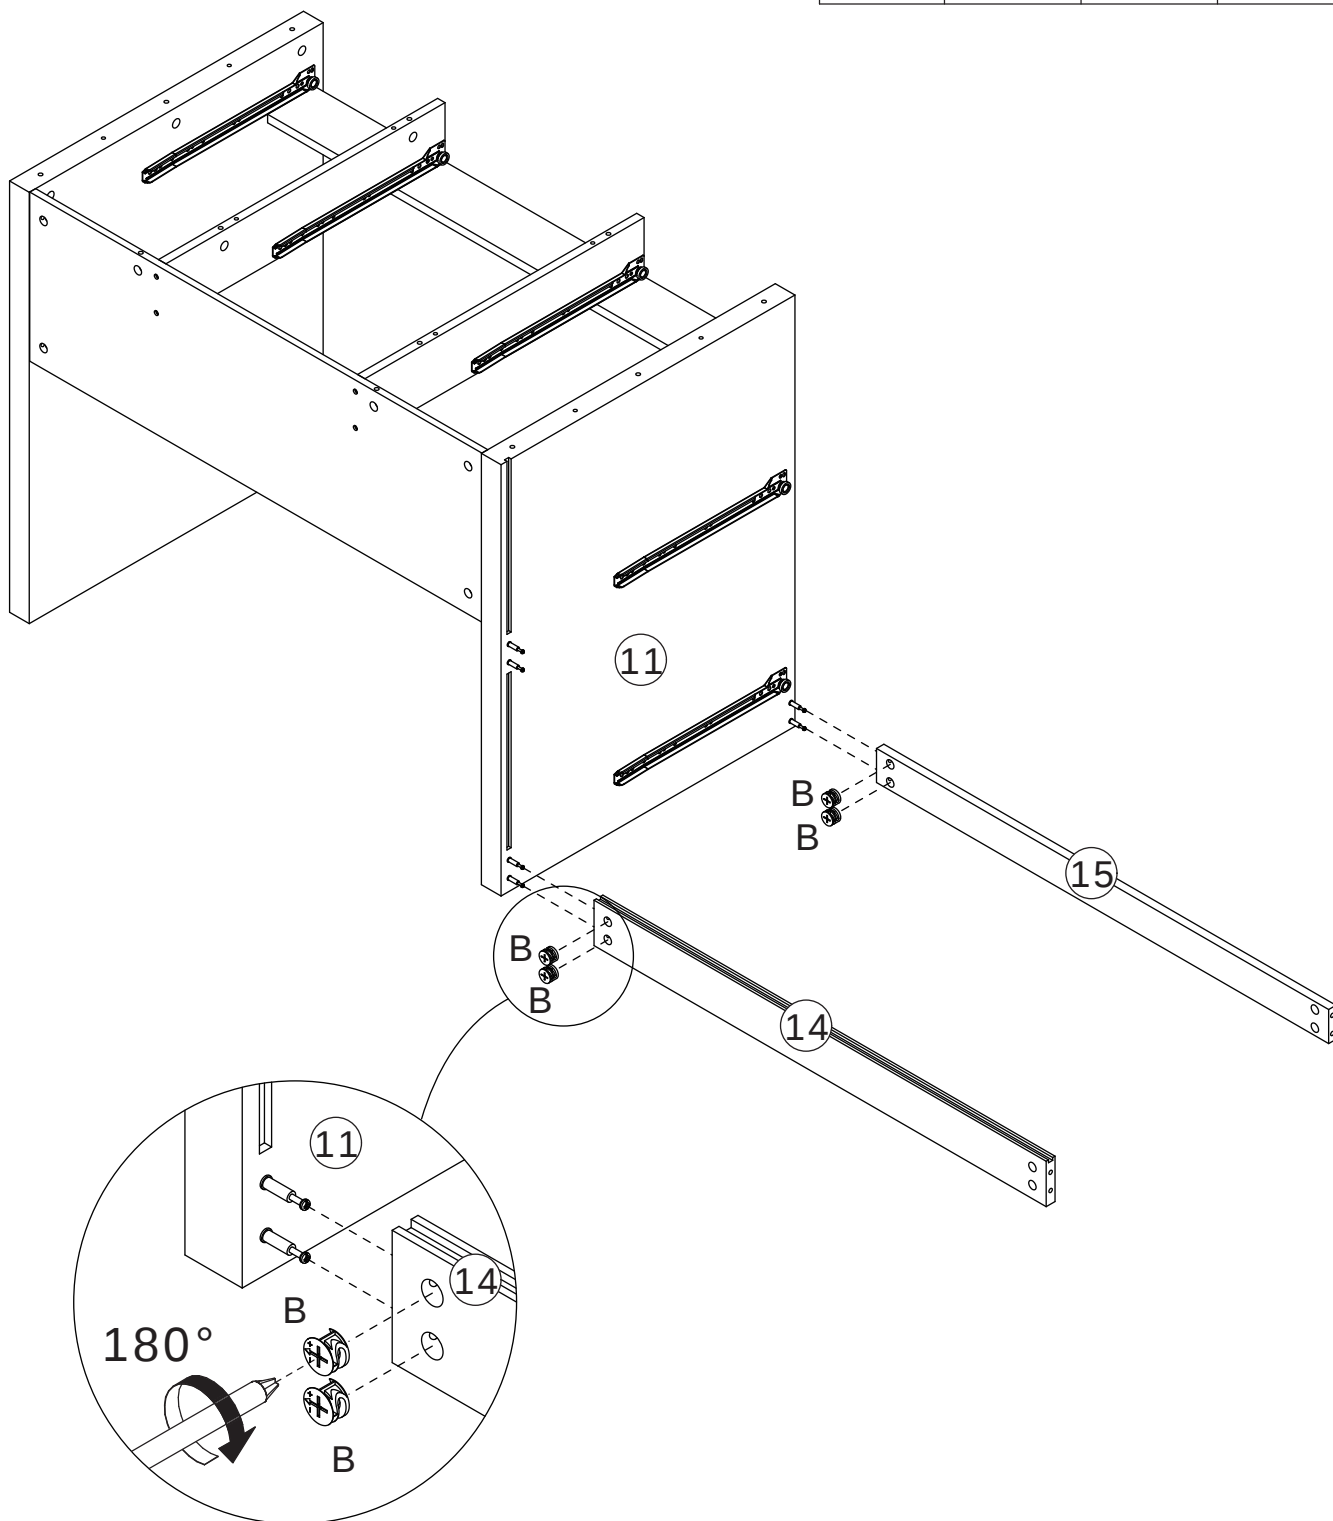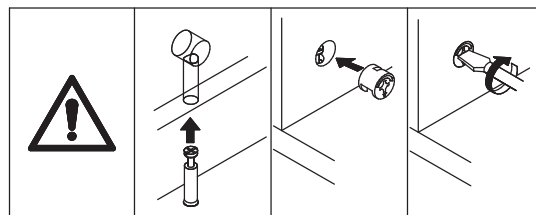


23



B x 2



 
Ø 15 x 10 mm






 
 
Connect part 13 to part 11, then tighten by turning cam lock B clockwise as shown. Insert part 38 along the grooves.

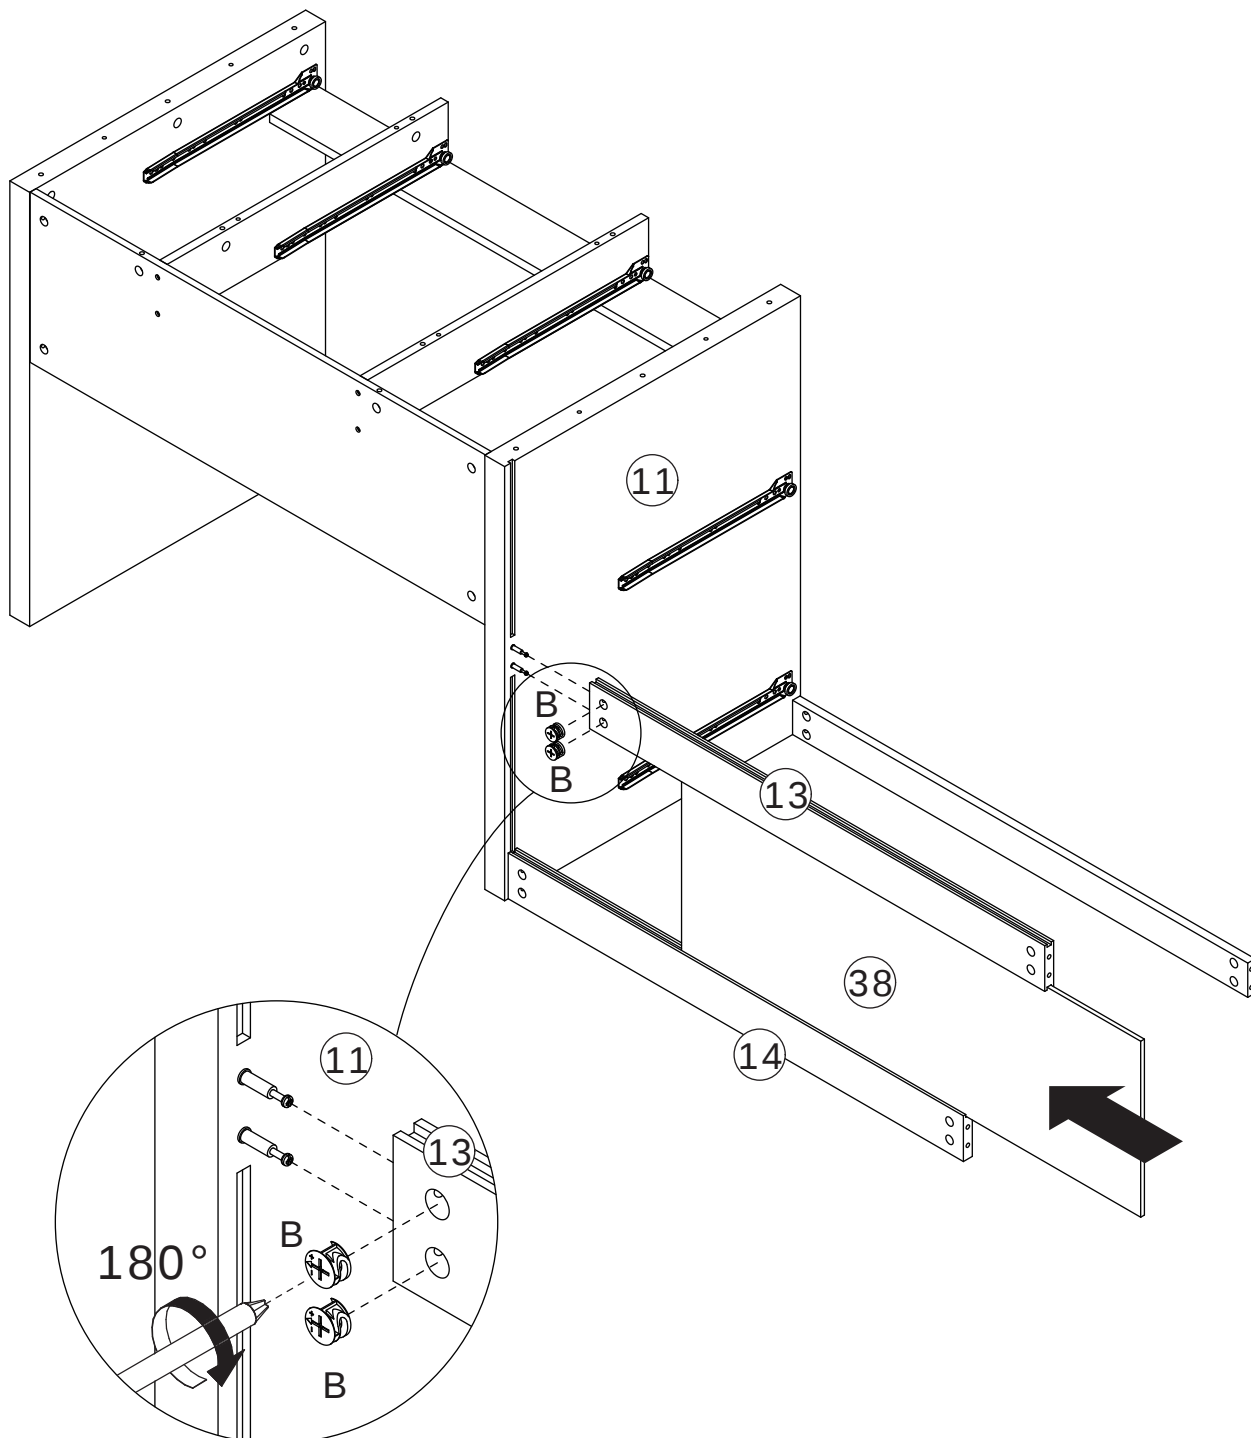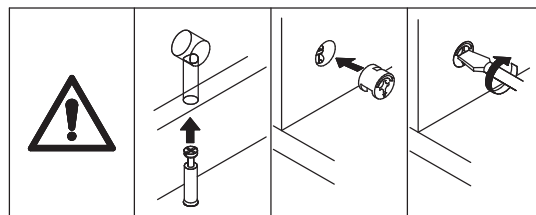

24

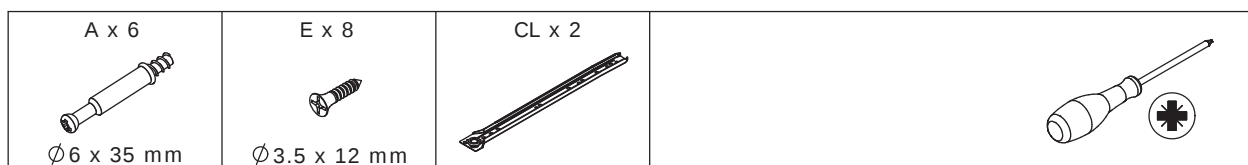 

     Screw eccentric rod A onto part 10.
Secure guide rail CL to part 10 using screw E as shown.

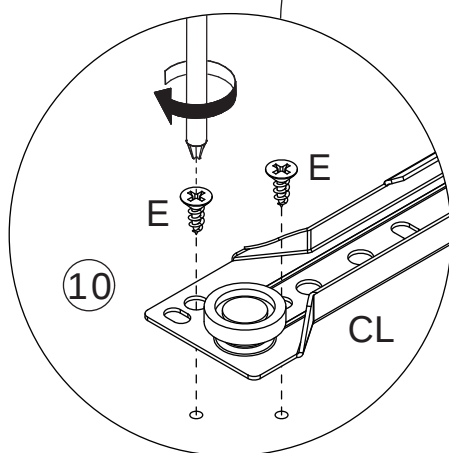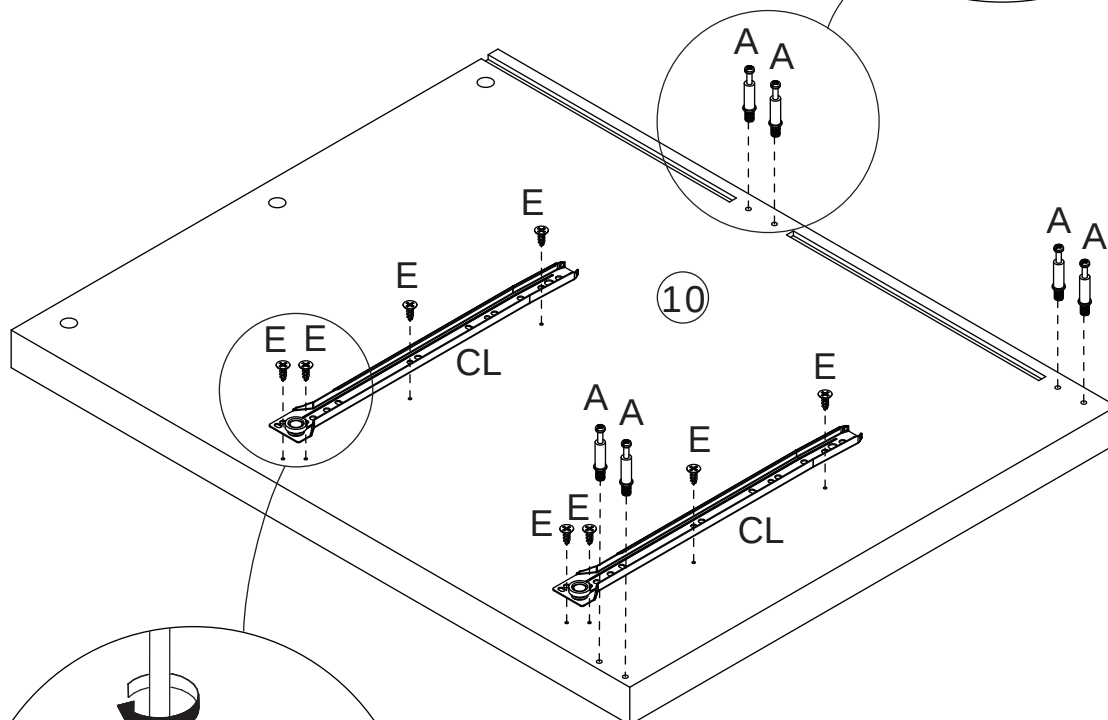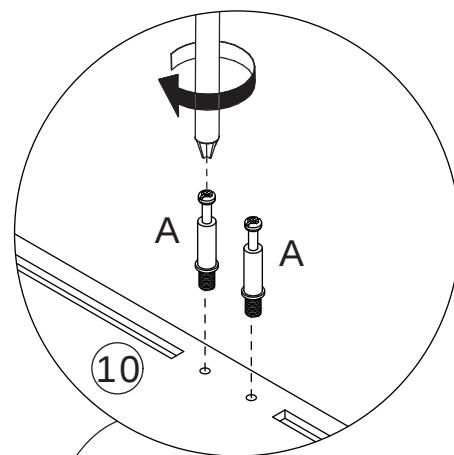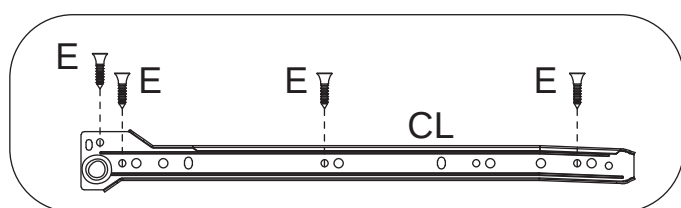
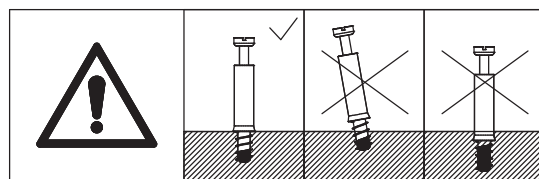


25


B x 6



  Ø 15 x 10 mm

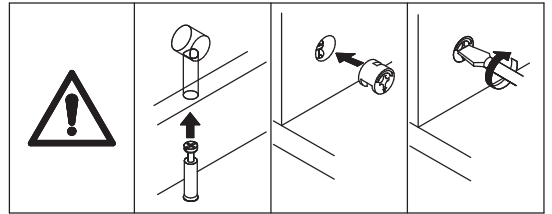


 Connect part 10 to part 13, 14, and 15, then tighten by turning cam lock B clockwise as shown.

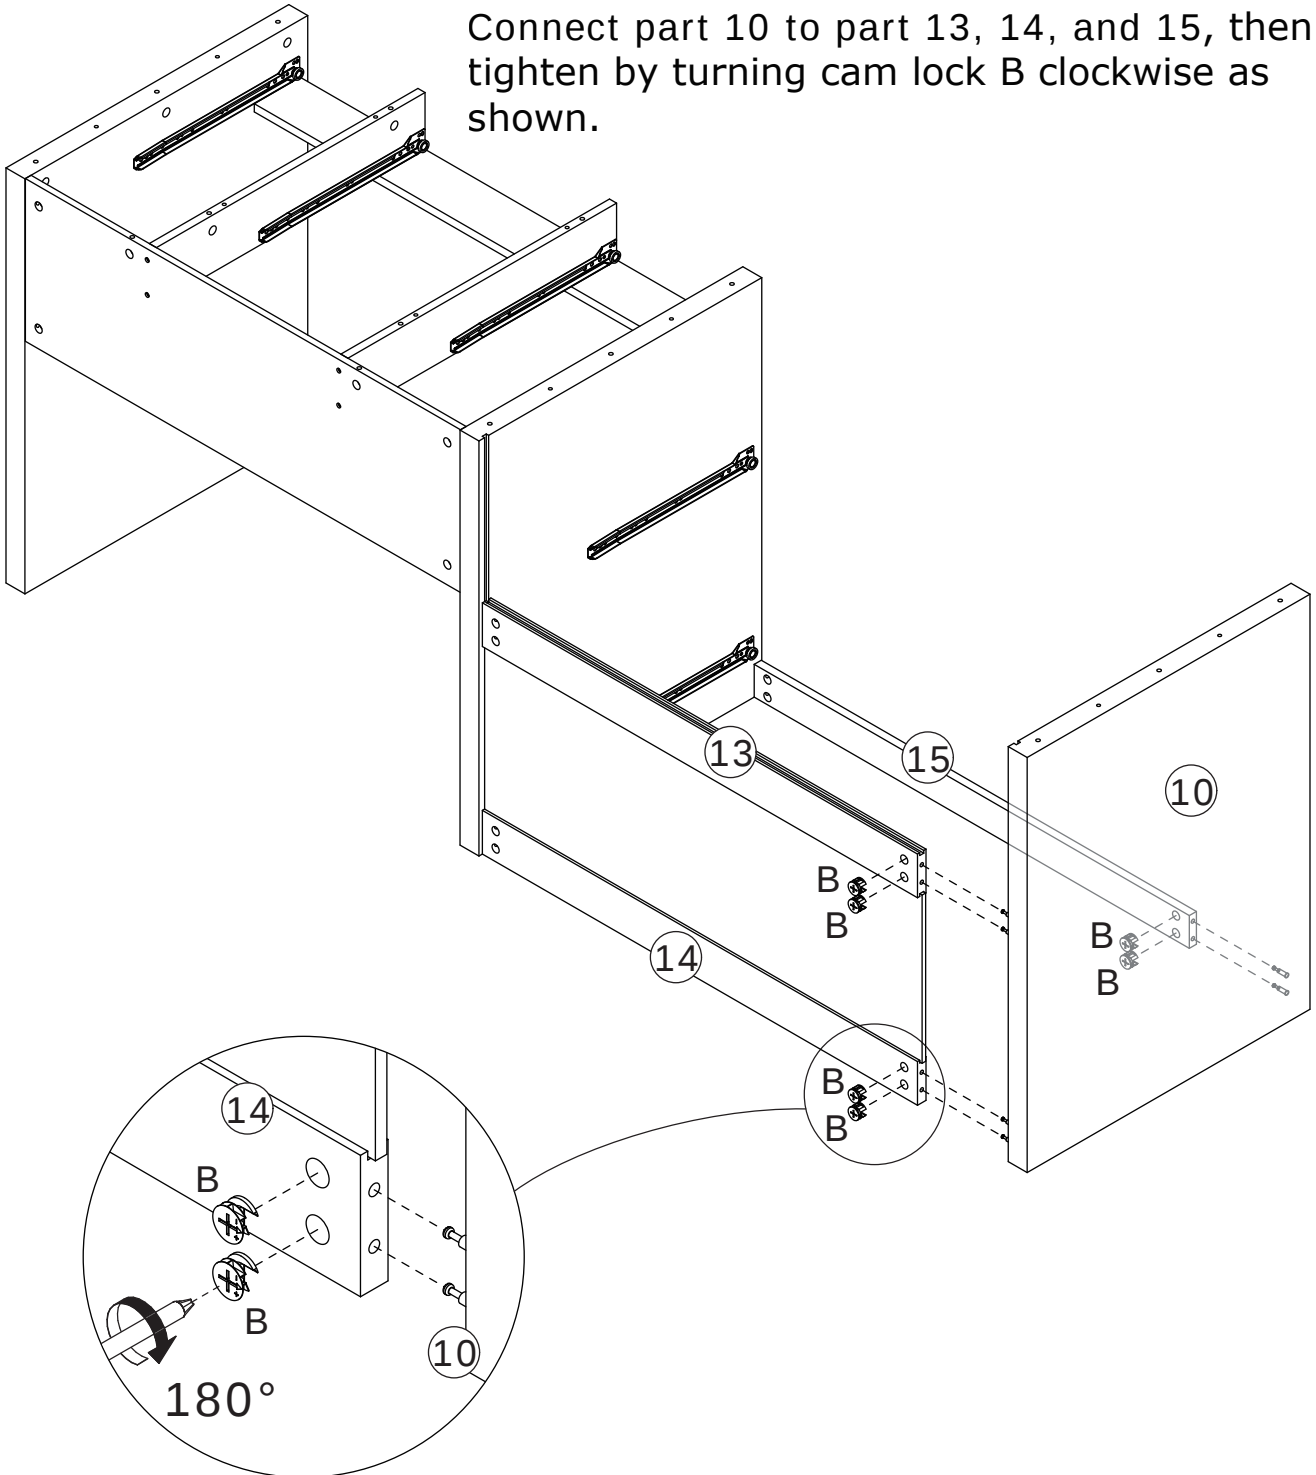


26



 
Insert part 38 along the available grooves.

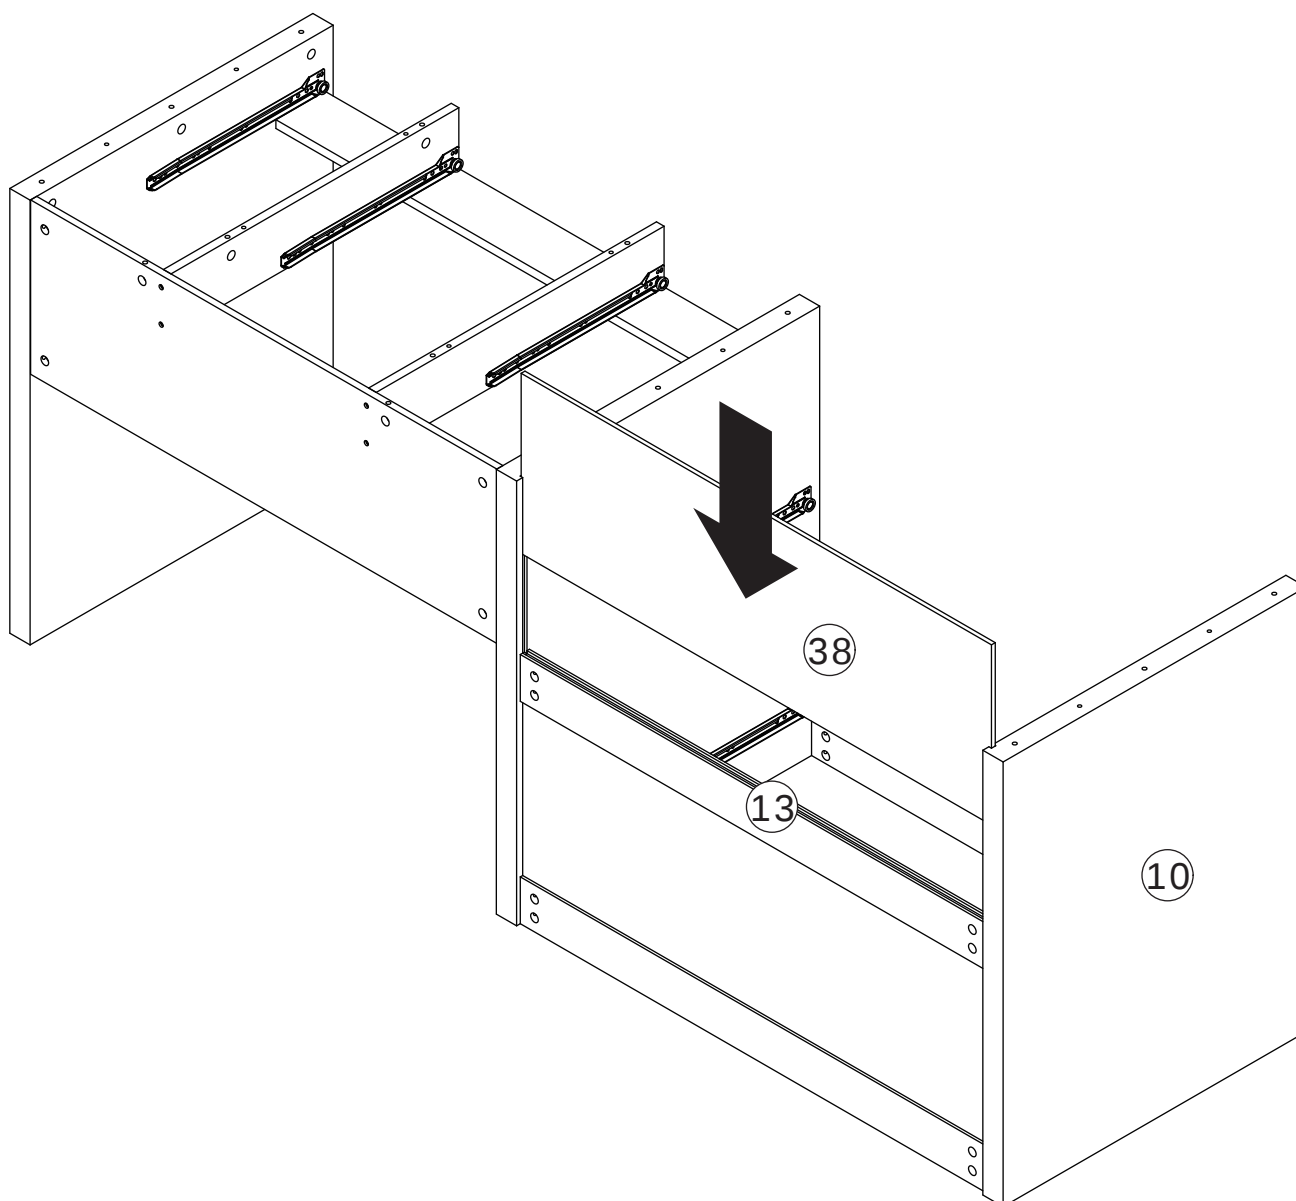




27

 B x 13  Ø 15 x 10 mm	C x 10  Ø 6 x 30 mm	
---	--	---


 
 
 
Connect the two assembly components using dowel C, then tighten by turning cam lock B clockwise as shown.

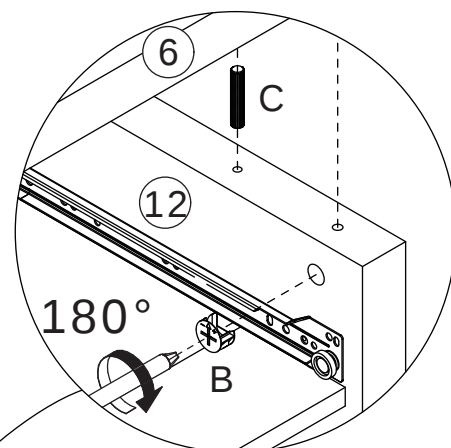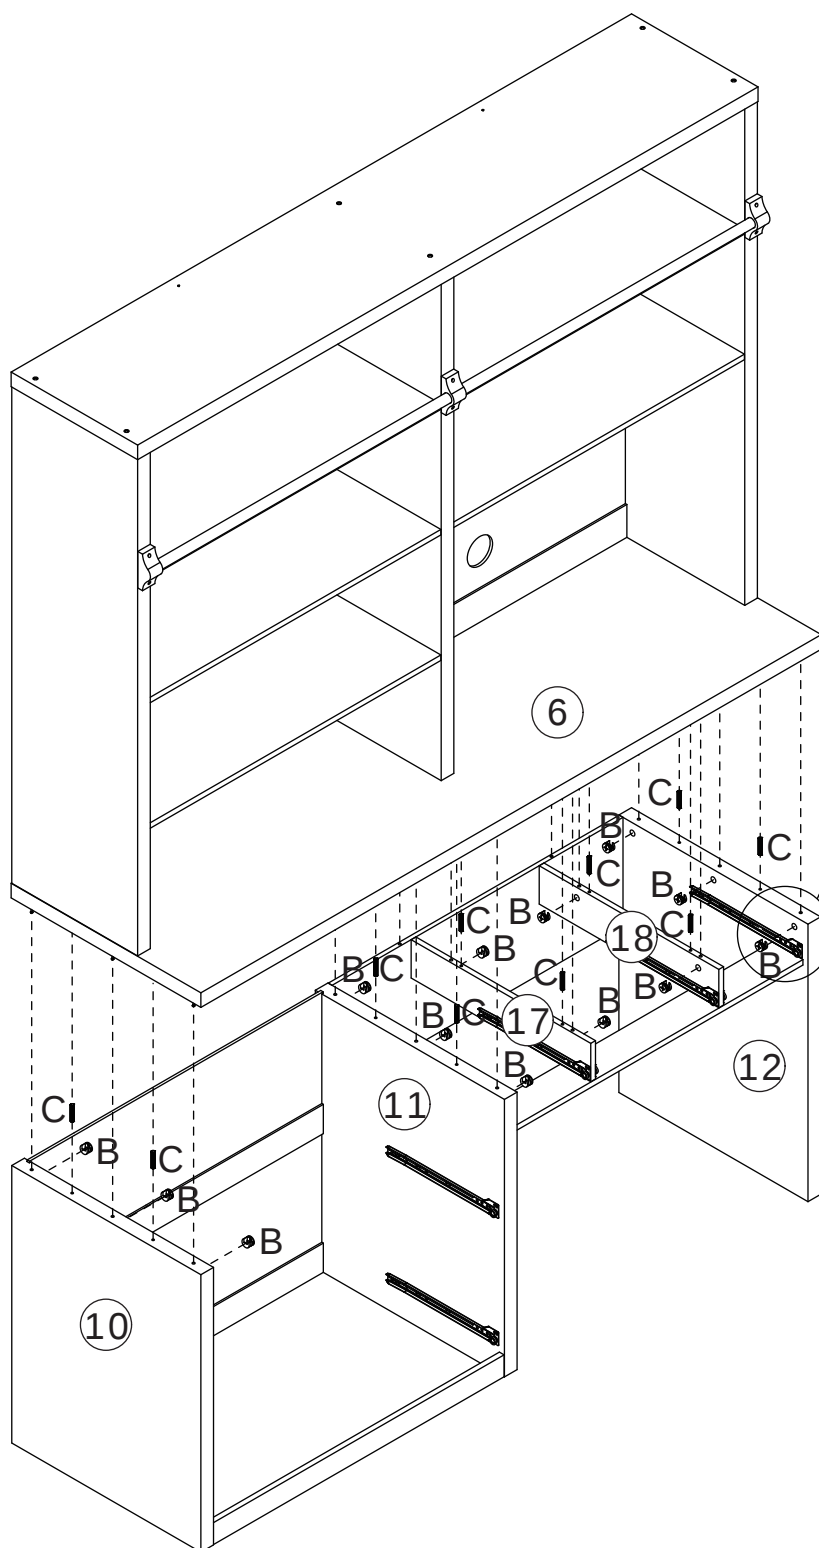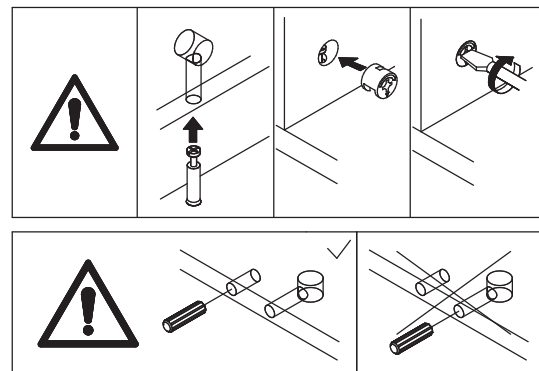



28

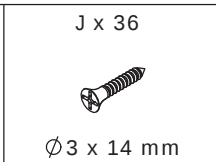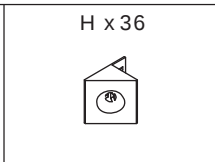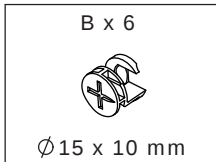   

    
Put cam lock B into holes on part 7 and 16, then tighten them.
 Insert back panel clip H into slots and secure them using screw J.

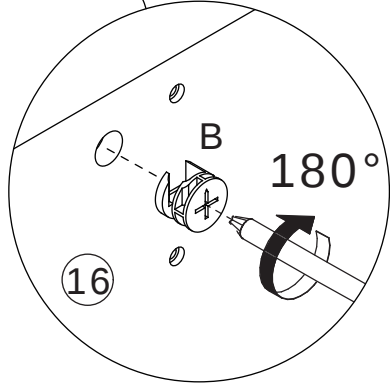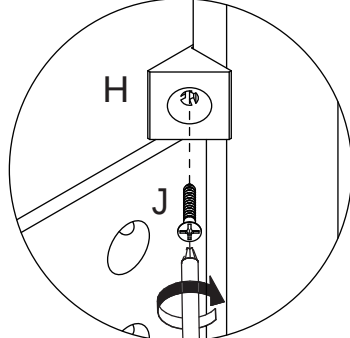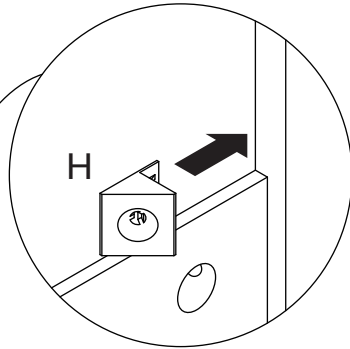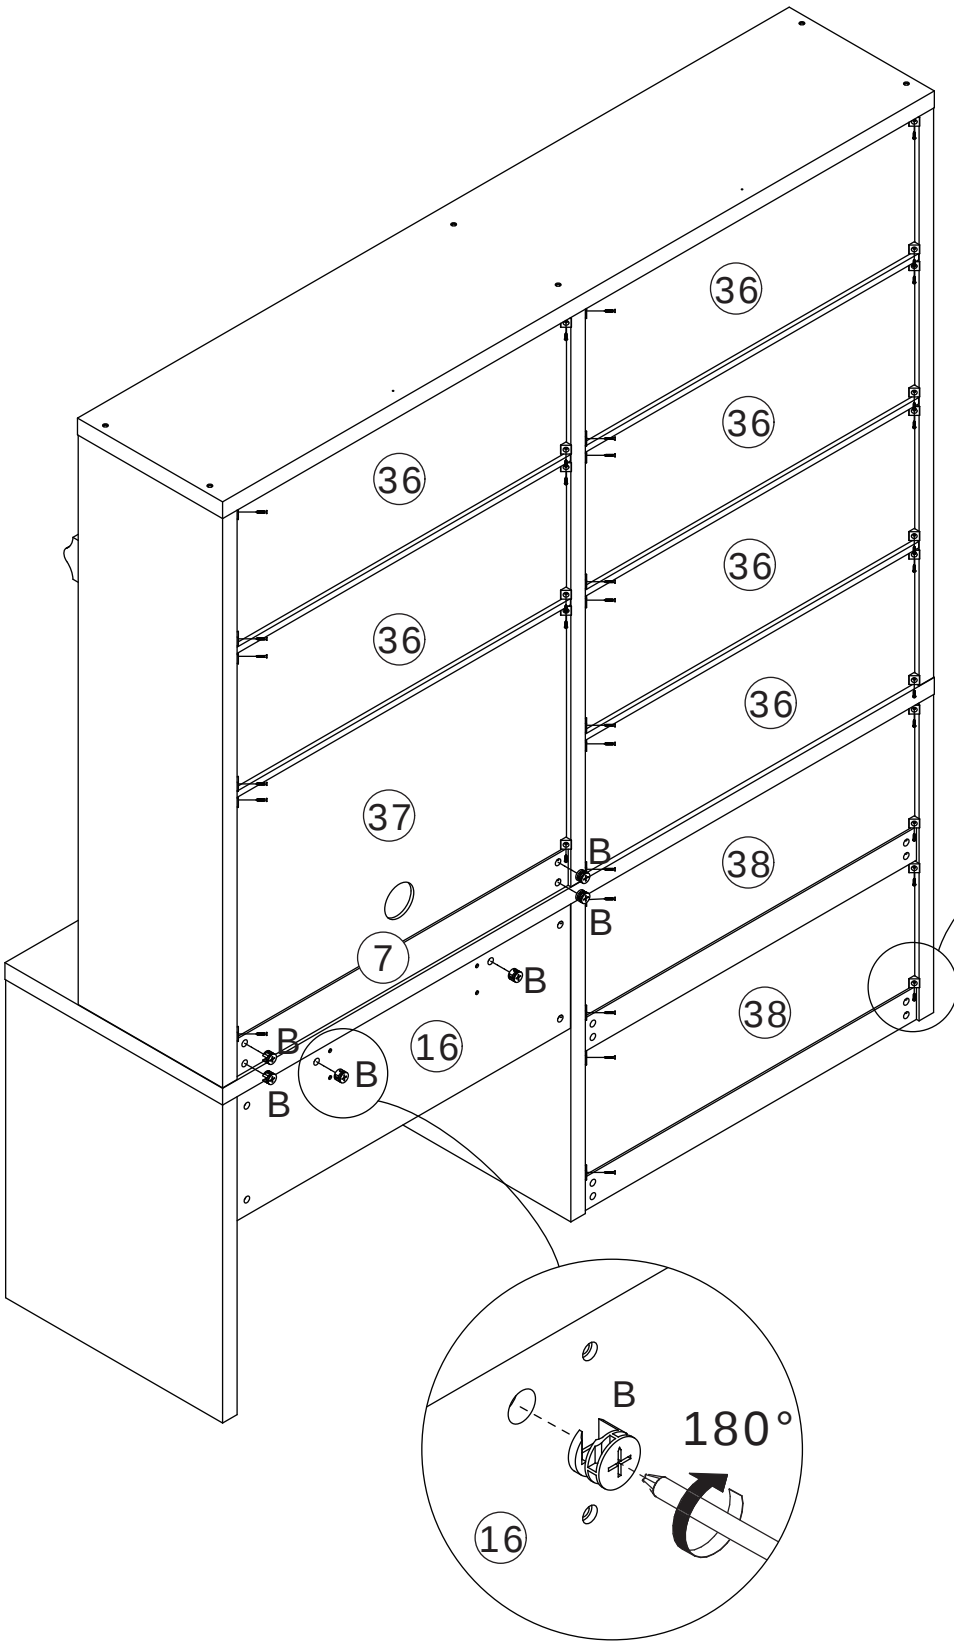


29

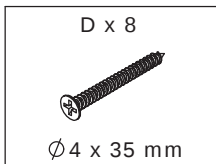  



 
Secure part 21 and 23 to part 20 using screw D.

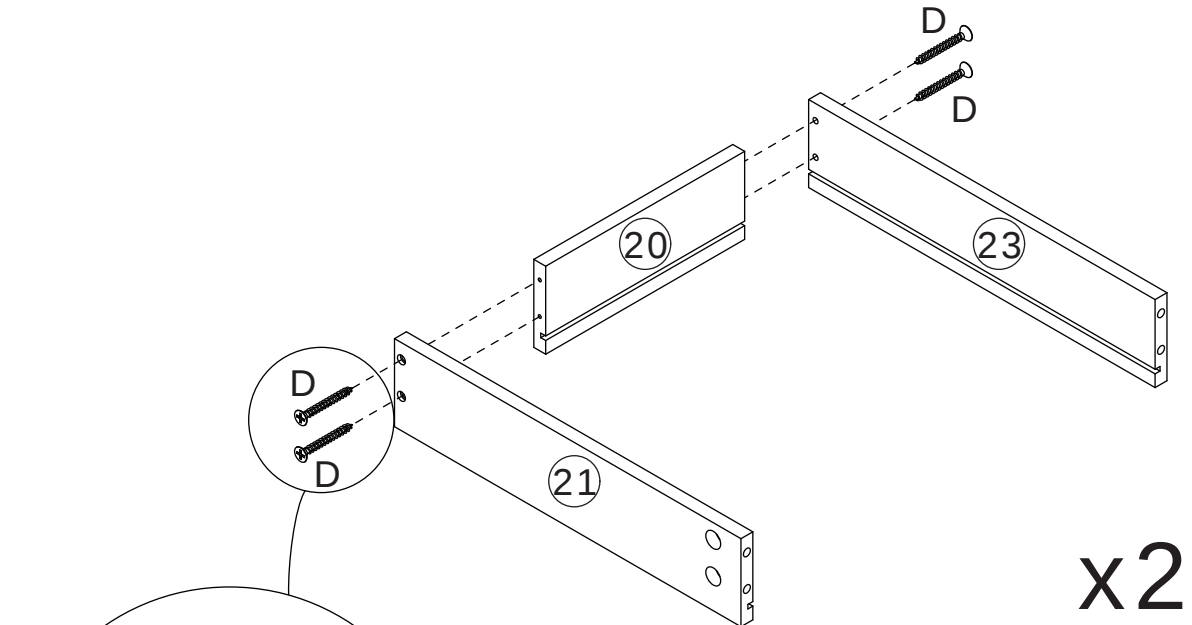

Insert part 22 along the grooves.


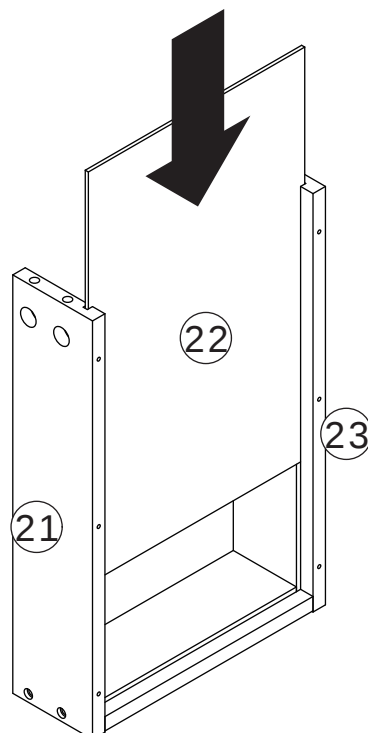 


30

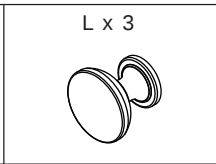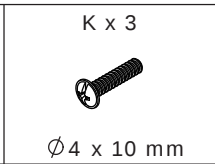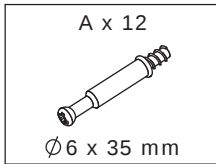   

Screw eccentric rod A onto part 24, 27, and 28.

  Secure knob L using screw K as shown.

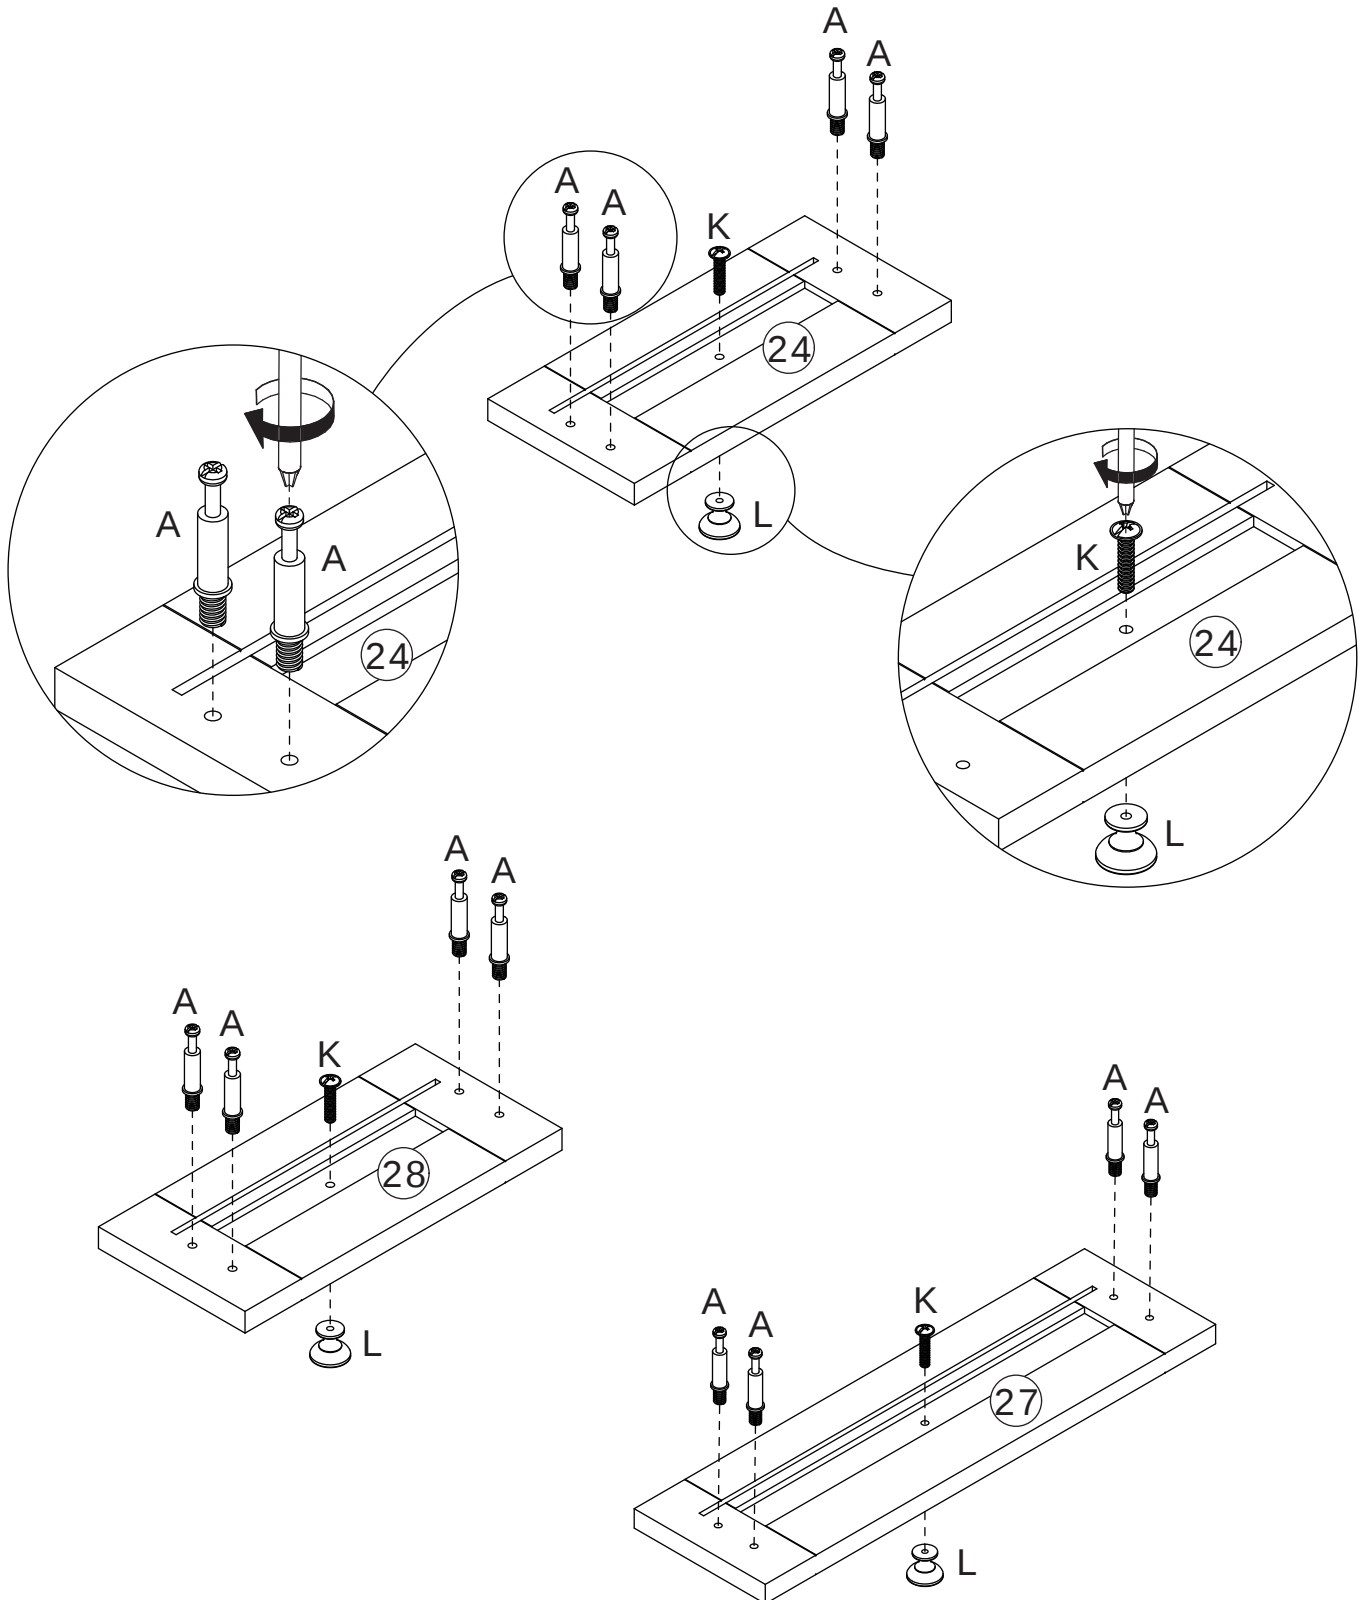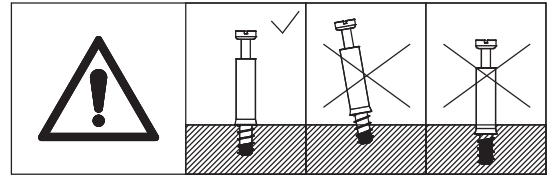


31





B x 8



 Ø 15 x 10 mm



    Connect part 24 and 28 to part 21 and 23 respectively, then tighten by turning cam lock B clockwise as shown.

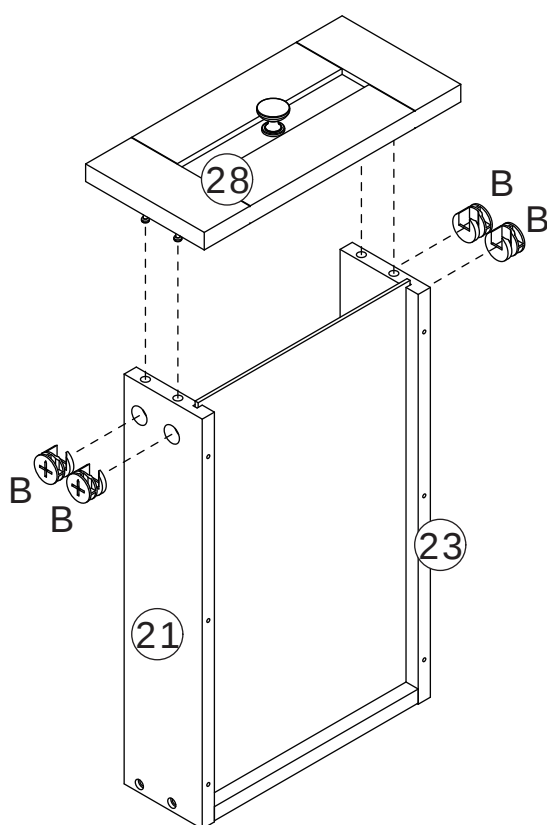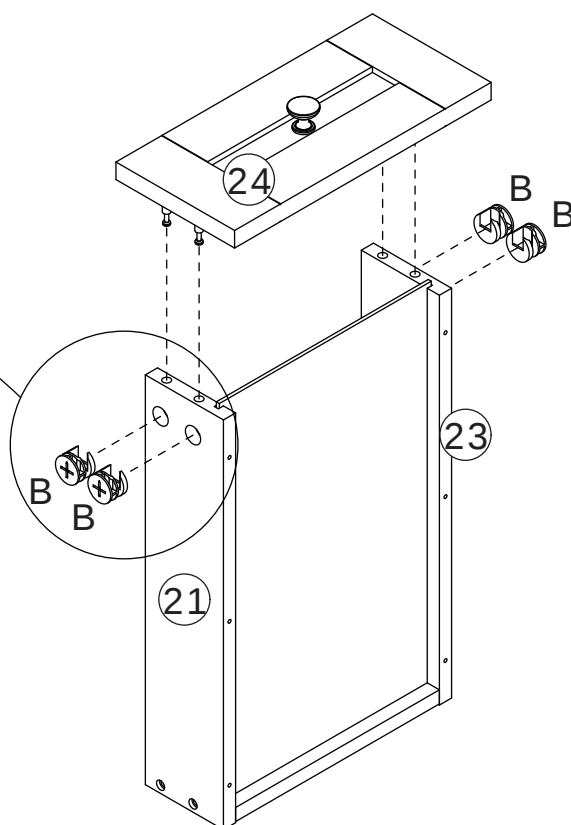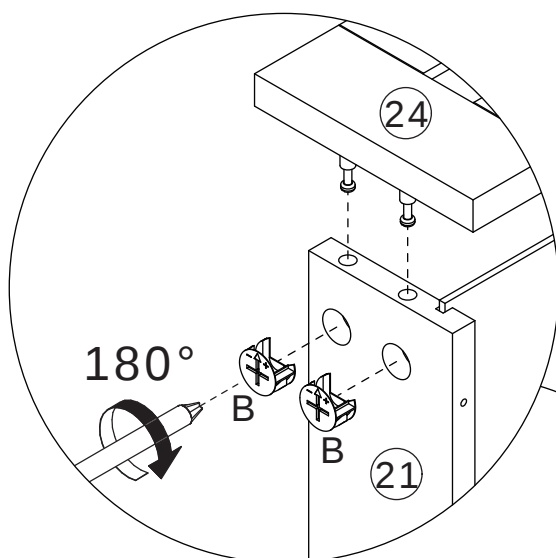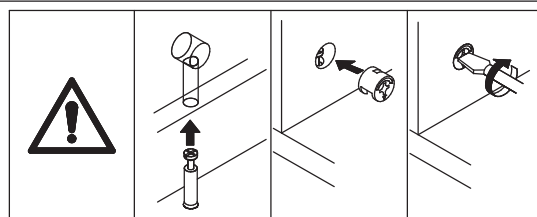

32

E x 12

 
 
 


Ø3.5 x 12 mm



DL x 2





DR x 2

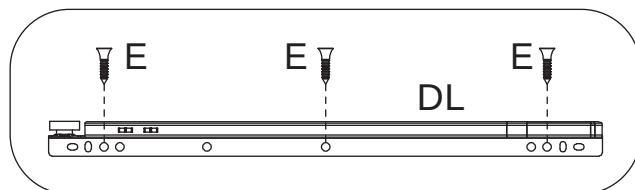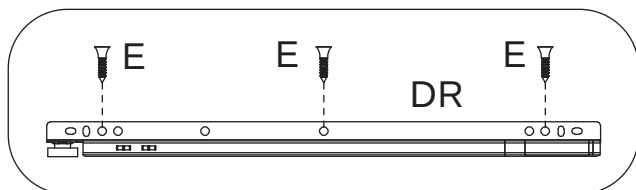

  
Secure guide rail DL and DR to part 21 and 23 using screw E.

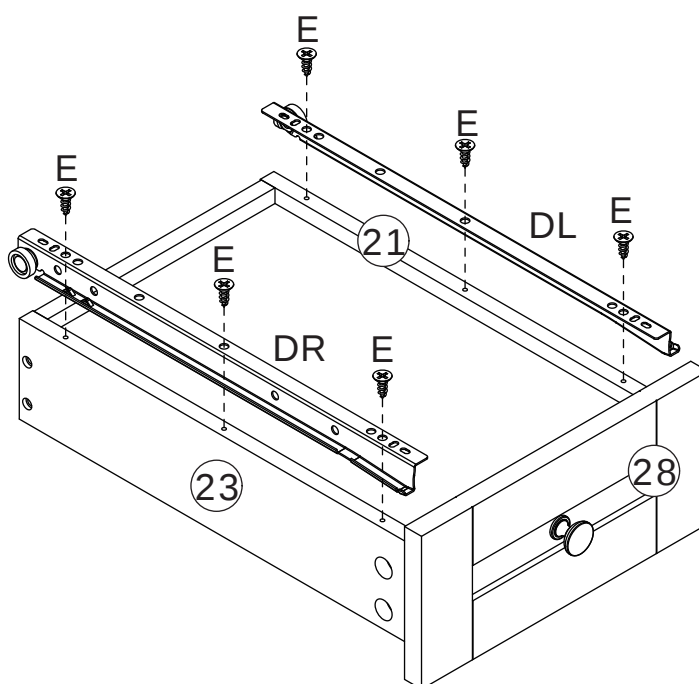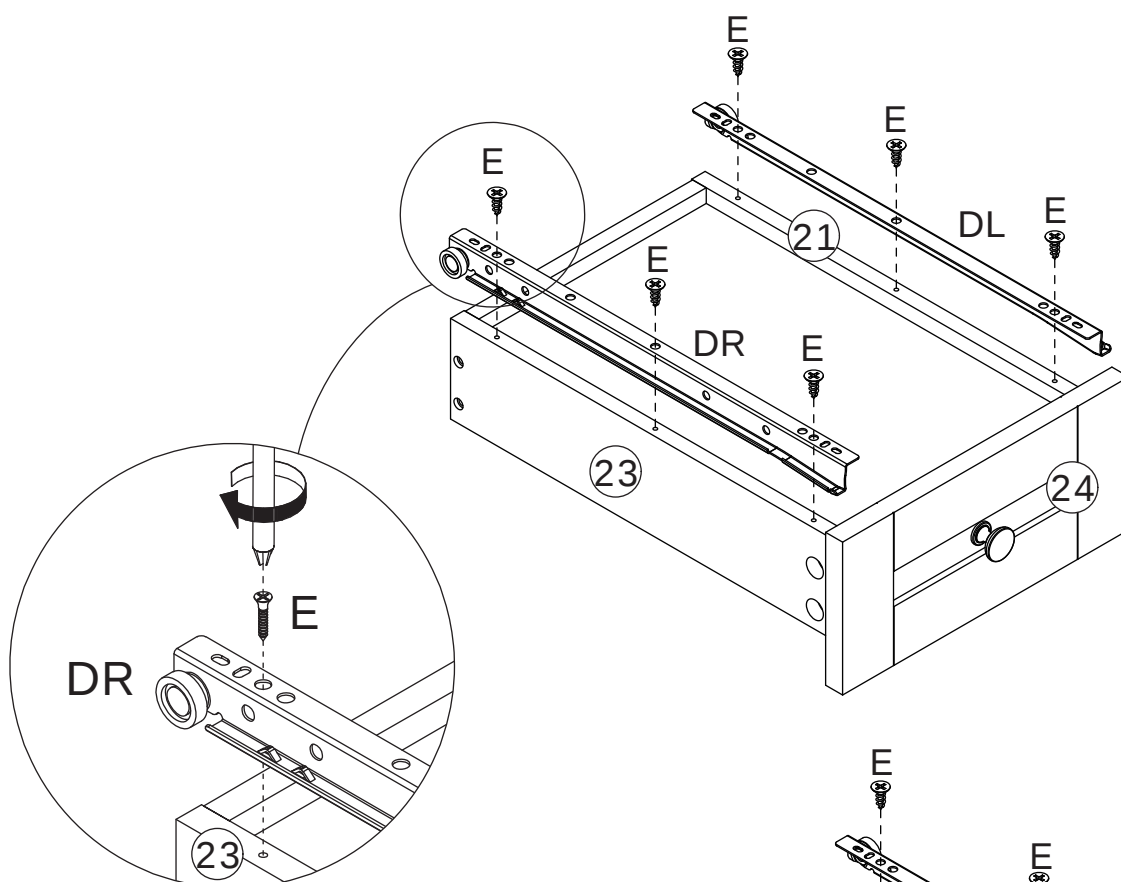


33

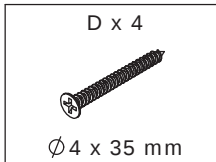  

 Secure part 21 and 23 to part 25 using screw D.

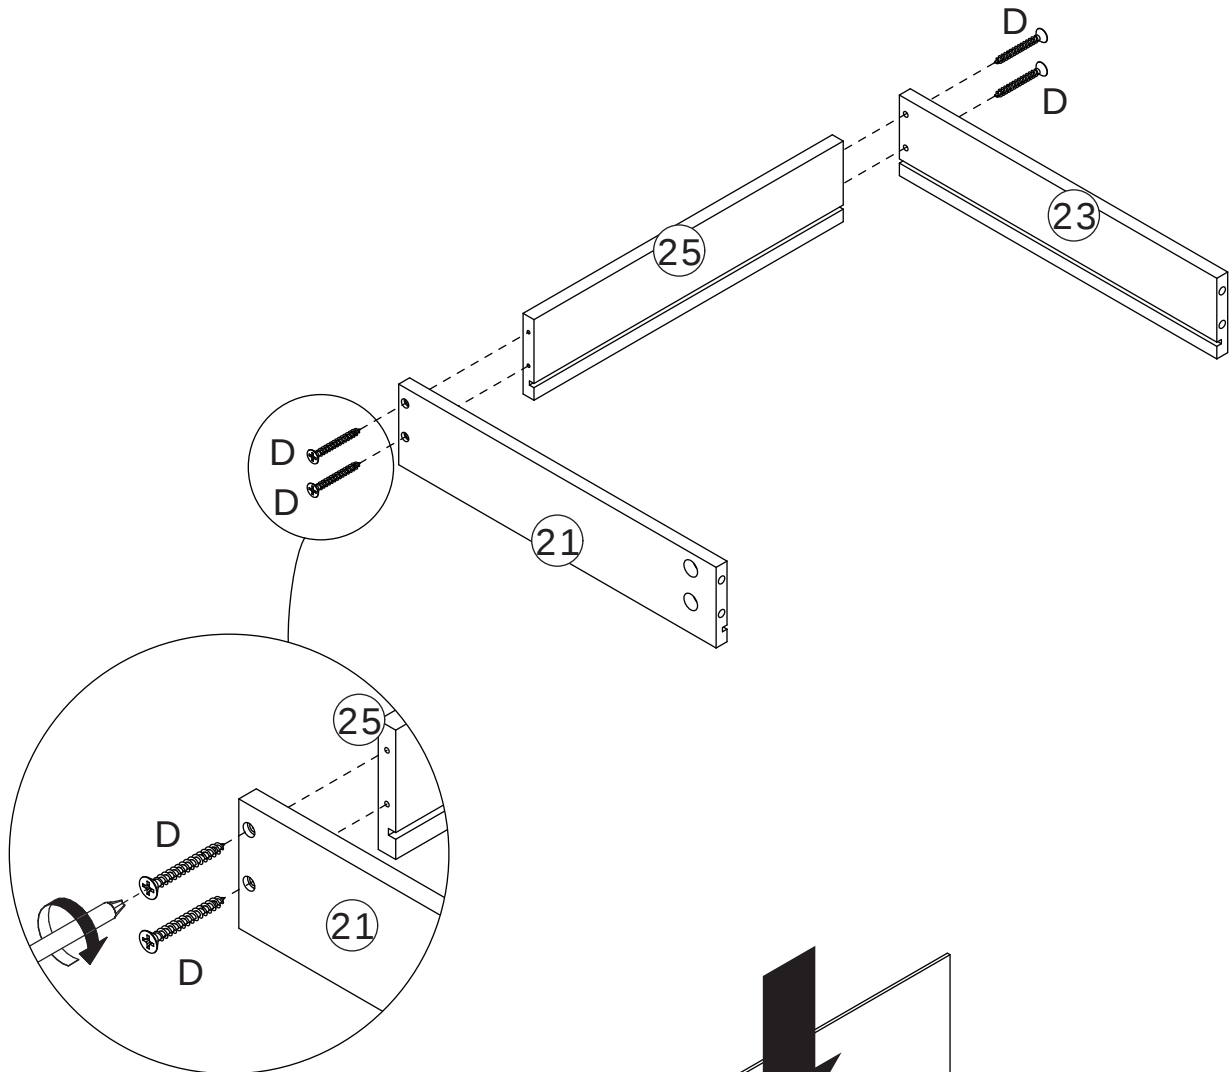

Insert part 26 along the grooves.

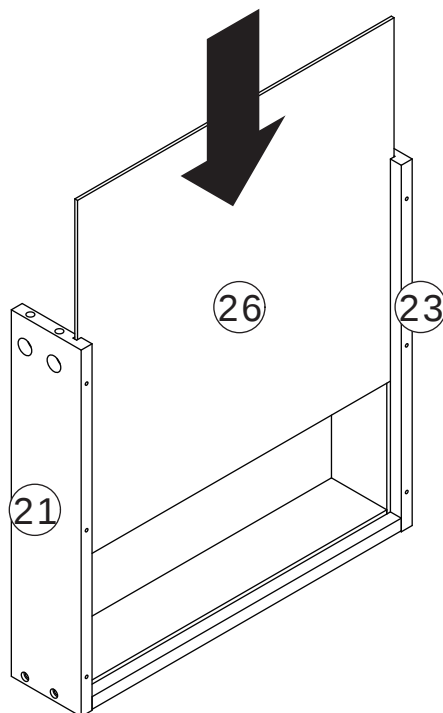 


34




B x 4



 Ø 15 x 10 mm



   Connect part 27 to part 21 and 23, then tighten by turning cam lock B clockwise as shown.

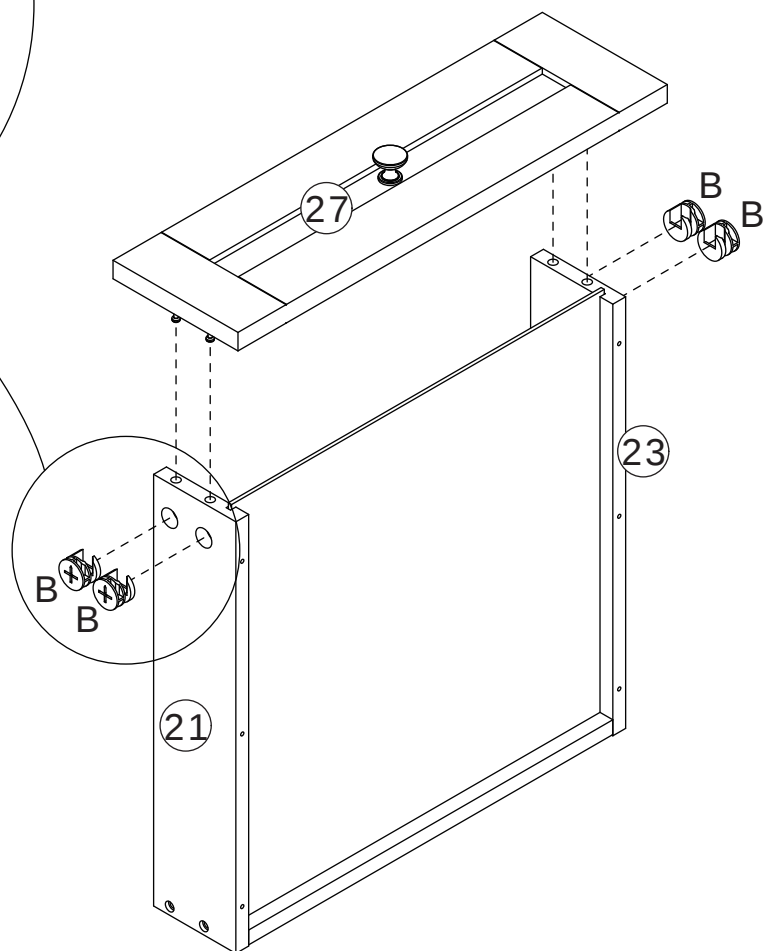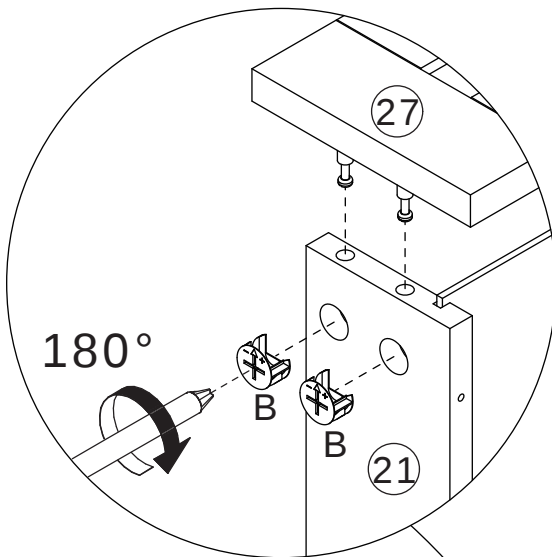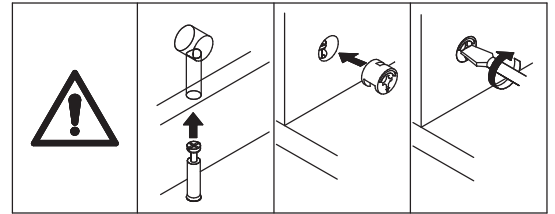

35

E x 6

 


Ø 3.5 x 12 mm




DL x 1





DR x 1



   
Secure guide rail DL and DR to part 21 and 23 using screw E.

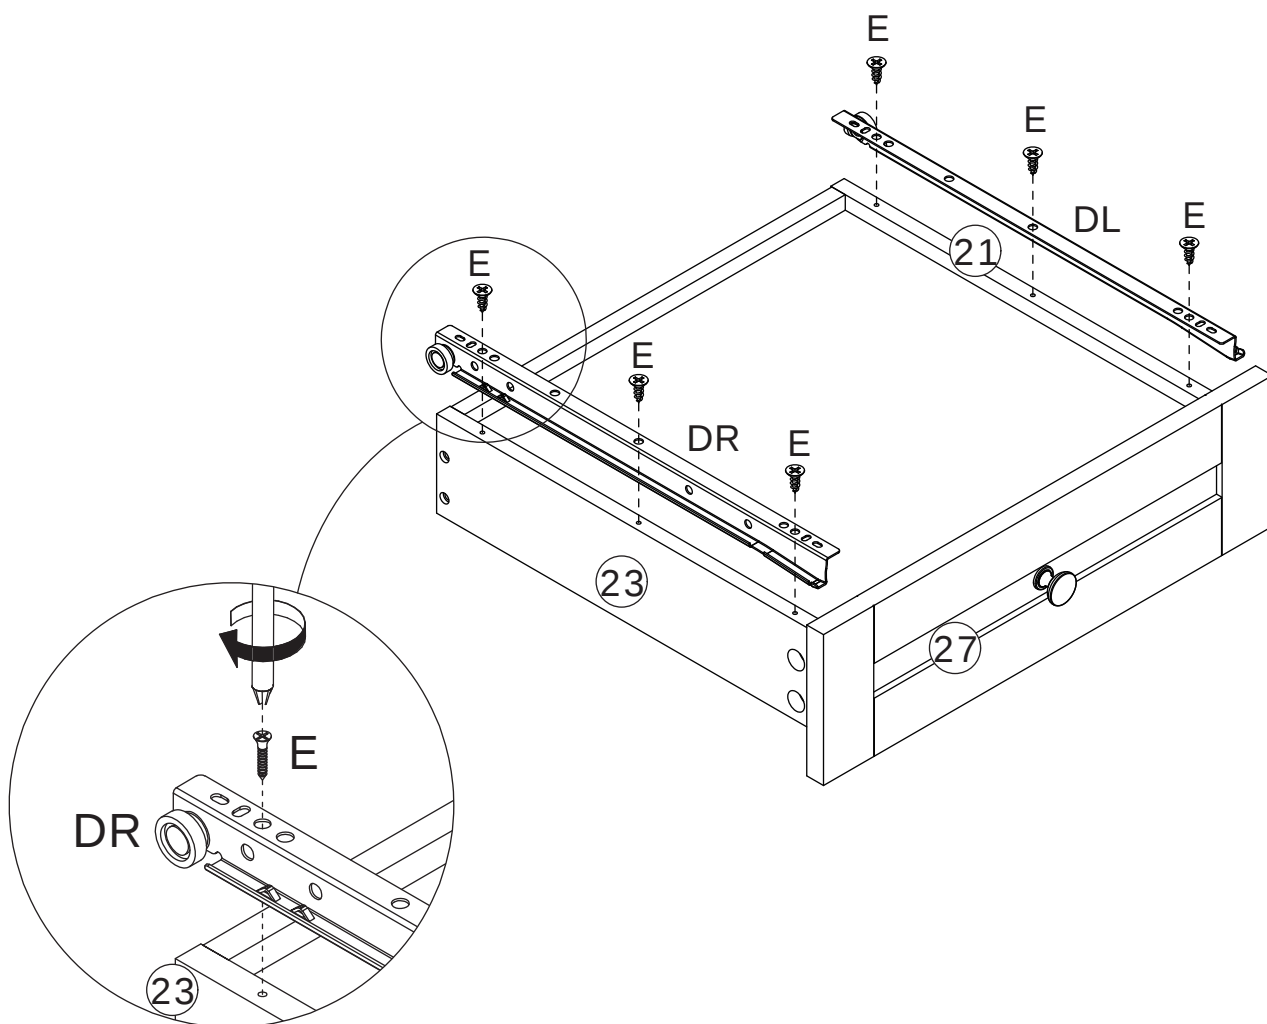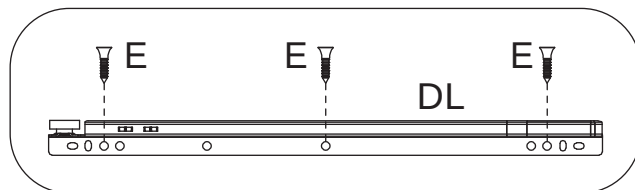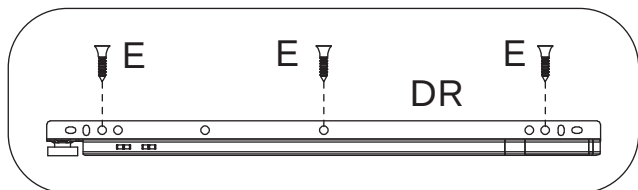


36

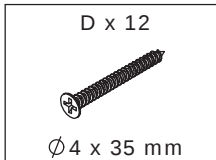  

 Secure part 30, 31 and 33 to part 29 using screw D.

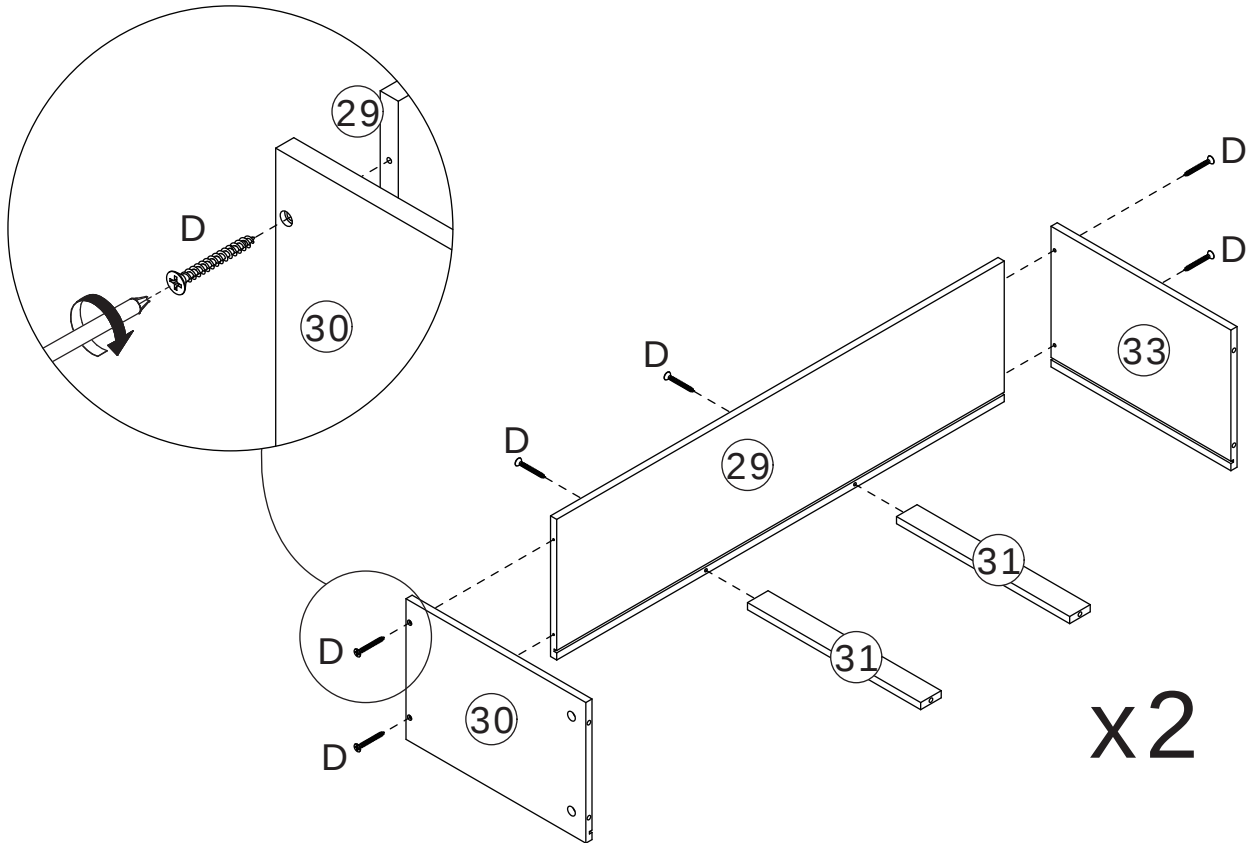

Insert part 32 along the grooves.

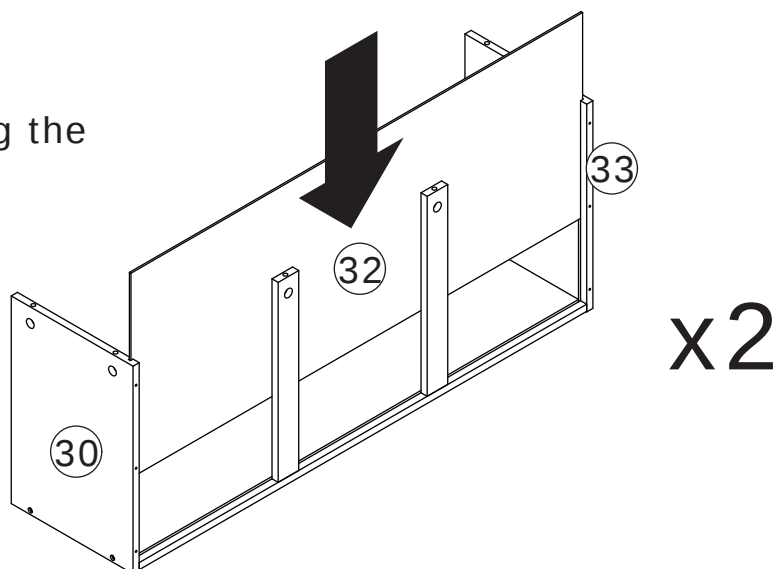 

37

 
A x 12





K x 6



M x 3



  Screw eccentric rod A onto part 34 and 35.
Secure handle M using screw K.

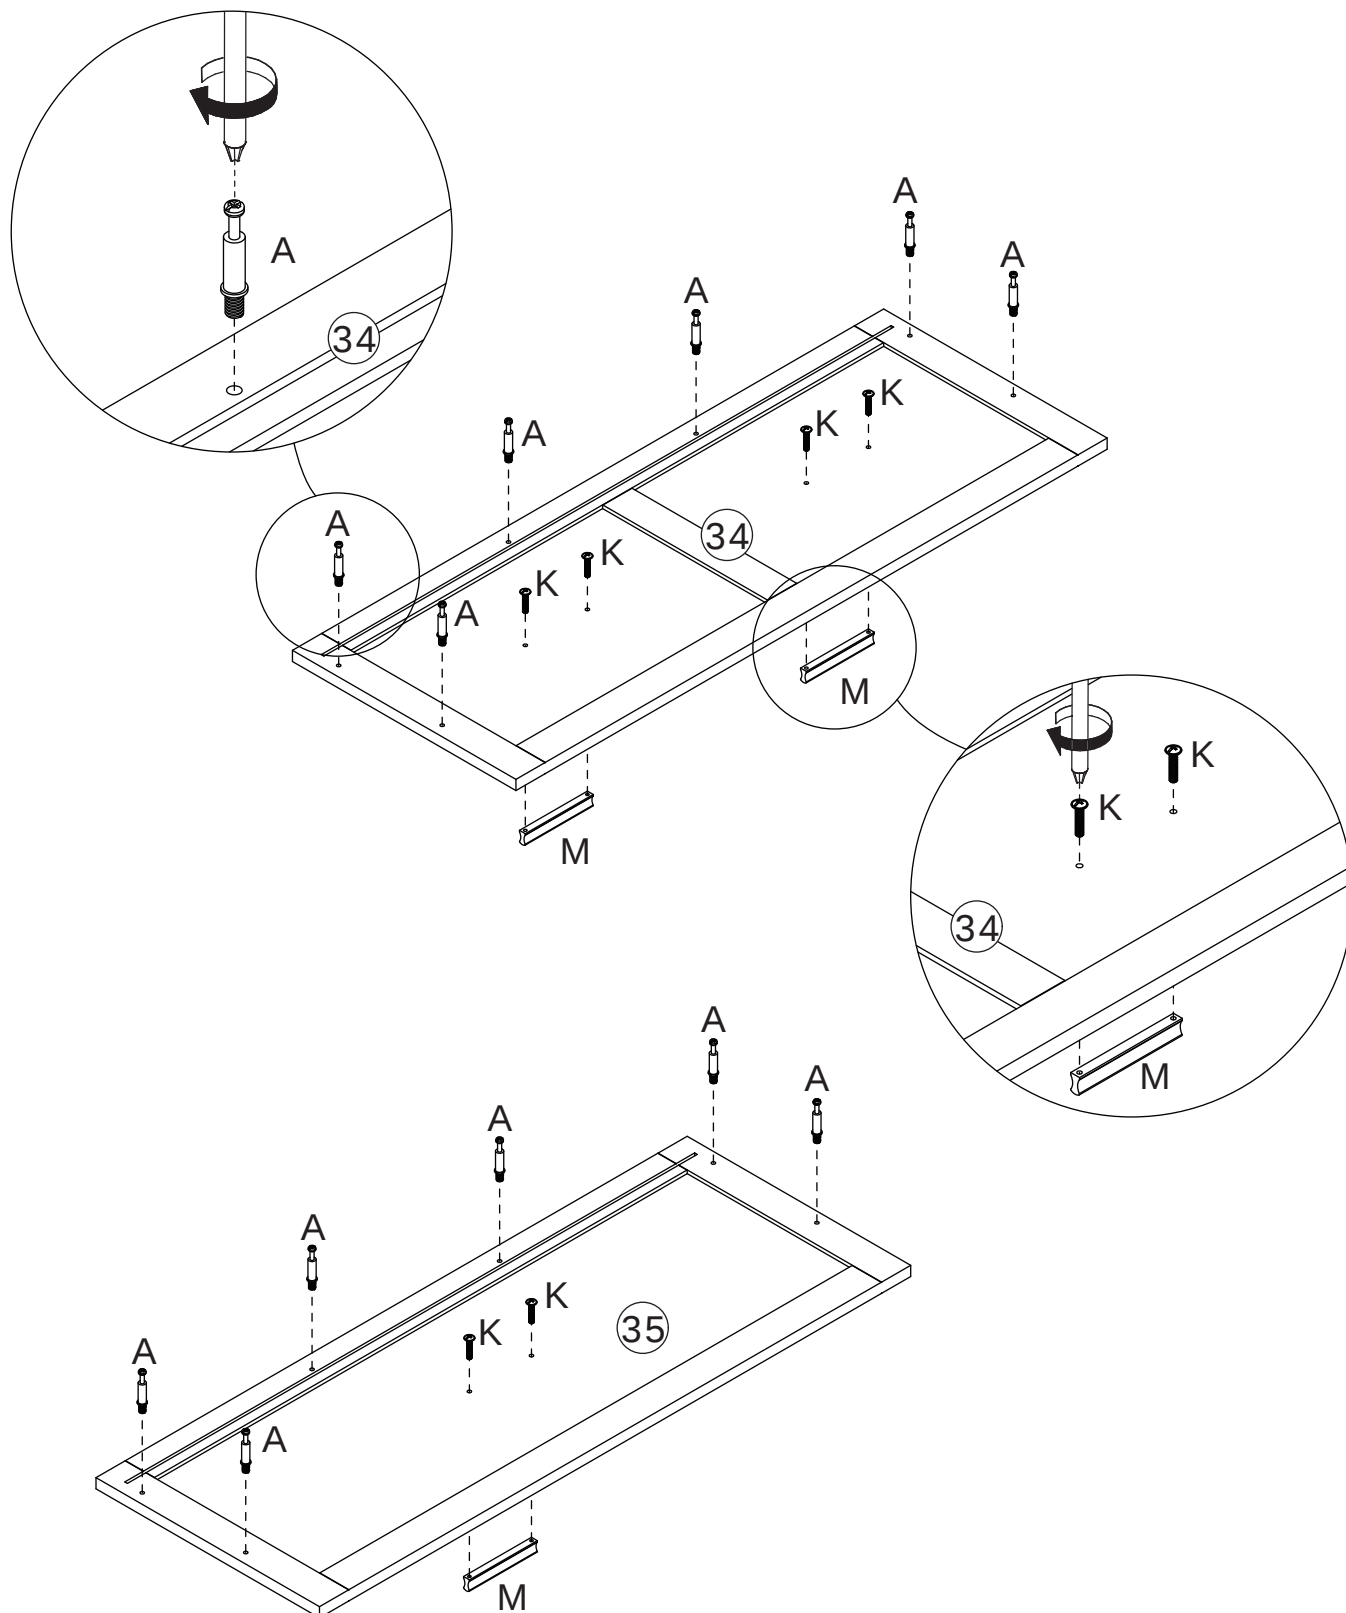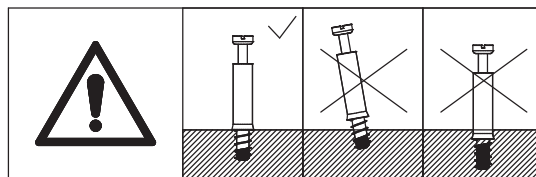


38





B x 12



 Ø 15 x 10 mm



    Connect part 34 and 35 to part 30, 31 and 33 respectively, then tighten by turning cam lock B clockwise as shown.

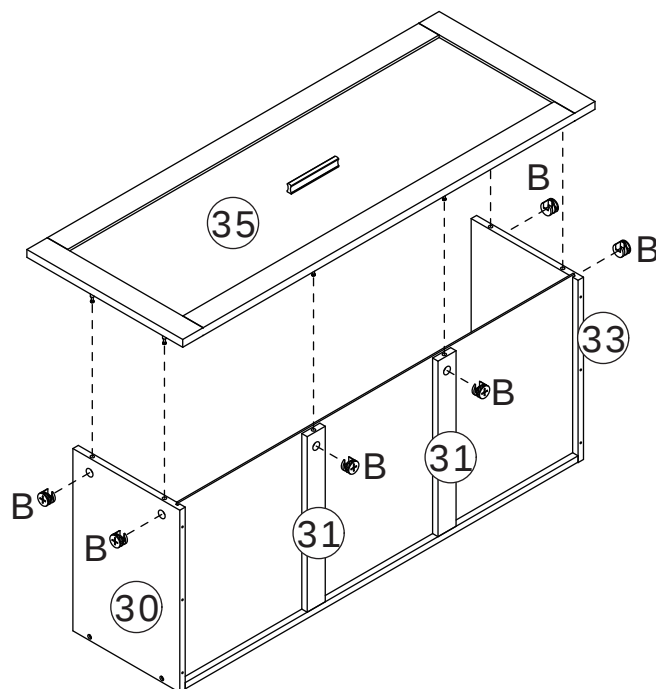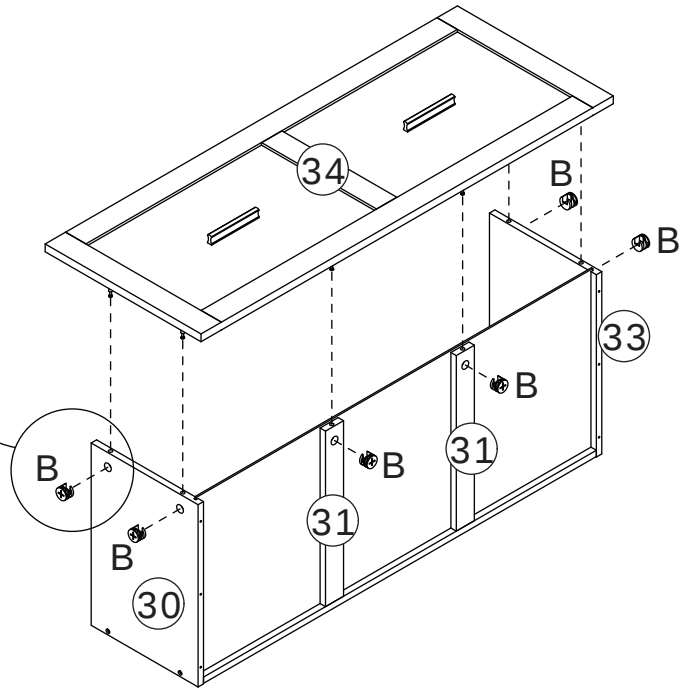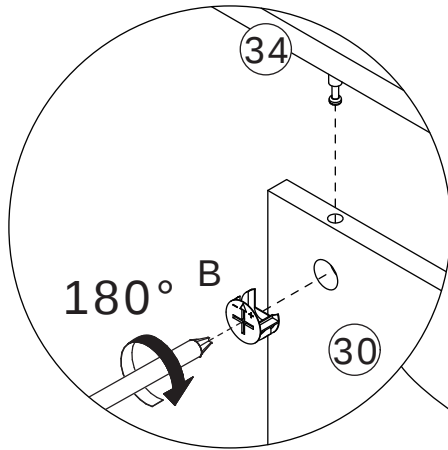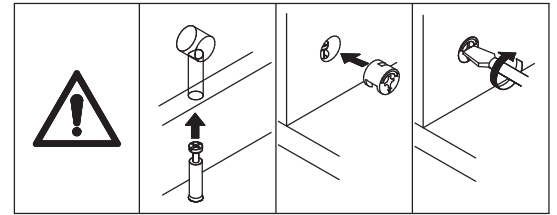

39

E x 12

 
 
 


Ø3.5 x 12 mm




DL x 2



DR x 2

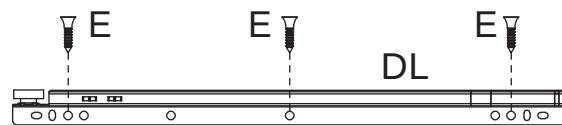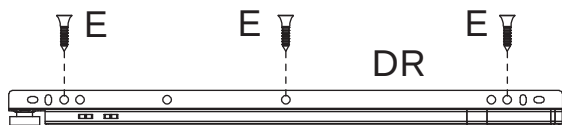



   Secure guide rail DL and DR to part 30 and 33 using screw E.

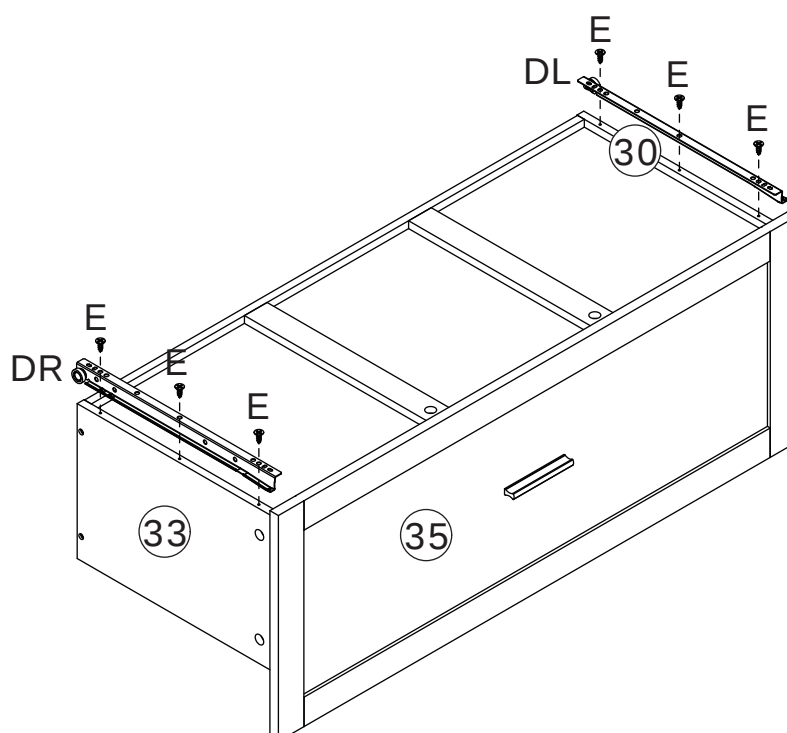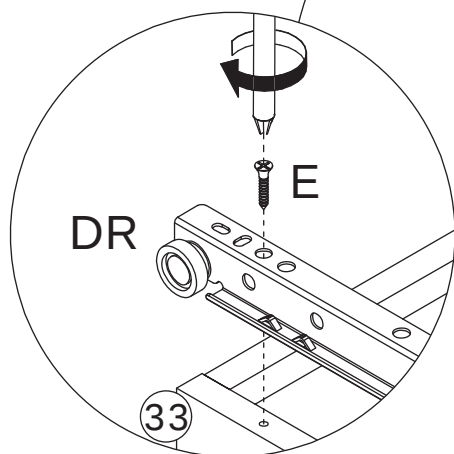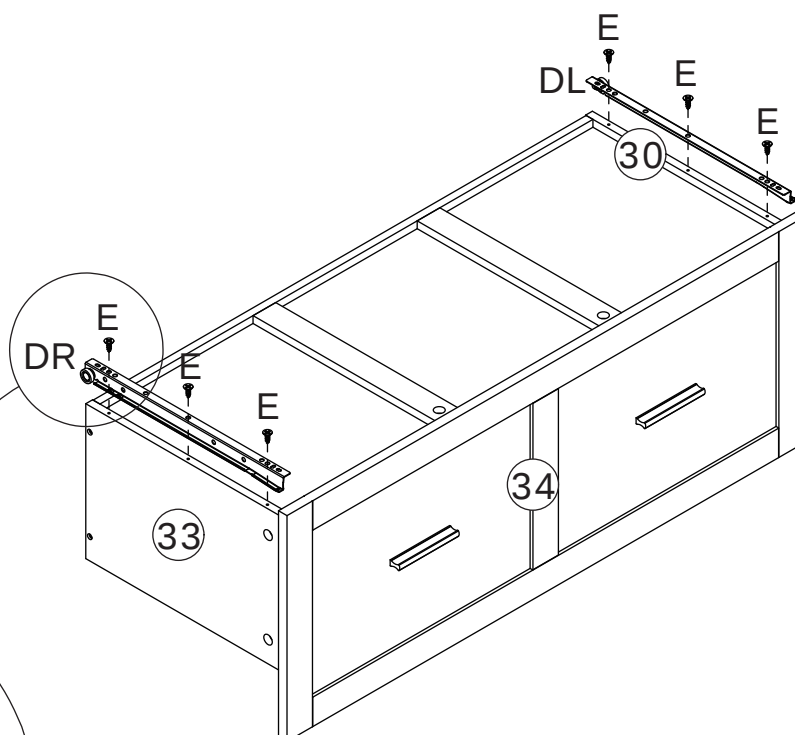


40

  Push drawers to the nut.

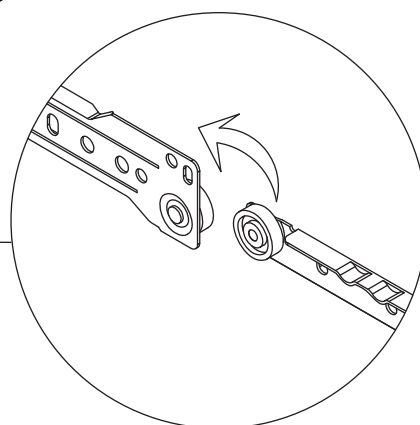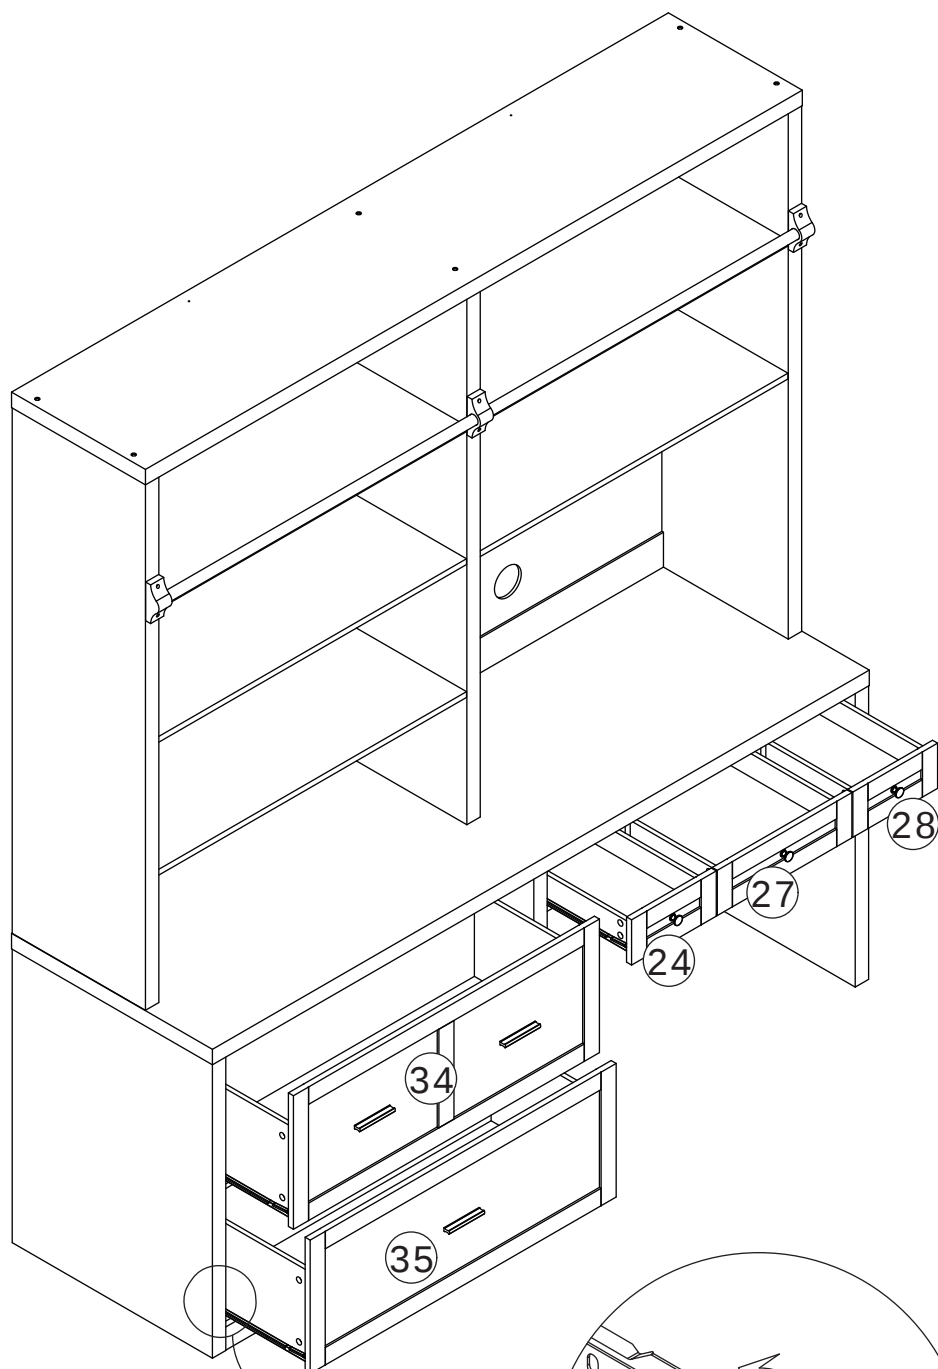

41

 
P x 2





Q x 2



 Ø4 x 12 mm



  Secure anti-tip bracket P onto part 1 using screw Q as shown.

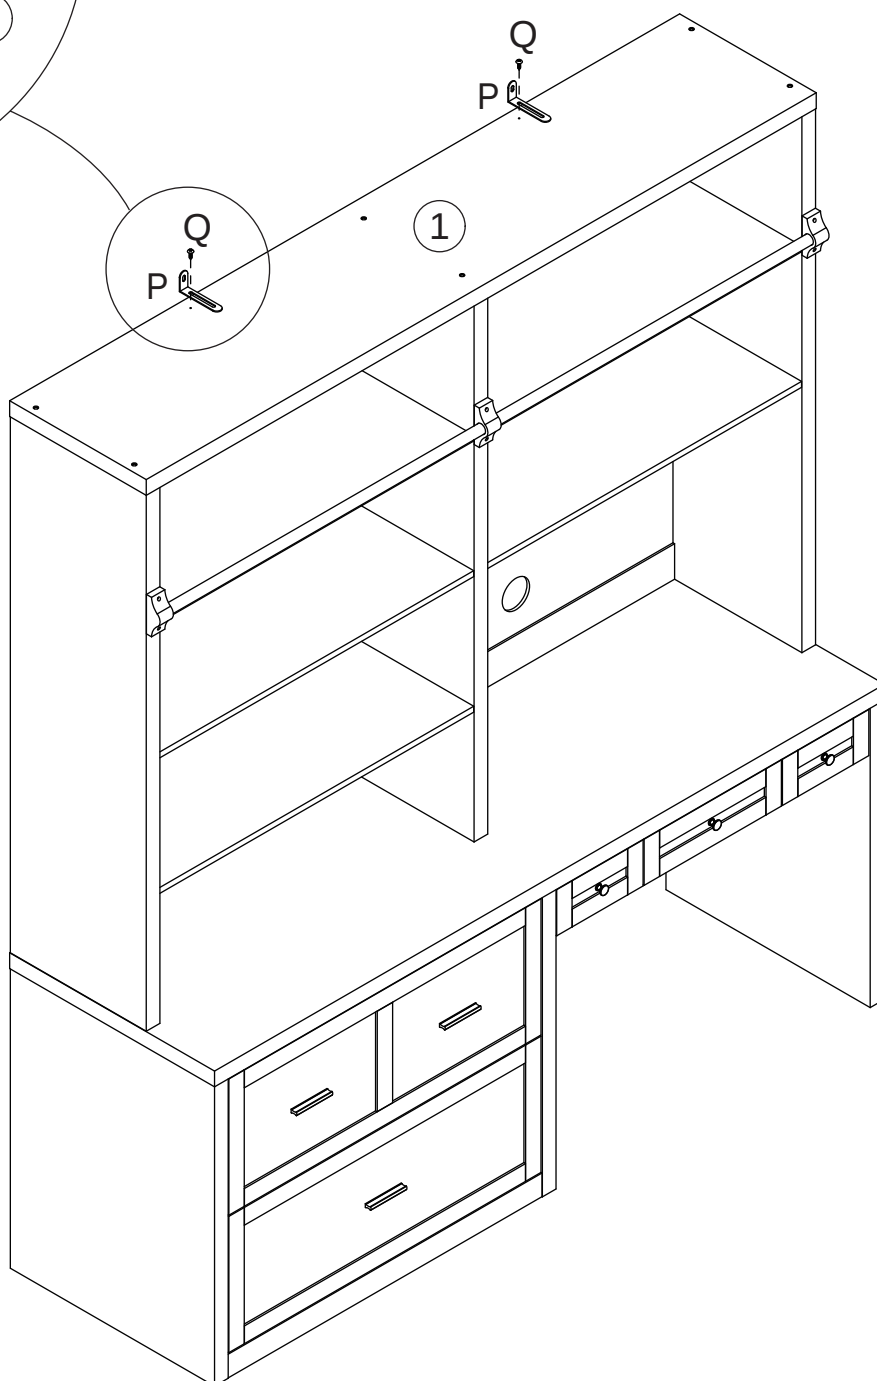
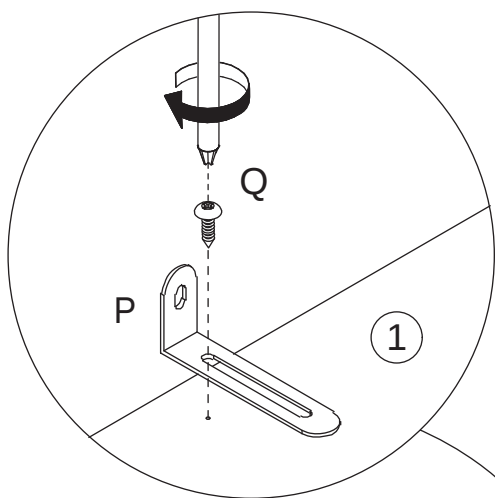


42



D x 2



  
R x 2




Install anti-tipping device as shown.

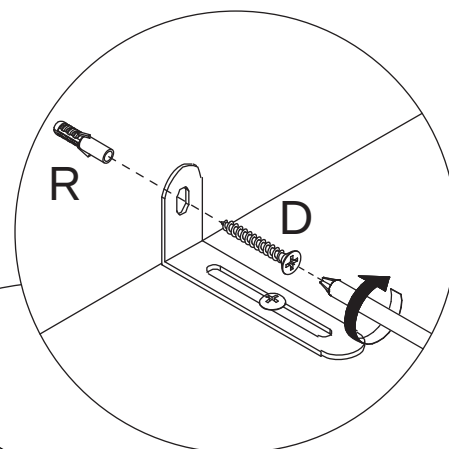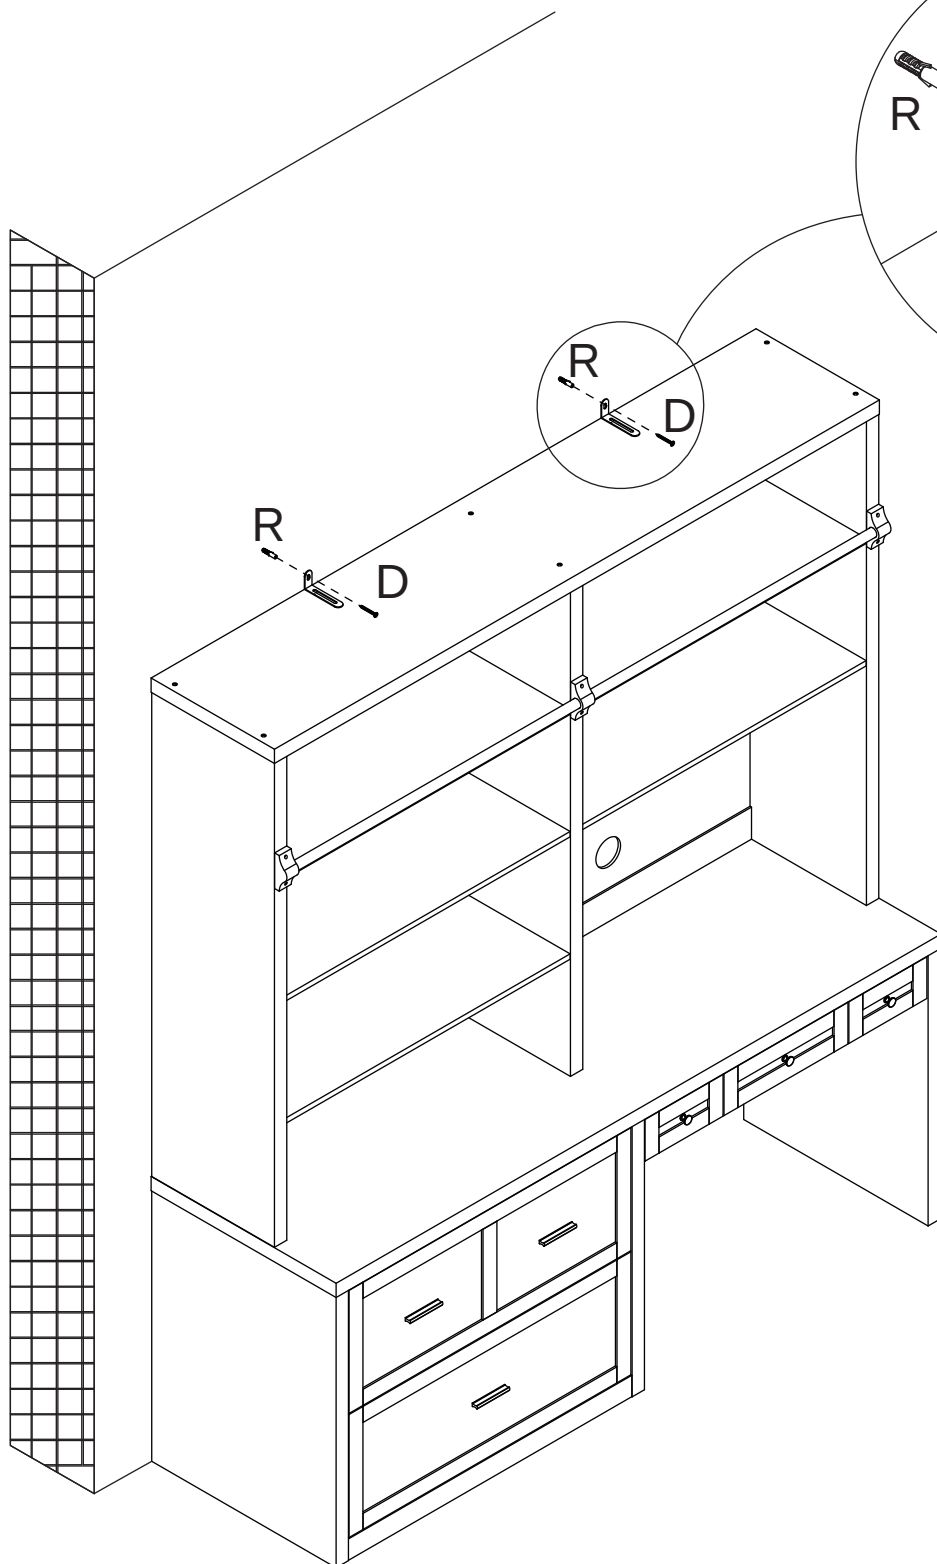  

 
1.

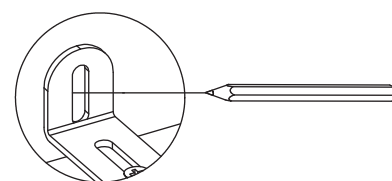

 
2.

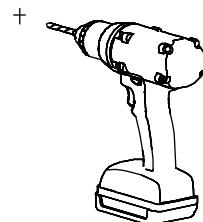

 3.

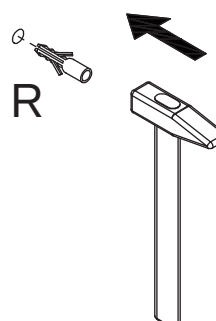


 4.

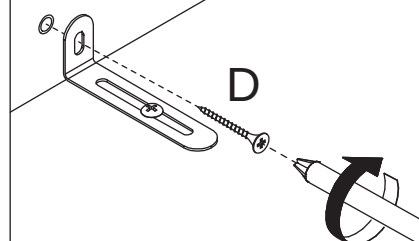

43

 Choose a ladder to match.

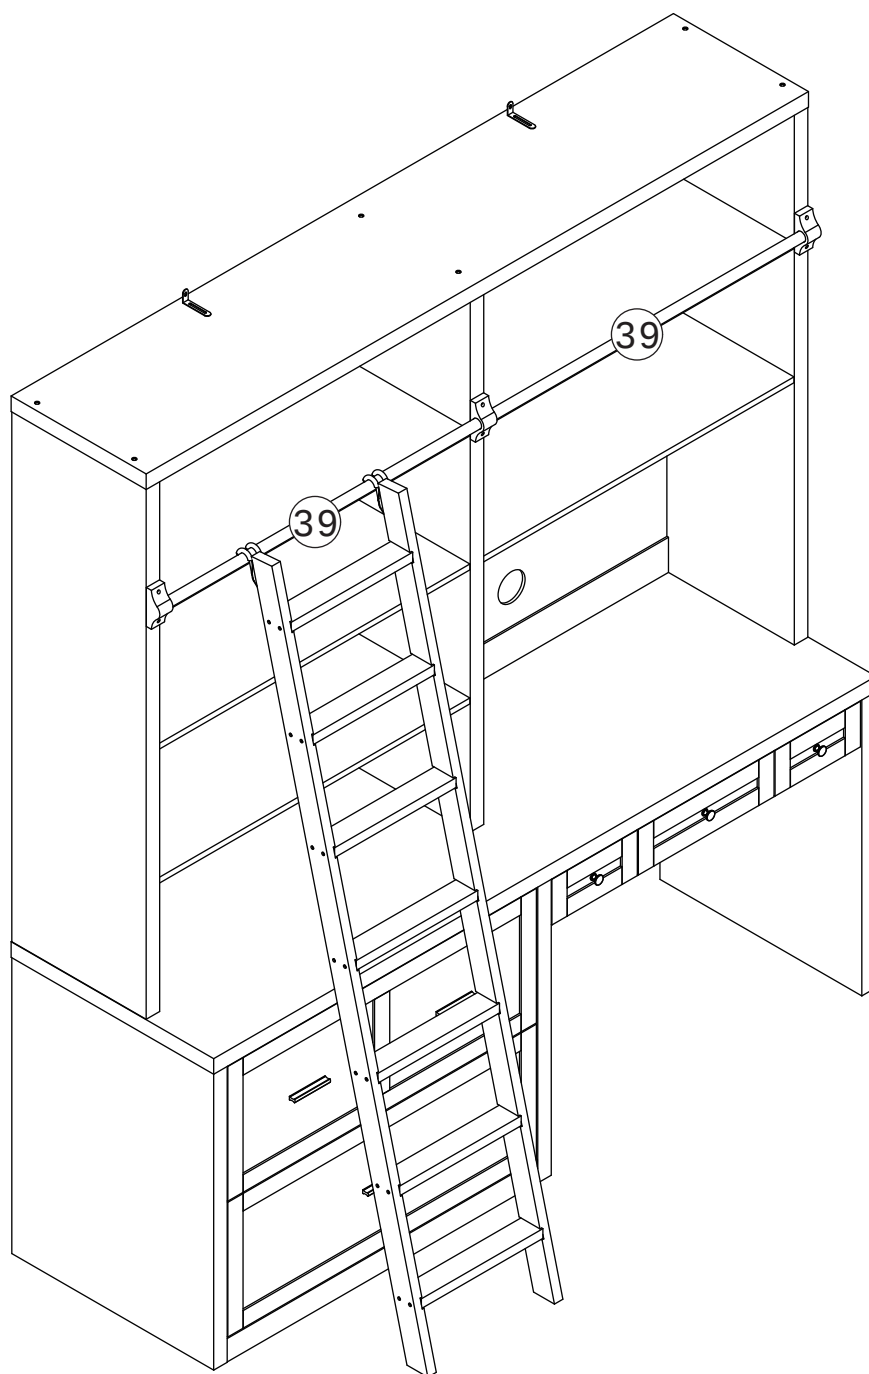

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



adelahu@fufugaga.com



208-820-0068