 


Dresser with Side Shelf

User Manual

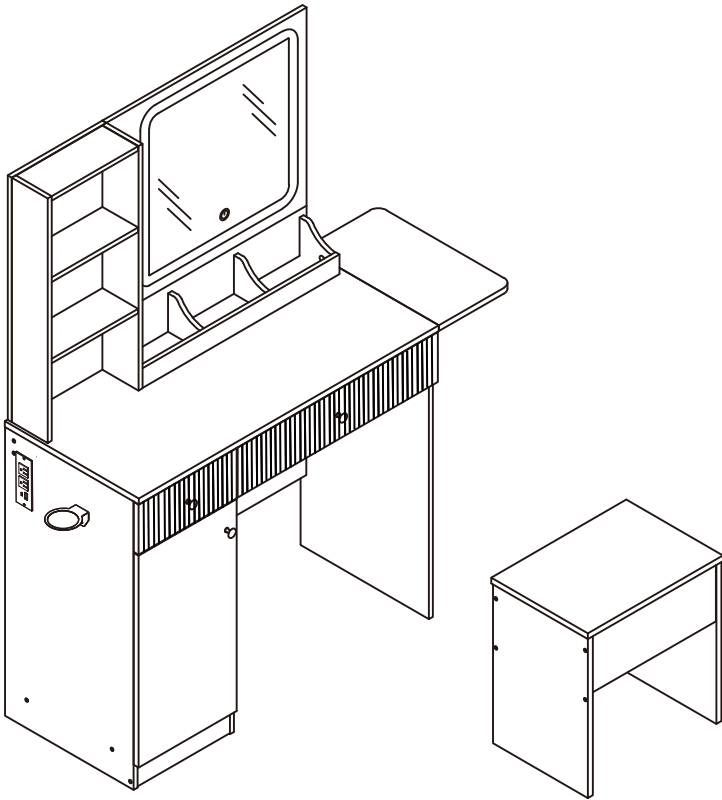

Appreciate your trust in our products. Should you encounter difficulties during assembly or require spare parts, please don't hesitate to reach out to our customer support. We're here to help. Kindly include your Username and Order ID to facilitate prompt assistance.

 
IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FURTHER REFERENCE

 
 


 

 

 
 


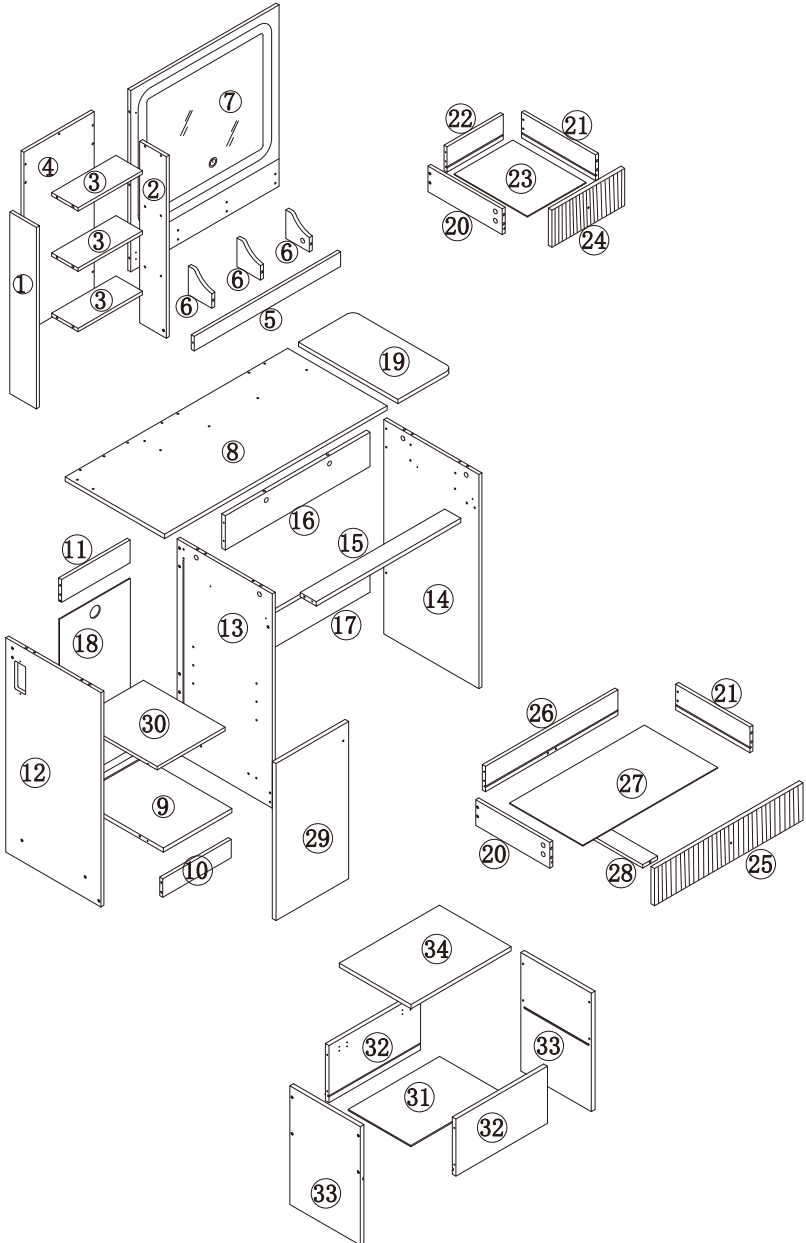

 

 
 
 

 


 
 

 
 
 
 
 
 

 
- ⇨ Adult assembly required.
- ⇨ Keep small accessories out of the reach of children until assembly is complete.
- ⇨ Tighten every screw to keep the dresser stable.
- ⇨ Avoid placing the dresser on uneven surface.
- ⇨ Inspect the dresser for any loose or damaged parts before use.
- ⇨ Inspect the power cord and plug for breakage before use.
- ⇨ Please use the correct supply voltage.
- ⇨ Be aware of the risk of tilting when in use.
- ⇨ Assemble the anti-tipping device for safety.
- ⇨ DO NOT use the product immediately if it malfunctions or becomes unstable.
- ⇨ DO NOT use the dresser unless all parts are properly fitted and adjusted.
- ⇨ DO NOT elevate the dresser on any structure or table. Always place and use the dresser on a level, stable surface.
- ⇨ DO NOT place the dresser near safety hazards such as electrical cords, an open fire or other sources of strong heat.
- ⇨ DO NOT allow children to stand, sit or climb on the dresser.
- ⇨ DO NOT touch the electric plug or charging port with wet hands.
- ⇨ DO NOT use the accessories or replacement parts not approved by the manufacturer.

IN THE BOX

 








 

 




 









 
 
 
Please ensure all parts and accessories are included before assembly. If there are any missing or damaged parts, please contact us




PARTS LIST





1  1PC	2  1PC	3  3PCS	4  1PC	5  1PC
6  3PCS	7  1PC	8  1PC	9  1PC	10  1PC
11  1PC	12  1PC	13  1PC	14  1PC	15  1PC
16  1PC	17  1PC	18  1PC	19  1PC	20  2PCS
21  2PCS	22  1PC	23  1PC	24  1PC	25  1PC
26  1PC	27  1PC	28  1PC	29  1PC	30  1PC
31  1PC	32  2PCS	33  2PCS	34  1PC	

HARDWARE LIST

<p>A</p>  <p>6x35mm 26PCS</p>	<p>B</p> 	<p>C</p>  <p>30PCS</p>	<p>D</p>  <p>65PCS</p>	<p>E</p>  <p>2PCS</p>
<p>F</p>  <p>M3.5x12mm 56PCS</p>	<p>I</p>  <p>2PCS</p>	<p>J</p>  <p>3PCS</p>	<p>K</p>  <p>M4x20mm 3PCS</p>	<p>L</p>  <p>4PCS</p>
<p>M</p>  <p>4PCS</p>	<p>N</p>  <p>1PC</p>	<p>O</p>  <p>10PCS</p>	<p>P</p>  <p>6PCS</p>	<p>Q</p>  <p>1PC</p>
<p>R</p>  <p>M3.5x14mm 6PC</p>	<p>S</p>  <p>1PC</p>	<p>T</p>  <p>M3.5x35mm 1PC</p>	<p>U</p>  <p>1PC</p>	<p>V</p>  <p>M6x15mm 4PCS</p>
<p>W</p>    <p>W-2 x3 W-3 x3 W-4 x3</p>  <p>W-1</p>				
 <p>CL x2 L300mm</p>		 <p>CR x2 L300mm</p>		
 <p>DL x2 L300mm</p>		 <p>DR x2 L300mm</p>		

CAM LOCK FASTEN SYSTEM

    
 Insert the cam bolt into the hole, then insert the cam lock and tighten.

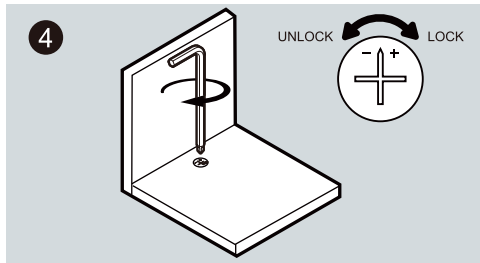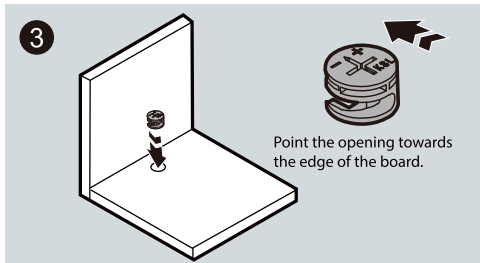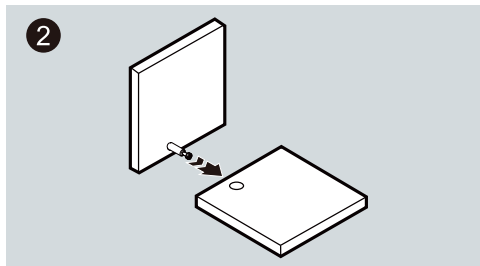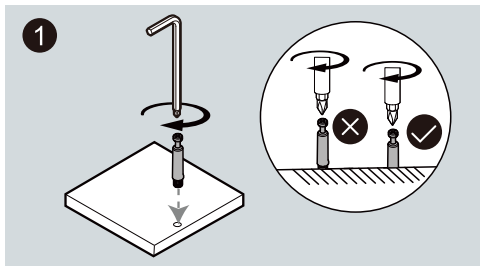



ASSEMBLY INSTRUCTIONS

 
Warm Tips

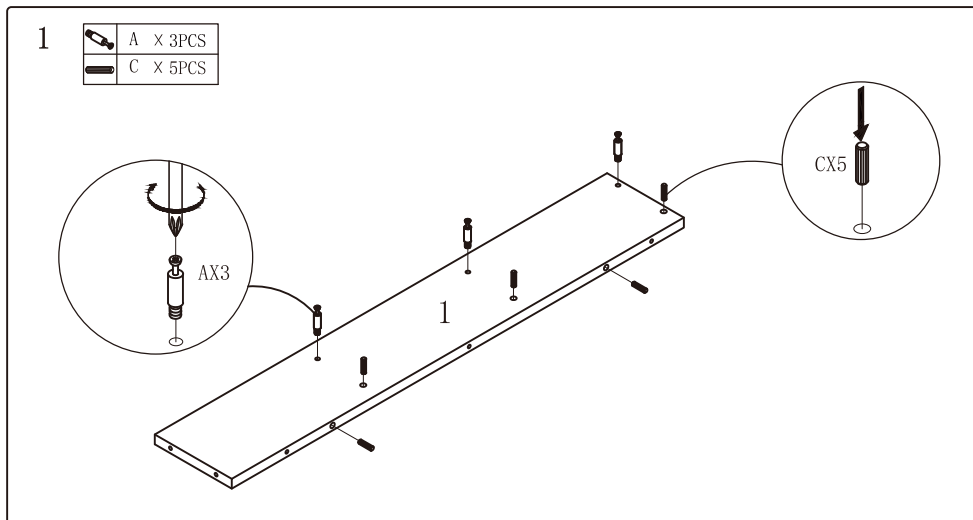1. Ensure that all parts and accessories are included before assembly.
2. Carefully follow the assembly instructions step by step.
3. After assembly, the anti-tipping device should be installed to ensure safety.





 
2

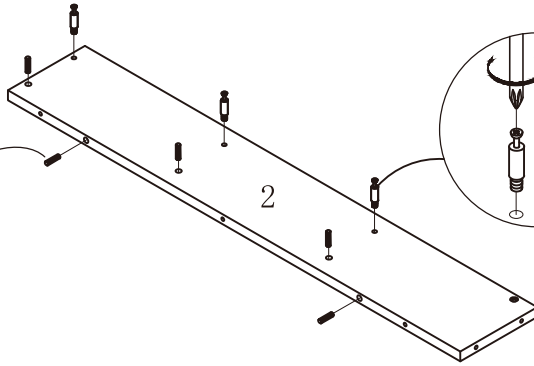	A × 3PCS
	C × 5PCS





 
3

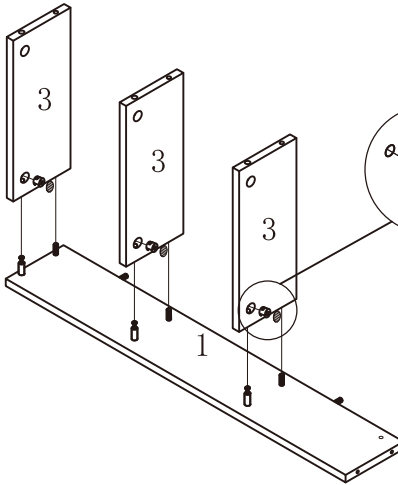	BX3PCS
	HX3PCS




4


	BX3PCS
	HX3PCS

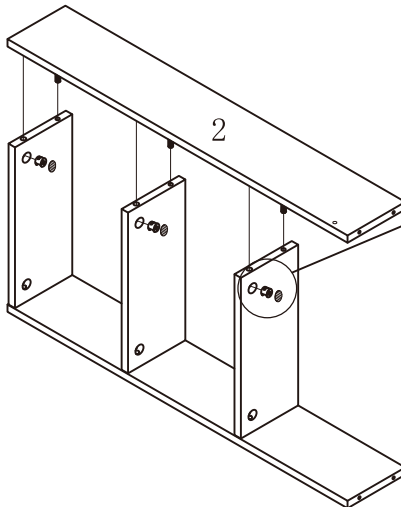 


5  C x 2PCS

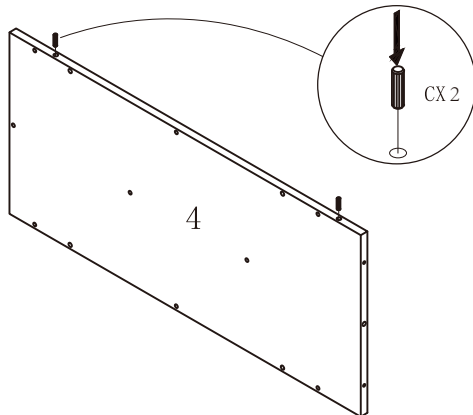 



6  DX9PCS

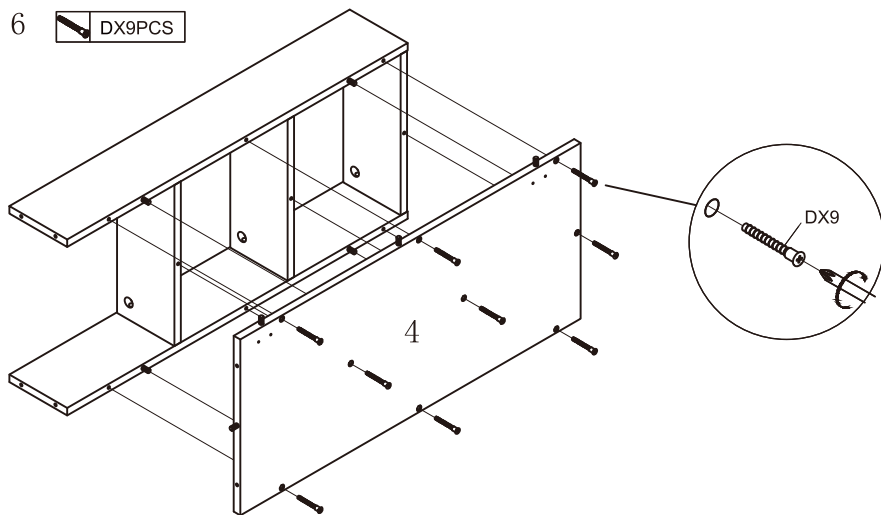 


7  A x 3PCS

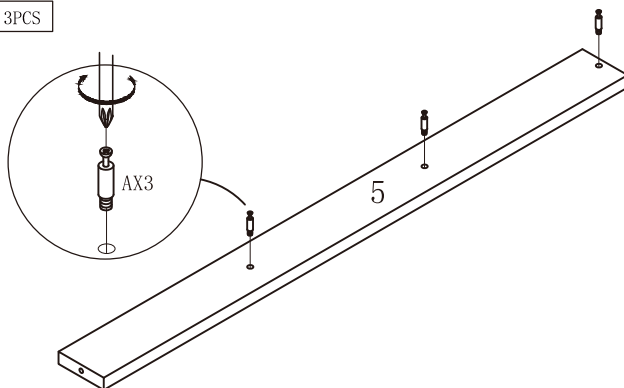 


8

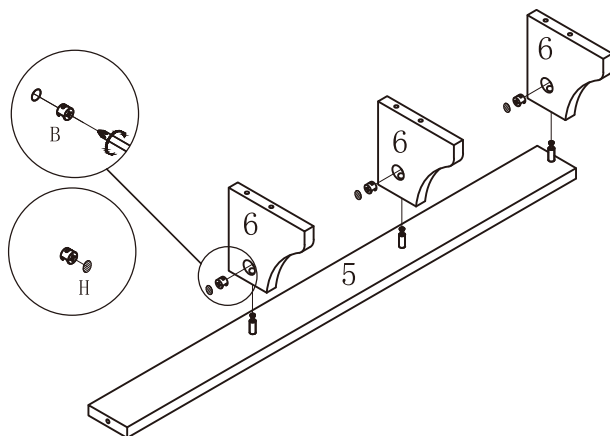  

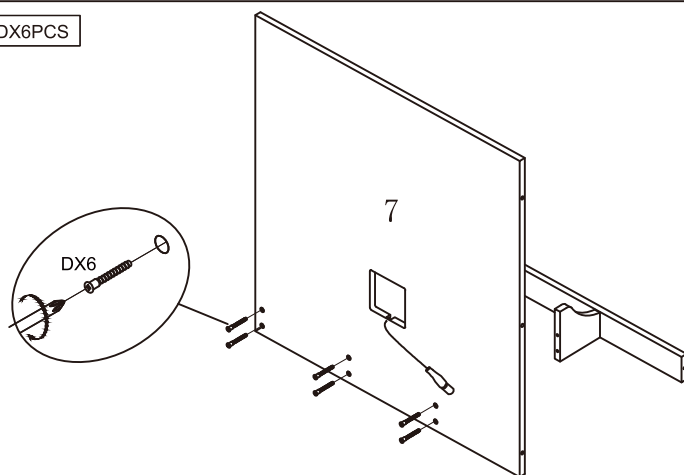 

9


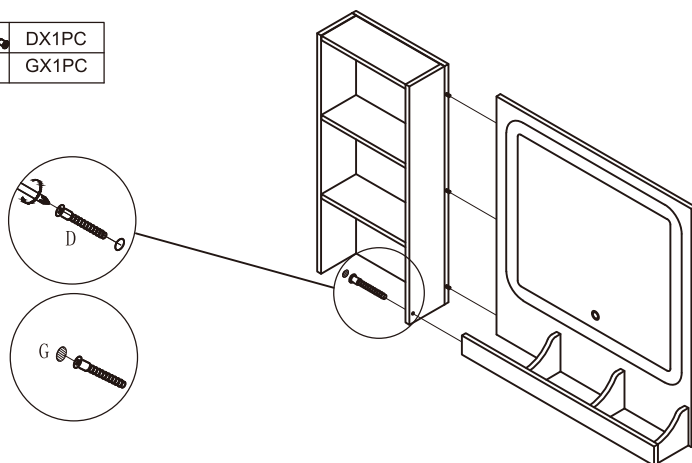 


10




11

	EX2PCS
	FX8PCS

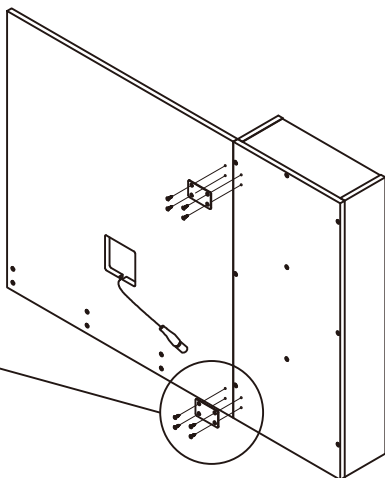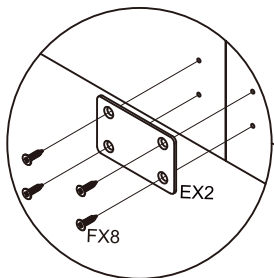  



12

	C x 3PCS
---	----------

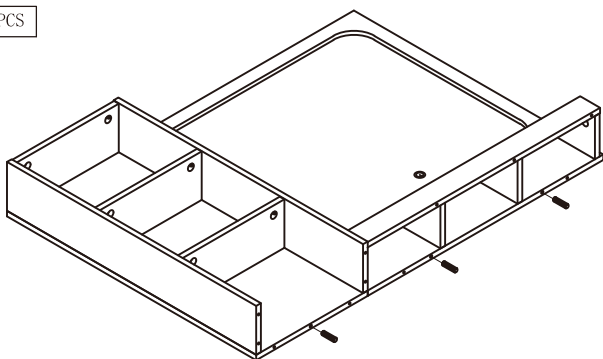 



13


	A x 8PCS
--	----------

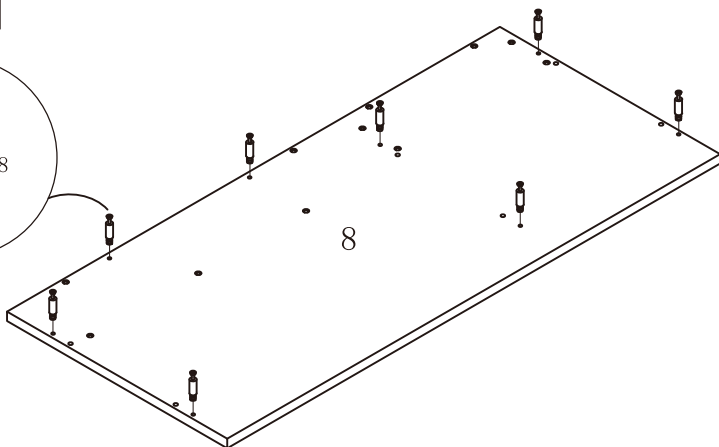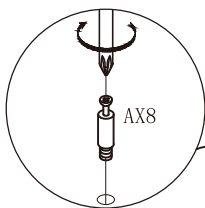  

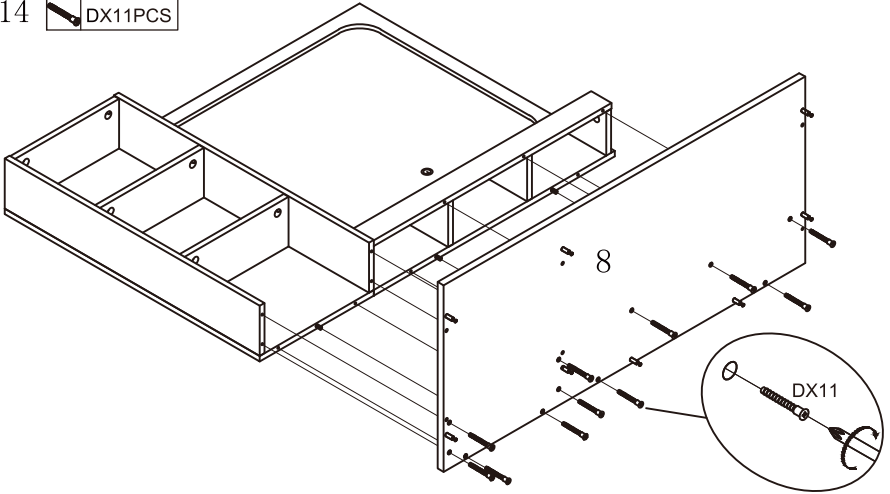 

14  DX11PCS


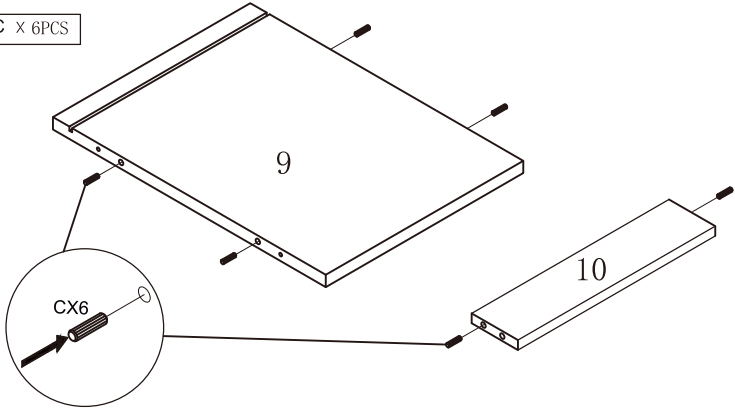 


15  C x 6PCS





16

	CLX1PC
	FX2PCS
	OX2PCS

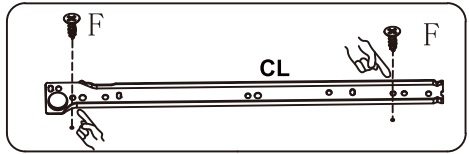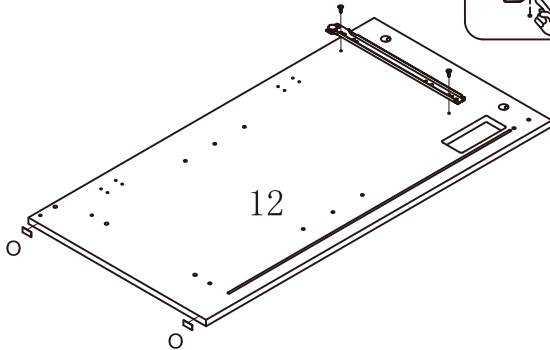  



17

	CRX1PC
	FX2PCS
	OX2PCS

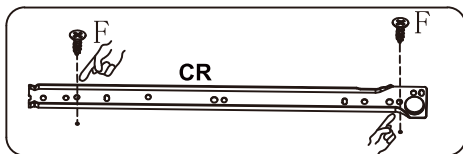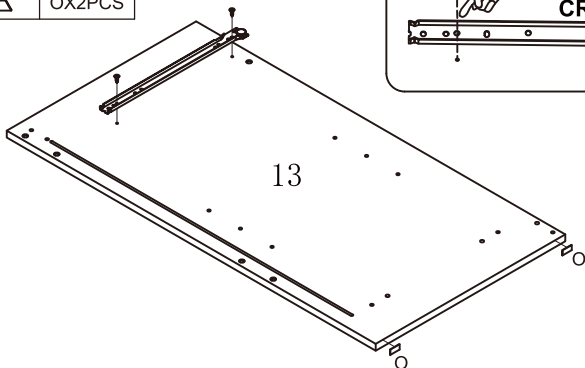  



18

	CLX1PC
	FX2PCS

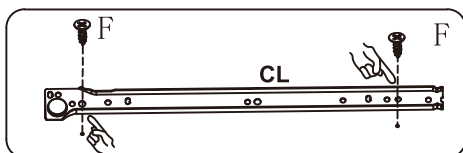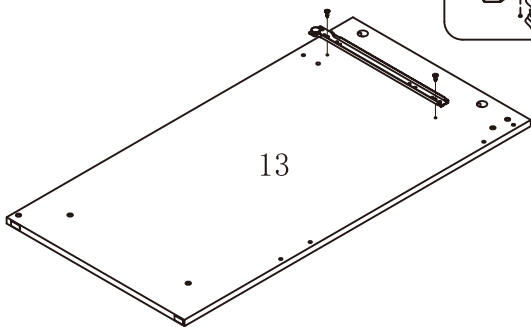  


19


	CRX1PC
	FX2PCS
	OX2PCS

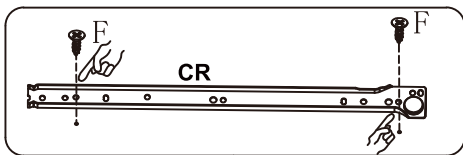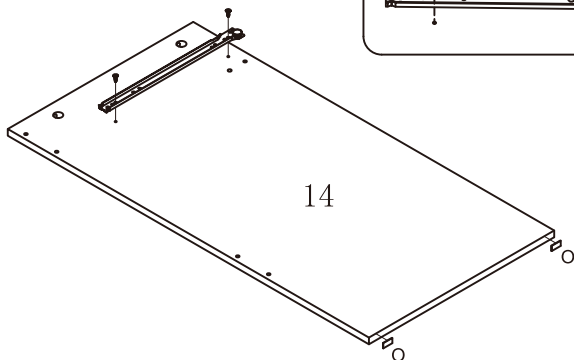  


- 20
- | | |
|---|--------|
|  | DX5PCS |
|  | GX5PCS |

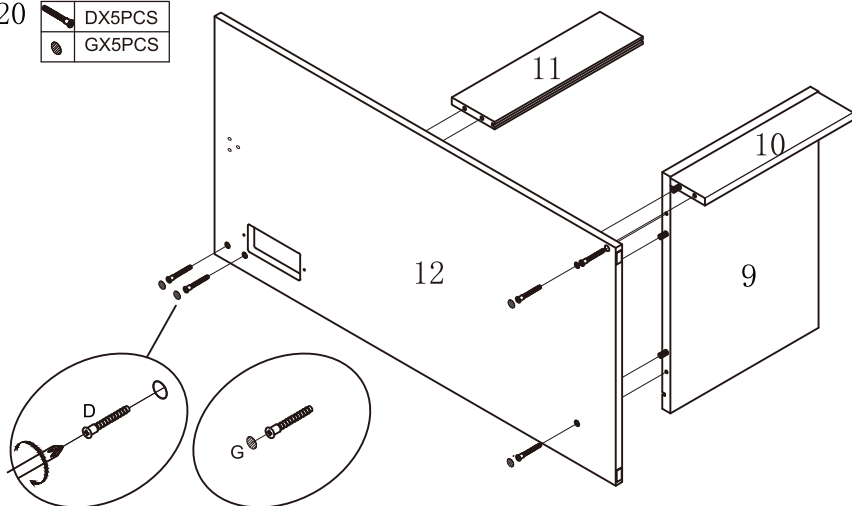 


21

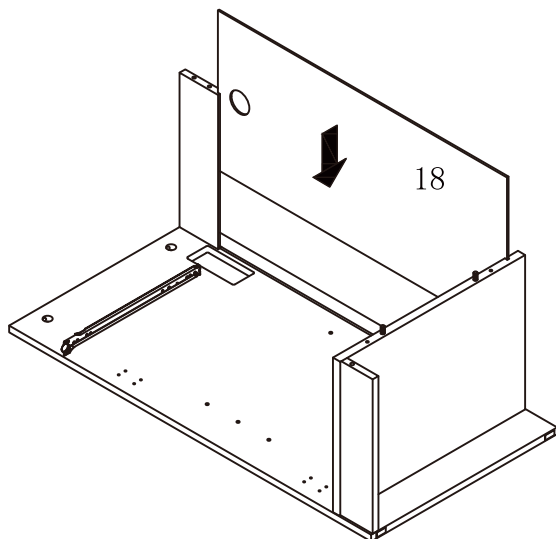 


- 22
- | | |
|---|----------|
|  | C x 2PCS |
|---|----------|

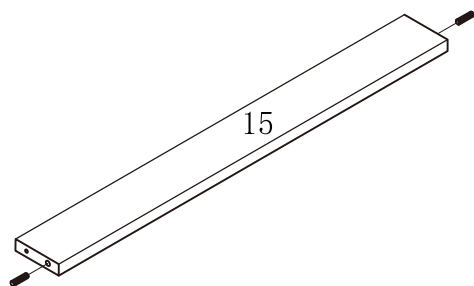 

23  DX5PCS



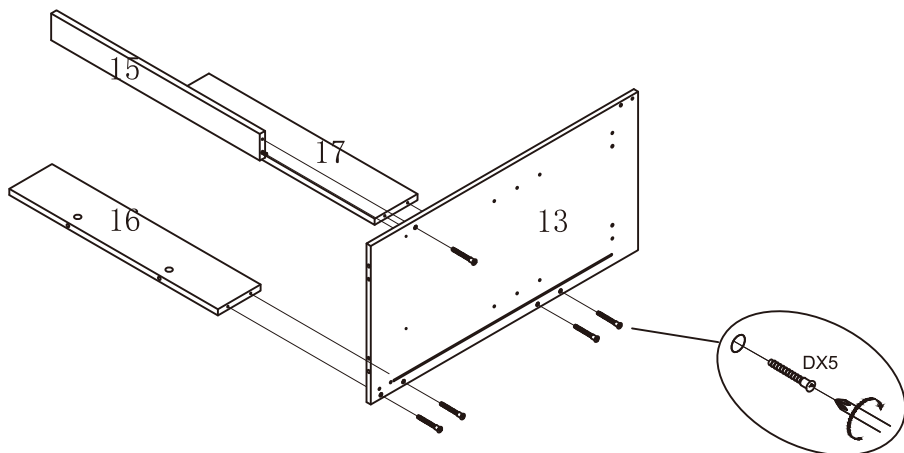 


24  DX5PCS
 GX3PCS

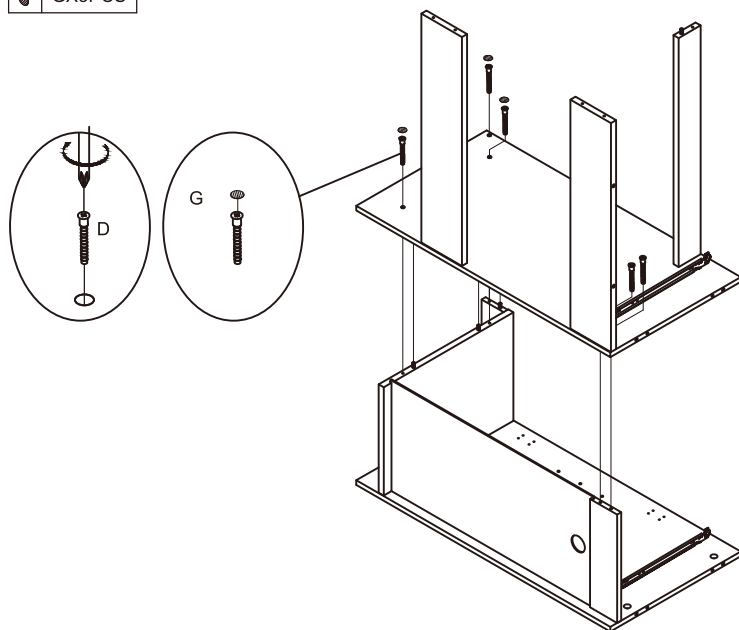 



25

	DX5PCS
	GX5PCS

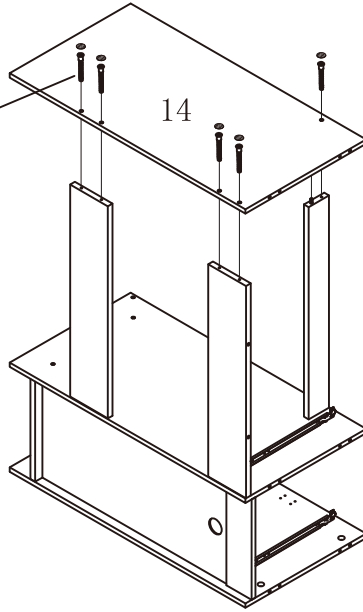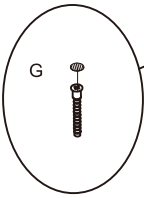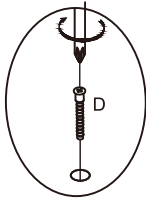   


26

	CX6PCS
---	--------

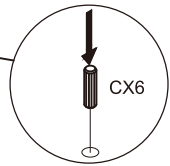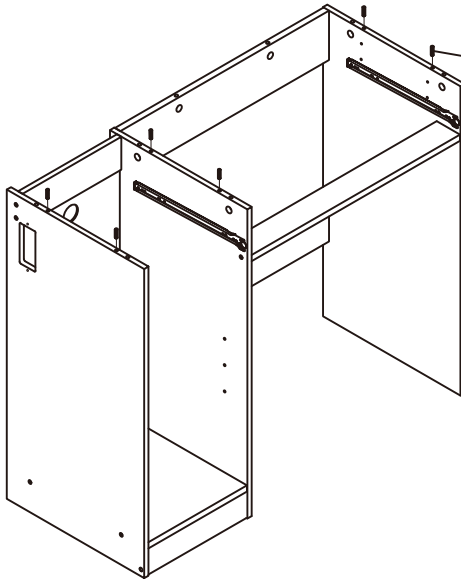  


27  BX8PCS

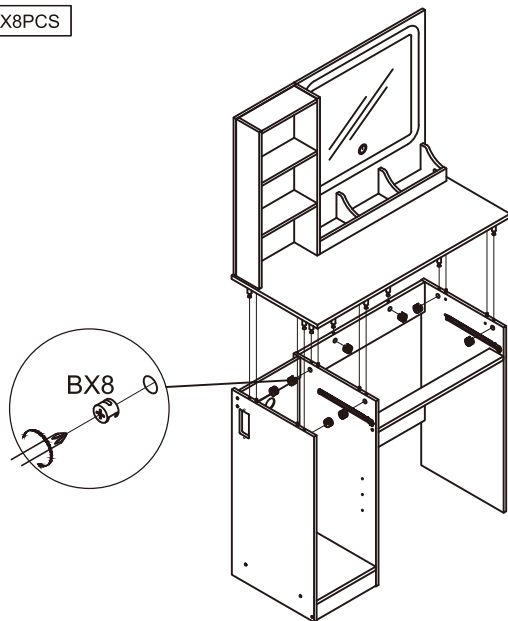 


28  RX6PCS
 IX2PCS

 
Press this button to turn on or off.

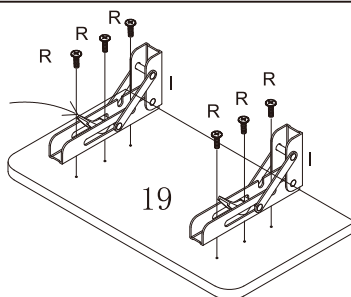


29  VX4PCS

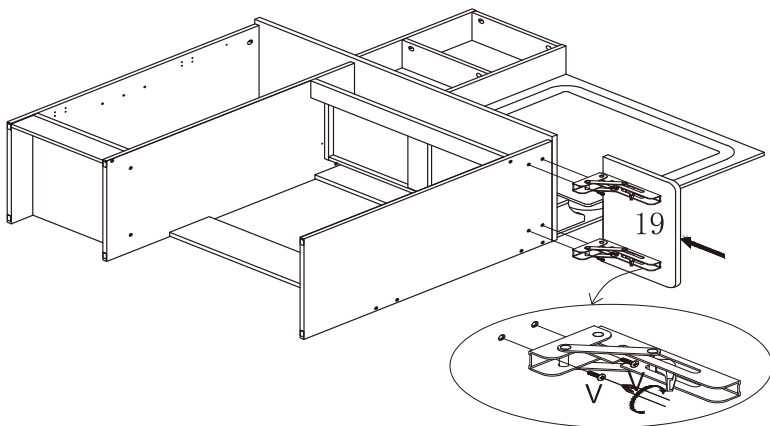 


30  DX4PCS

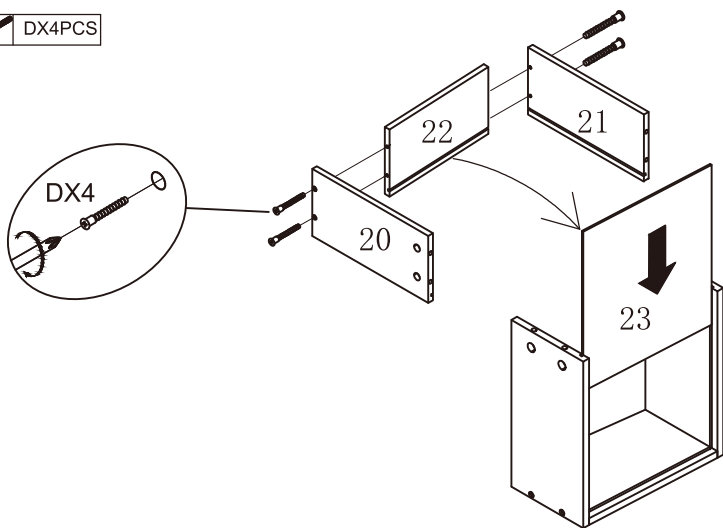 


31  AX9PCS
 JX2PCS
 KX2PCS

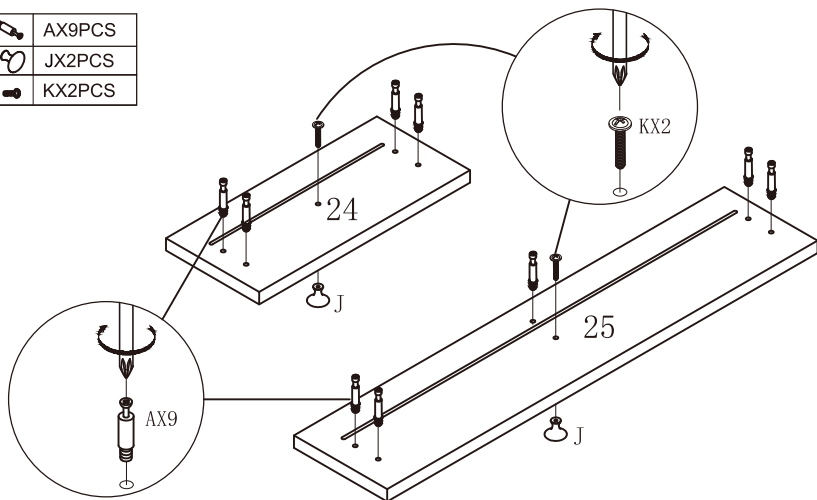 


32  BX4PCS

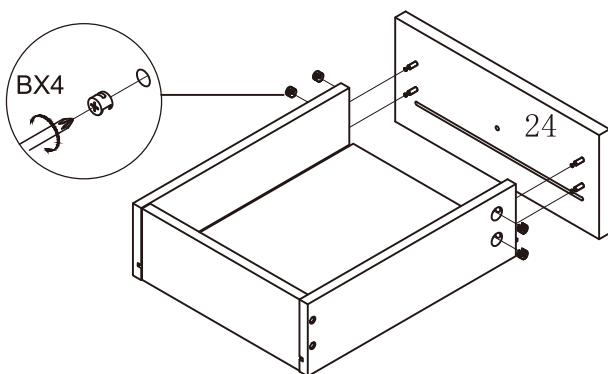 

33  DX4PCS

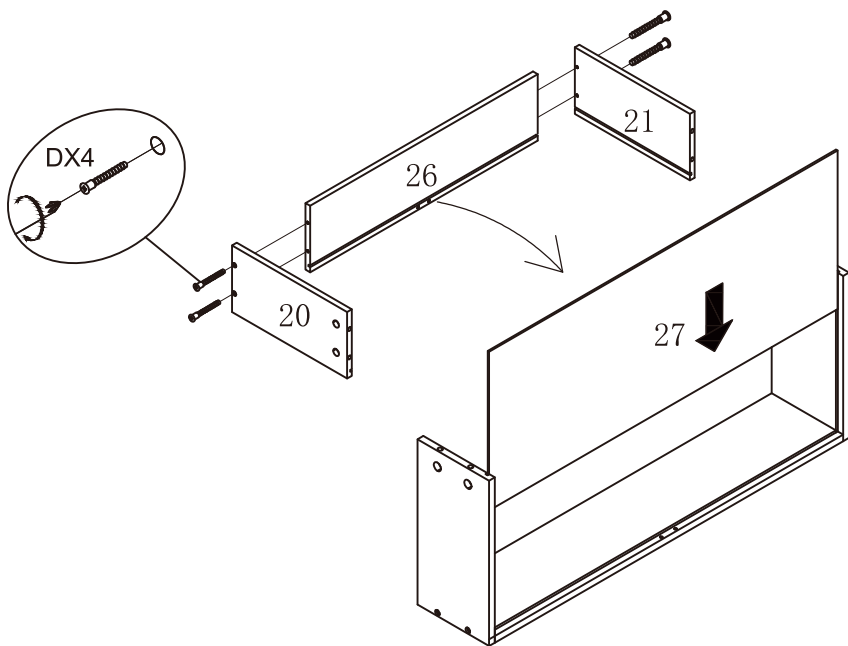 


34  BX5PCS
 DX2PCS

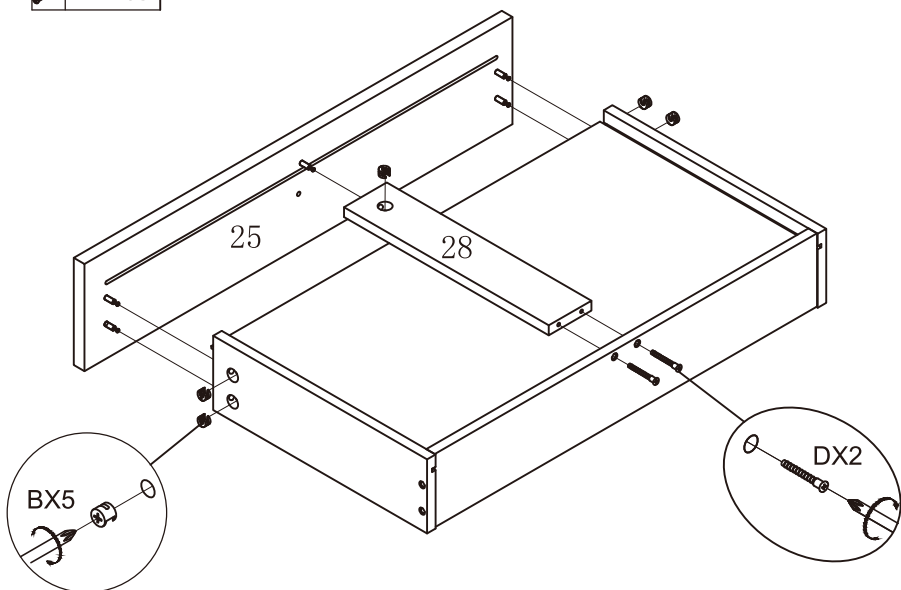 


35

	DLX1PC
	DRX1PC
	FX4PCS

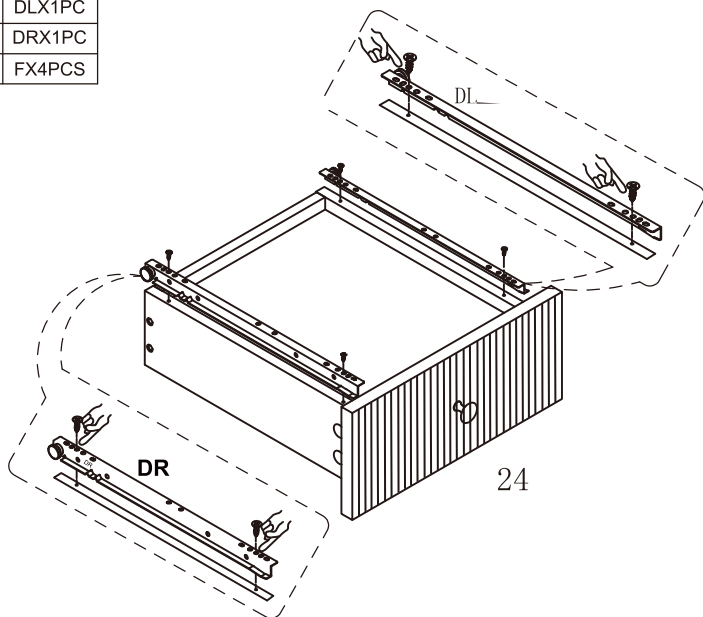 



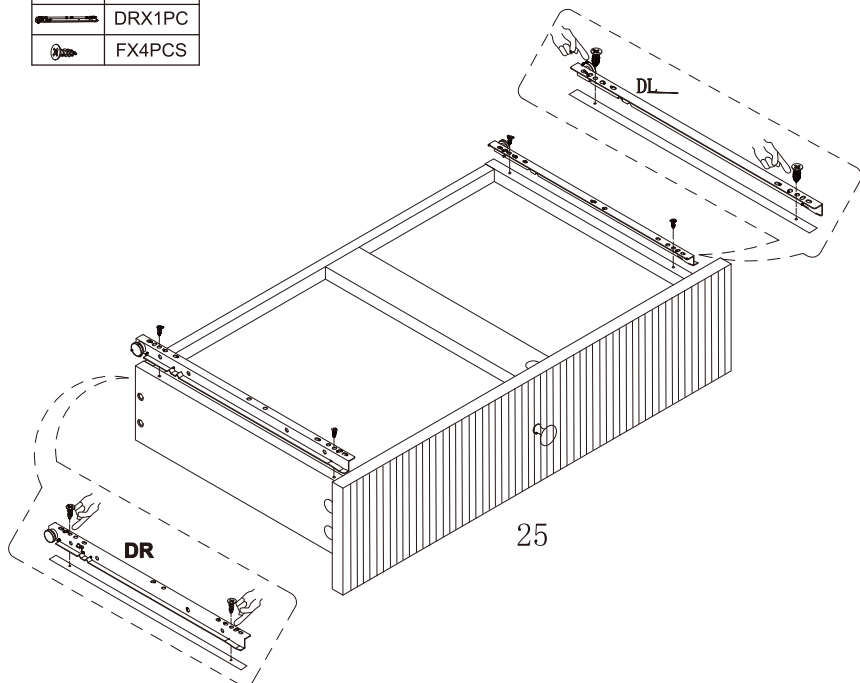 


36

	DLX1PC
	DRX1PC
	FX4PCS




37

	LX2PCS
	FX4PCS
	JX1PC
	KX1PC


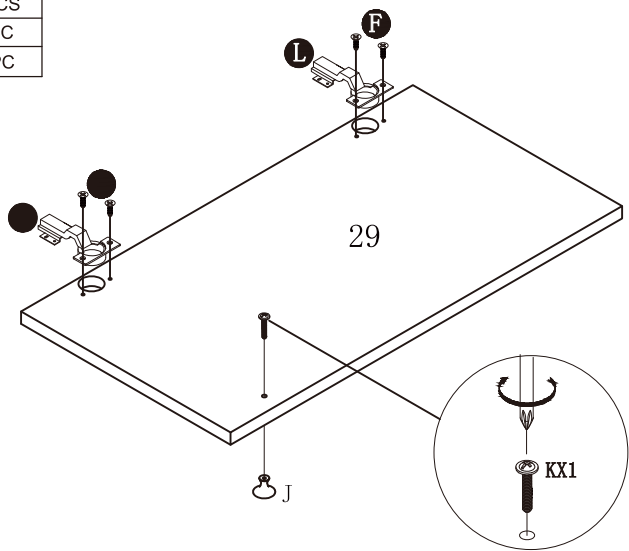 


38

	MX4PCS
---	--------





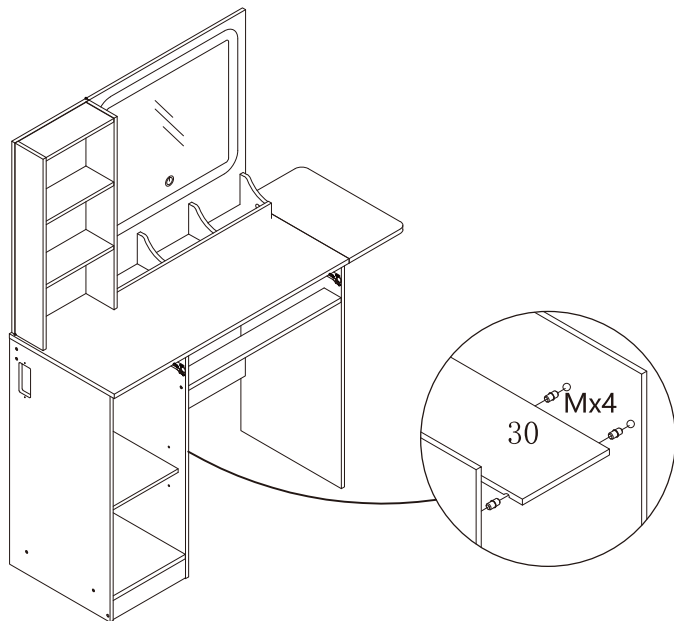 


39

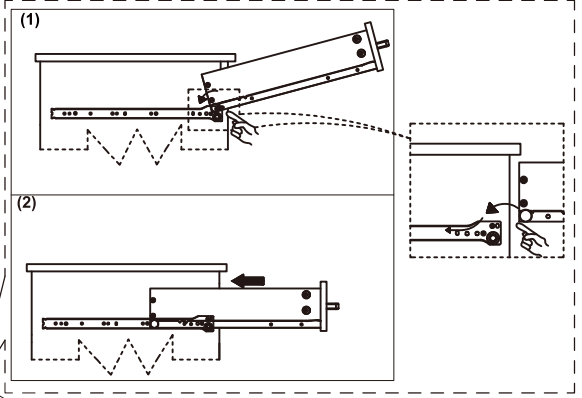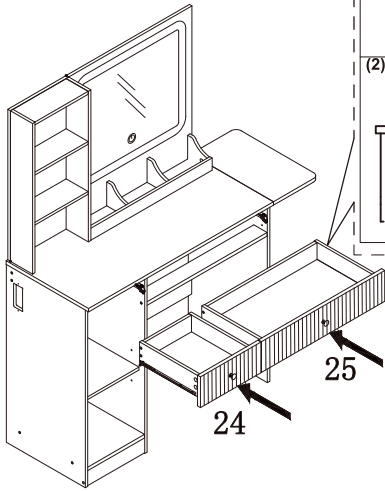  



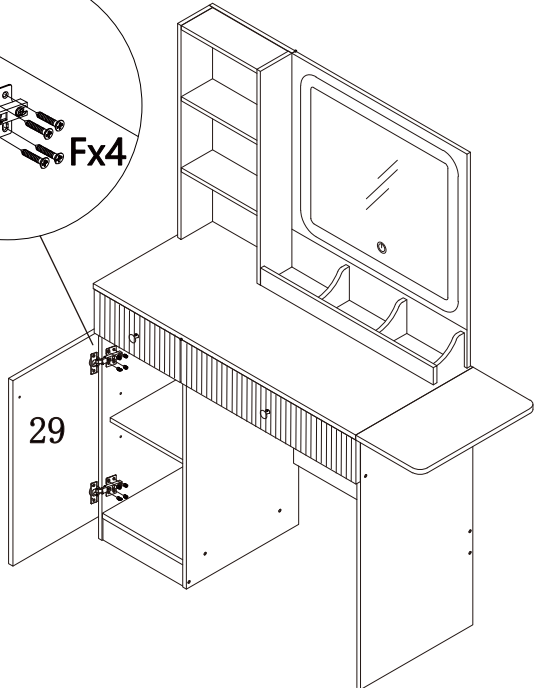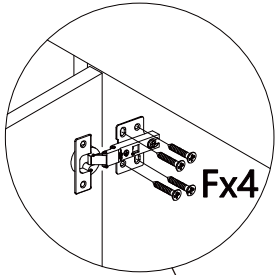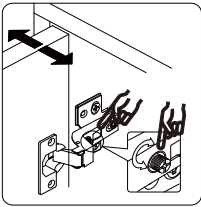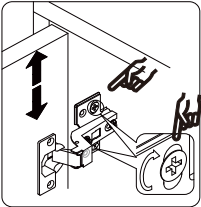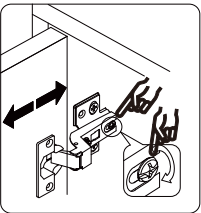     




40

 FX8PCS







41

	FX2PCS		RX2PCS
	NX1PC		WX1PCS

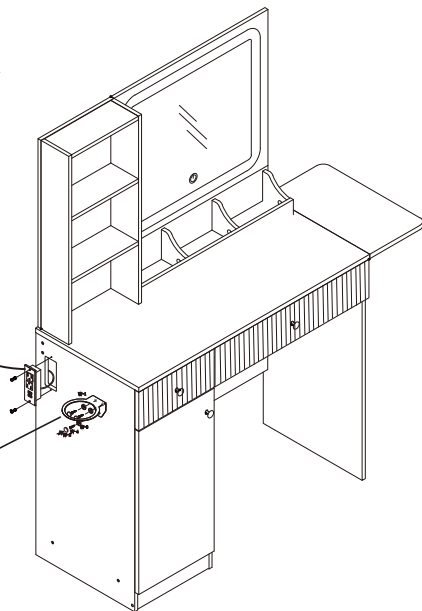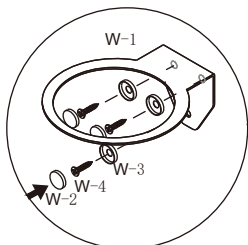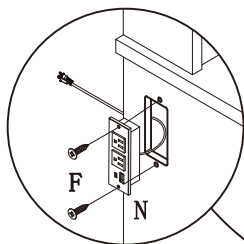   





42

	P X6PCS
	F X6PCS
	Q X1PC
	U X1PC

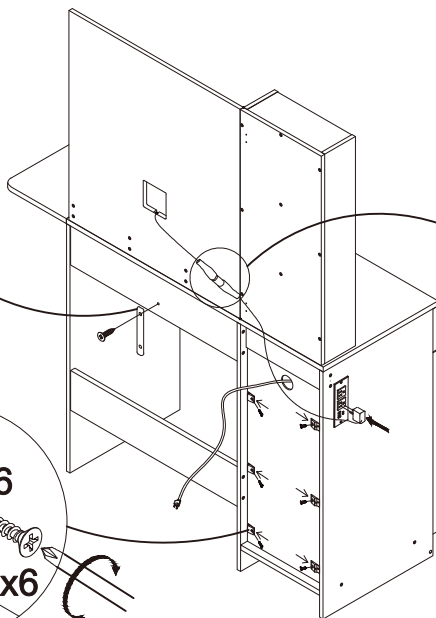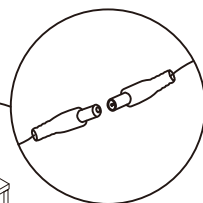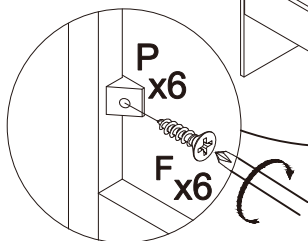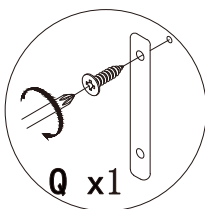    


43

	S X1PCS
	T X1PCS

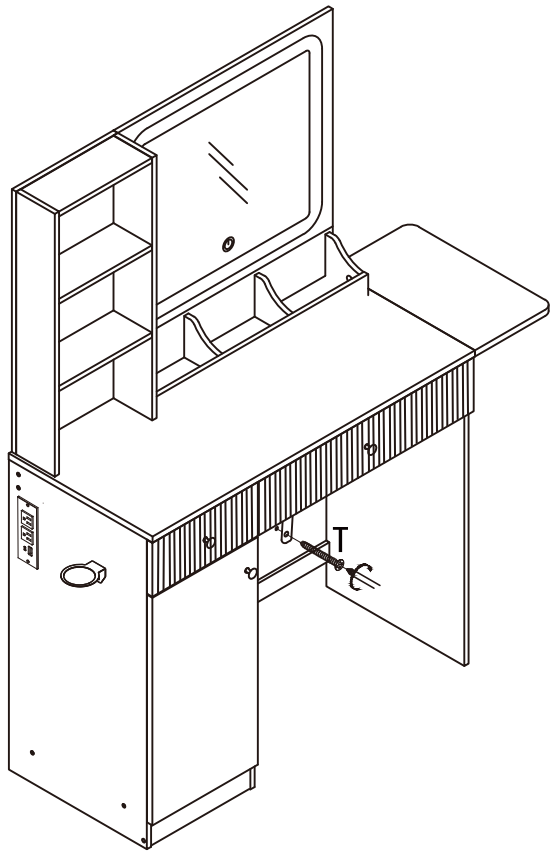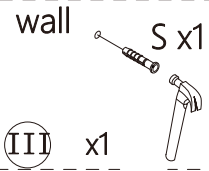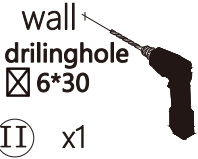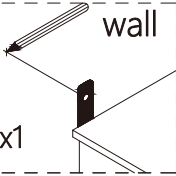    


44

	DX4PCS
	GX4PCS

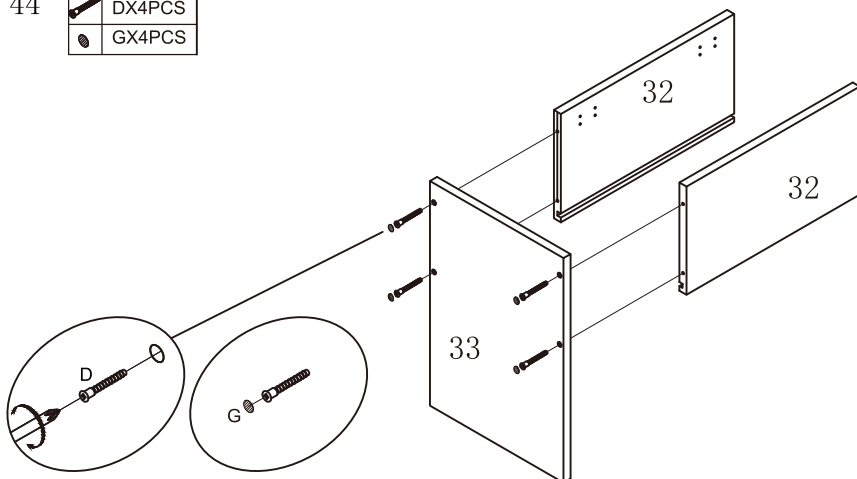 


45

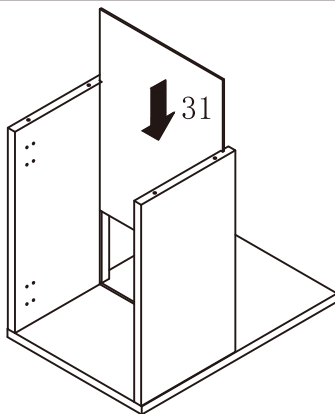 

46


	DX4PCS
	GX4PCS

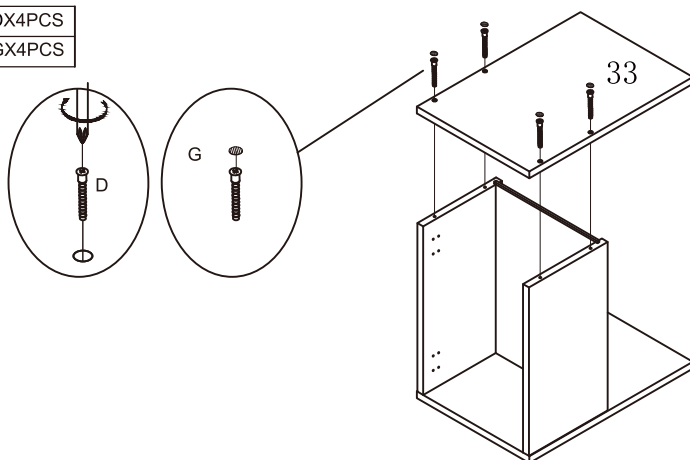 


47





	LX2PCS
	FX4PCS

 * If the hinge holes on the back of the cushion is covered with the non-woven fabric, you can secure the hinge first, then lock the screws.


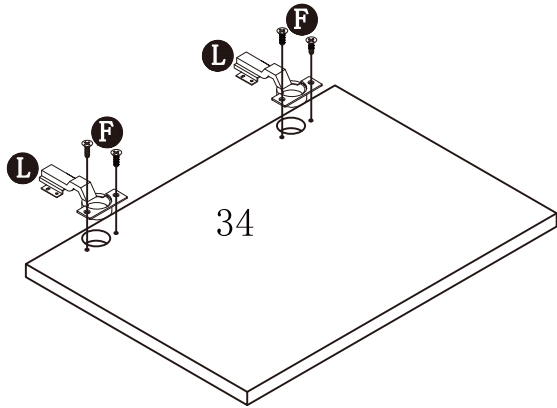


48

	FX8PCS
---	--------

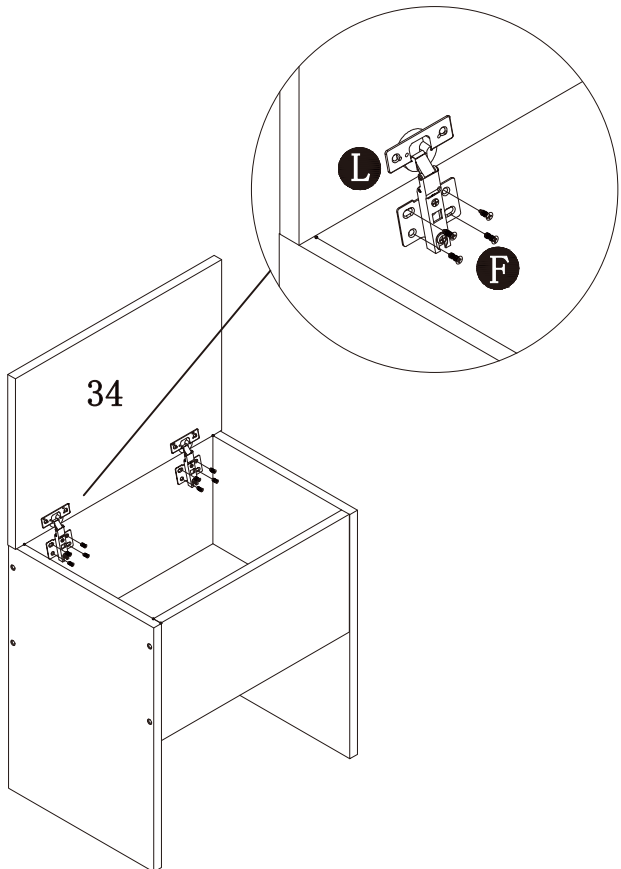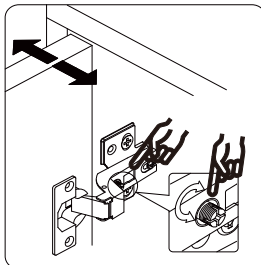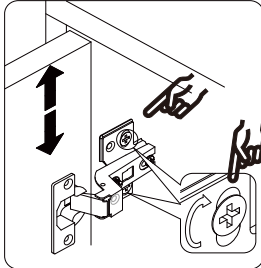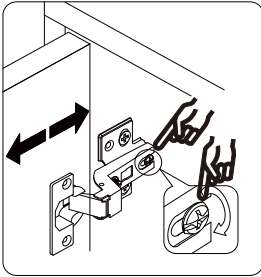    

49

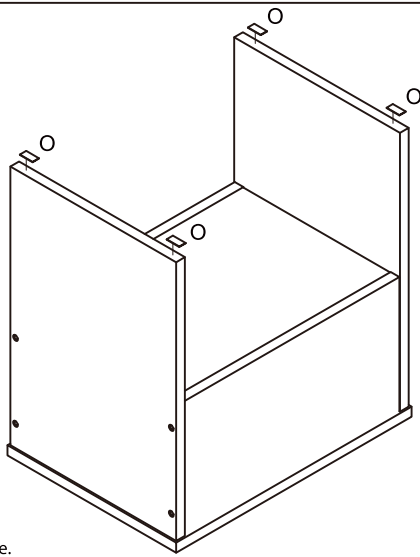  

Flip the stool and the assembly is complete.

WARNING



Children have died from furniture tip-over.
To reduce the risk of furniture tip-over:

- ALWAYS install tip-over restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest shelf or drawer.



 
MAINTENANCE

- Regularly inspect the dresser for any signs of damage or wear and tear, and repair or replace it as necessary.
- Clean the dresser periodically using a damp cloth to remove any dust or dirt.
- Avoid using harsh chemicals or abrasive cleaners, as they can damage the dresser 's finish.
- Keep the hardware away from water and other liquids.
- Put the dresser in a dry and ventilated place.

CAUTIONS



Please check the product and voltage are matched. If it is not suitable, you need to use an adapter or converter.



Turn off the power supply when not in use for a long time.



Do not touch the electric plug or charging port with wet hands to avoid electric shock.



Inspect the power cord and plug for breakage before use.

Limited Liability & Warning

No Unauthorized Modifications/Repairs: Do not modify or attempt to repair this product unless you are an authorized technician. Unauthorized actions may create hazards and void all warranties

Misuse & Non-Compliance: We are not liable for any injury, damage, or loss resulting from:

- (a) misuse, abuse, neglect, or improper installation;
- (b) failure to follow instructions or safety precautions;
- (c) use of unauthorized parts/accessories;
- (d) unauthorized modifications/repairs;
- (e) accidents, natural disasters, or external causes.

If you doubt any step of installation or operation, stop using the product and contact authorized service or the customer support.

LIMITACIÓN DE RESPONSABILIDAD Y ADVERTENCIA

Modificaciones o Reparaciones No Autorizadas: NO modifique ni intente reparar este producto a menos que sea un técnico autorizado. Las acciones no autorizadas pueden generar riesgos y anularán todas las garantías.

Uso Indebido e Incumplimiento: No asumimos responsabilidad alguna por lesiones, daños o pérdidas que resulten de:

- (a) uso indebido, abuso, negligencia o instalación incorrecta;
- (b) incumplimiento de las instrucciones o precauciones de seguridad;
- (c) uso de piezas o accesorios no autorizados;
- (d) modificaciones o reparaciones no autorizadas;
- (e) accidentes, desastres naturales o causas externas.

Si tiene dudas sobre algún paso de la instalación o el funcionamiento, deje de usar el producto y póngase en contacto con el servicio técnico autorizado o con atención al cliente.