




1.Put the table foot and wire in the cabinet upside down and tighten it.

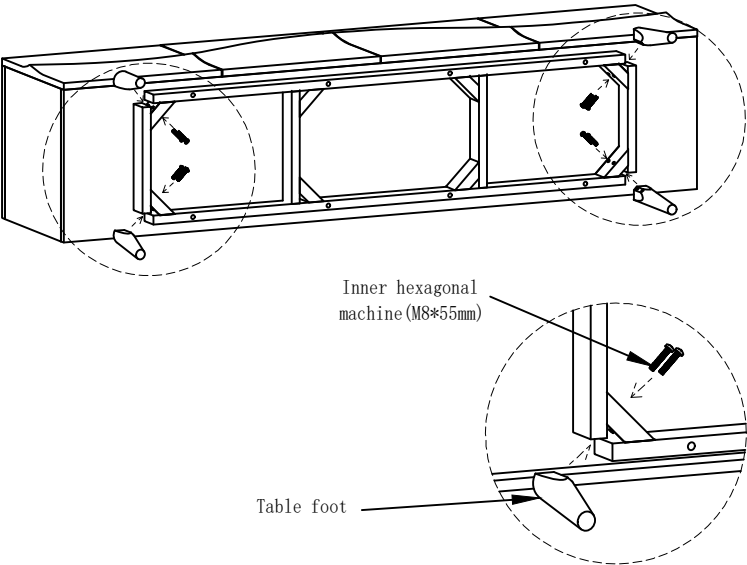


3. installation is complete

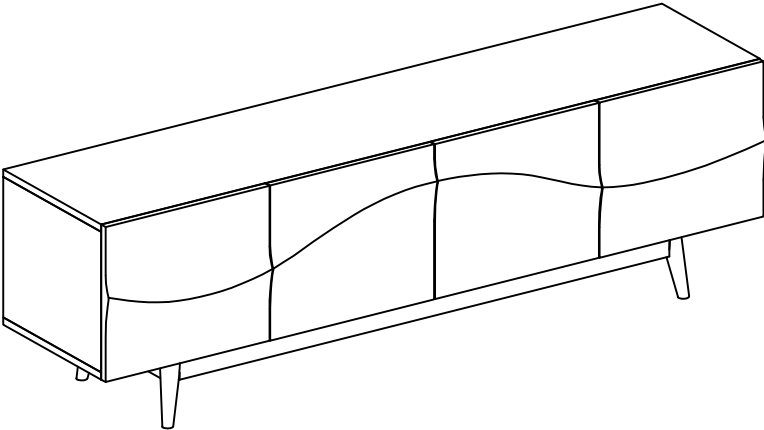

2. Installation of anti -tilt device

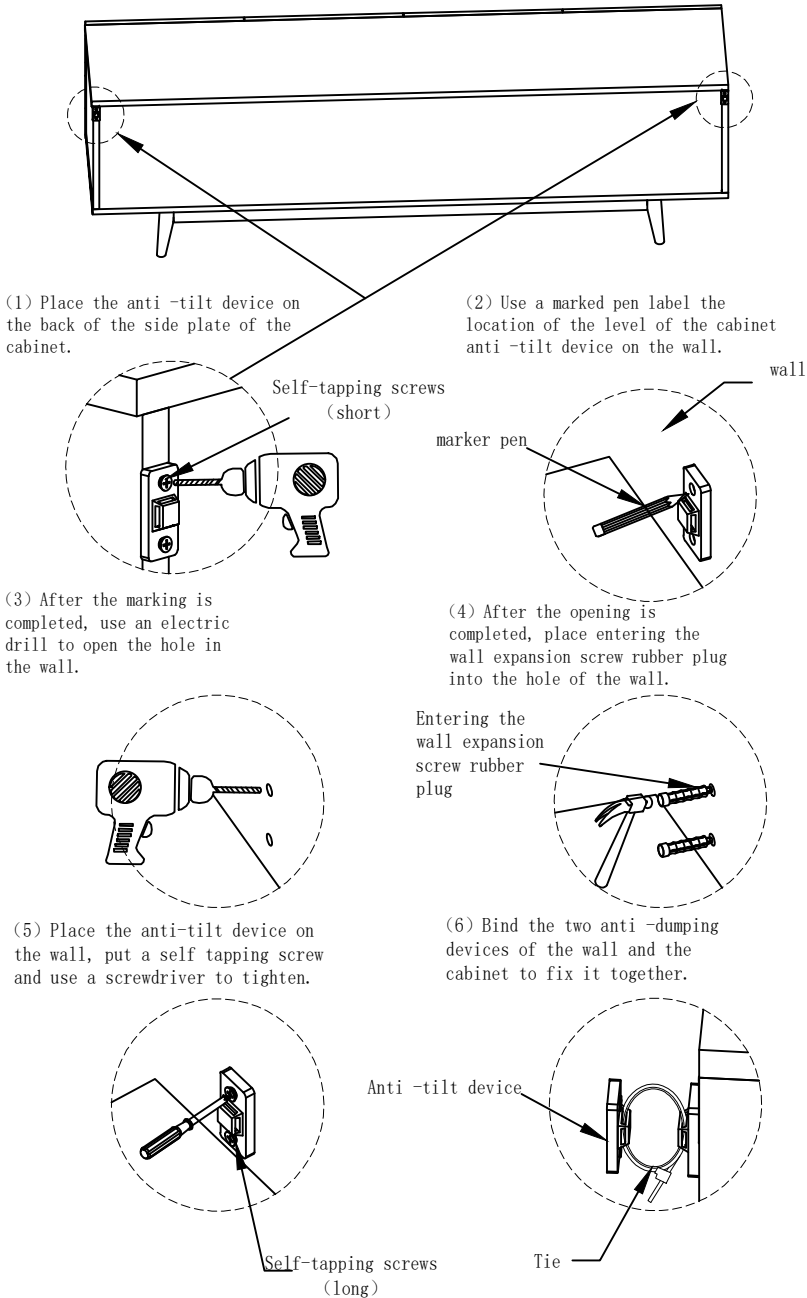

Installation instruction

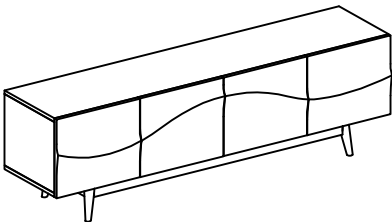

TS1028WD18-20/TS1028G20
Installation


The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation


Parts list

Serial number	Shape	Name	Quantity
A		Inner hexagonal machine (M8*55mm)	8
B		Anti -tilt device	4
C		Self-tapping screws (short)	4
D		Self-tapping screws (long)	4
E		Entering the wall expansion screw rubber plug	4
F		Tie	2


1.Put the table foot and wire in the cabinet upside down and tighten it.

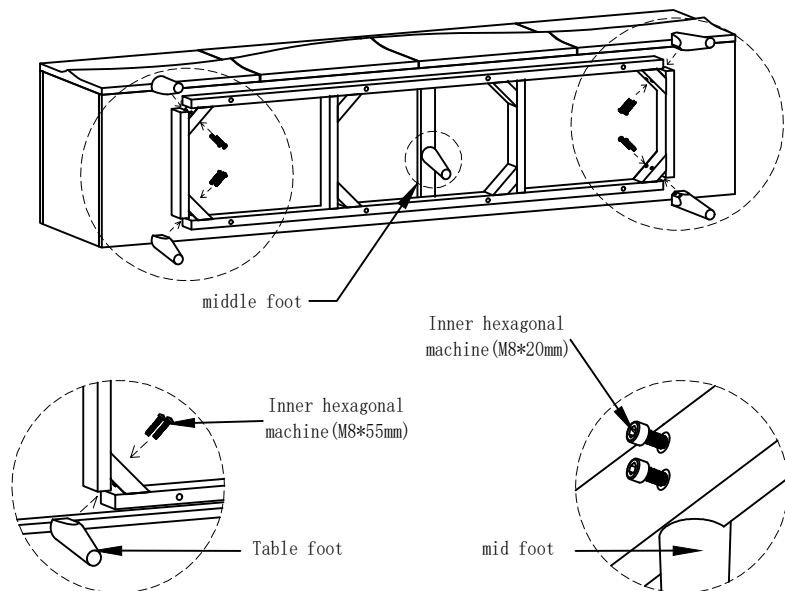


3.installation is complete

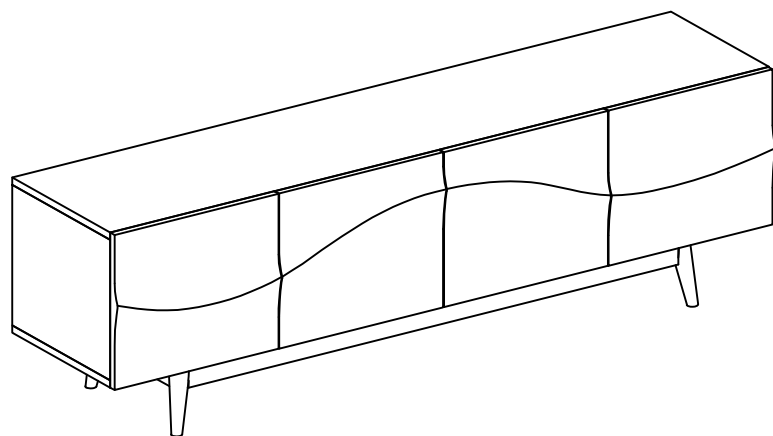

2. Installation of anti -tilt device

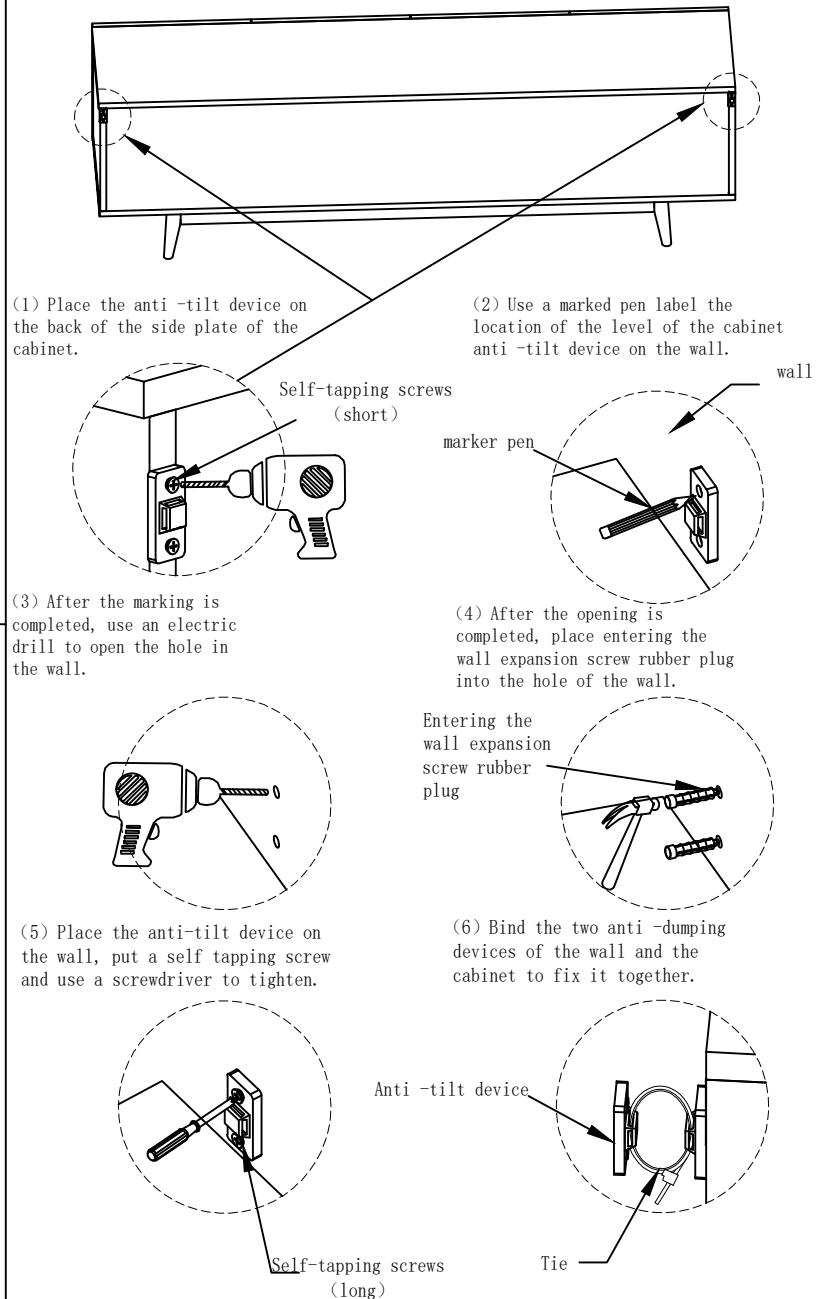

Installation instruction

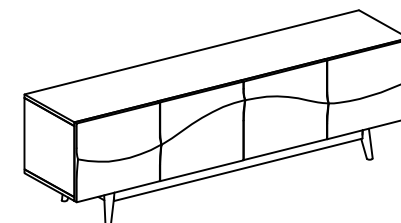

TS1028WD24 Installation

The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation

Parts list

Serial number	Shape	Name	Quantity
A		Inner hexagonal machine (M8*55mm)	8
B		Inner hexagonal machine (M8*20mm)	2
C		Anti -tilt device	4
D		Self-tapping screws (short)	4
E		Self-tapping screws (long)	4
F		Entering the wall expansion screw rubber plug	4
G		Tie	2