



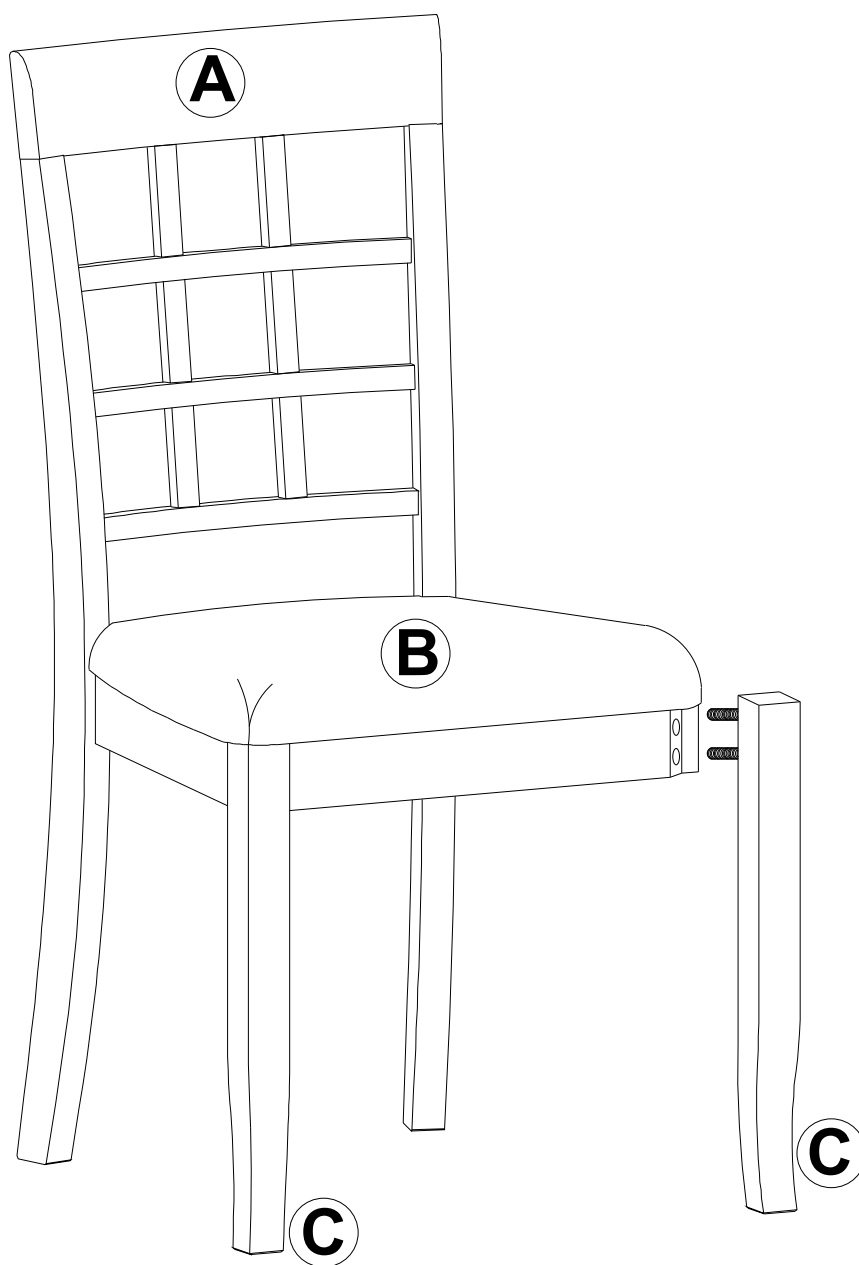
OWNER MANUAL

Thank you for purchasing the Dining Chair.




Please read the instructions and warnings carefully before use, to ensure safe and satisfactory operation of this product. **We** are committed to making great products possible. From our in-house Design Team, to our Buyers, we work together to bring great designs to life. Our expert Product Technologists work collaboratively with our buyers and suppliers to assure the legality, safety and quality of the product we sell. We are all committed to designing and developing products to the highest industry standards. We hope you are happy with your product and welcome any feedback or comments you may have.

EXPLOSIVE VIEW







Dining Chair



PARTS LIST

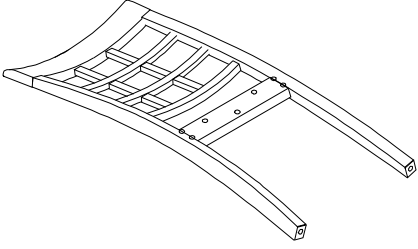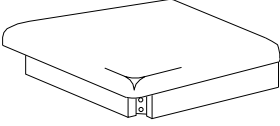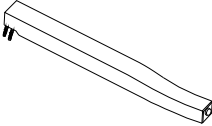
A x 1  Chair Back	B x 1  Seat Cushion	C x 2  Leg
---	---	--

    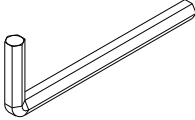 
HARDWARE LIST

1 x 4  Long Bolt Ø1/4"×3"L	2 x 3  Bolt Ø1/4"×1-9/16"L	3 x 11  Spring Washer Ø5/16"
4 x 11  Flat Washer Ø5/16"	5 x 4  Hex Nut Ø5/16"×1/2"	6 x 1  Allen Wrench 4#
7 x 1  Wrench 1/2		

Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.

 STEP 1


5		x 4
3		x 4
4		x 4
7		x 1

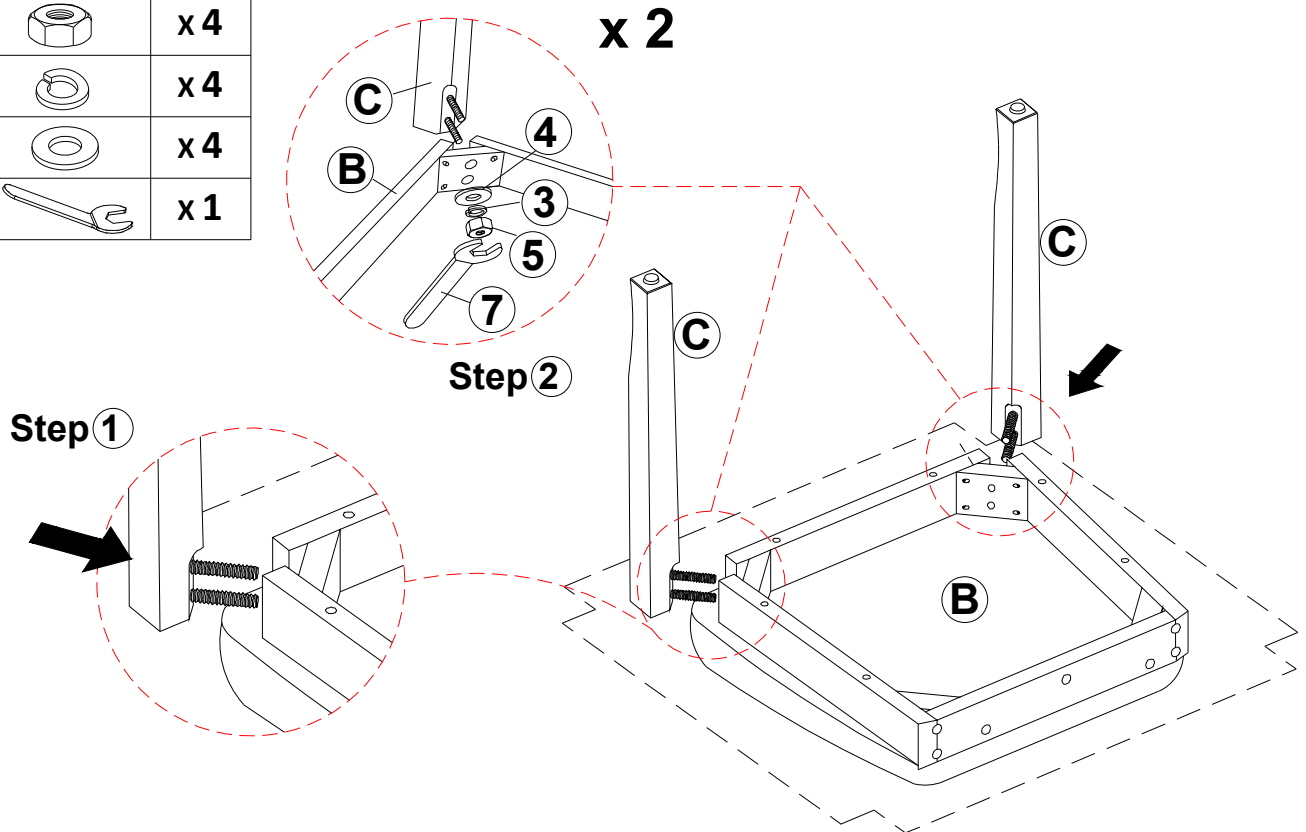

Attach the Front Leg (C) to the Seat Cushion (B) using Flat Washer (4), Lock Washer (3) and Hex Nut (5) with the Wrench (7).


STEP 2

1		x 4
2		x 3
3		x 7
4		x 7
6		x 1

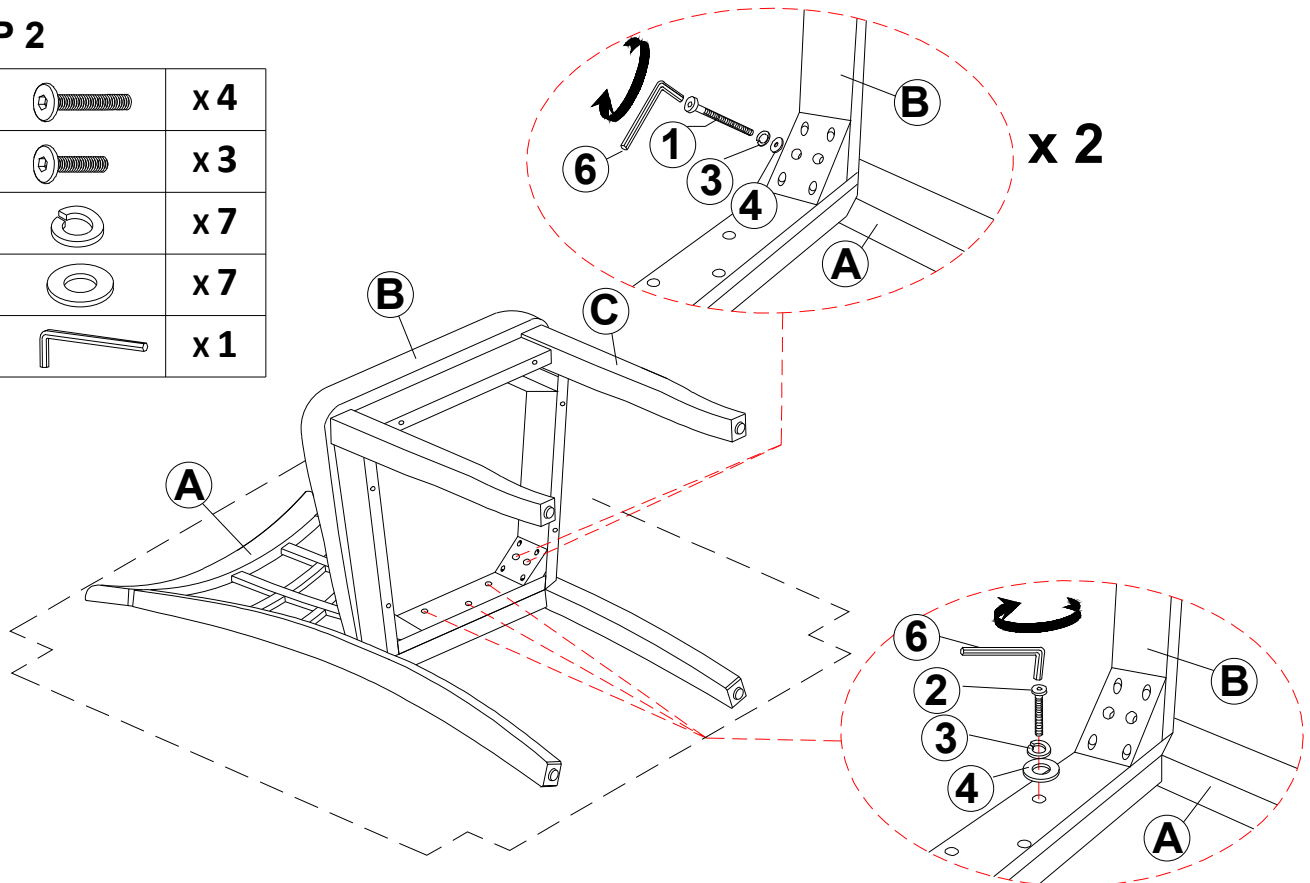

Attach the Seat Cushion (B) to the Chair Back (A) using Bolt (1), Lock Washer (3) and Flat Washer (4) at the corners. Use Bolt (2), Lock Washer (3) and Flat Washer (4) for the middle holes of the back rail. Secure both parts with the Allen Key (6).

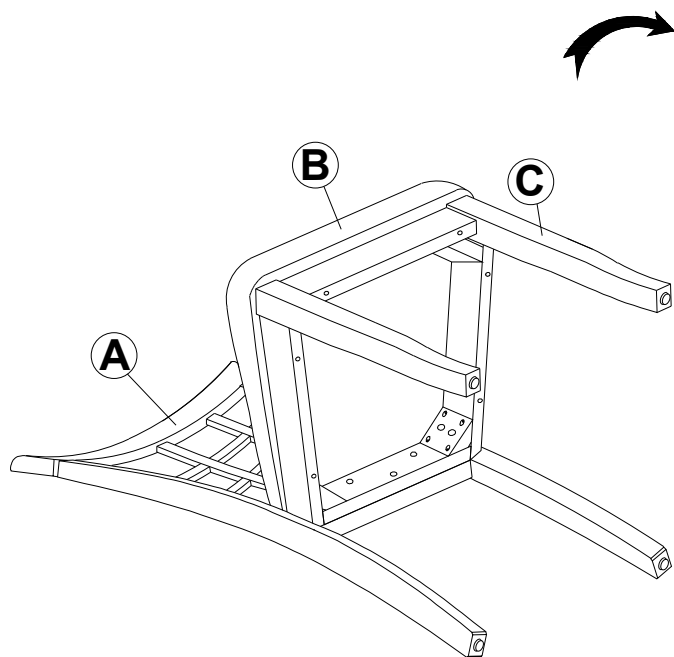STEP 3




After installation, Please keep the chair balanced, tighten all bolt.



Flip the assembled chair over to complete the assembly.

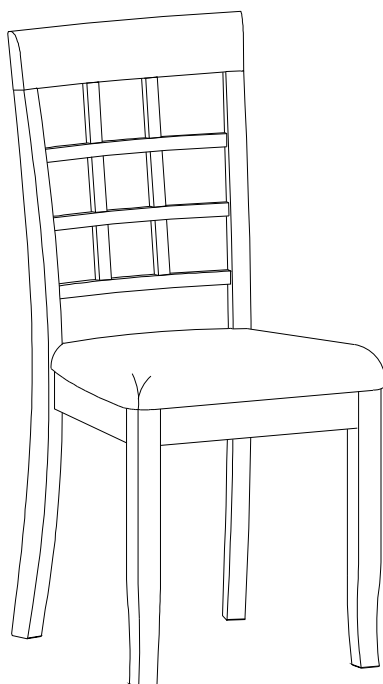STEP 4



Now your chair is ready for use !

MAINTENANCE AND WARNING



- Keep furniture away from heat.
- Do not clean furniture with harsh cleansers or polish. Do not use detergents, Solvents, abrasives, spray packs or leather cleaner. Use non-color mild soap with warm water clean spills(Mix 1:10 soap to water)
- Do not place furniture under direct sunlight, material will possibly fade over time.
- Do not use on site dry Cleaning machine.
- Children should not climb or jump on the furniture.
- Do not write on furniture without a padded barrier to protect the surface.
- Not for commercial use, For residential use only.
- The maximum load is 275 LBS.

WARRANTY

We strive to offer high , quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed. We provide 30 days warranty starting from the time you receive the item. Each customer must provide a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive replacement parts by purchasing them with our company if they are available.

Are you having difficulty with assembly? Missing parts? Please send email with your order No For return, please check the return policy with the retailer or market place you bought from. Appreciate your purchasing from us. Pop up your life by our furniture piece!