



Model No.: Model : 83-DT6157


Use this popcorn pan to cook your own popcorn above an open fire or BBQ. Pour 2 tablespoons of oil into the pan and add 1/3 cup of popcorn (50 gram/2 oz. of popcorn) then close and lock the lid. Hold the closed pan over a fire or BBQ approximately 5-8 cm(2-3 inches)above the flame.Do not stick in coals. DO NOT place the pan too close to the flame otherwise the popcorn will burn and blacken the pan.

IMPORTANT: Shake the pan from front to back to spread the kernels.Ensure that the kernels aren't constantly touching the oil.This will prevent the kernels burning and they will pop more evenly.Remove the pan from the flame when the popping begins to stop (in approx.2-4 minutes).Beware the hot oil may spit.Be especially careful if you're making the popcorn with children. Use a heat-resistant glove when opening/unlocking the lid.Pour the popcorn in a bowl and add butter and salt to taste. Enjoy the warm popcorn.

Assembly Instructions

Model No. 83-DT6157

1. Put the popcorn ring(CCP-2) around into the popcorn handle(CCP-1)
2. Assemble the popcorn handle(CCP-1) to the popcorn pot(CCP-5) using the M4 screw(CCP-3)
3. Put the popcorn lid(CCP-4) on the popcorn pot(CCP-5) through the hole.

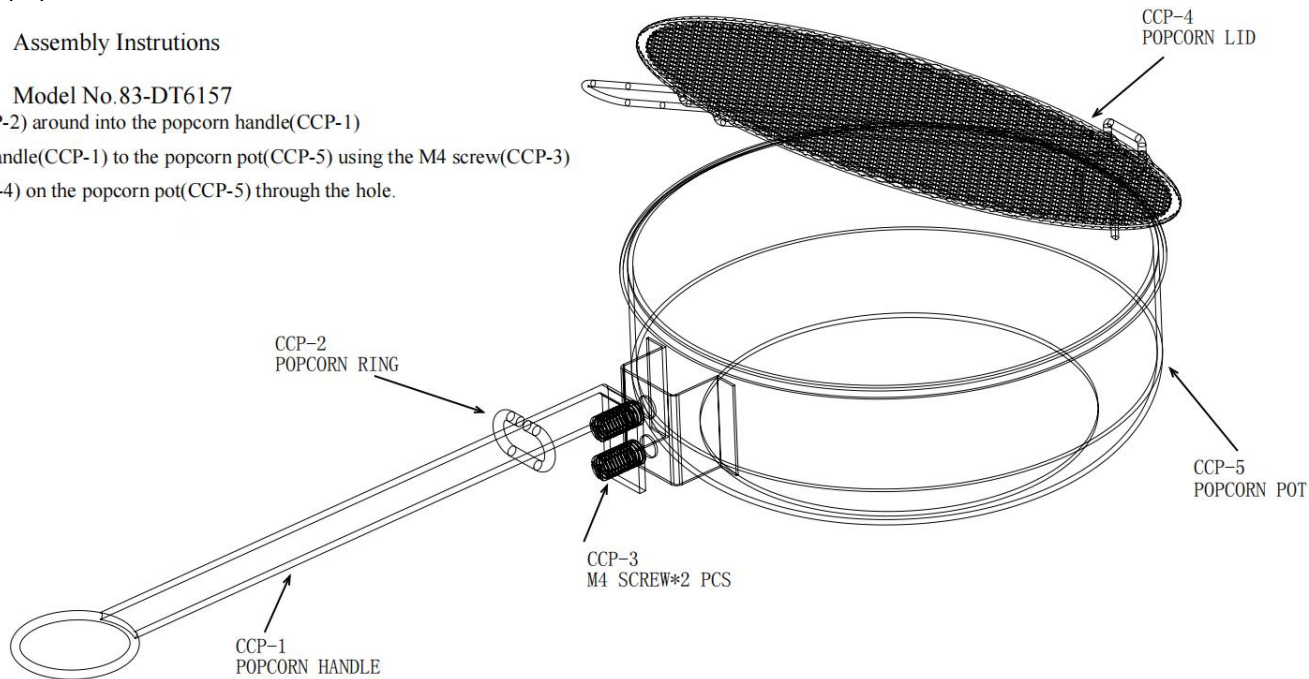

Maintenance:

Wash the pan by hand. Use hot soapy water.

Rinse with hot water. Dry it thoroughly and immediately after washing. Oil the pan with vegetable oil before putting it in storage. DO NOT use any sharp metal kitchen tools, scourers or abrasive detergent, as this will damage the finish of this pan.

Warning:

Read and retain this information for future reference. Do not allow young children to prepare unsupervised. To use the pan correctly, follow directions written above. Please follow the rules of the landowner, do not light a fire in a dry forest/park/garden and confirm well in advance when and where you can make a campfire. Do not leave children unattended next to the pan, the pan is hot! Never leave a fire unattended. Remove all decoration and packaging before use. Place the fire on a suitable safe, level, heat resistant surface away from furnishings, flammable materials, heat and draughts. Do not create the fire with alcohol or other flammable fluid substances. Keep out of reach of children and pets. Extinguish the fire if flame becomes enlarged or gives off excessive smoke, cover the fire with a large fire blanket. Do not blow out or use water to extinguish. Hold open fires/BBQ only outside.

THANK YOU FOR YOUR PURCHASE



↑ SCAN FOR ↑
WARRANTY
REGISTRATION



Register your warranty at
<https://qrco.de/bdV8rJ>



Additional Savings available for
customers across all brands



Hassle-free customer service
TeamCustomerService.com



Connect on social media with our
lifestyle brands



PURE GARDEN



LAVISH HOME
COLLECTION

Stalwart

Classic Cuisine

NORTHWEST



WAKEMAN
OUTDOORS