

Fabric Dresser

Installation Manual



① PRE-INSTALLATION PREPARATION	01
1-1 Thank you for choosing our products	01
1-2 Package contents	01
1-3 Precautions	01
② INSTALLING MODULES	02
2-1 Product Assembly Diagram	02
2-2 Suggestion	02
2-3 Parts List	03
2-4 Assembly Steps	04
③ CUSTOMER SERVICE	08
④ PROBLEMS YOU MAY ENCOUNTER	09

Thank you for choosing our products

Package contents

Fabric dresser with drawers

Assembly tools

Installation Manual

Precautions



Avoid long-term direct sunlight exposure.



Keep away from sharp objects.



Keep away from corrosive substances.



 
Keep infants/children away from assembled parts to avoid



This product must be assembled by an adult before use.



Never allow children to stand, climb or hang on drawers, doors or shelves.

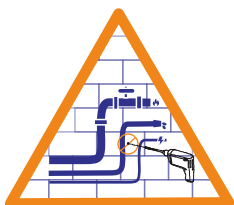

Note that the wall to be drilled has no hidden electrical wires, water pipes and gas pipes.

 


When assembling the product, be careful of iron frames or iron pipes hitting people.



Pay attention to avoid over-tightening fasteners, or they may induce cracking within the board.

Product Assembly Diagram

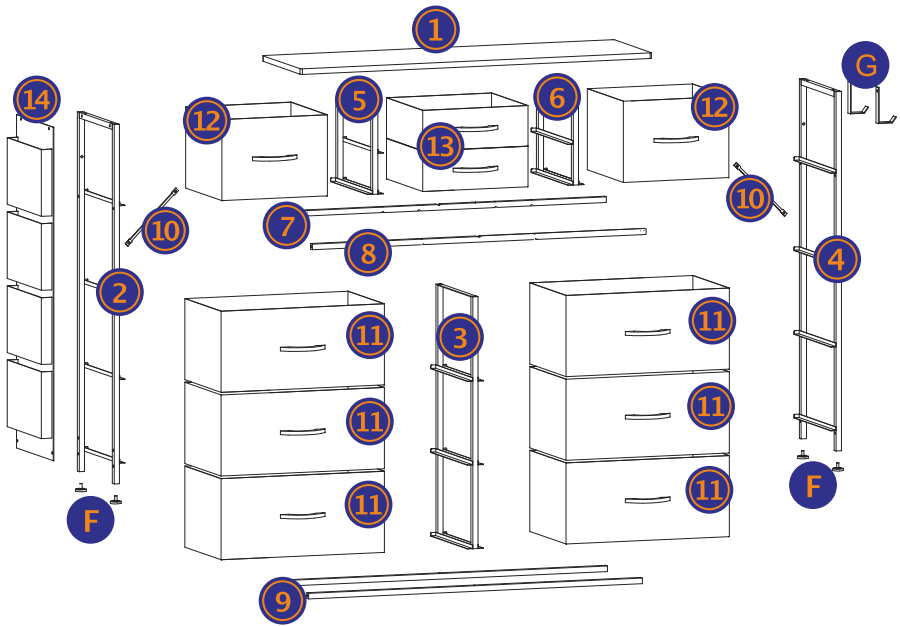

Suggestion



The installation
takes 30 minutes



For convenience
and safety, we
recommend two
people to assemble

 
 
 
 
 
 



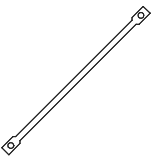 
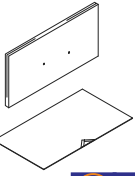 
 
 
 



 
 



 




Assemble it by
selecting the drill
to our manual
mounting
specifications

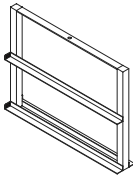

Product assembly
video



Parts List

				
1 x1	2 x1	3 x1	4 x1	5 x1
				
6 x1	7 x1	8 x1	9 x2	10 x2
				
11 x6	12 x2	13 x2	14 x1	


 
				
M6x10 A x12	M6x23 B x4	M6x30 C x16	M4x10 D x20	E x10
		 M6x30 x2  M4x50 x2 Anti-tip protection H x1		
M6 F x4	G x2			

Assembly Steps

  STEP1 Note: the guide rails are in the same direction

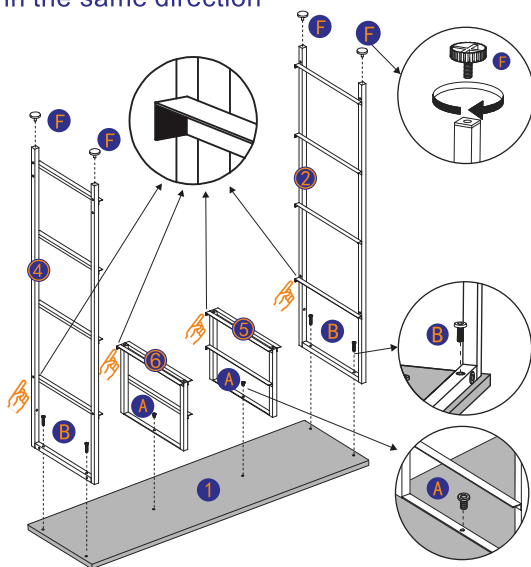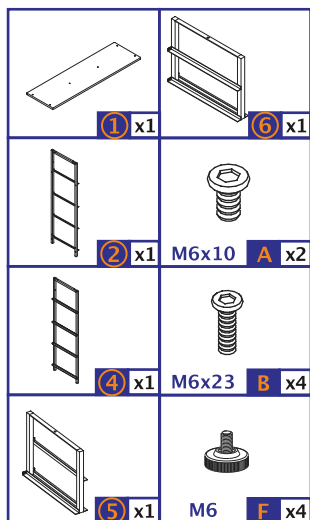

 
 
STEP2

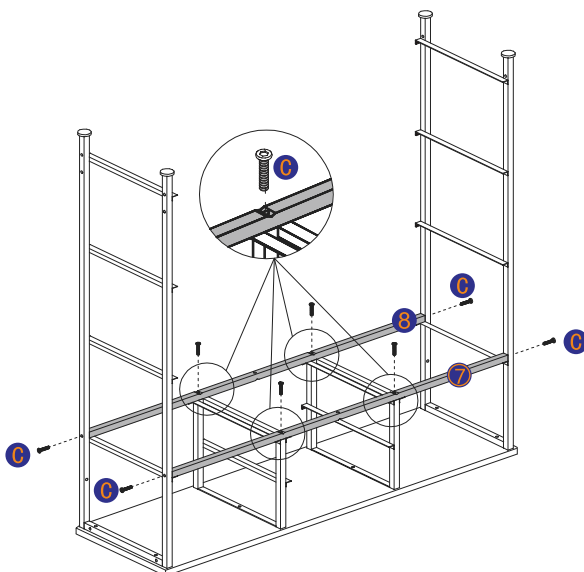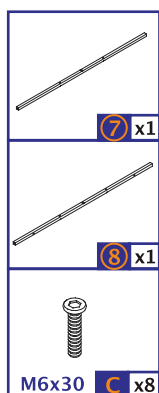



Assembly Steps

STEP 3

  Note: the guide rails are in the same direction

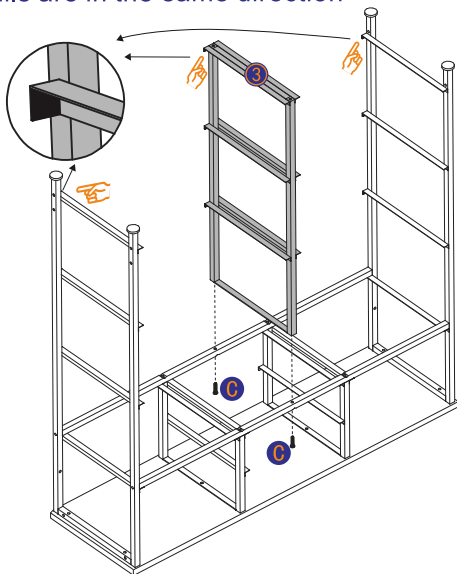
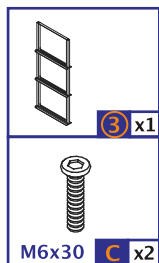


  STEP 4

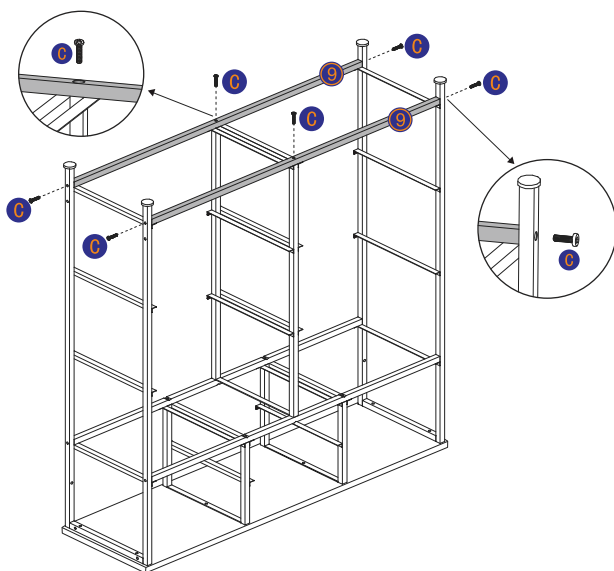
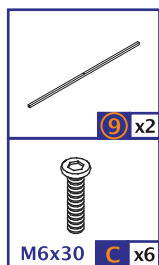


Assembly Steps

  STEP 5

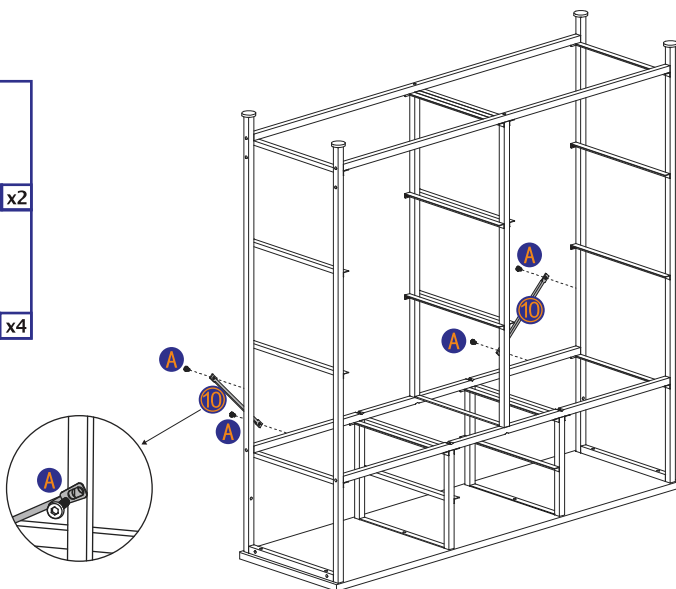
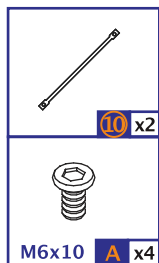


  STEP 6

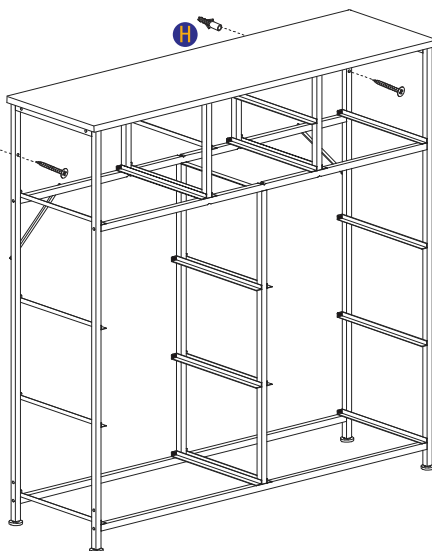
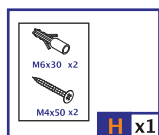



Assembly Steps

  STEP 7

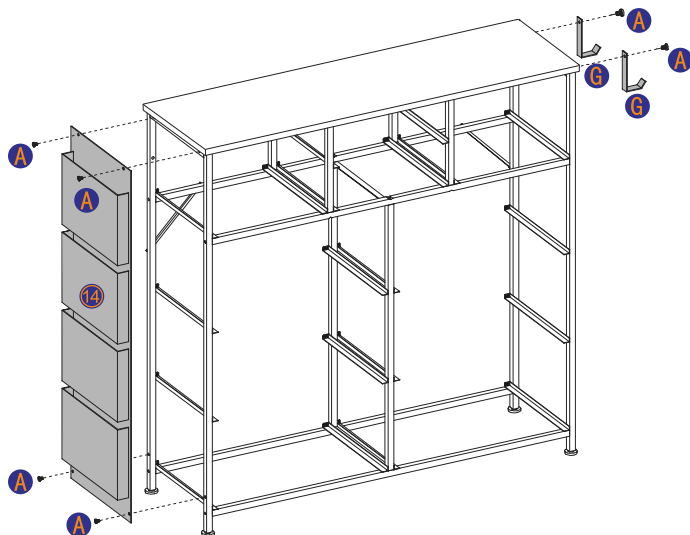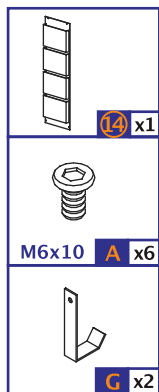

   STEP 8

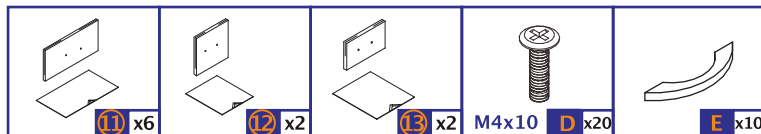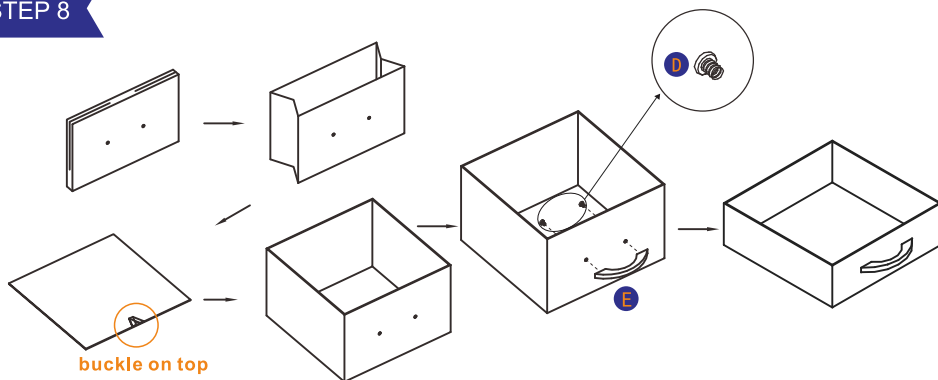

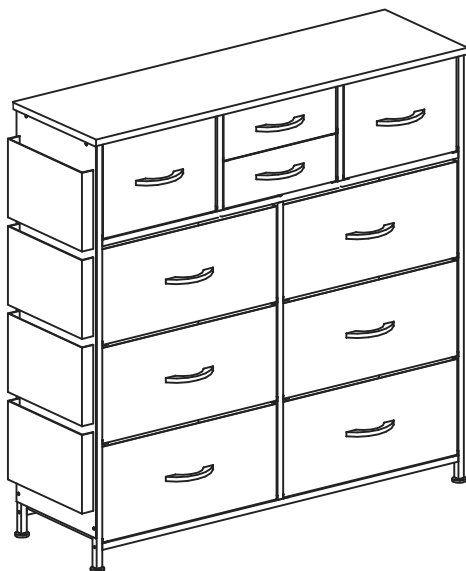

CUSTOMER SERVICE

Quick Response within 24 Hours



If you are still unable to resolve the issue you are experiencing, please contact us immediately via our support email. It doesn't matter if the product has been installed or not, our customer support team will respond within 24 hours and assist you quickly and efficiently. The most efficient way to confirm your problem to us is to attach a video and photograph, which illustrates your product issues.

PROBLEMS YOU MAY ENCOUNTER

PART	PROBLEM	SOLUTION
ALL Product	Parts are missing, defective or having wrong parts in package	
	Having issue(s) while reading the instruction or completing the assembly.	You can contact us and we will get back to you within 24 hours. Or, you can reach us via after-sales email.
	Encountering non-human caused damage during usage.	If the product is damaged due to non-human causes, please keep the product and send us photos of it. We will ascertain the cause of the product damage within 48 hours and provide you with a satisfactory solution.
Table Surface	Board Surface is broken, scratched or lack of some screw holes.	You can contact us and we will get back to you within 24 hours. Or, you can reach us via after-sales email.
	The screw holes that Table on the board and the Surface steel frame don't line up.	1.Please tighten the screws on the board by 70%, do not tighten completely. 2.Adjusting board and steel frame until the screw holes are lined up, then tighten all the screws.
	The dresser board is uneven or not tight that has gaps after being assembled.	1. Loosen the screws in the uneven or gap positions; adjust until the desktops are flat and tight, and then tighten the screws. 2. If your problem still can't be solved, please feel free to contact us.
Steel Frame	The dresser board is uneven or not tight that has gaps after being assembled.	You can contact us and we will get back to you within 24 hours. Or, you can reach us via after-sales email.
	The product is unstable after being assembled.	1.Check if the screws are tightened. 2.Read throughout the manual, check are there any parts installed incorrectly or missing assembled. 3.If your problem still can't be solved, please feel free to contact us.
	Encountering non-human caused damage during usage.	If the product is damaged due to non-human causes, please keep the product and send us photos of it. We will ascertain the cause of the product damage within 48 hours and provide you with a satisfactory solution.
Drawer	Broken, dirty or missing	You can contact us and we will get back to you within 24 hours. Or, you can reach us via after-sales email.

WARNING



Children have died from furniture tip over. To reduce the risk of furniture tip over:

ALWAYS install tip over restraint provided.

NEVER allow children to stand, climb or hang on drawers, doors, or shelves.

NEVER open more than one drawer at a time.

Place heaviest items in the lowest drawers.