

ASSEMBLY INSTRUCTIONS

Customer Service Email: **chairservice888@163.com**

We provide 5 years of after-sales guarantee!

If there are problems such as missing parts, product damage, or other unsatisfactory issues,
Please feel free to contact us (attach with your order number).



MODEL NO(JX1665)

Customer Service Email: **chairservice888@163.com**

We provide 5 years of after-sales guarantee!

If there are problems such as missing parts, product damage, or other unsatisfactory issues,
Please feel free to contact us (attach with your order number).

Components

- A 5×Legs
- B 1×Base
- C 1×Backrest




- D 1×Seat
- E 1× Seat Plate
- F 1×Gas Lift



- G 5×Casters
- H 2 x Armrest



Hardware

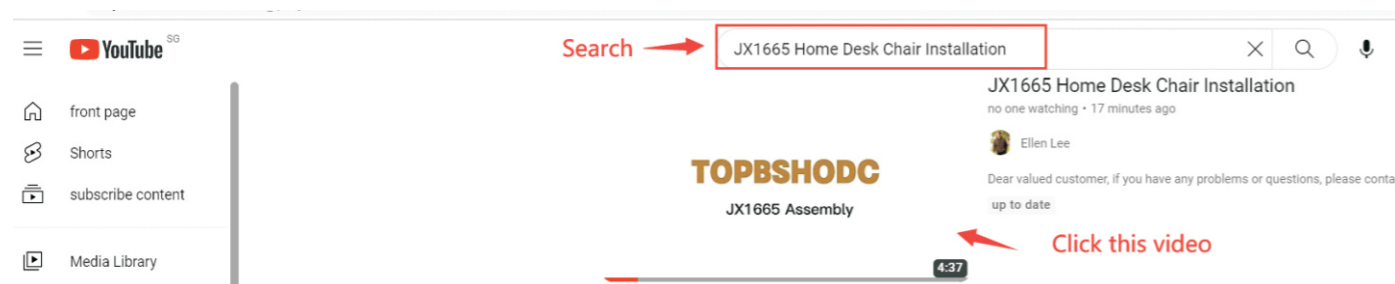

Search " JX1665 Home Desk Chair Installation " on YouTube


The installation video helps you install the chair more conveniently.

<https://youtu.be/d53PESuy1QI>


ITEM	DESCRIPTION	QUANTITY
A	Leg	5
B	Base	1
C	Backrest	1
D	Seat	1
E	Seat Plate	1
F	Gas Lift	1
G	Caster	5
H	Armrest	2
I	Screw(M6x20mm)	5
J	Screw(M8x35mm)	4
K	Screw(M8x35mm)	4
L	Screw(M6x20mm)	4
M	T Allen Wrench	1



step 1.

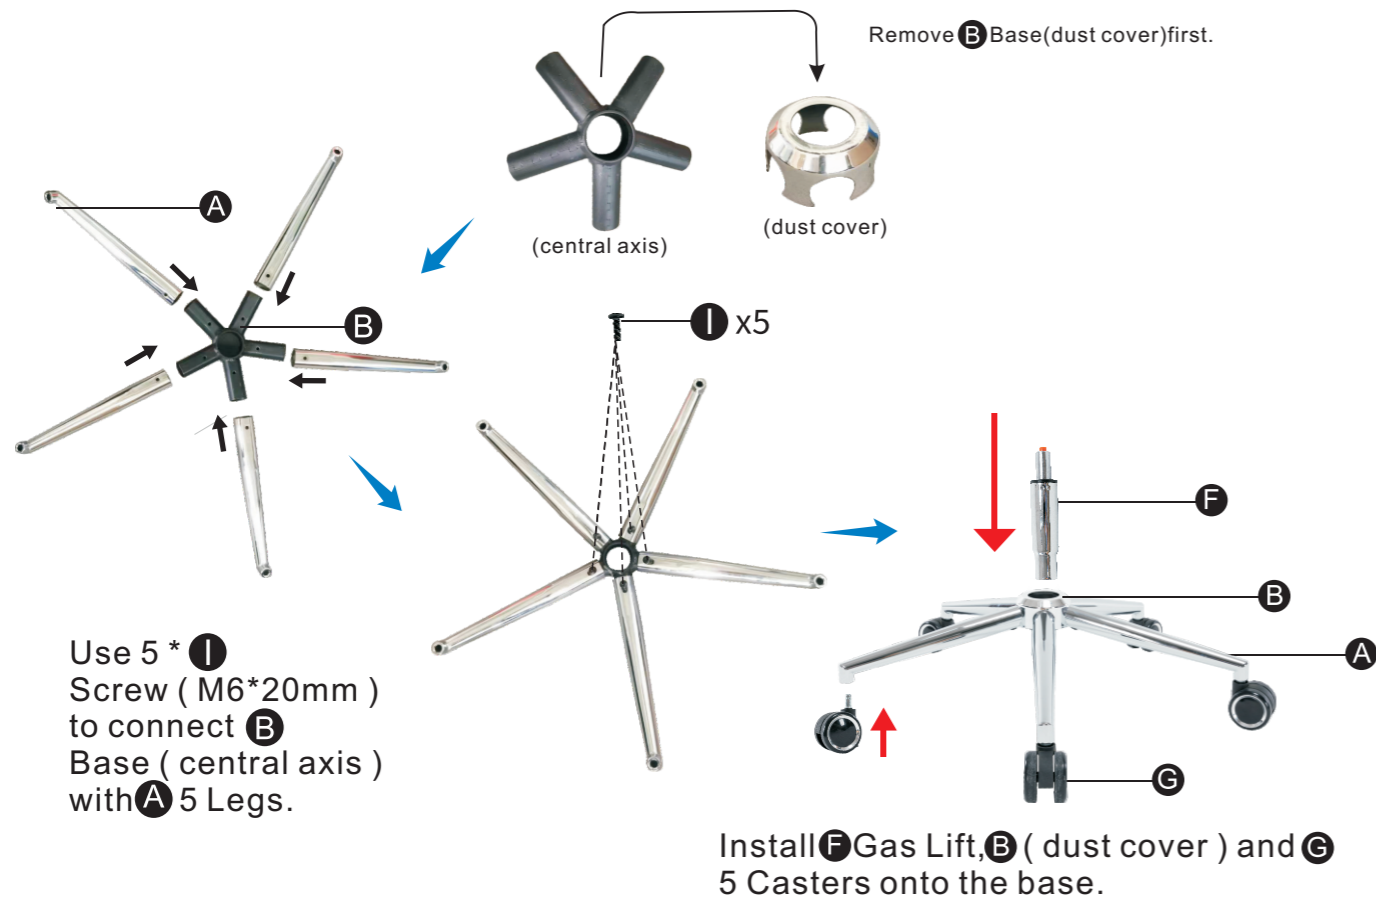


step 2 .

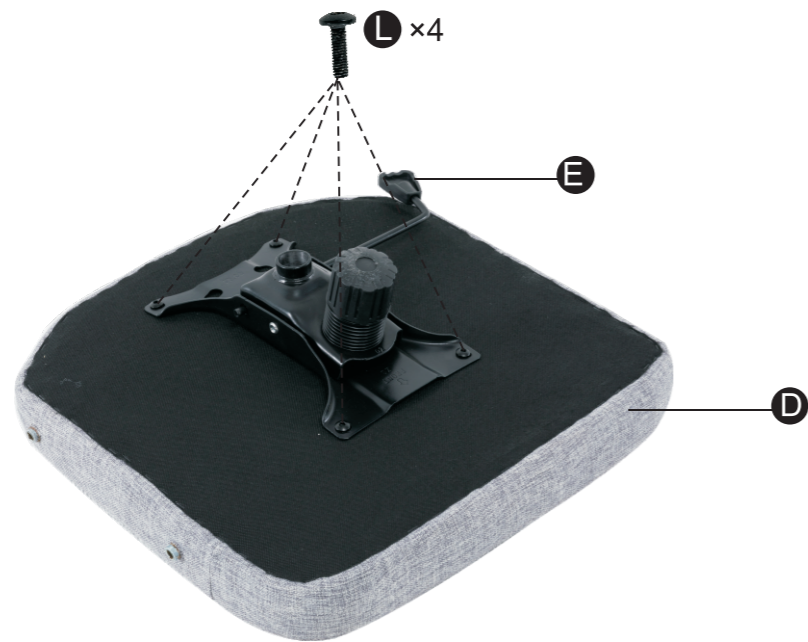

Use 4 * **L** Screw (M6 *20mm) to connect **D** Seat and **E** Seat plate

step 3.

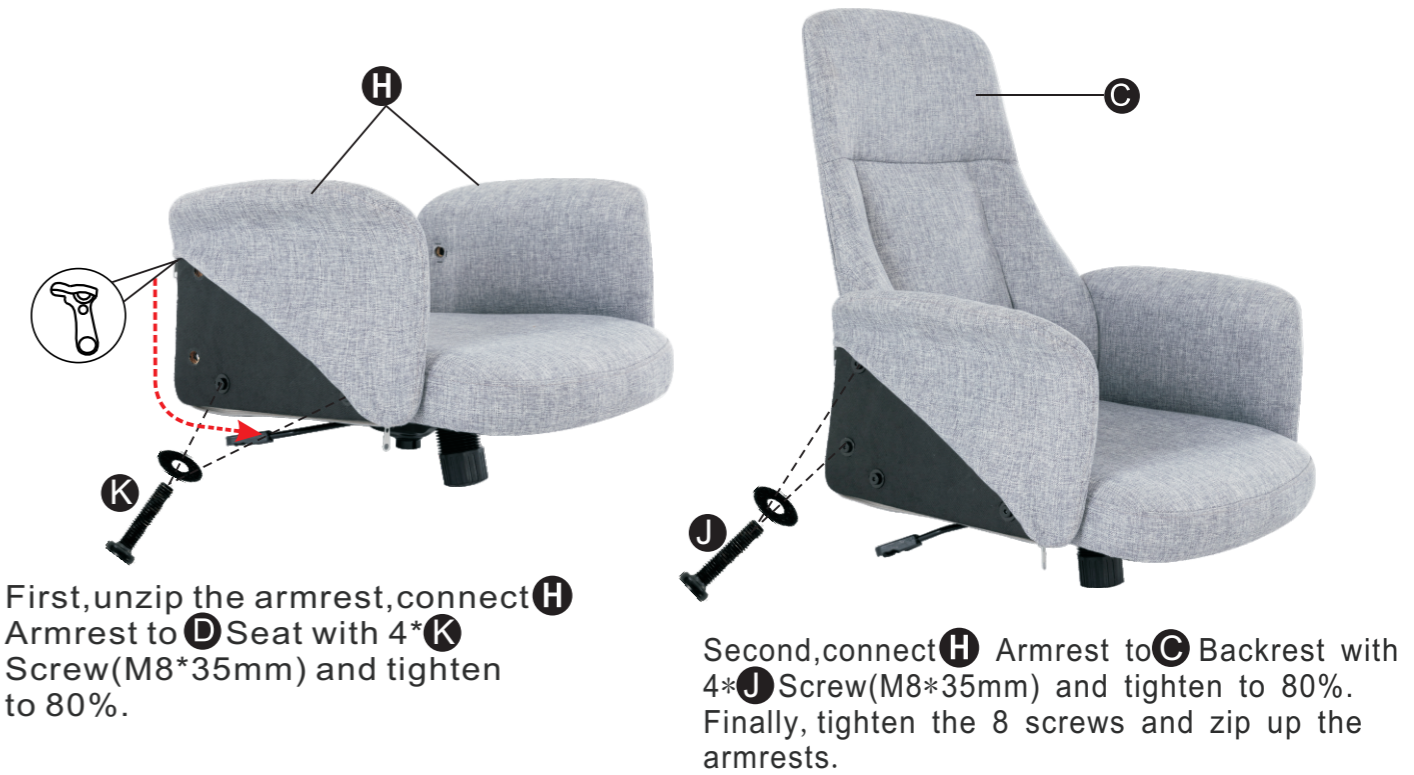

step 4 .



Function



Rocking Mode
Pull out the lever to enter rocking mode with the backrest. Push in the lever to lock the backrest to 90°

Adjustable Height
An adjustable height range of 4 inches, support shoulder & back relaxation. You can adjust the height by pulling up on the rope lever if you are already in the chair.

Tension Device
Offer a little rocking feature what are clockwise to tight and anticlockwise to loosen.

Q&A

Q: Does the chair have a warranty? What if parts are missing or damaged?

A: Dear customer, we have 5-year warranty. If there are problems such as missing parts, product damage, or other unsatisfactory issues, please feel free to contact us.

Customer Service Email: chairservice888@163.com

Q: How to adjust the seat height?

A: When you sit on the chair. To raise the seat height, please lift your body slightly while lifting the adjustment lever. To lower the seat height, please increase the pressure down on your body while lifting the adjustment lever.

Q: How to adjust the tightness of the backrest?

A: When you are taking a rest. Loosen the tension knob (under the seat), pull out the adjustment lever, and you can turn on the rocking mode. Lean back, and the backrest angle swings from 90° to 110°.

When you are working, you can push in the adjustment lever to lock, keeping the backrest angle at 90°.