


## OPERATING MANUAL

- (A.) Remove the back cover and insert three "C" batteries (not included) into battery Compartment.
- (B.) Hang the pendulum on holder (② on diagram below). Unwrap chains attached to the bottom of clock and hang the carved faux weights on these chains.
- (C.) Gently push pendulum to one side to start swinging motion.
- (D.) Move hands to the correct time by moving the minute hand clock wise manually.
- (E.) Push the reset button (④ on diagram below) and the cuckoo/hour count will automatically be set at 6:00 o'clock.
- (F.) Adjust to the correct cuckoo count by pushing the "Adjust" button(⑤ on diagram below) until it matches the correct time (e.g if you push three times, the cuckoo hour would be 8:00 o'clock; if you push eight times the cuckoo hour would be 1:00 o'clock).
- (G.) Switch the volume control (high-low) to meet your needs (③ on diagram below).
- (H.) Please replace the batteries if there is an abnormal cuckoo sound or the bird is not coming out on time.
- (L.) We recommend that the batteries be changed twice per year for optimum performance and enjoyment.

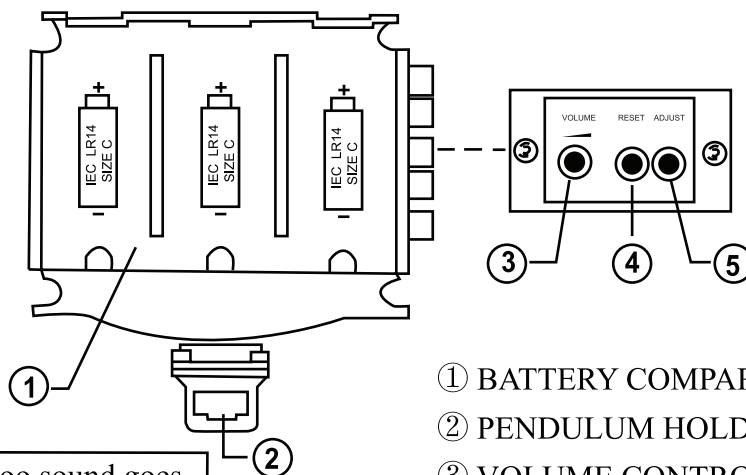

N.B. The cuckoo sound goes off automatically between 10:00PM-5:00AM

- ① BATTERY COMPARTMENT  
② PENDULUM HOLDER  
③ VOLUME CONTROL S/W  
④ AUTO RESET BUTTON  
⑤ CUCKOO COUNT ADJUSTMENT