 
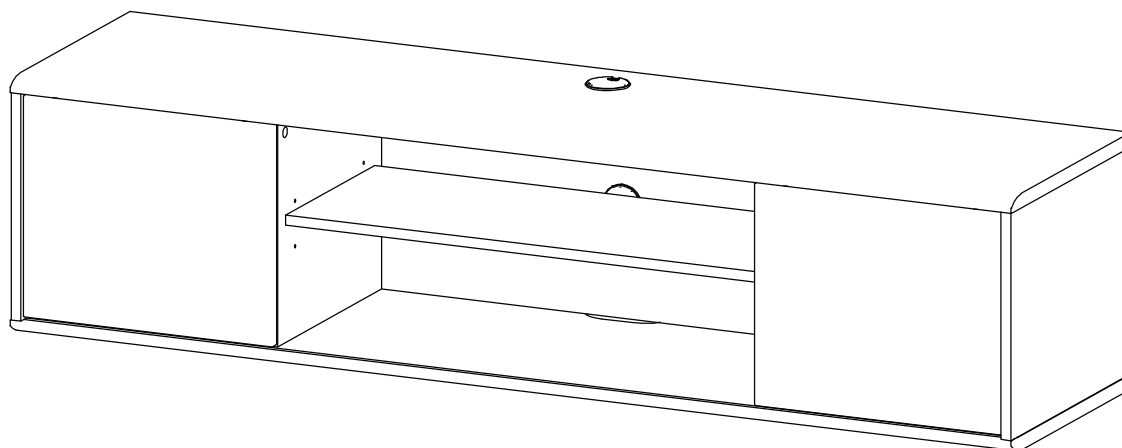




 


 

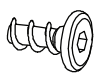
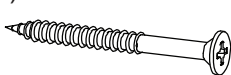
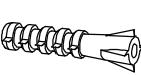


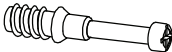



Before you start, here are some helpful advice:

 
1. We suggest you spend a short time reading through this leaflet and then follow the simple step-by-step instructions.
 2. Owing to the size and weight of the TV Stand, we recommend that it is assembled by two adults, on a carpeted or padded area, in the room that it is intended for. Approximate assembly time: 70 minutes.
 3. Please do not use any tools other than those provided or recommended in these instructions.
 4. Please do not throw away any of the packaging or instructions until you have checked all the components and hardware and the furniture is fully assembled.
 5. Assemble all components loosely until advised to tighten. Depending on use, it may be necessary to tighten the components from time to time, so please save the tools that have been provided.
 6. Please keep all pieces out of reach of children.
-

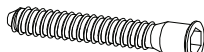

Hardware :

 
| | | | | |
|---|--|--|--|---|
| A) Cambolt/Metal  Ø 6 x 35 mm x 16 | B) Camlock/Metal  Ø 15 mm x 16 | C) Dowel/Wood  Ø 8 x 30 mm x 28 | D) Screw/Metal  M 7 x 50 mm x 16 | E) Hex/Allen Key/Metal  L 4 x 1 |
| F) Pin Sliding Top/Plastic  Ø 8 x 19 mm x 4 | G) Pin Sliding Bottom/Plastic  Ø 8 x 16 mm x 4 | H) Grommet Cover / Plastic  x 2 | I) Short Bracket / Aluminium  x 5 | J) Long Bracket /Aluminium  x 1 |
| K) Screw/Metal  M 6.4 x 14 mm x 10 | L) Screw/Metal  M 12 x 45 mm x 8 | M) Wall Plug/Plastic  5002 x 8 | N) Wall Mounted Bolt/Metal Plastic  x 2 | O) Shelf Support/Metal  x 4 |
| P) Screw Cup/Plastic  Ø 15 mm x 8 | Q) Bumper /Silicon  Ø 8 mm x 3 | R)  Screwdriver (Not Include) x 1 | | |

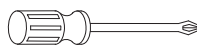Components:

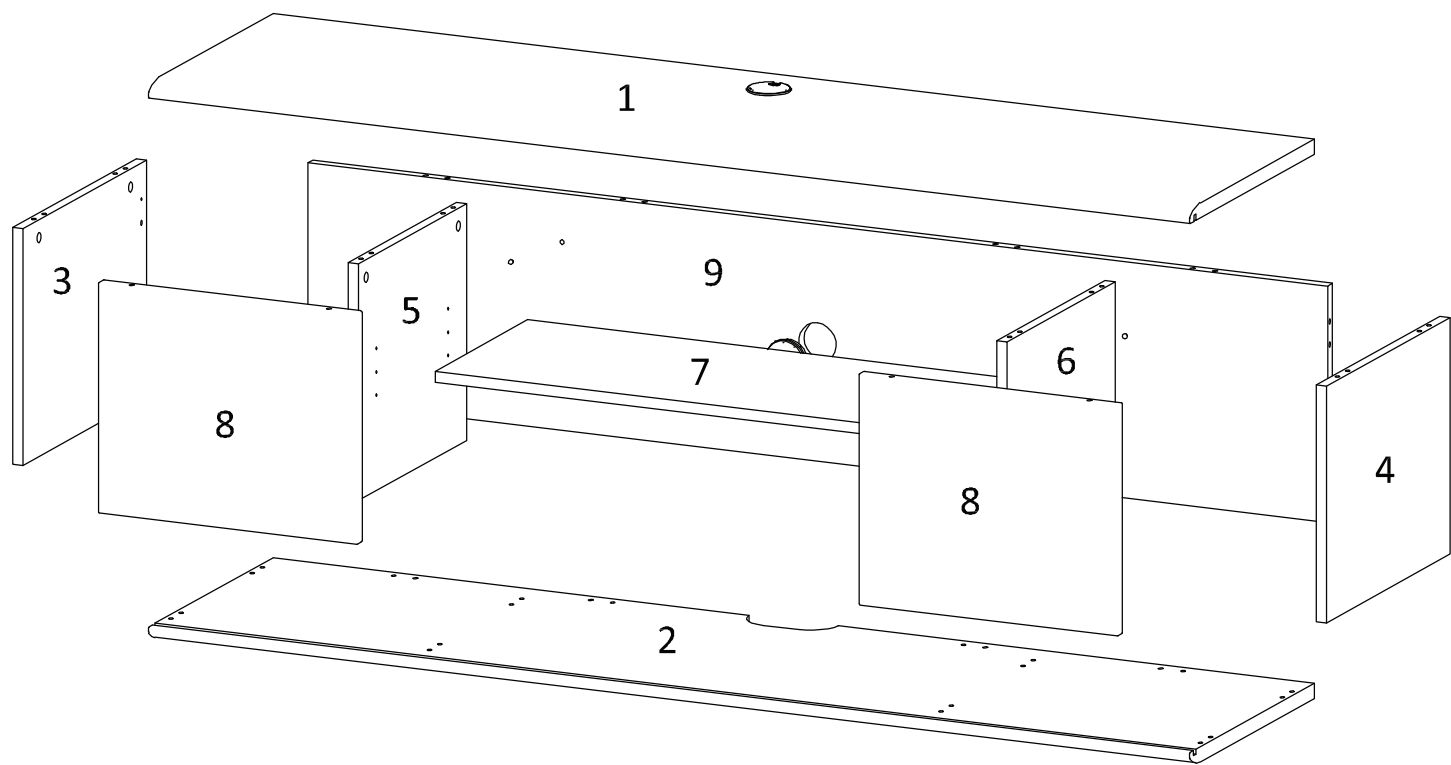




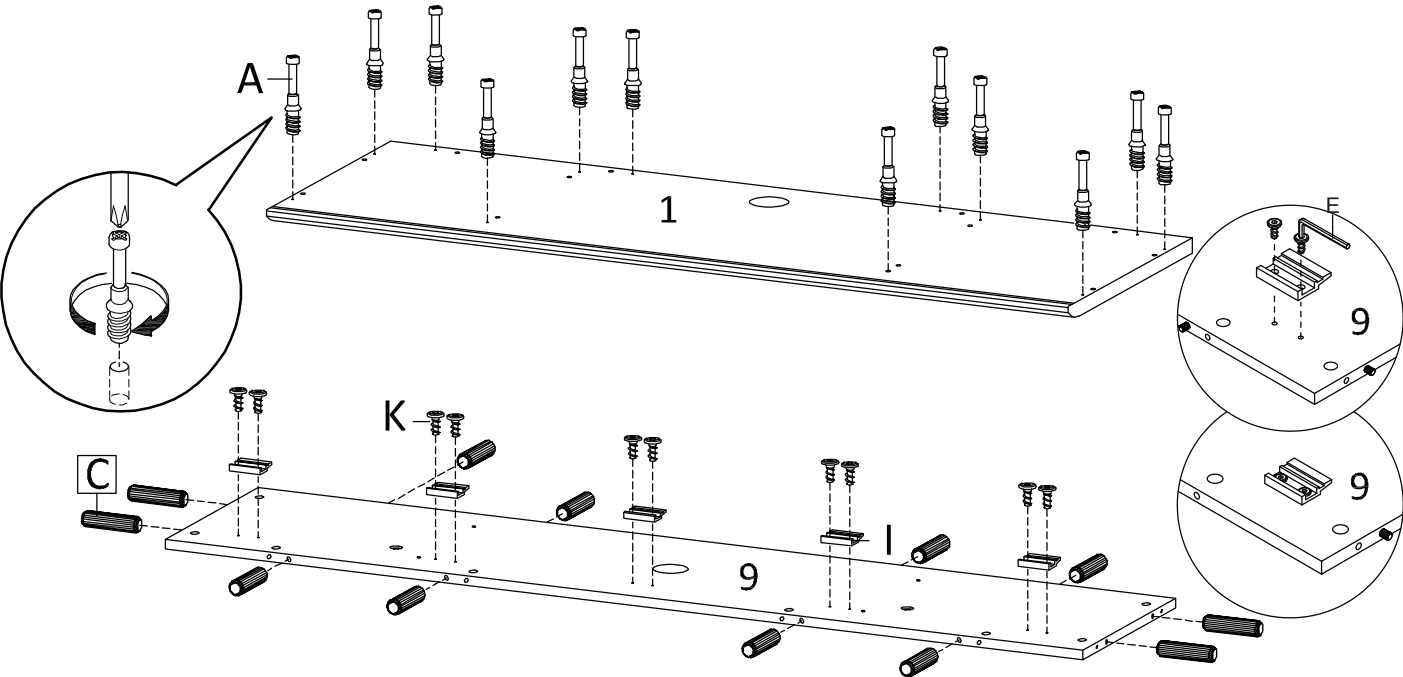


| | | | | | | | | | | | |
|---|----------------|----|---|----------------|----|---|------------------|----|---|------------------|----|
| 1 | Top Board | x1 | 2 | Bottom Board | x1 | 3 | Side Board Left | x1 | 4 | Side Board Right | x1 |
| 5 | Center Board 1 | x1 | 6 | Center Board 2 | x1 | 7 | Adjustable Shelf | x1 | 8 | Wooden Door | x2 |
| 9 | Back Board | x1 | | | | | | | | | |

 
STEP 1:

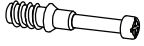

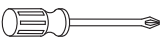


Hardware required.
Screwdriver not included

| | | | | | |
|---|---|---|---|--|---|
|  |  |  |  |  |  |
| Ax12 | Cx12 | Ex1 | Ix5 | Kx10 | Rx1 |

 
STEP 2:

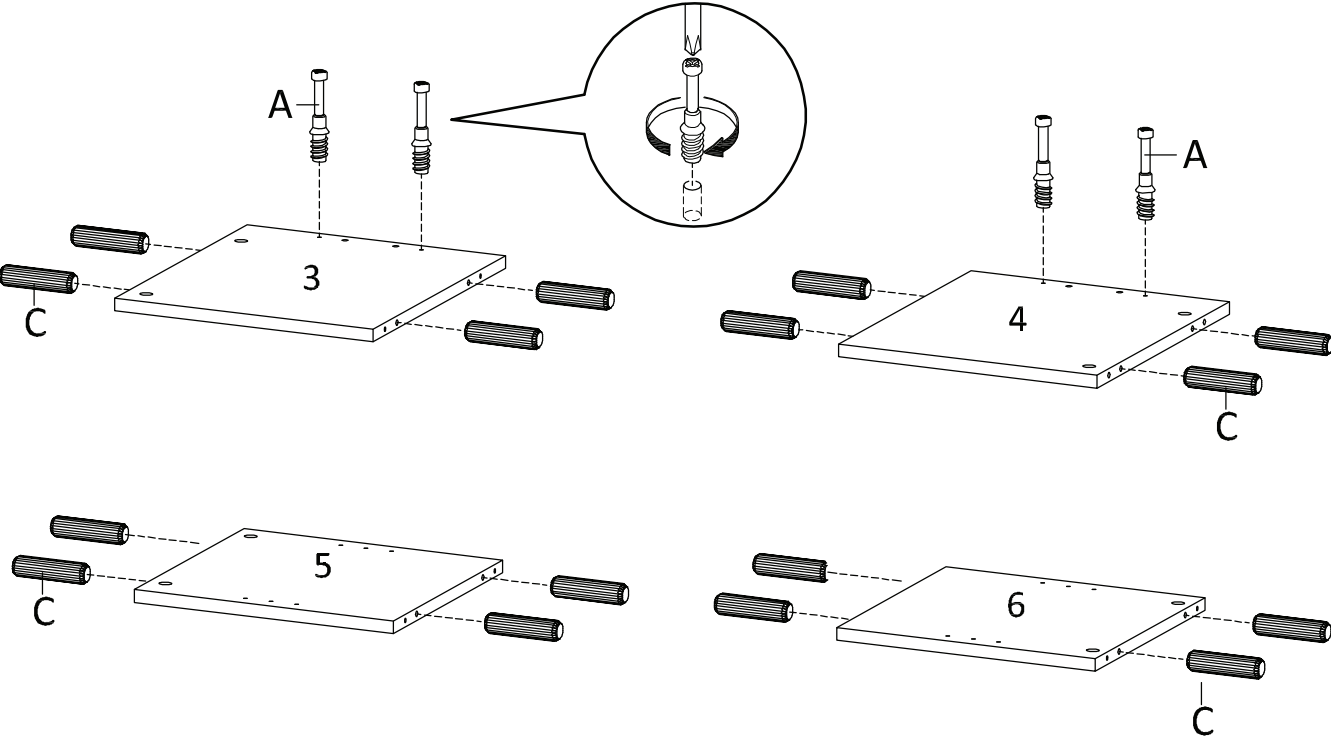
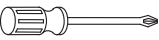

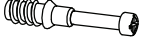
| | | |
|---|---|---|
|  |  |  |
| Ax4 | Cx16 | Rx1 |

Hardware required.
Screwdriver not included

 
 
 
STEP 3:

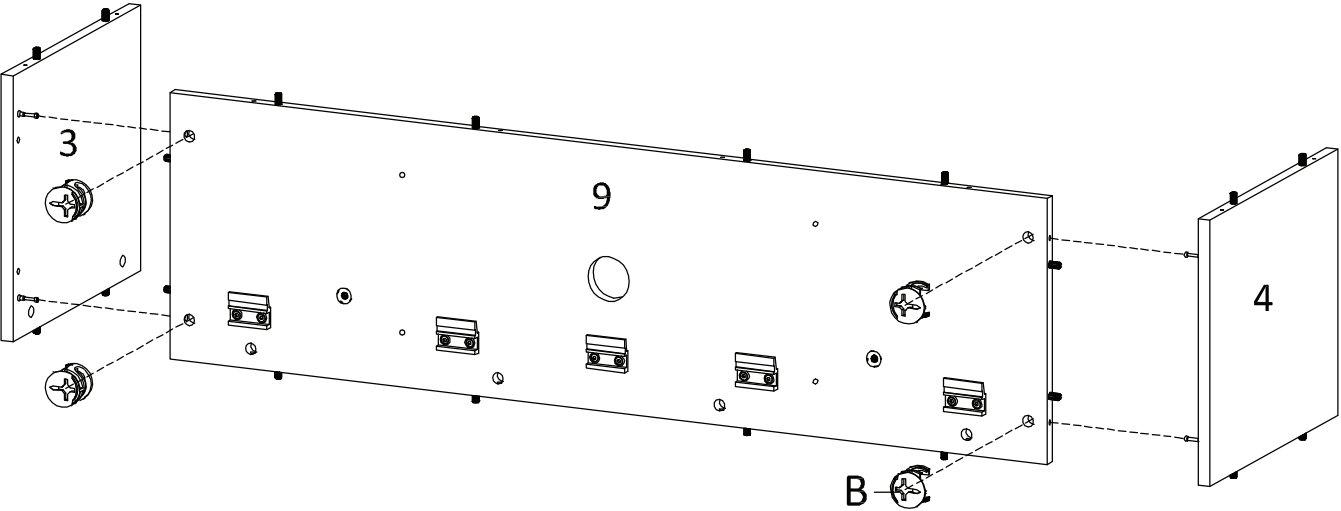





| | |
|---|---|
|  |  |
| Bx4 | Rx1 |

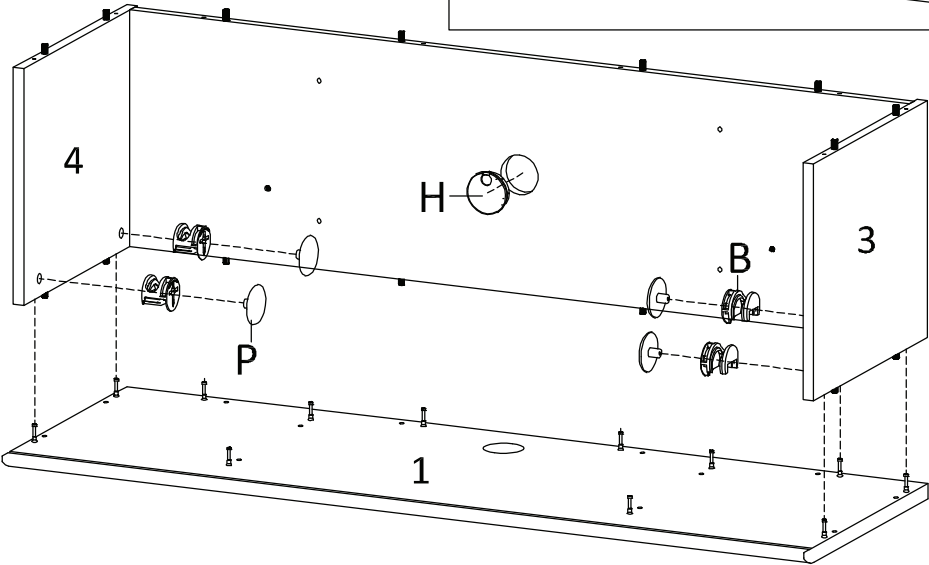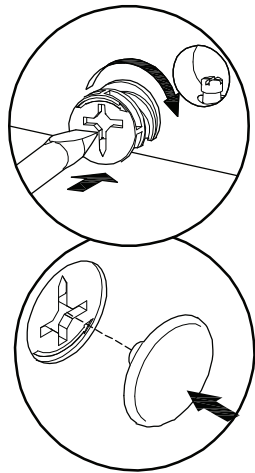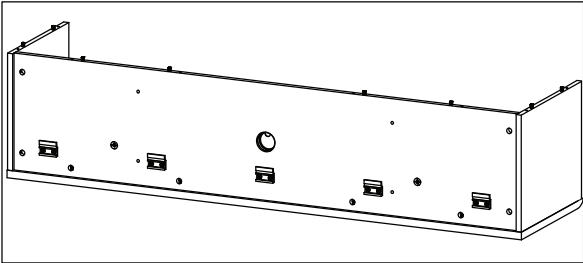STEP 4:

 
BACK VIEW


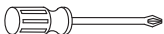


| | | | |
|---|---|---|---|
|  |  |  |  |
| Bx4 | Hx1 | Px4 | Rx1 |

Hardware required.
Screwdriver not included

 
STEP 5:

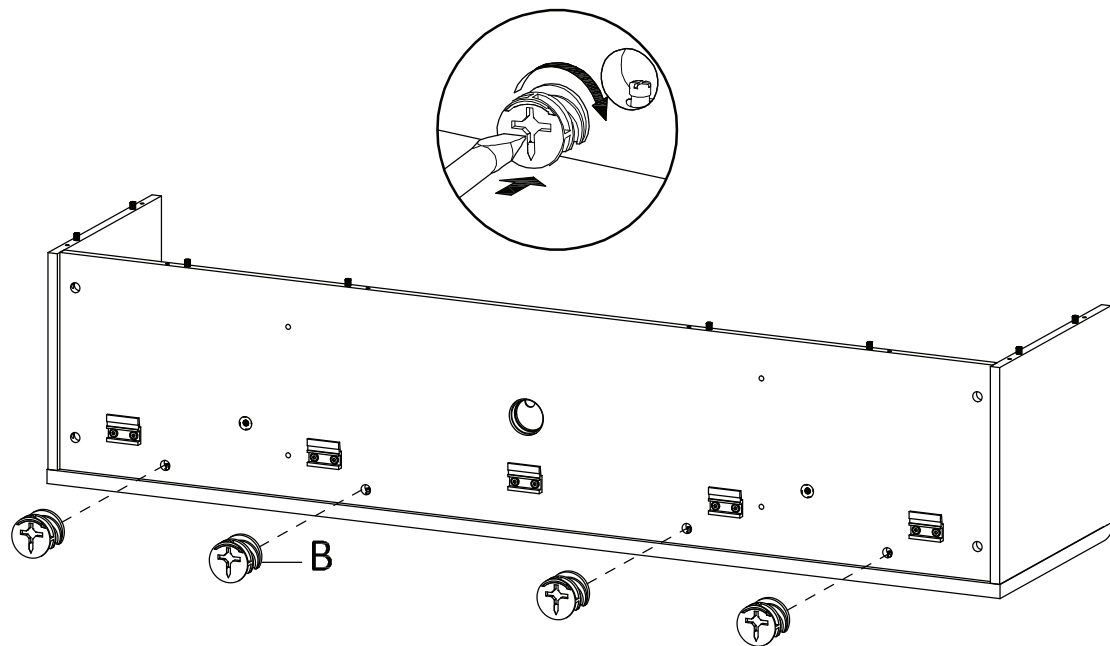




| | |
|---|---|
|  |  |
| Bx4 | Rx1 |

Hardware required.
Screwdriver not included

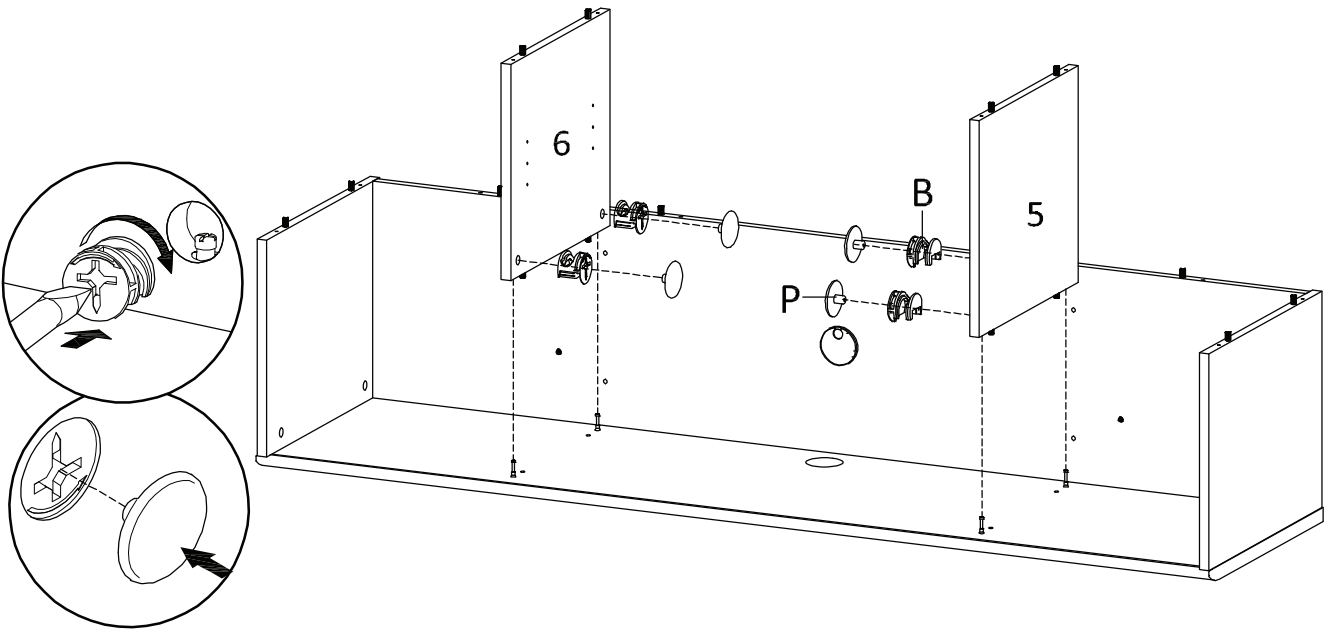 
STEP 6:





| | | |
|---|---|---|
|  |  |  |
| Bx4 | Px4 | Rx1 |

Hardware required.
Screwdriver not included

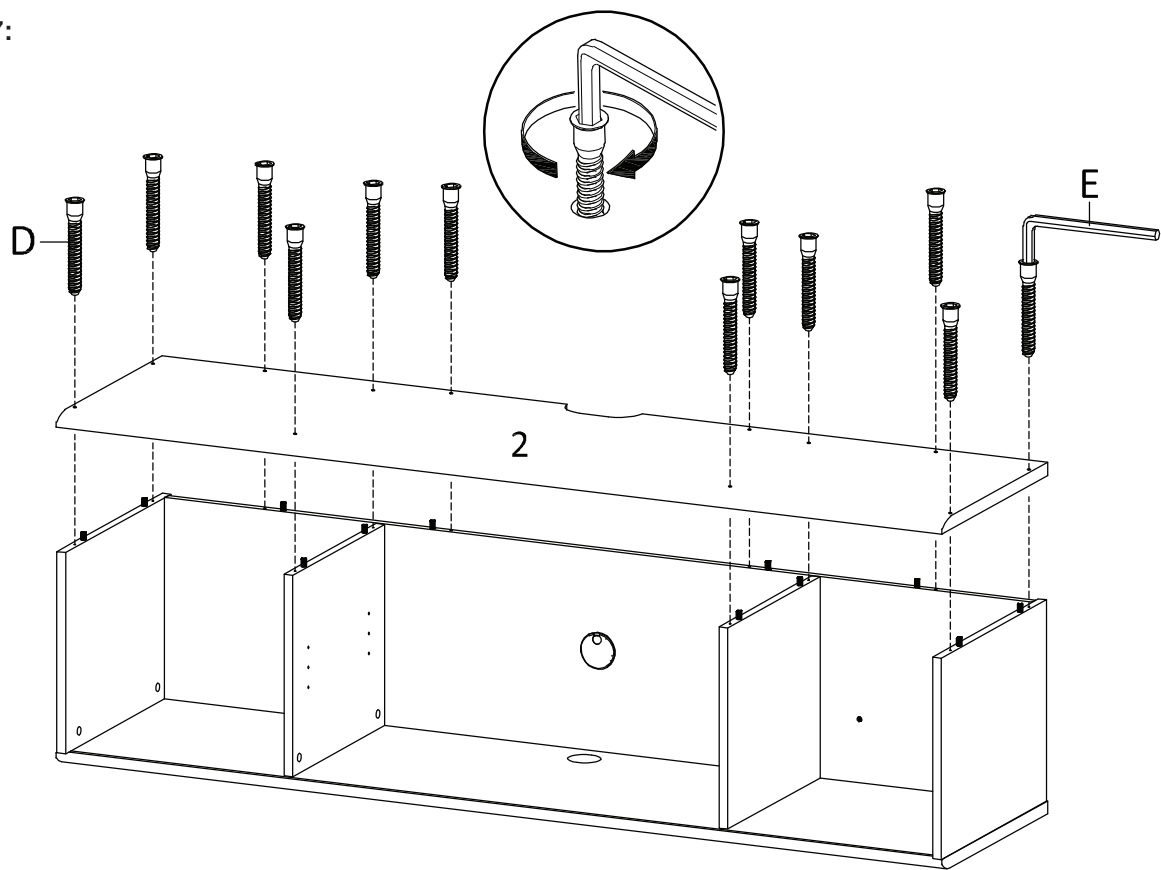 
STEP 7:






| | |
|---|---|
|  |  |
| Dx12 | E |

Hardware required.

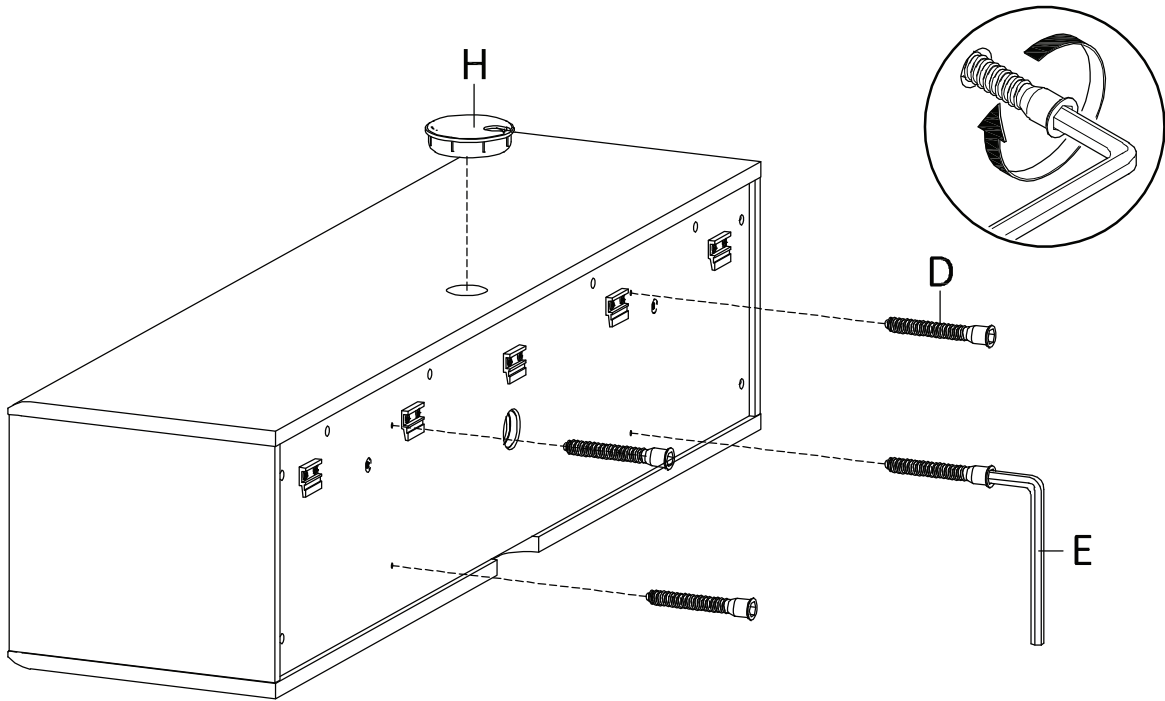STEP 8:

 


| | | |
|---|---|---|
|  |  |  |
| Dx4 | E | Hx1 |

Hardware required.

STEP 9:

 
Determine your desired (Y) height, then subtract by 127 mm.
This is the drill holes height from the floor (Z).

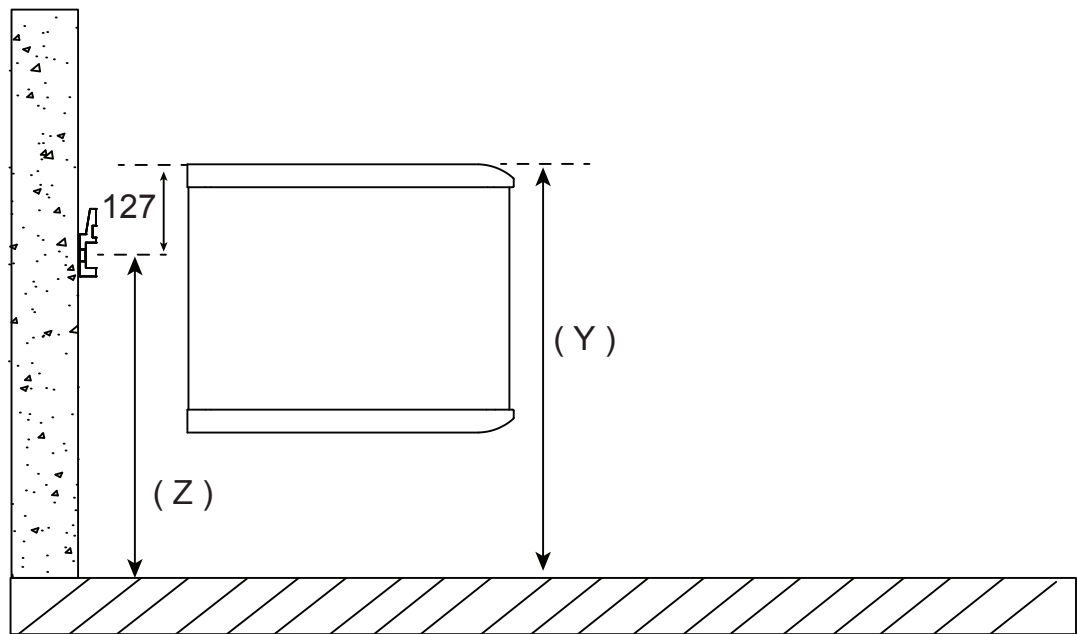




STEP 10:

Please use minimum 1 hole from each hole group to apply the wall plug and screw. Use additional holes when necessary.

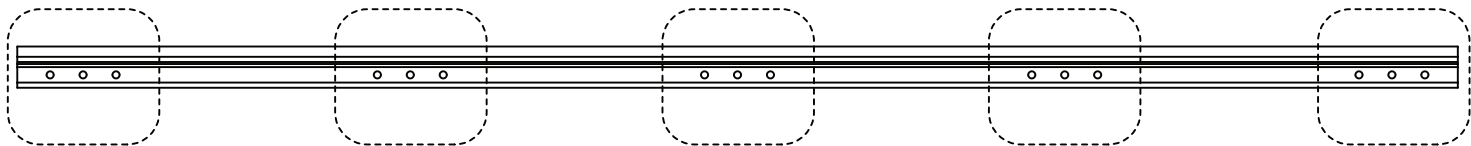* Long Bracket

 


Different wall materials require unique wall fasteners.
The wall plugs (M) and screws (L) are designed for fixing to concrete walls only.
Please consult your local hardware store to ensure you are using the correct hardware for your wall type.

 
| | | |
|---|---|---|
|  |  |  |
| J | L | M |




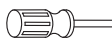
STEP 11:

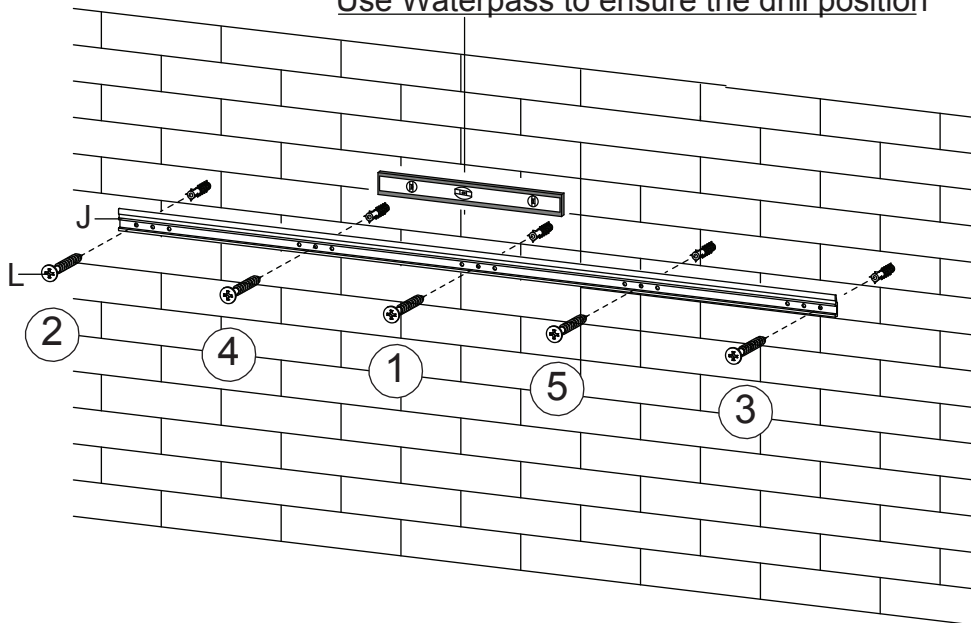Use Waterpass to ensure the drill position

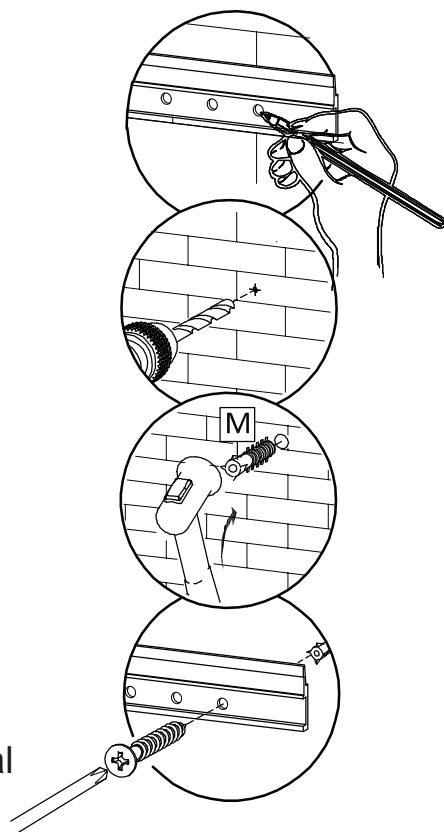

 
 
*Start from middle hole (1) then use waterpass to mark screw position (2),(3) then followed by (4),(5), or additional holes when necessary


 


| | | | |
|---|---|---|--|
|  |  |  |  |
| Jx1 | Lx5 | Mx5 | Rx1 |

Hardware required.
Screwdriver not included

 
STEP 12:

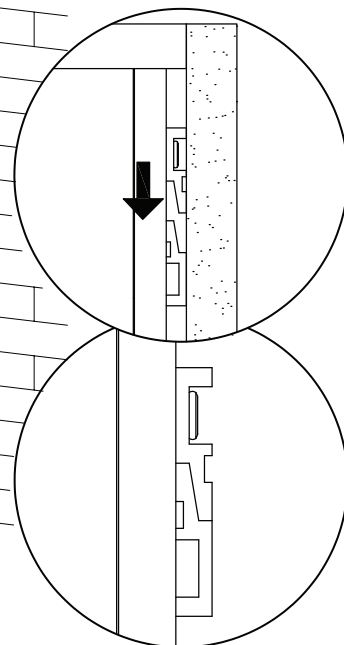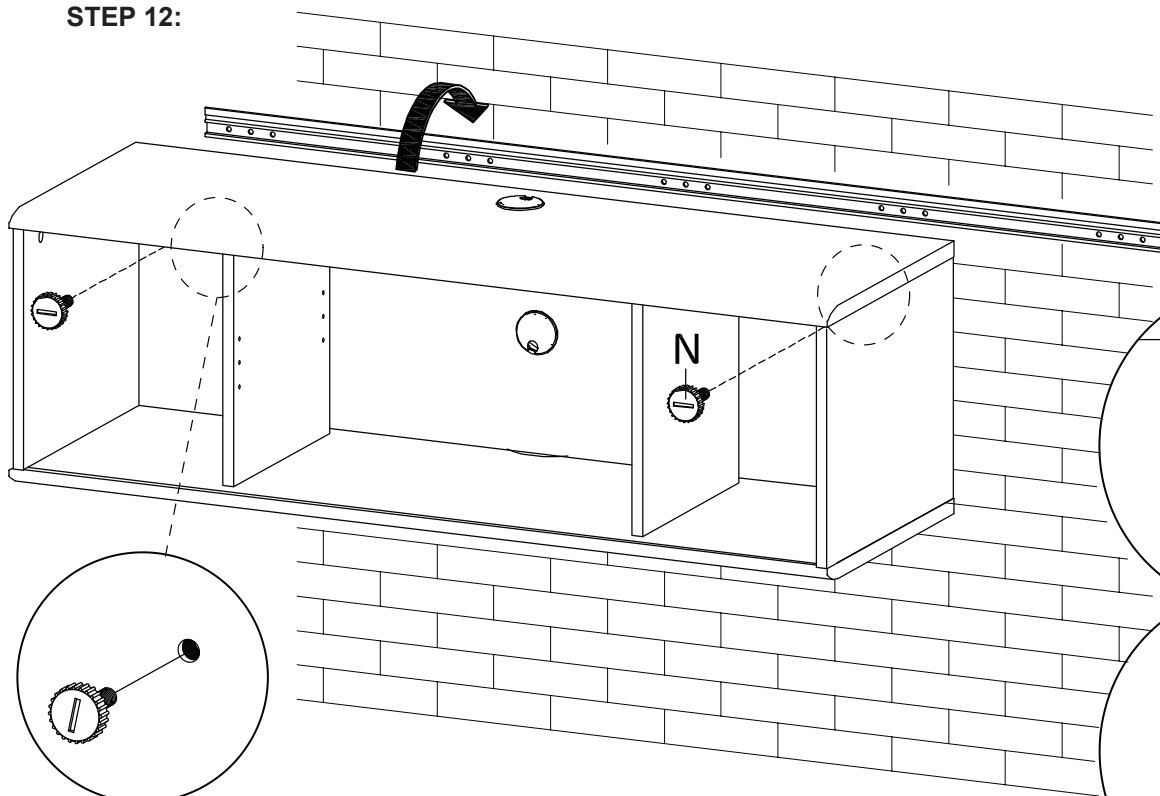

| | |
|---|---|
|  |  |
| Nx2 | Rx1 |

Hardware required.
Screwdriver not included

 
STEP 13:

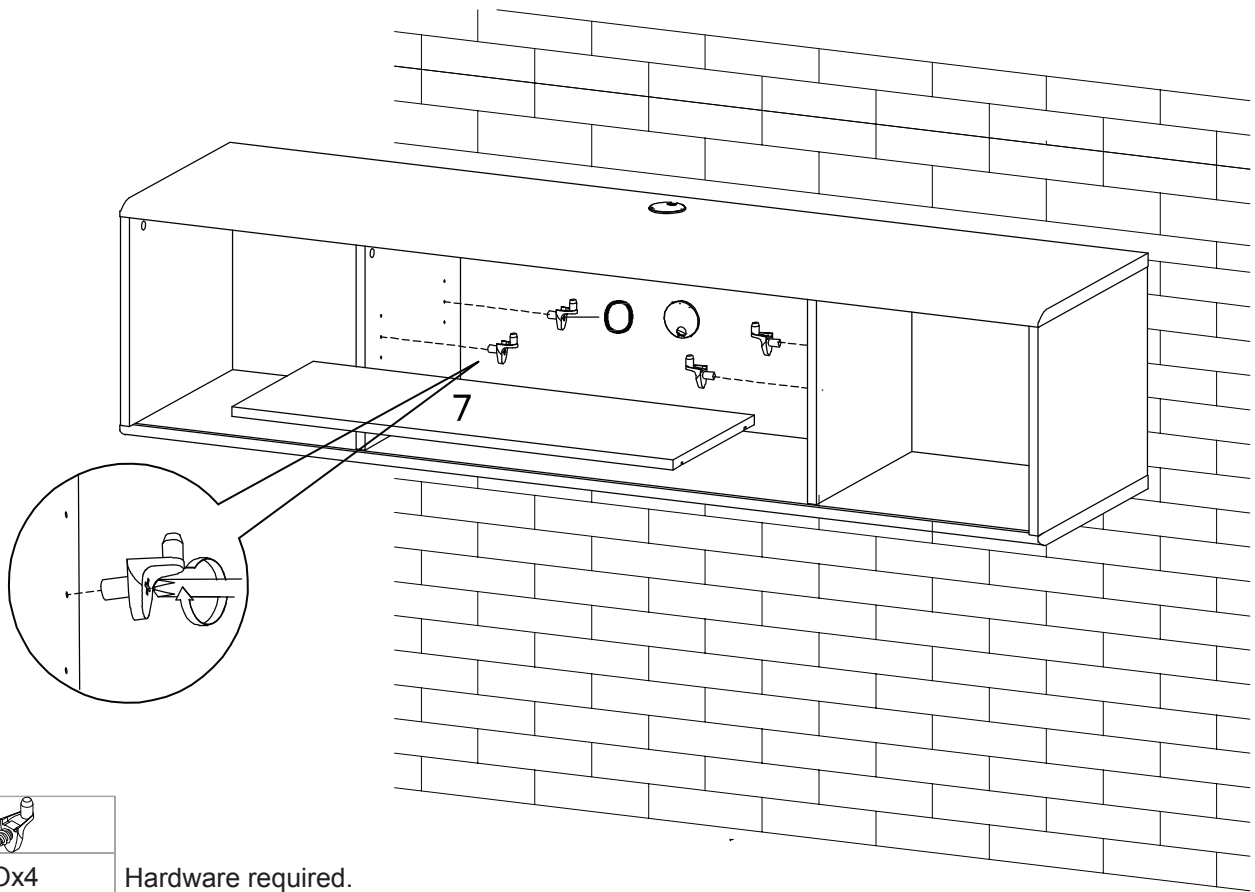

| |
|---|
|  |
| Ox4 |

Hardware required.

 
STEP 14:

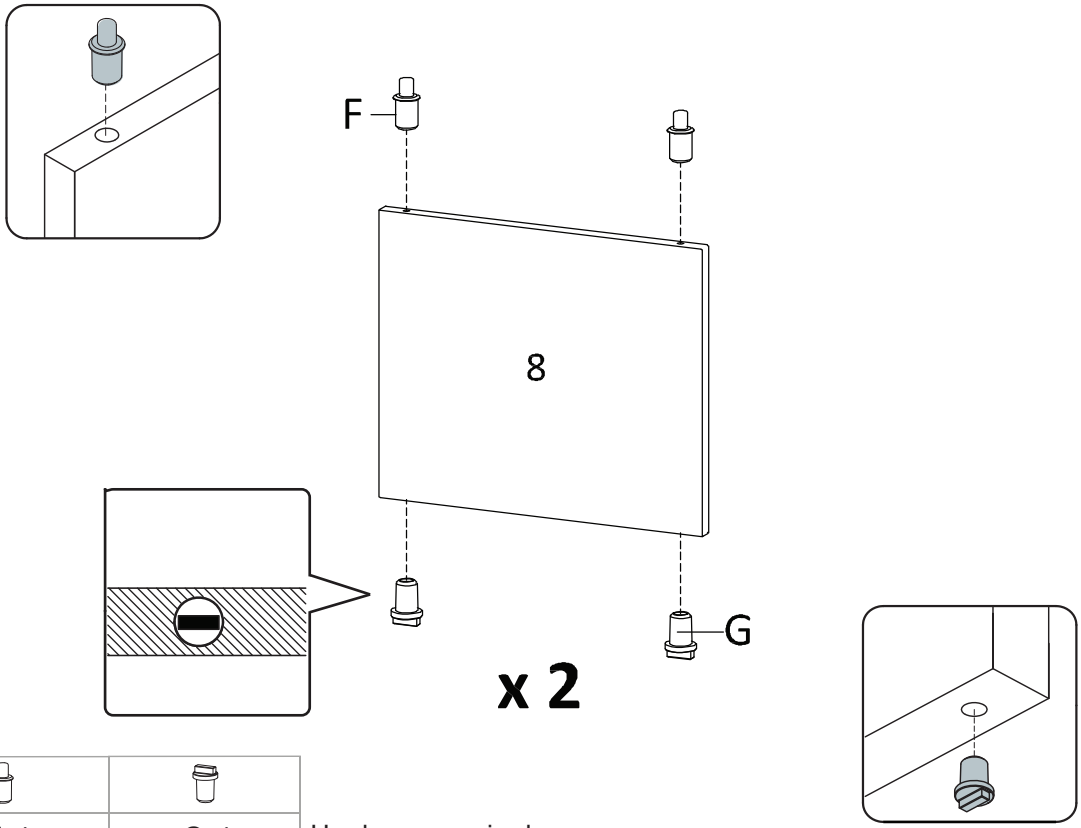

 
| | |
|---|---|
|  |  |
| Fx4 | Gx4 |

Hardware required.

STEP 15:

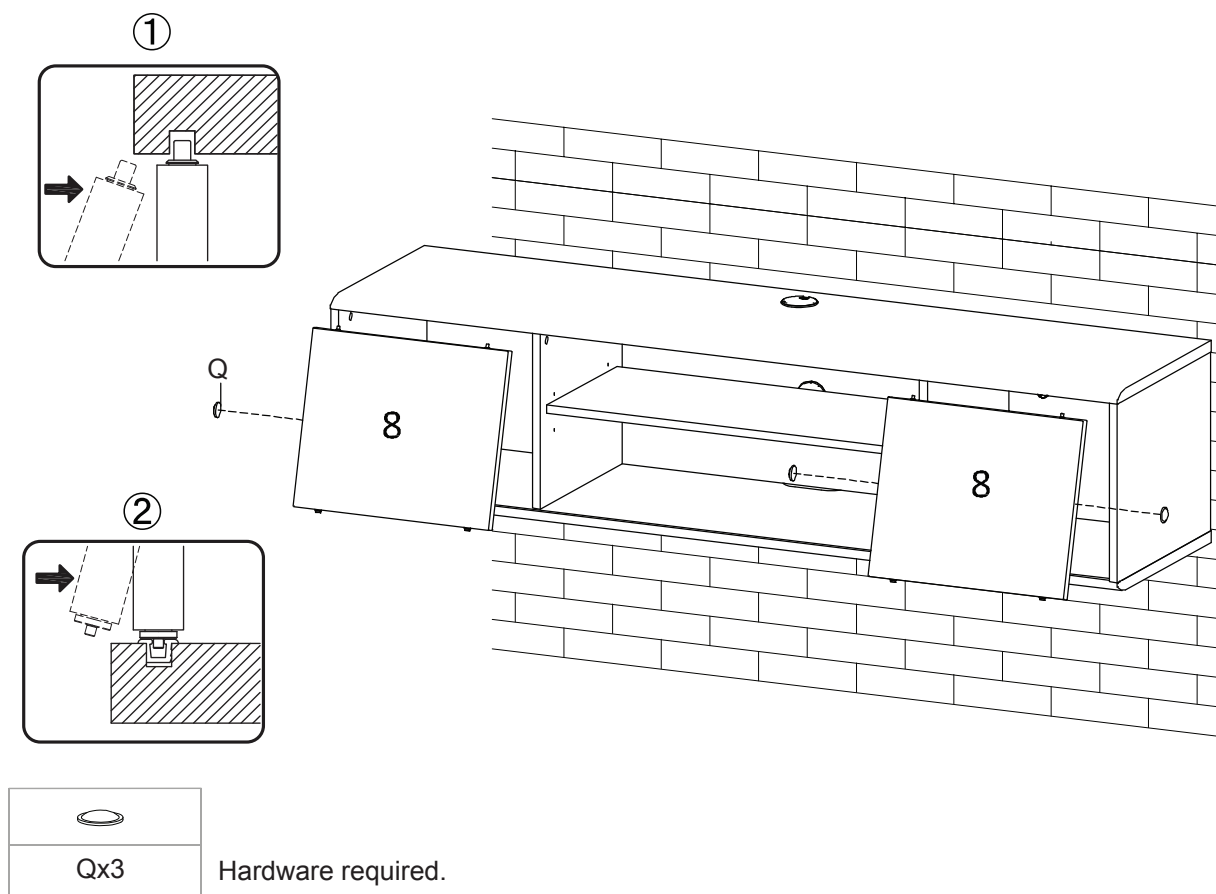

STEP 16:

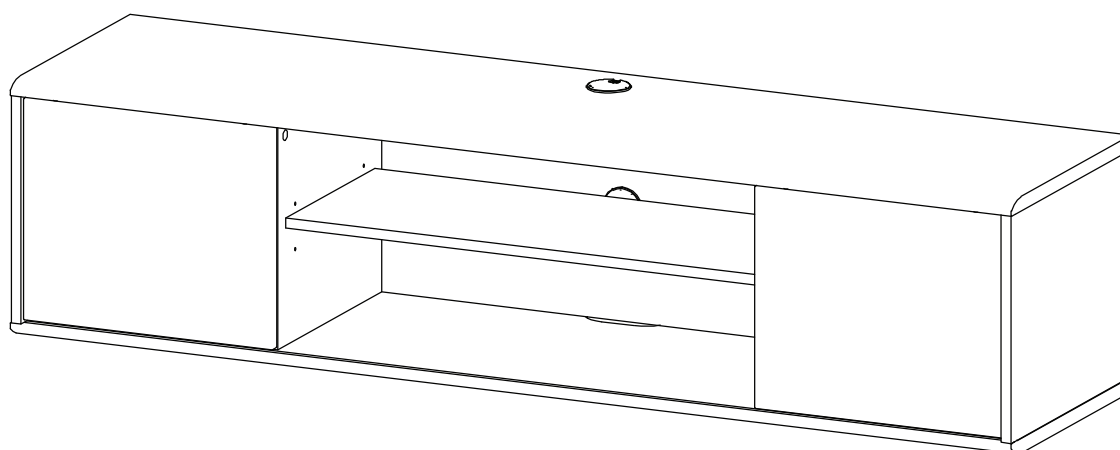

Assembly is complete. The TV Stand is ready to enjoy now !