



USER MANUAL

BS9023

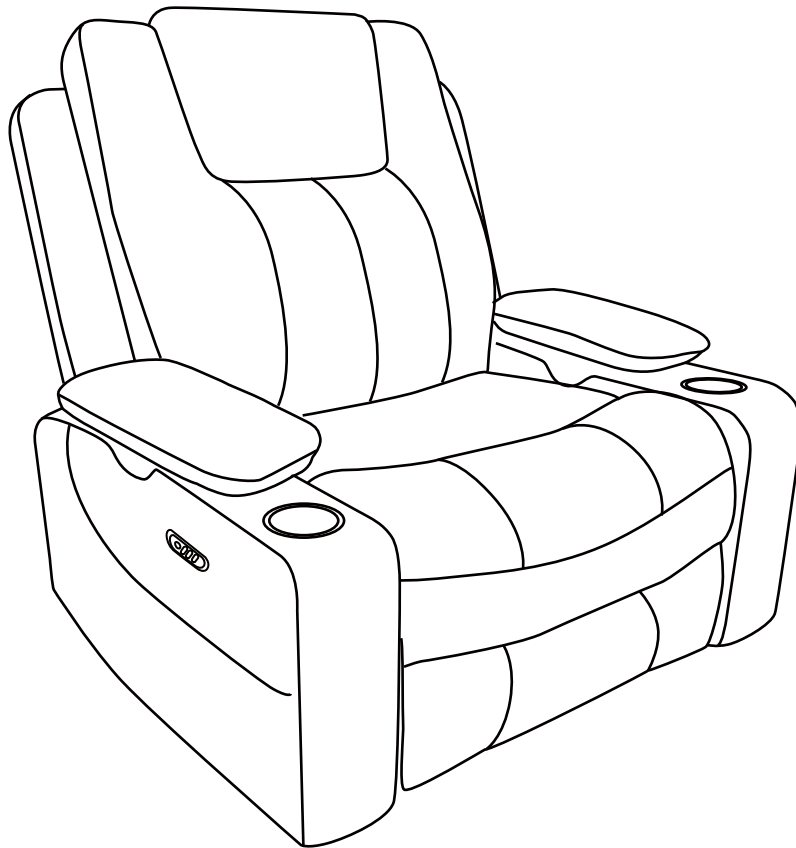


Return & Warranty policy:


- We strive to offer the highest quality products, and we also try our best to satisfy each and every customer that orders from us with replacement parts or service as needed.
- If the item is damaged or defective , please take photos as evidence for replacements and refunds.
- Please do not return to store, contact the seller if you have any questions about the product, please feel free to contact szhd2025@163.com at any time.

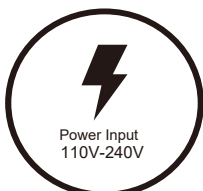

Caution: Do Not Exceed Maximum Listed Weight Capacity.
Serious Injury or Property Damage May Occur!

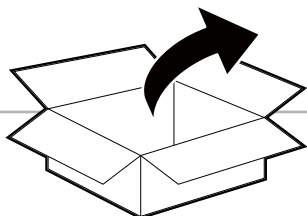


BOX A

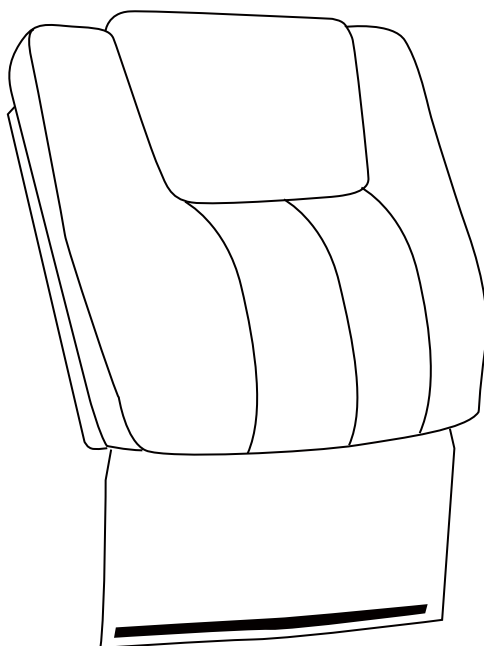

A x 1


Backrest

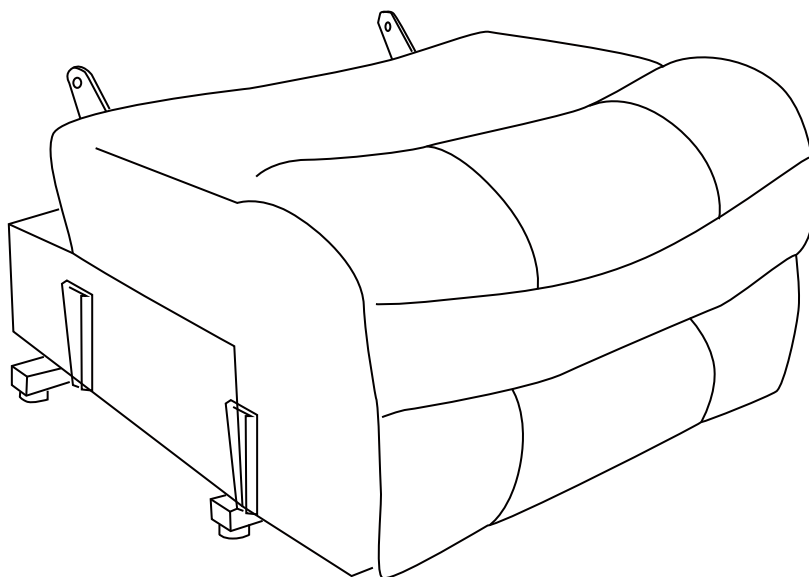

B x 1


Seat

Power Line

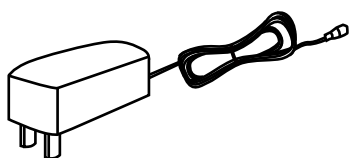


G x 1

Massage controller

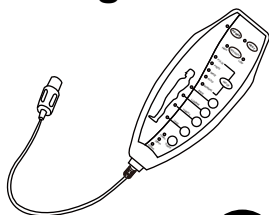


H x 1

Power Line

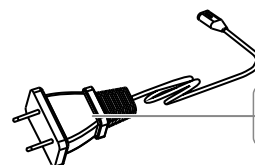


Actual part
may vary.


I x 1

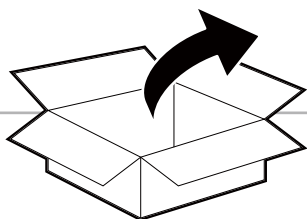


BOX B

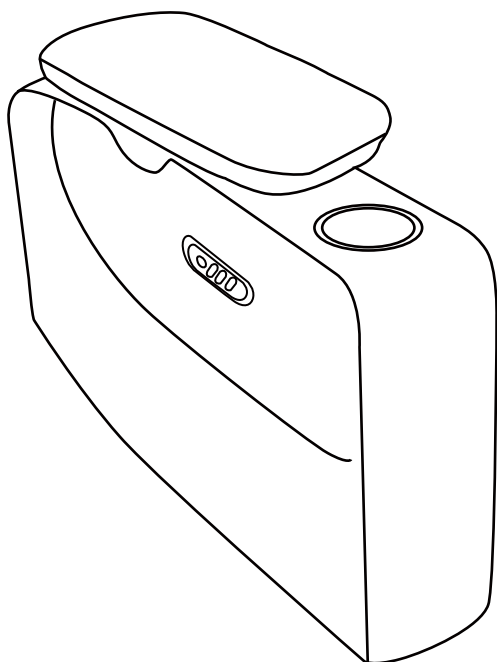


C x 1
Armrest(L)

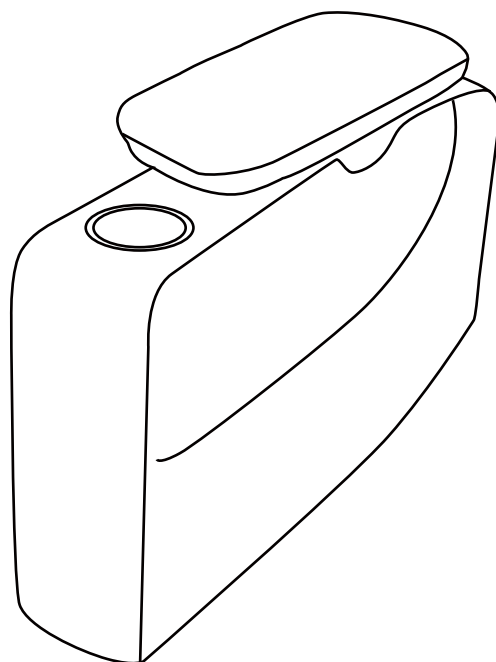

D x 1
Armrest(R)

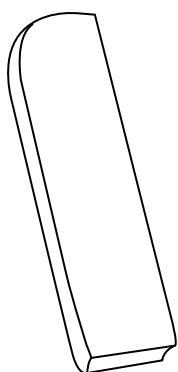


E x 1
Back Ear(L)

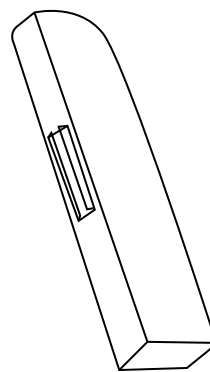

F x 1
Back Ear(R)


1

Align the inserts on Part C and Part D with the inserts on both sides of Seat B, then press down to connect them.

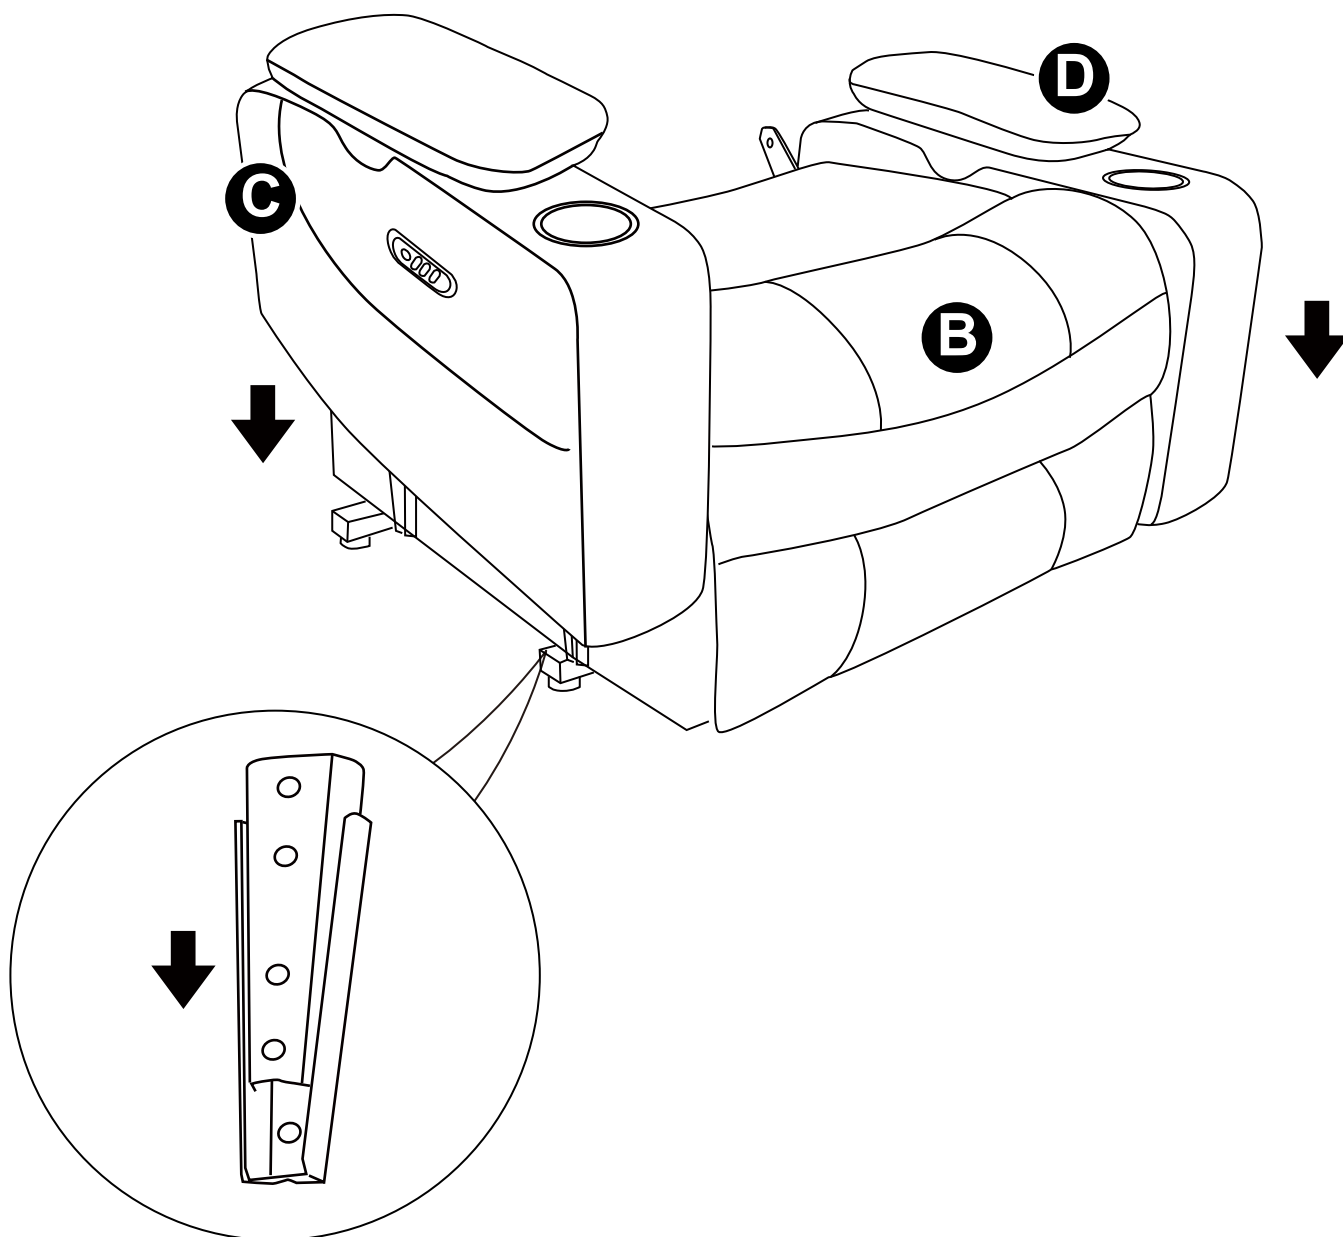


2

Align the bolts on both sides of Backrest A with those on the seat B, press down firmly, and the installation is complete when a "click" is heard.

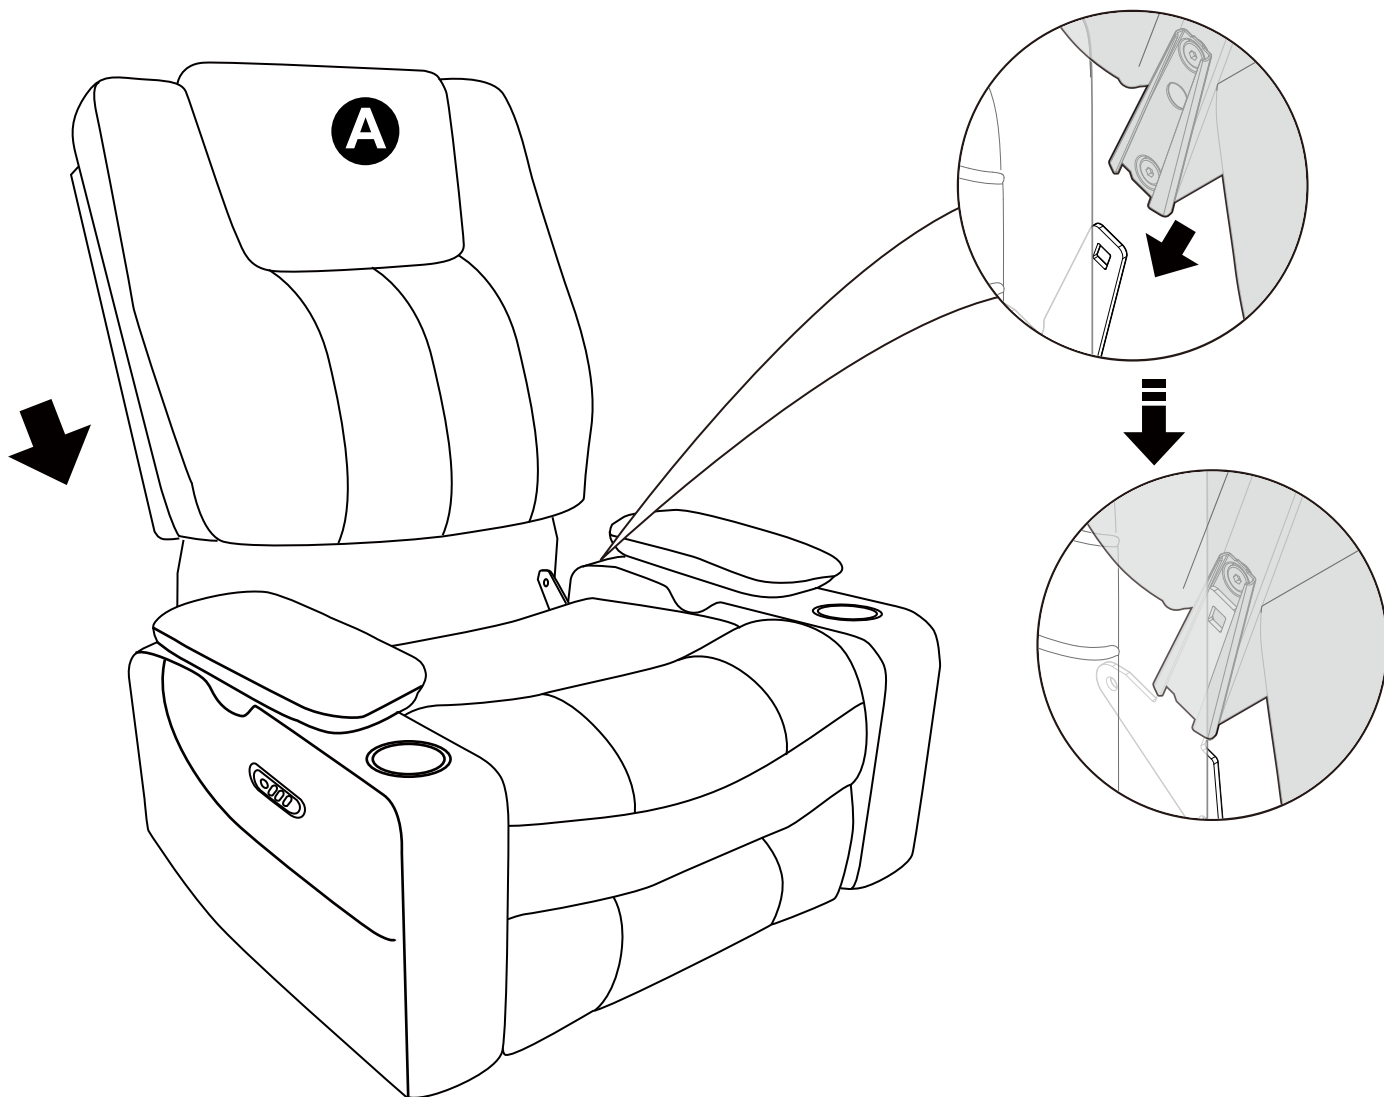


3

Install the back ears on both sides of the backrest.

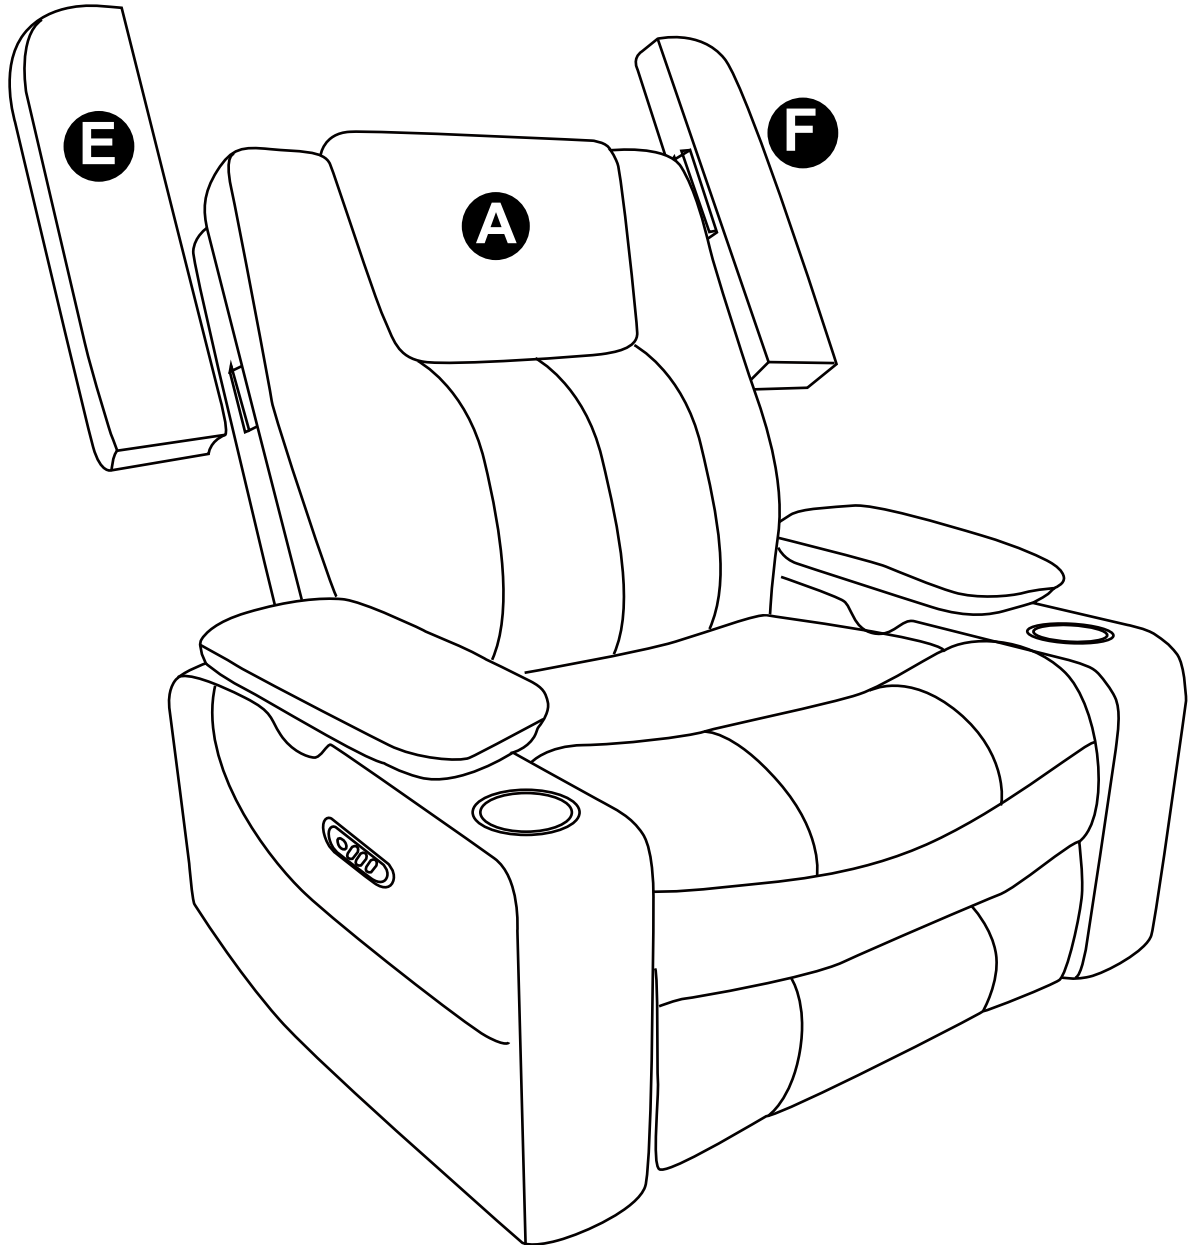


4

To connect your sofa: Match and attach the black, white, and red cable pairs (following their respective arrow directions), join the paired top-right connector, plug the power adapter (G) into an outlet, and secure the control module (H) to the sofa's port as indicated.

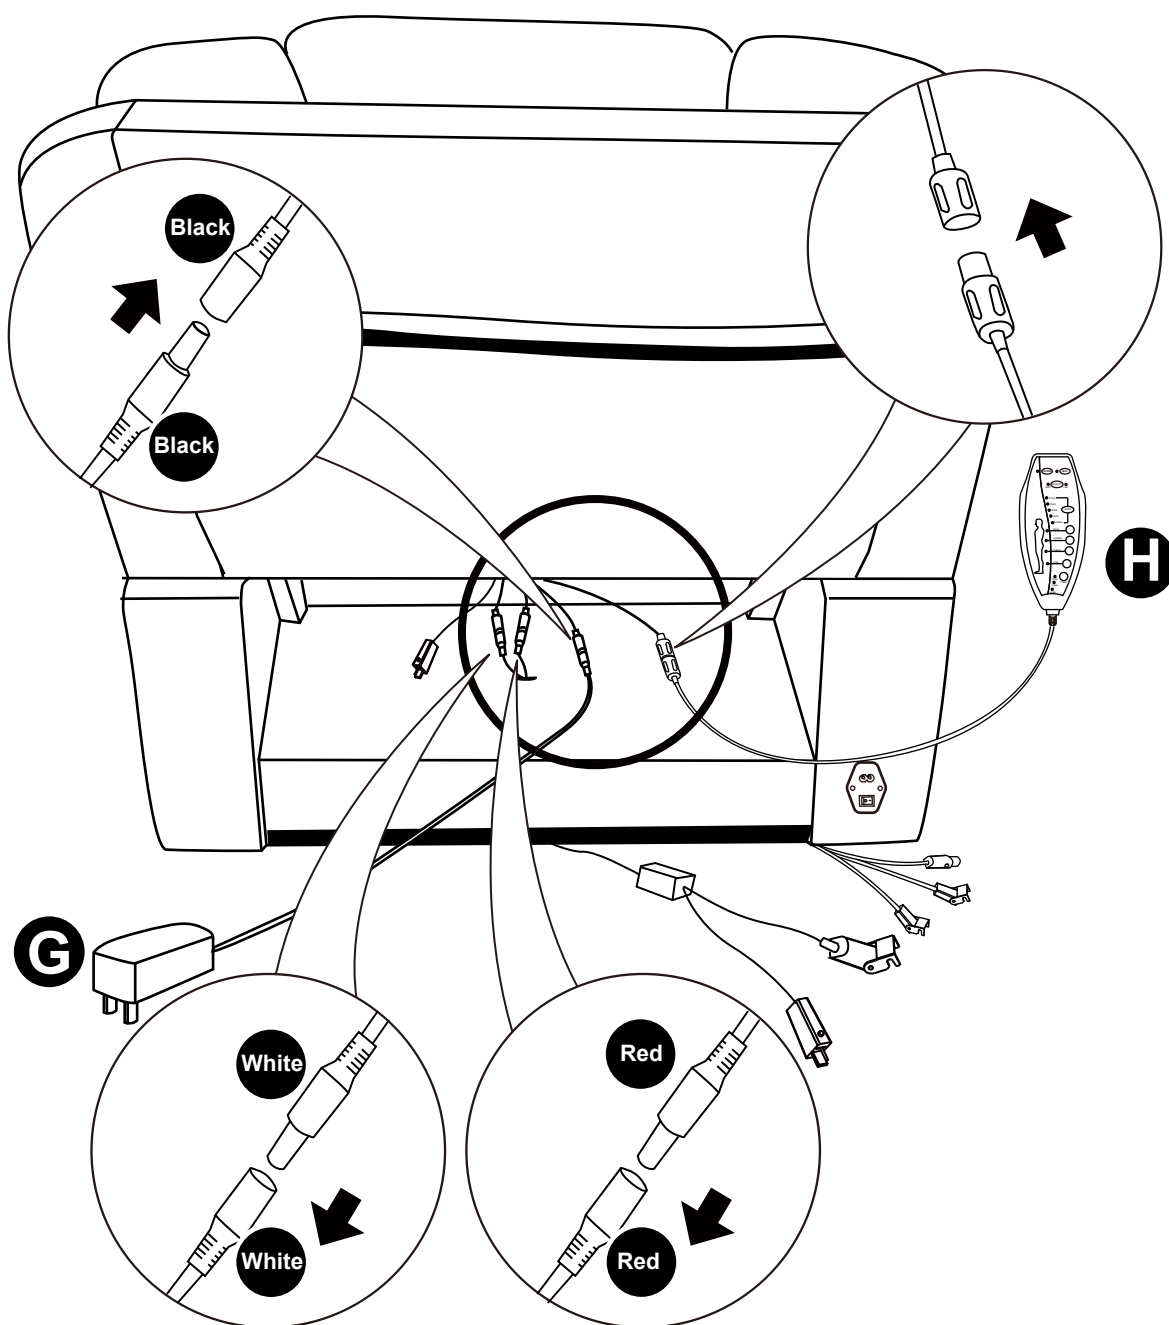


5

Connect the remaining three cables according to the instructions.

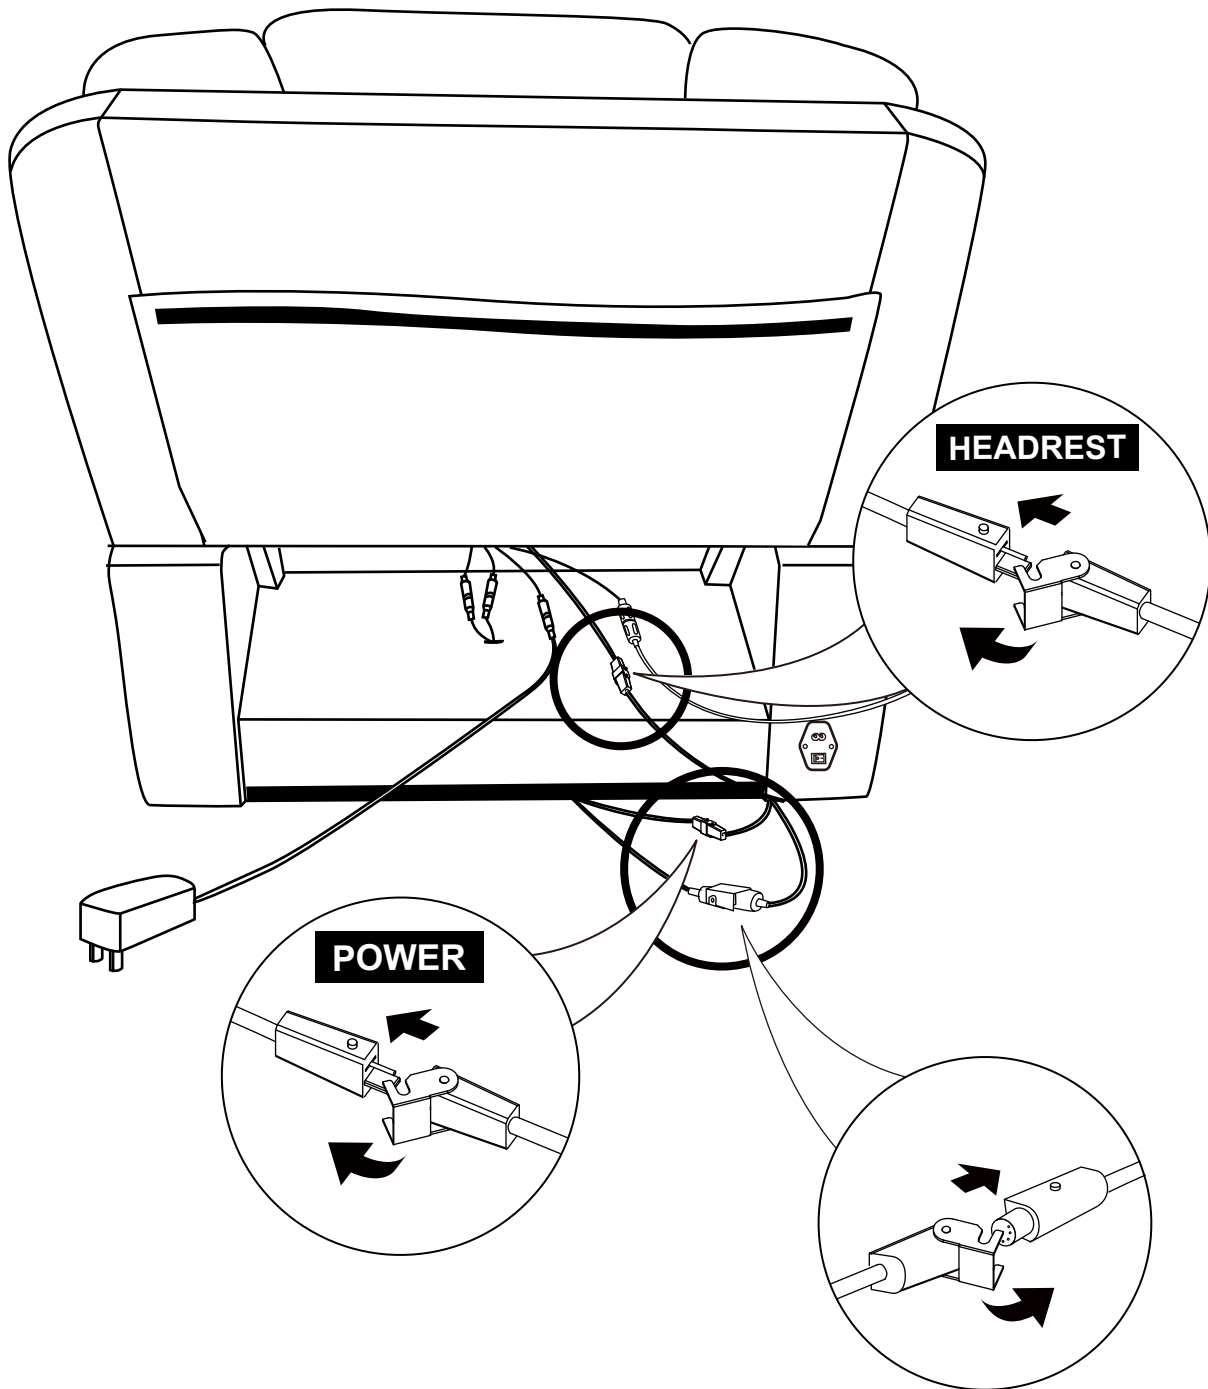

6

Stick the Velcro at the back end of the backrest properly.
Connect the power cord I.

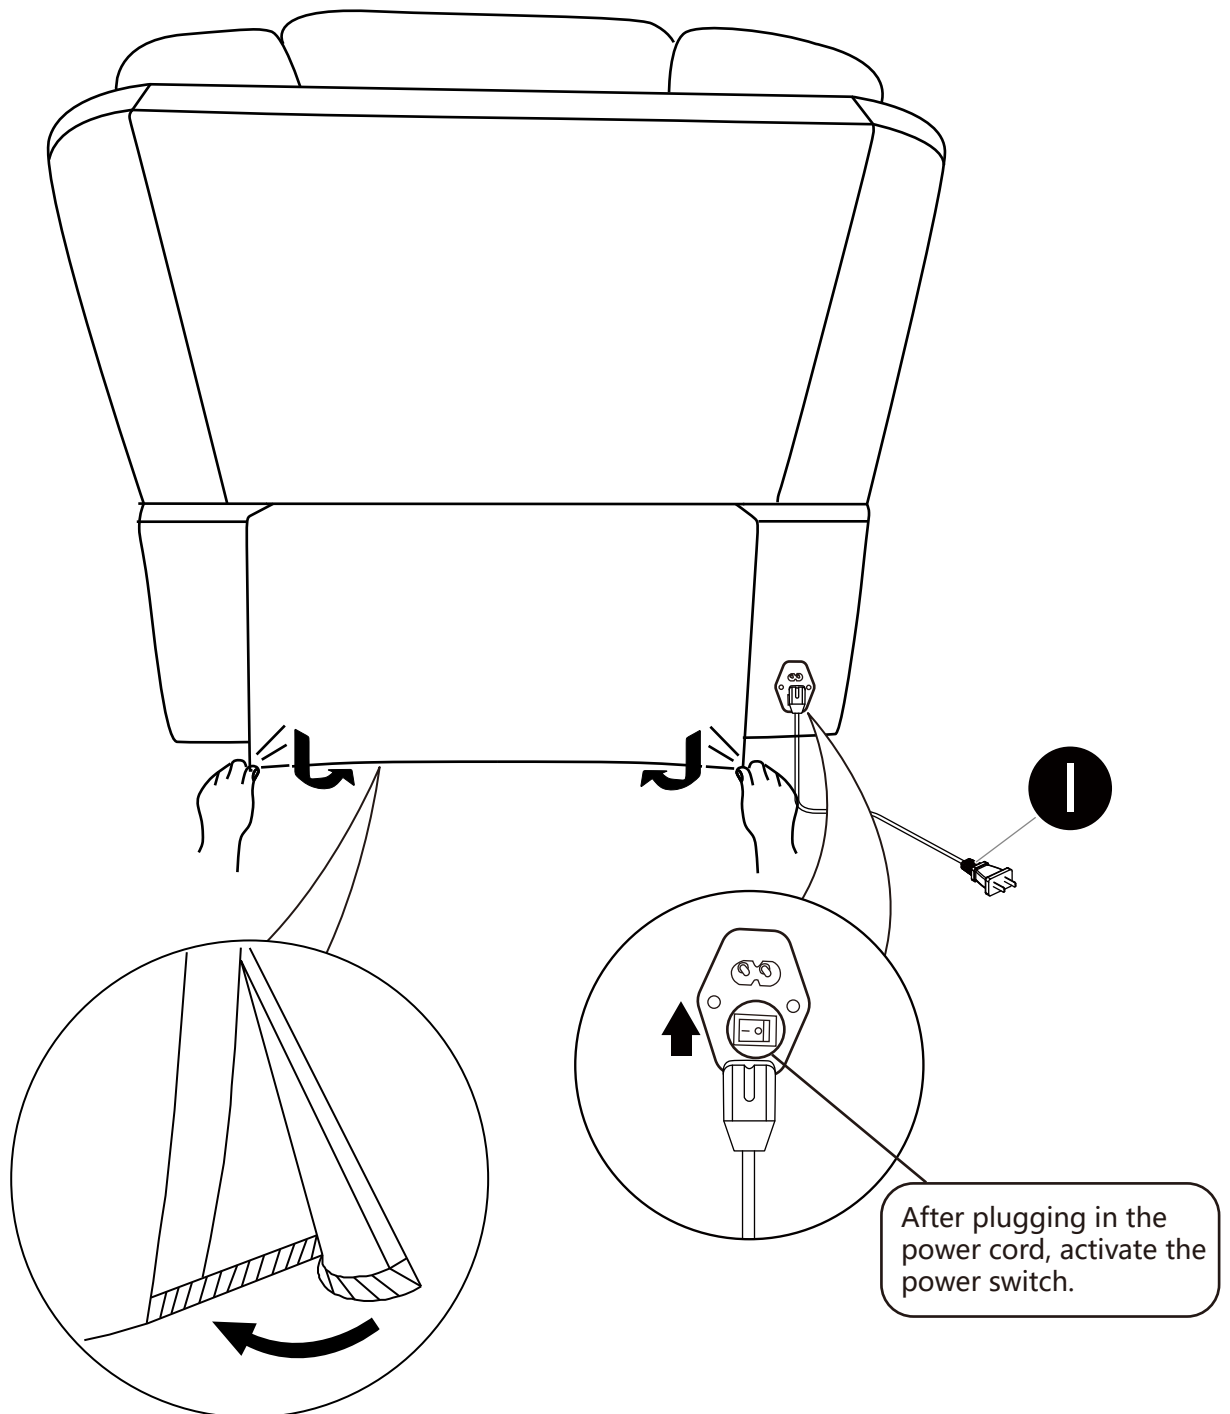


Manual controller instructions


1. When the sofa is in its initial state, long pressing the button can open the footrest.

2. When the sofa backrest is in the folded down state, long pressing the button to restore the backrest.


3. When the sofa is in the assist station state, long pressing the button to restore the sofa to its initial state.

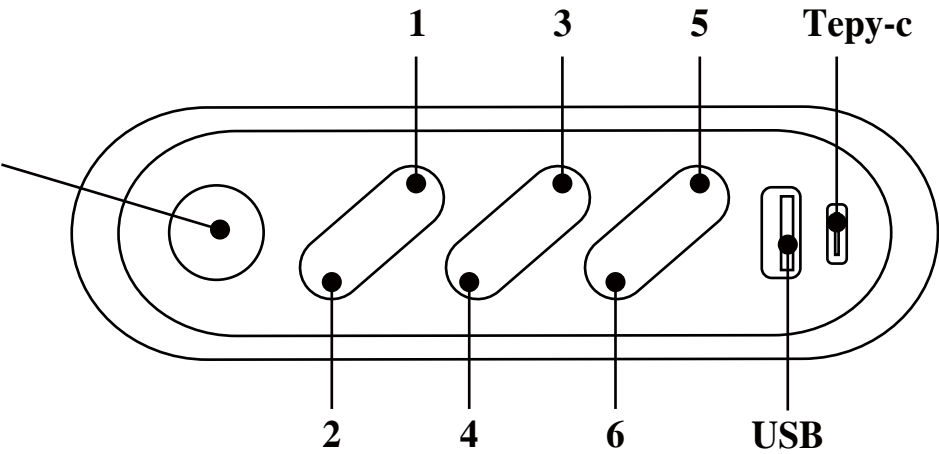

1 Headrest Forward Tilt Button	3 Backrest recline Button	5 Footrest Recycling Button / Assisted Standing Button
2 Headrest retract Button	4 Backrest retract Button	6 Footrest Extend Button / Standing Recycling Button

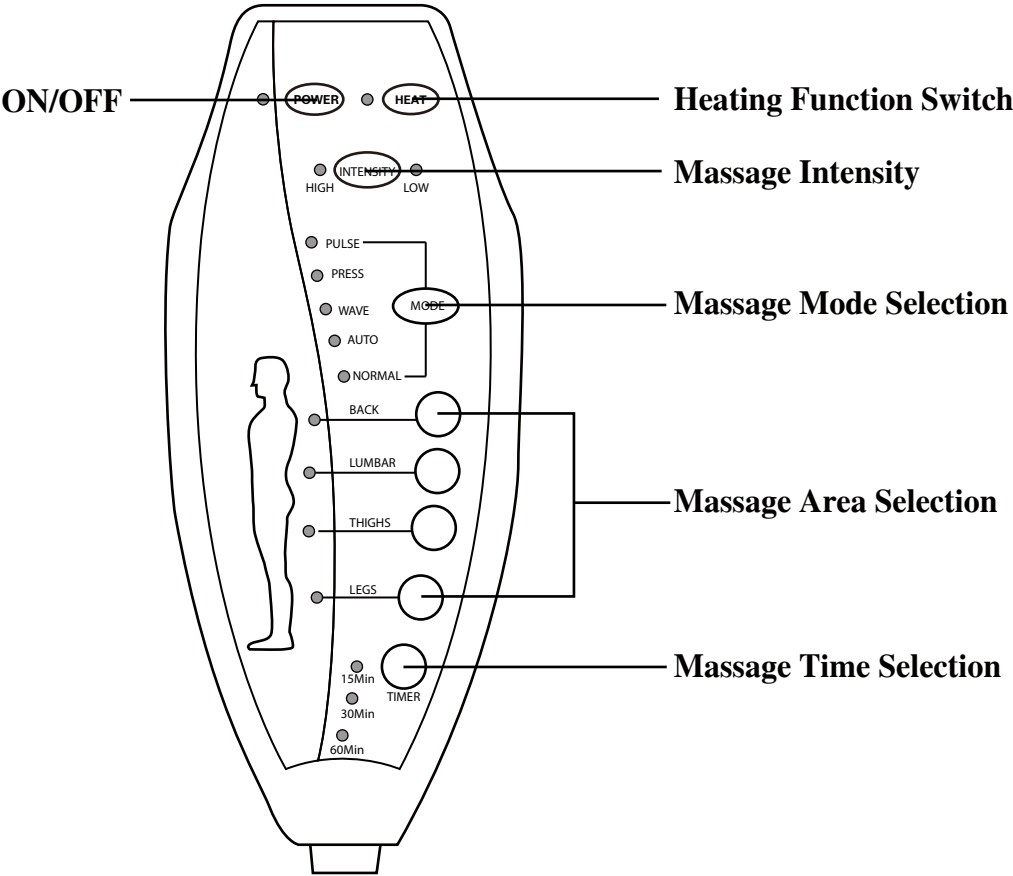

Introduction to Armrest Adjustment Functions

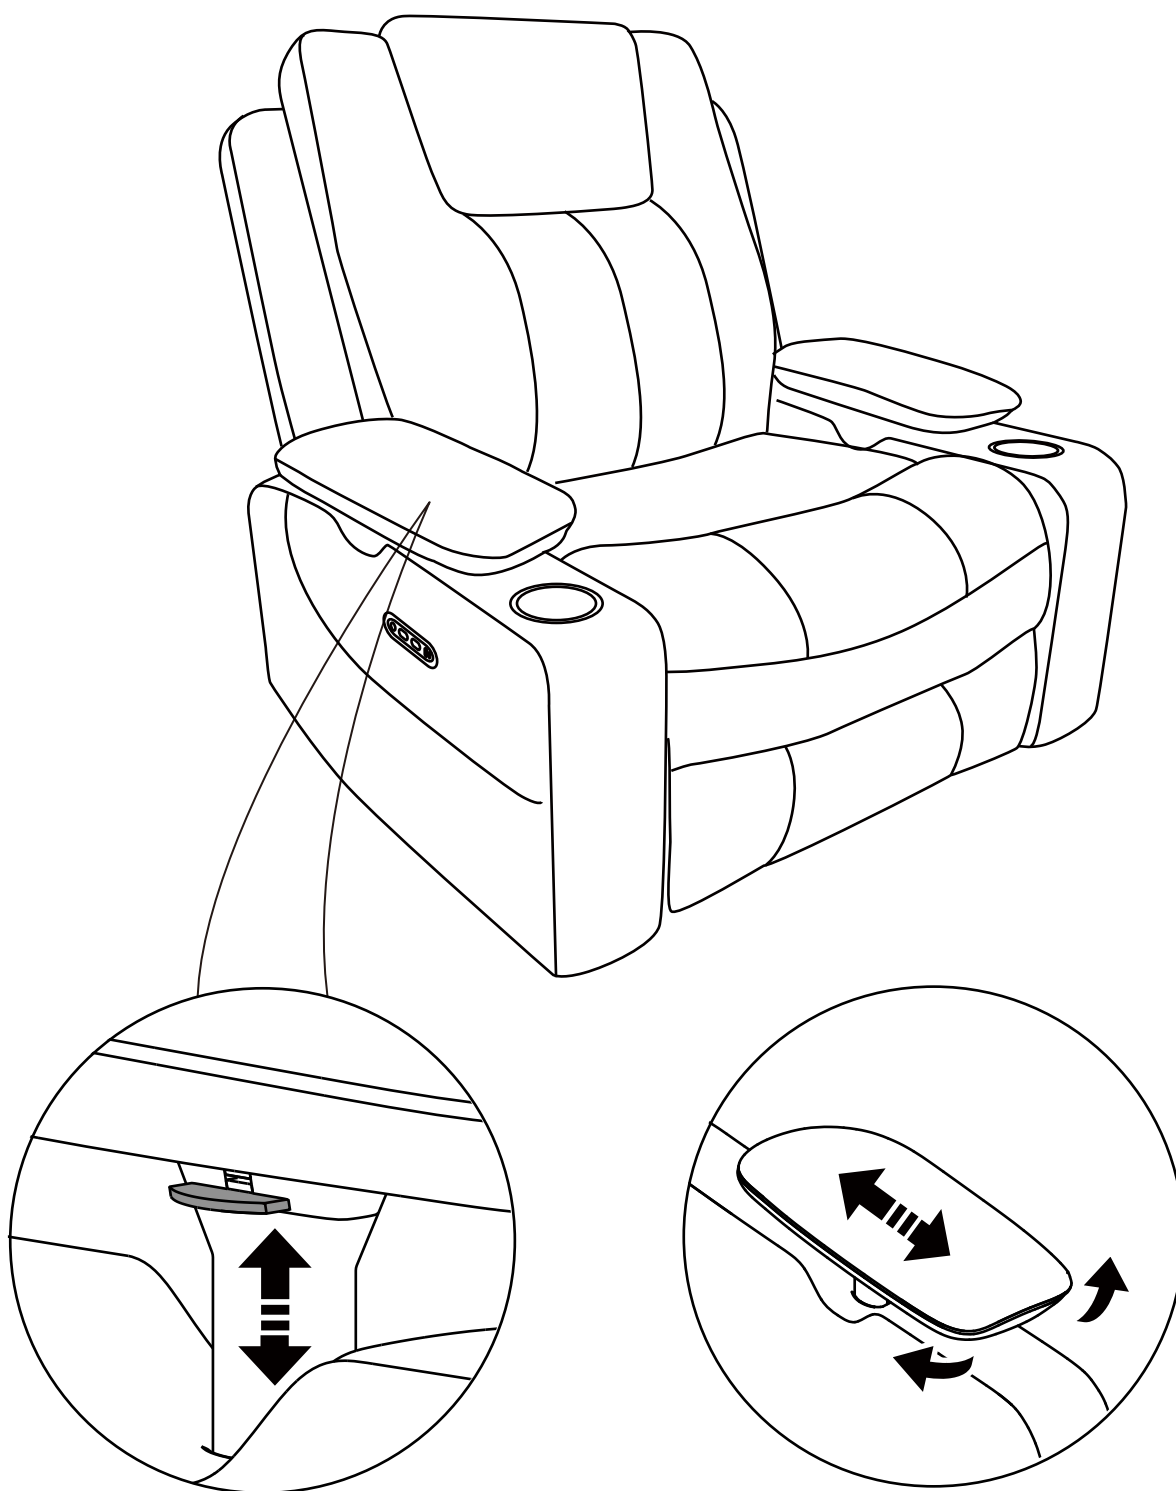

Press the adjuster control button to adjust the armrest's height up and down.

Push the armrest to adjust it forward/backward and rotate it left/right.

Safety precautions

Risk Type	Common Problems
Electrical Safety	1. Do not use the sofa near water (e.g., bathtubs, sinks) to avoid electric shock. 2. Unplug the power cord from the outlet and turn off the main switch when the sofa is not in use, or during cleaning/maintenance. 3. Inspect the power cord regularly: if it is frayed, damaged, or overheated, stop using the sofa immediately and contact professional service.
Stability & Fall Prevention	1. Ensure the sofa is placed on a flat, stable surface (avoid sloped floors) to prevent tipping over. 2. Do not stand, jump, or climb on the sofa—this may cause the sofa to collapse or tip, leading to injury.
Usage Restrictions	1. Children are not allowed to use this sofa (including operating the massage controller or playing on it). Small parts (e.g., nuts) may pose a choking hazard to kids. 2. Do not exceed the maximum weight capacity (as stated in the manual) to avoid structural damage and injury.
Other Warnings	1. Keep sharp objects away from the sofa to prevent damage to the upholstery or internal electrical components. 2. Do not disassemble, modify, or repair the sofa by yourself—only authorized technicians should handle maintenance.