

# f10 Handheld Clothes Steamer

## QUICK START GUIDE



Please fill the water tank and press the on/off button.

Flashing **red** light = getting ready

Once the steamer is ready the light will go to **blue**. Press the trigger or slide the trigger down for continuous steam!

Press on/off button to switch between two modes.

Constant **blue** light = ready to steam full steam power

Constant **green** light = ready to steam eco mode (less steam, water in the tank lasts longer)

Both modes have the same heat power to the ironing metal plate

After period of unuse, the on/off button will pulse **red/green/blue** = stand by mode

# FRIDJA

