 


**THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.**

 
BUYING TIPS




If you have any questions below, please feel free to contact us. We will respond within 24 hours.

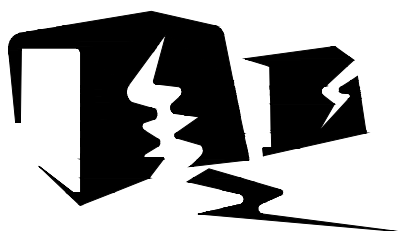

ANY DAMAGE

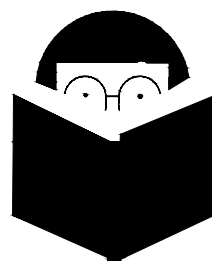

READ INSTRUCTIONS
CAREFULLY

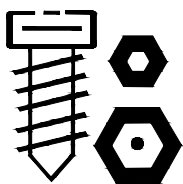 

MISS SOME PARTS

 


OTHER QUESTIONS

GENERAL INFORMATION, TIPS AND TRICKS

1. Please read the Assembly Instructions prior to assembling this product.
2. Remove all hardware from the box and sort by size.
3. Check to see that all hardware and parts are present BEFORE assembling.
4. Ask a friend to assist you with the assembly of this furniture.
5. To avoid damage, assemble the product on a sturdy, level and protective surface.
6. Please wait until all steps are completed before fully tightening bolts.
7. Make sure all screws and bolts are tightly fastened before the unit is used.

MAXIMUM RECOMMENDED WEIGHT LOADS

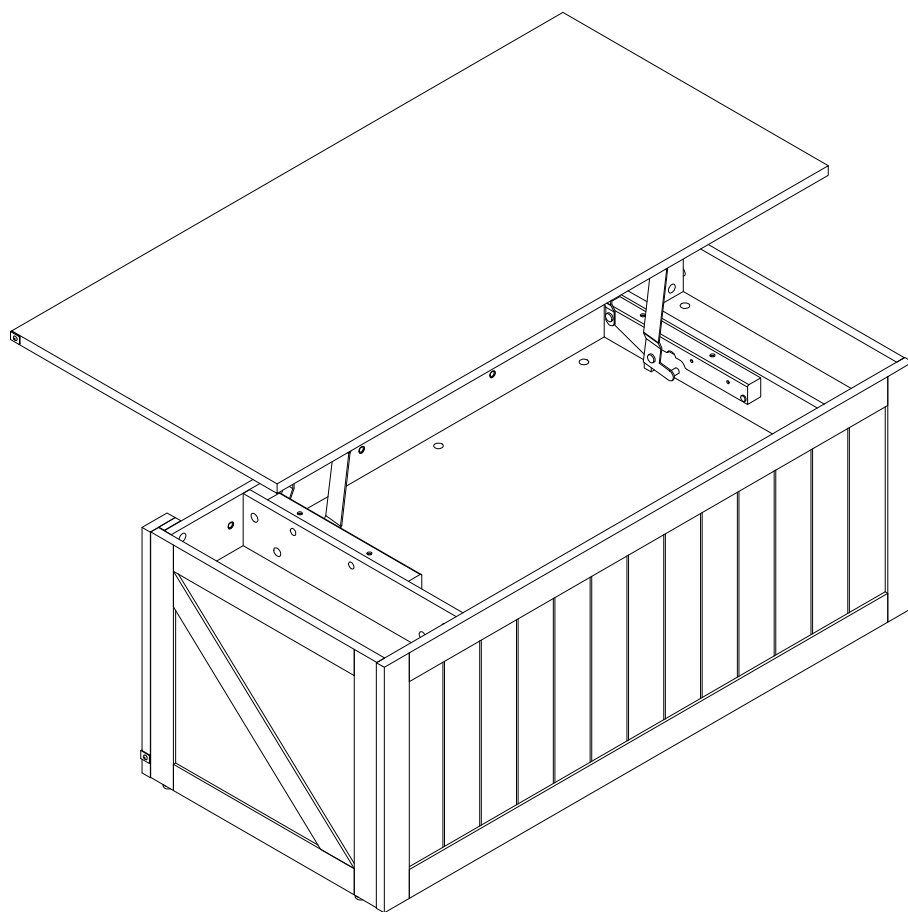


THIS UNIT IS NOT INTENDED FOR USE WITH CRT TVS. USE ONLY WITH FLAT PANEL TVS AND AUDIO/VIDEO EQUIPMENT MEETING RECOMMENDED SIZE AND WEIGHT LIMITS. NEVER USE WITH LARGER/HEAVIER THAN RECOMMENDED FLAT PANEL TVS OR EQUIPMENT. TO AVOID INSTABILITY, PLACE FLAT PANEL TV IN THE CENTER OF THE UNIT; THE BASE OF THE TELEVISION MUST BE ABLE TO REST ON THE SUPPORTING SURFACE OF THE UNIT WITHOUT OVER-HANGING THE EDGES. IMPROPERLY POSITIONED FLAT PANEL TVS, OR FLAT PANEL TVS INCLUDING OTHER EQUIPMENT THAT EXCEED RECOMMENDED SIZE AND WEIGHT LIMITS COULD FALL OFF OR BREAK THE UNIT, CAUSING POSSIBLE SERIOUS INJURY. FOR USE WITH TELEVISIONS WEIGHING 100 LBS (45.4 KG) OR LESS. USE WITH HEAVIER TELEVISIONS MAY RESULT IN INSTABILITY CAUSING TIP OVER RESULTING IN DEATH OR SERIOUS INJURY.

IMPORTANT


Before you begin: Open, identify and count all parts prior to assembly. Lay out parts on a flat and non-abrasive surface.

NOTE: IT IS VERY IMPORTANT TO USE GLUE WITH THE DOWELS. EXCESS GLUE CAN BE WIPED OFF WITH A DAMP CLOTH.

 Insert Dowel at least half way by tapping lightly with a rubber mallet (not included), IF NECESSARY.

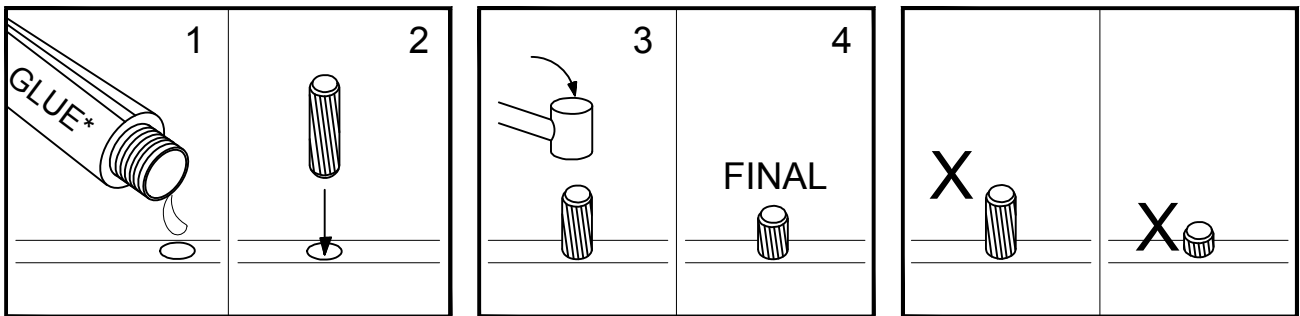


CAM LOCK SYSTEM OPERATION

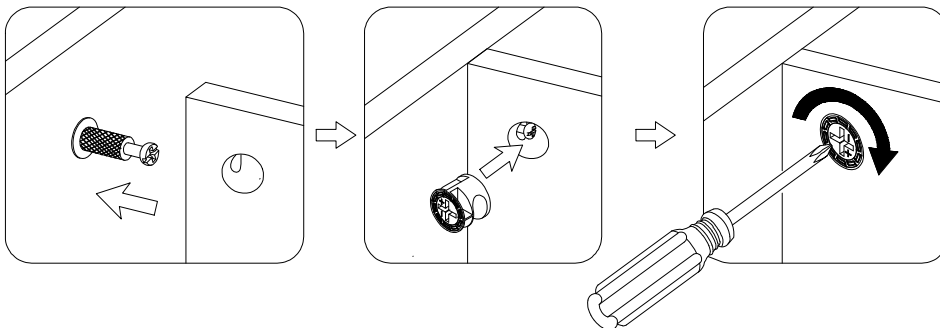 





 
 
 




HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS

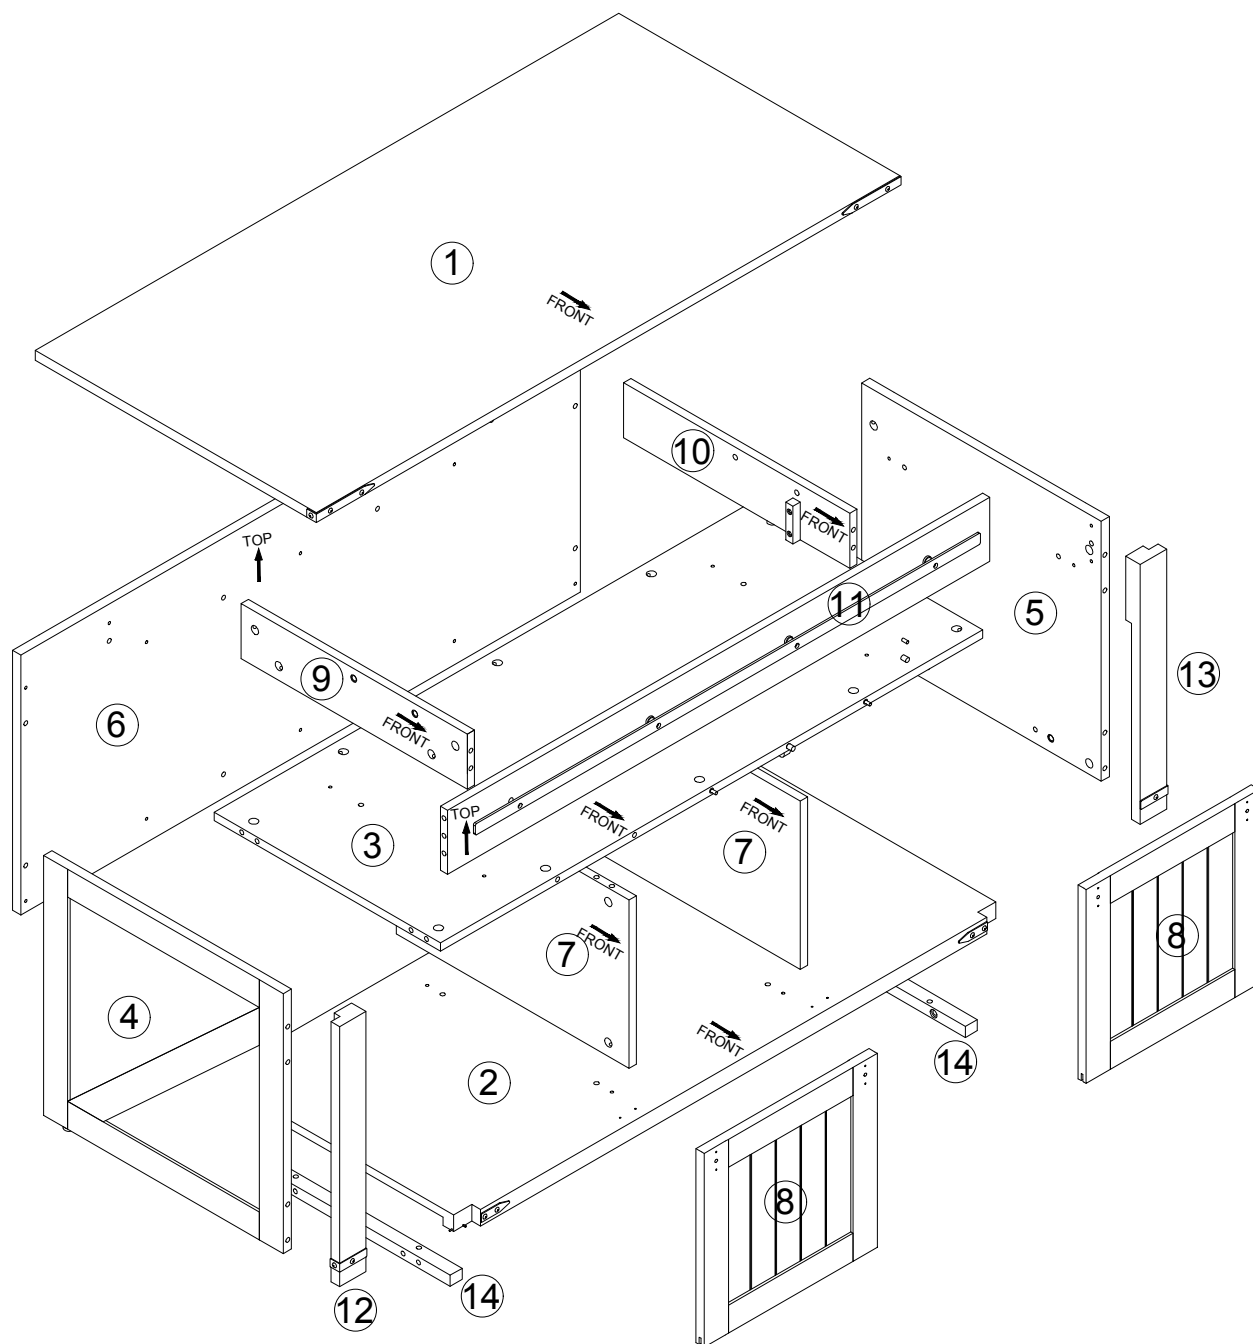 1. Screw the Cam Bolt into the pre-drilled small holes on the panel. Connect both panels together; making sure the Cam Bolt goes into the pre-drilled hole at the end of the panel with the Cam Lock.
2. Insert the Cam Lock into the pre-drilled large hole in the panel. Make sure the arrow on the Cam Lock is pointed towards the Cam Bolt.
3. Once the Cam Bolt is connected inside the Cam Lock, take a Phillips screwdriver (not included) and tighten the Cam Lock clockwise.



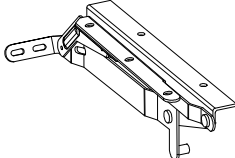
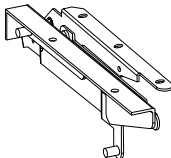
 
 


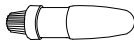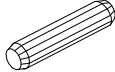

BOARD IDENTIFICATION




HARDWARE IDENTIFICATION-1

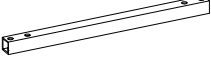A		GLUE	1 PC
B		WOODEN DOWEL Ø8 x 30mm	40 PCS
C		CAM LOCK Ø15 x 12mm	41 PCS
D		CAM SCREW Ø7 x 34mm	41 PCS
E		BOLT Ø1/4 x 15mm	10 PCS
F		BOLT Ø1/4 x 30mm	12 PCS
G		BOLT Ø1/4 x 35mm	4 PCS
H		HEX KEY	1 PC
I		WRENCH	1 PC
J		NUT	4 PCS
K		CRASH PAD	6 PCS

HARDWARE IDENTIFICATION-2

L		METAL TUBE	1 PC
M		METAL TUBE	2 PCS
N		LEFT LIFT MECHANISM	1 PC
O		RIGHT LIFT MECHANISM	1 PC
P		ANGLE BRACKET	2 PCS
Q		WOOD SCREW 3.5x12x6mm	12 PCS
R		L-SHAPED METAL BRACKET	4 PCS
S		DOOR GUIDE ROLLER	4 PCS
T		WOOD SCREW 4x14x8mm	8 PCS
U		STICKER	29 PCS

 
STEP 1

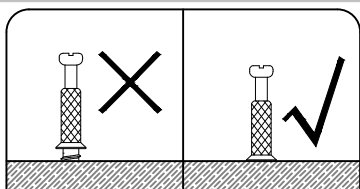


B
8x



 D
8 x

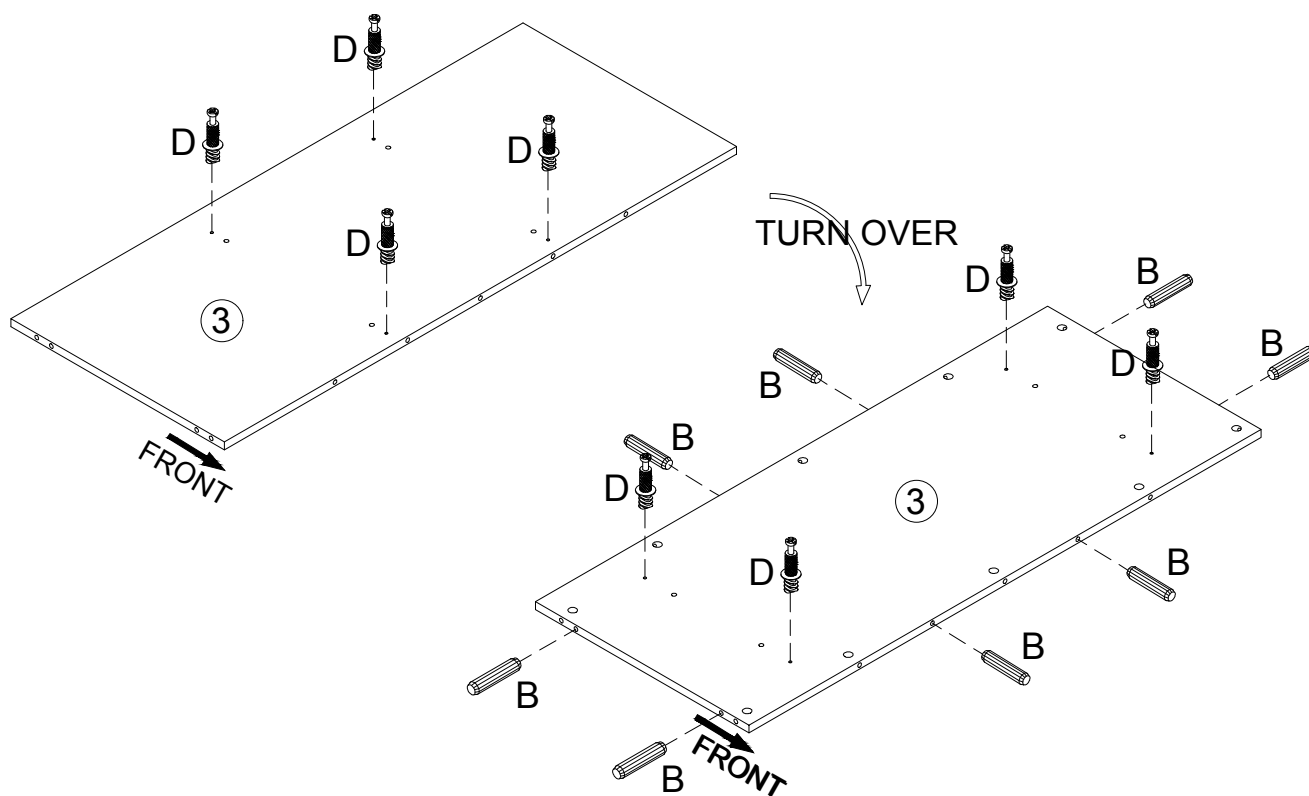

 
STEP 2

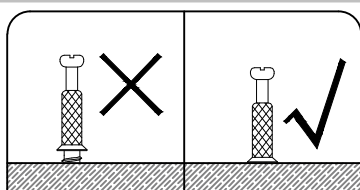


B
10x



 D
5 x

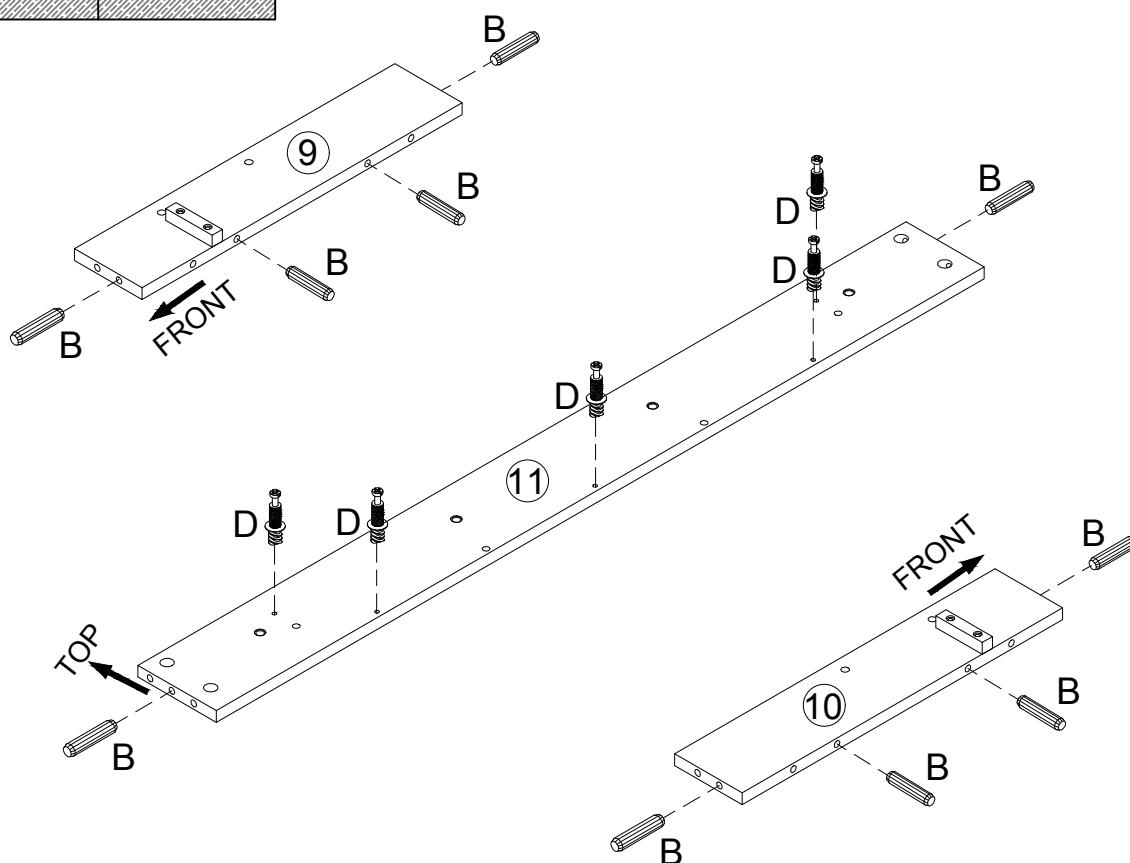




 
STEP 3

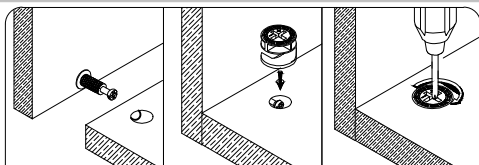


C
4 x



    U
4 x

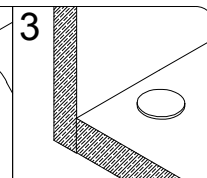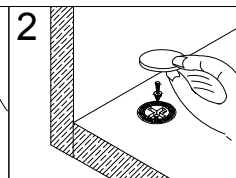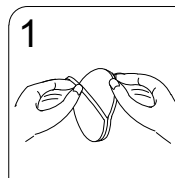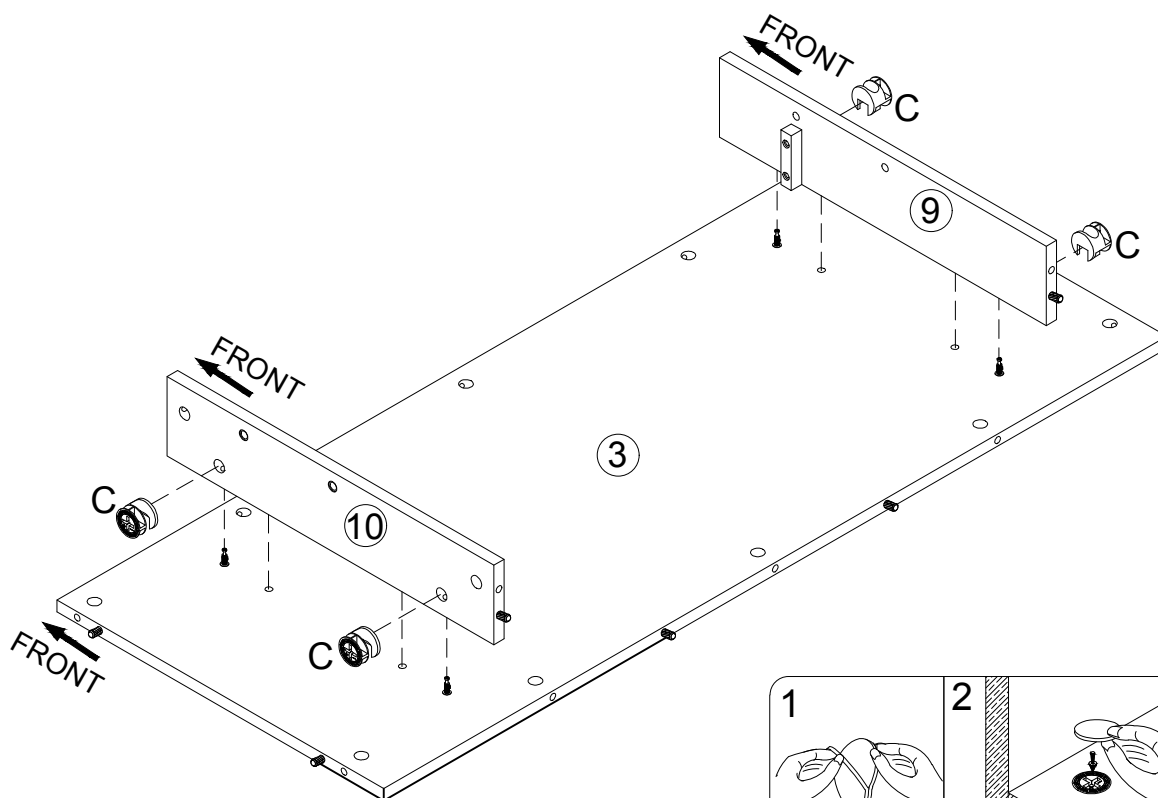




 
STEP 4

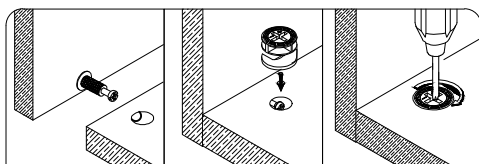

C
5 x



    U
5 x

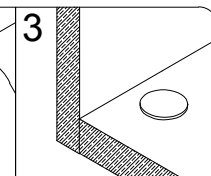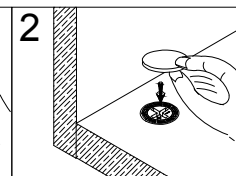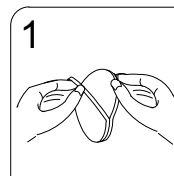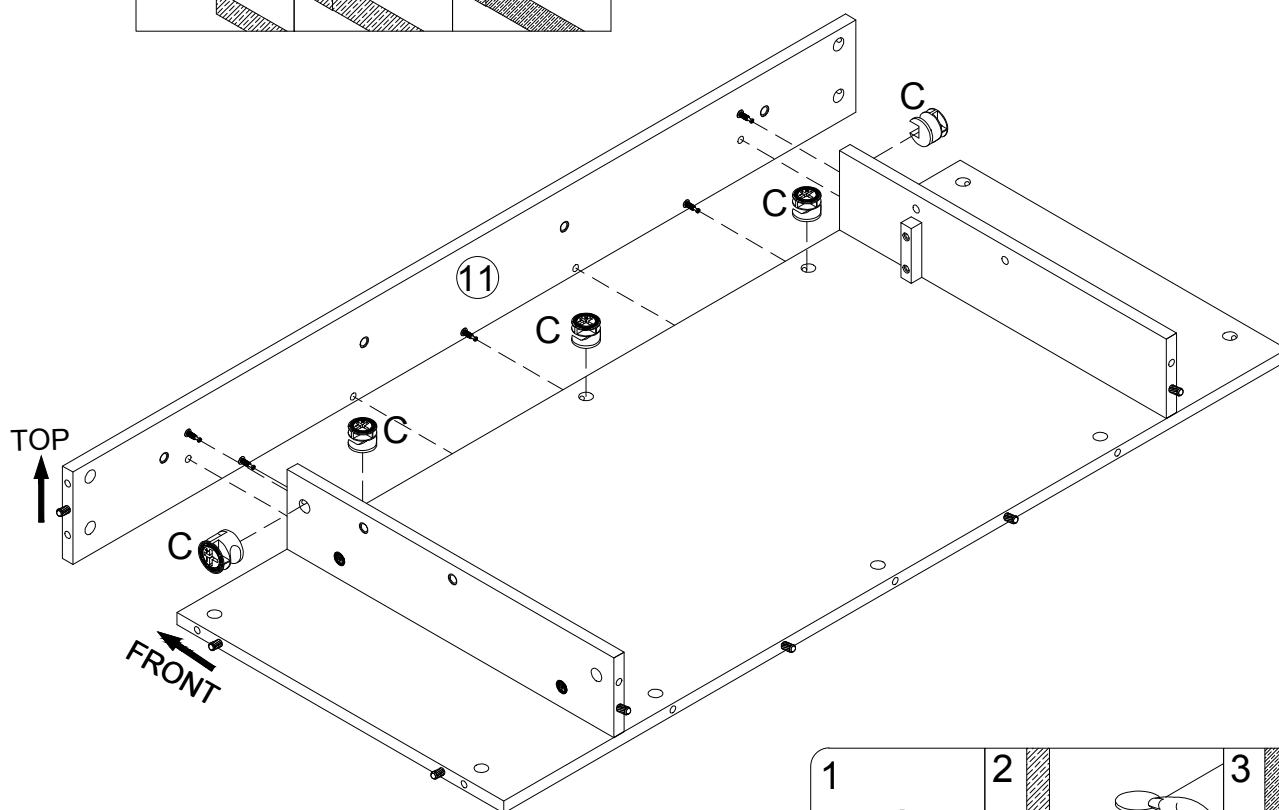

STEP 5

B
10x



 
D
4 x



P
2 x




Q
4 x

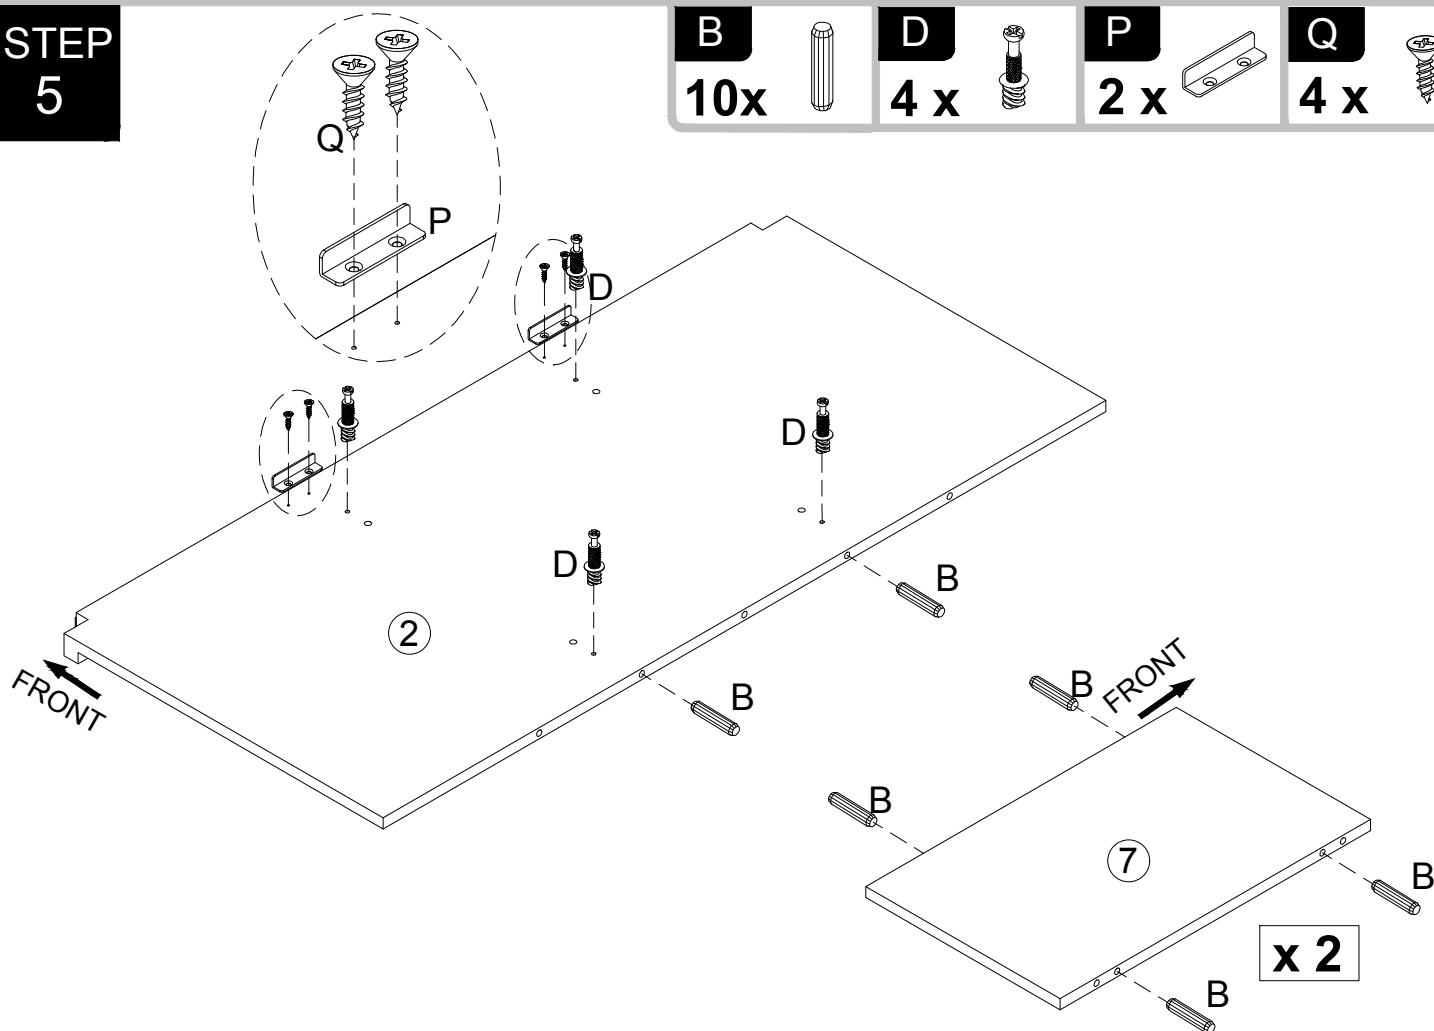


STEP 6

 
C
4 x

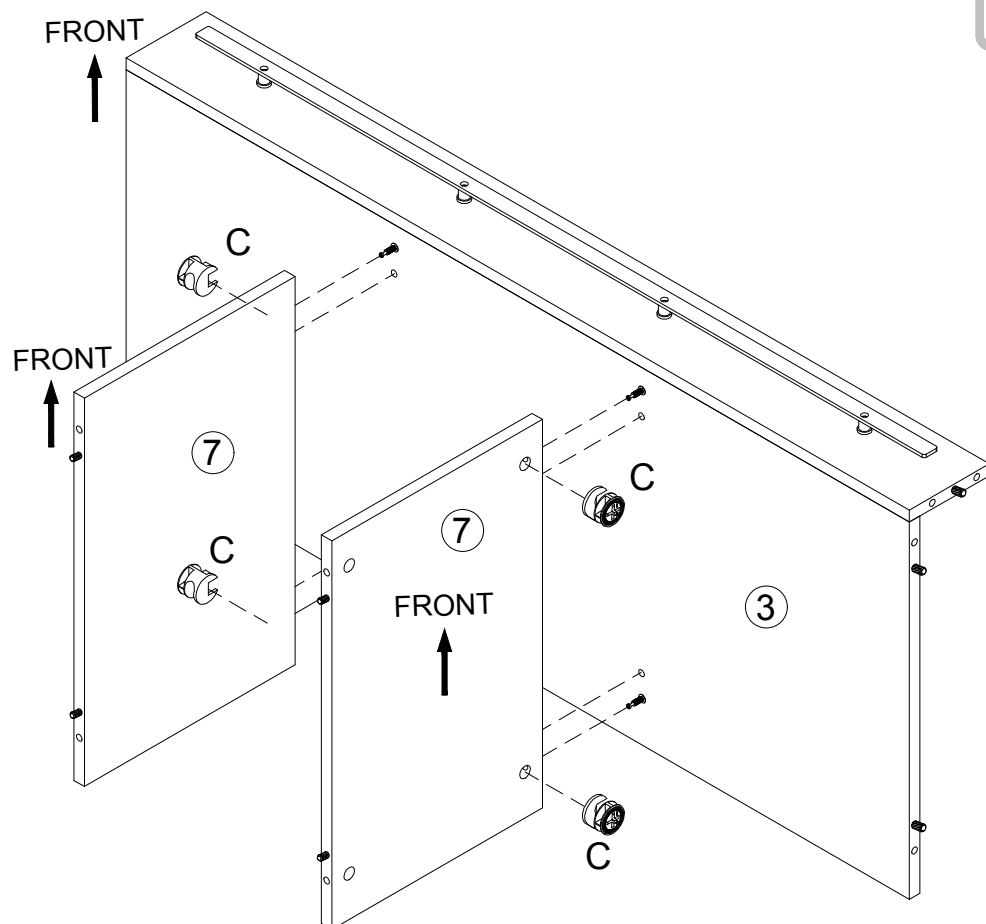

 
STEP 7

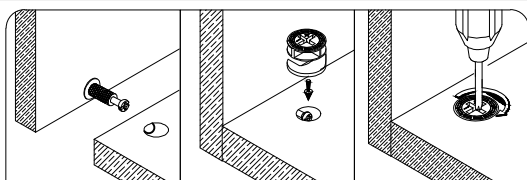

C
4 x



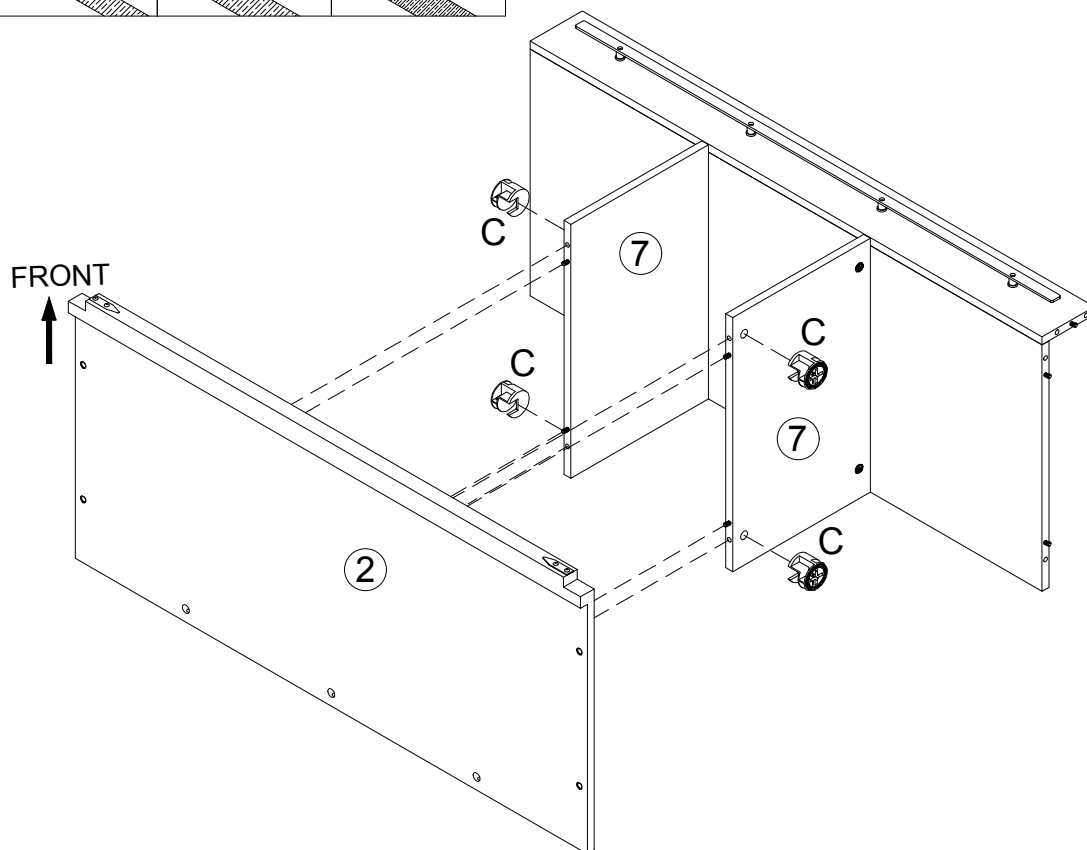 


 STEP 8

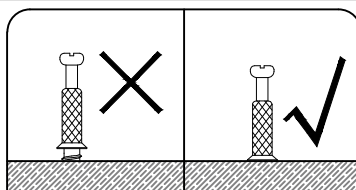


B
8 x

   
D
12 x

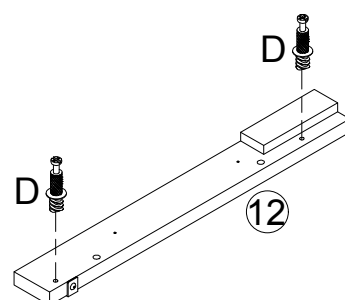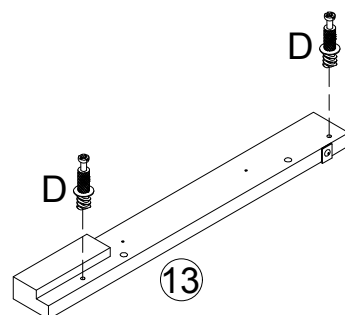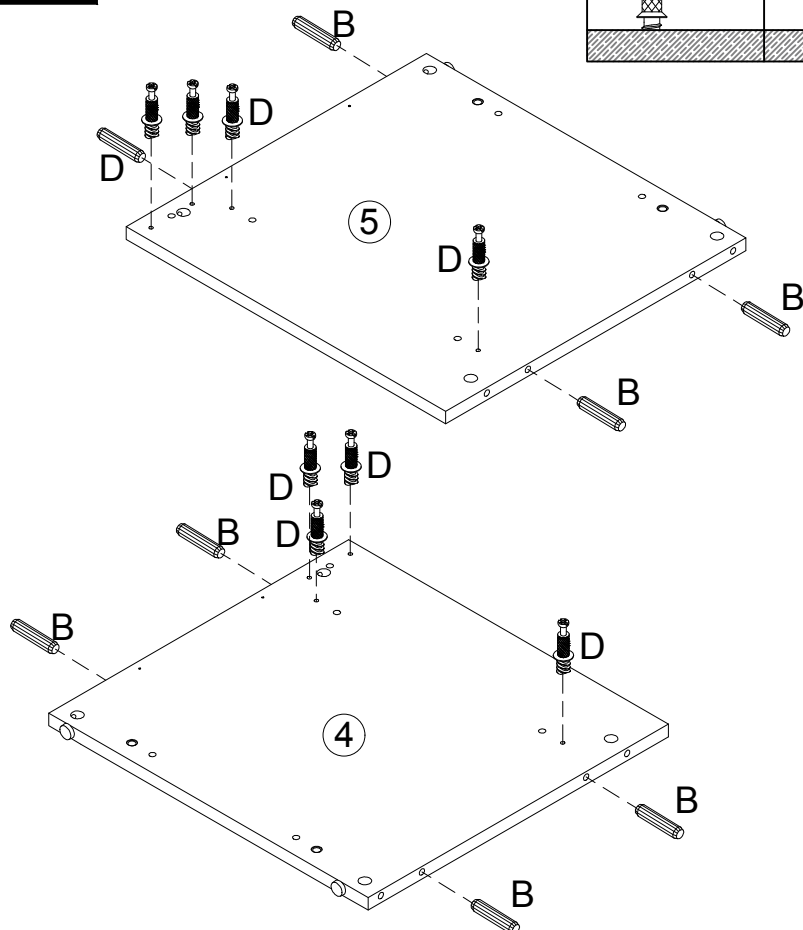

 STEP 9

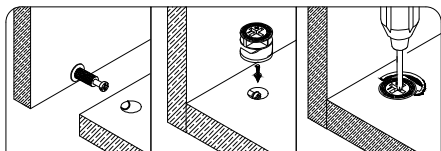



C
4 x

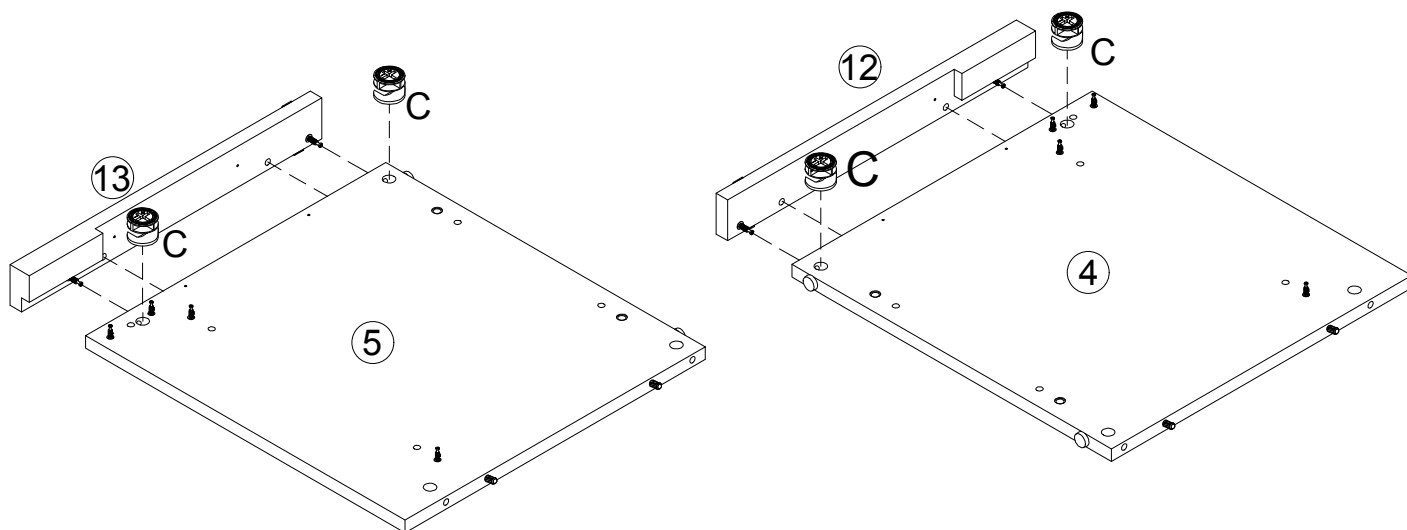 


STEP 10

R
4 x

  Q
8 x

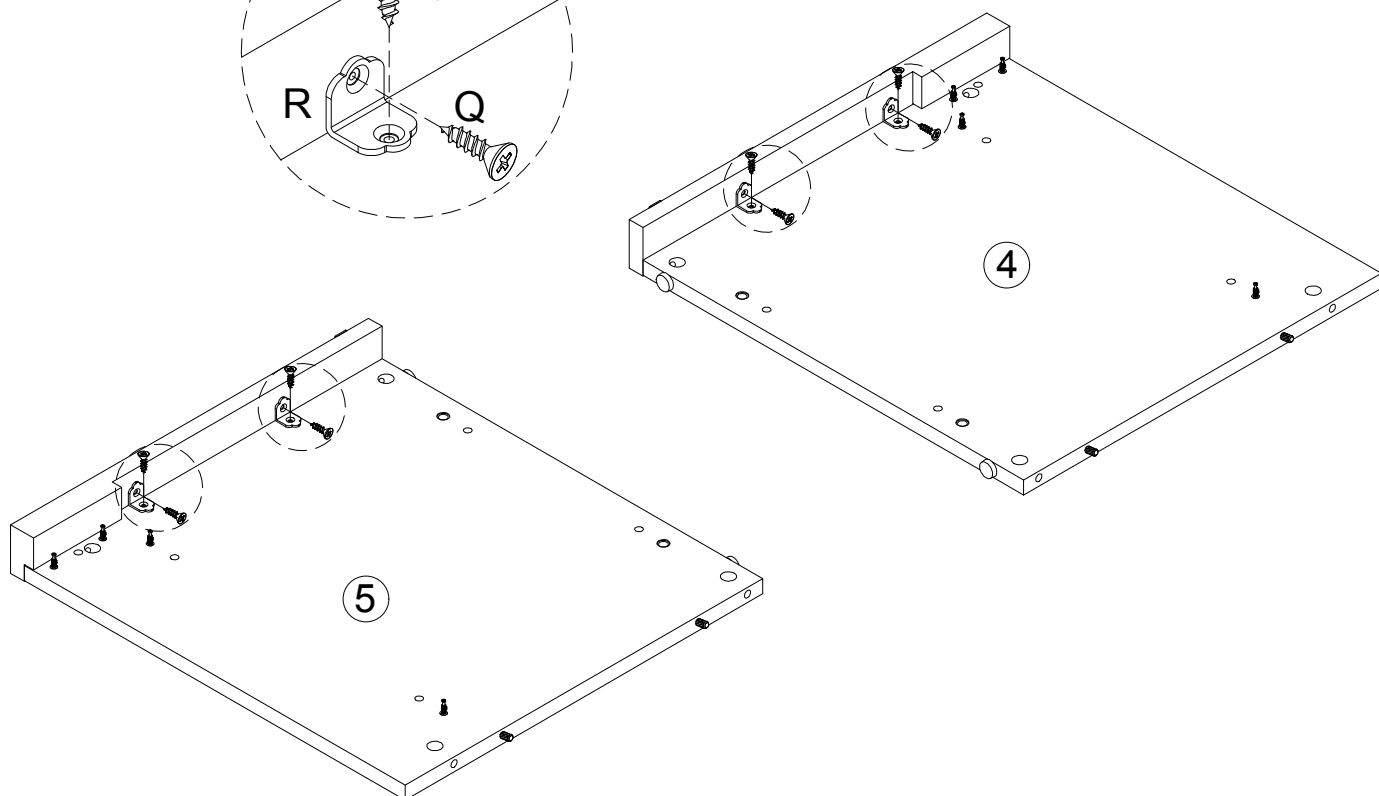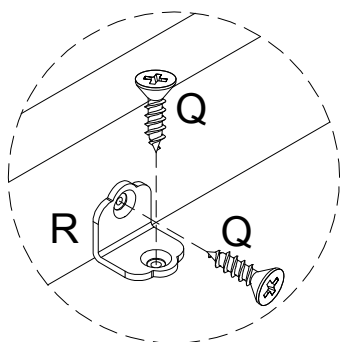


 
STEP 11

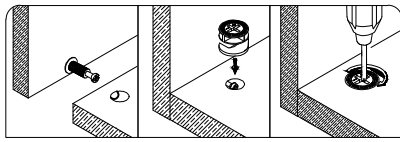

C
4 x



  U
4 x

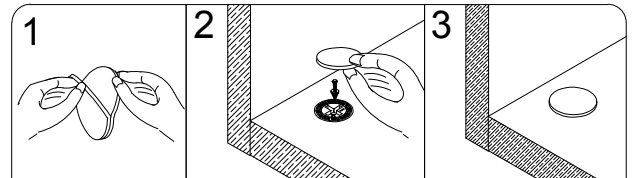
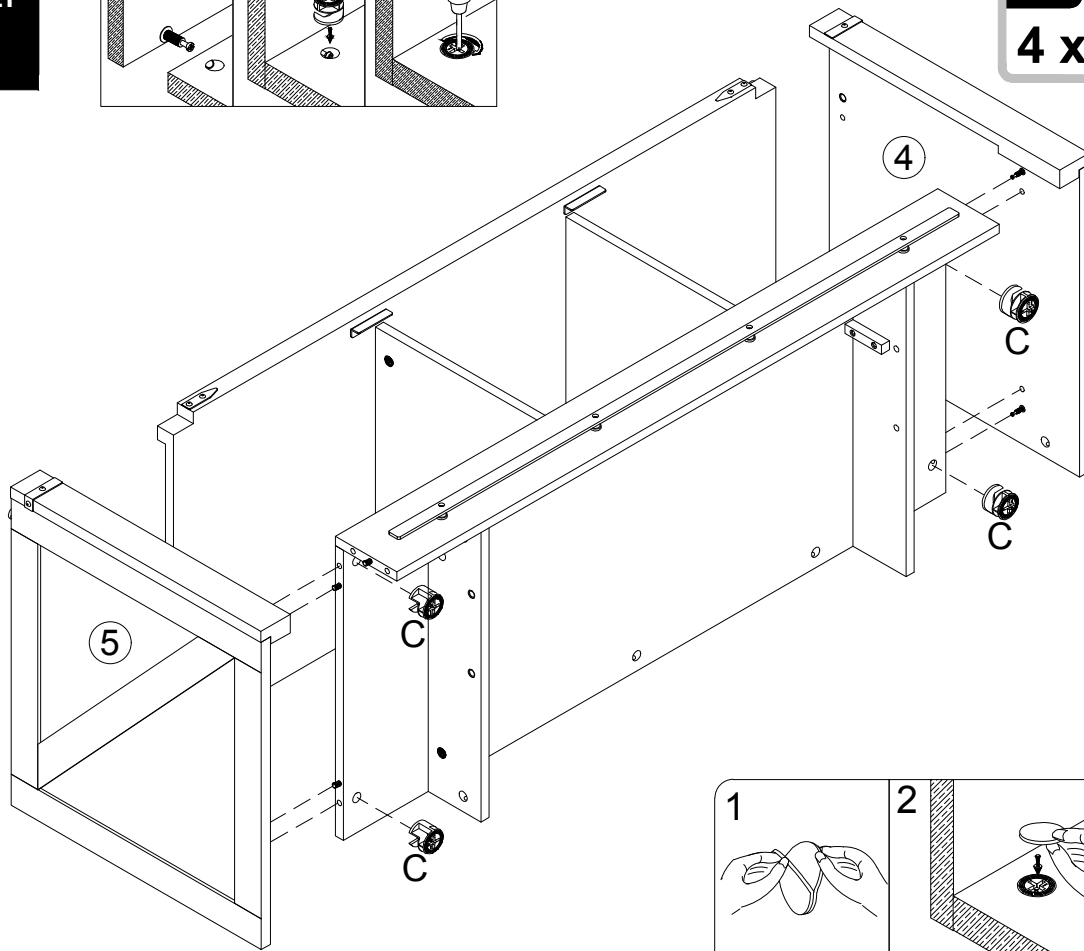


STEP 12

B
4 x



  D
12 x

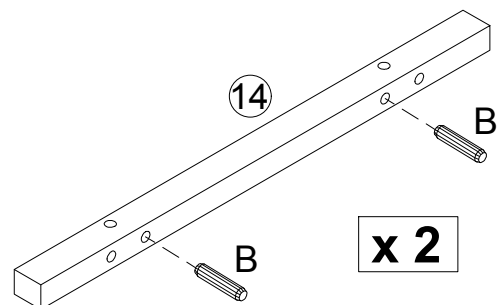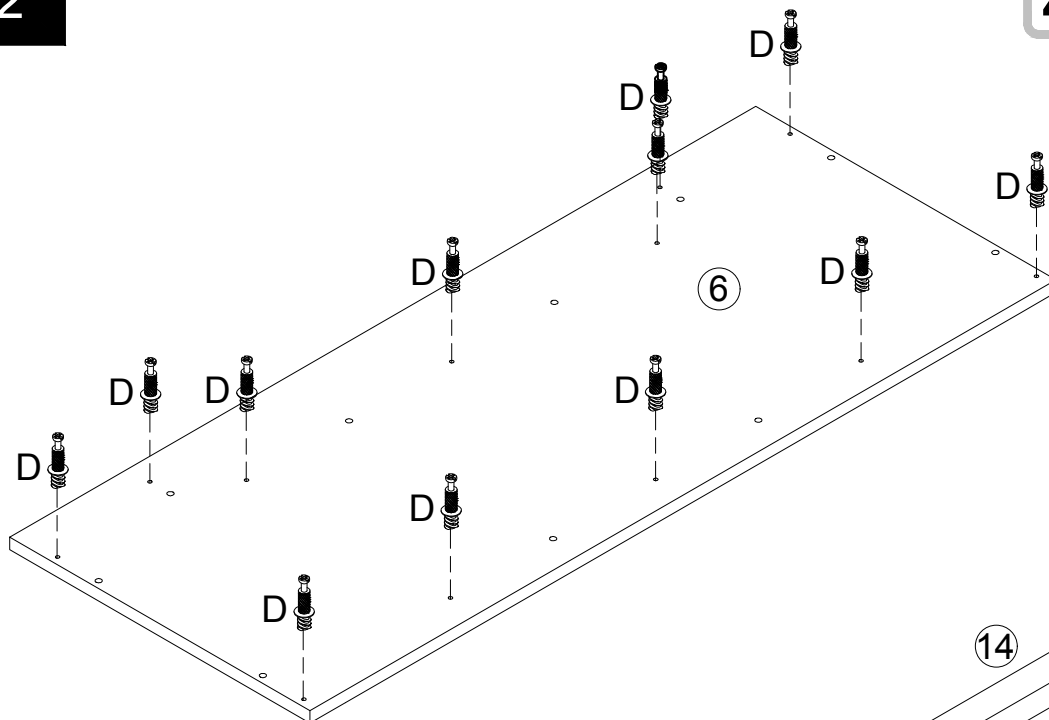






x 2

STEP 13


F
8 x



     H

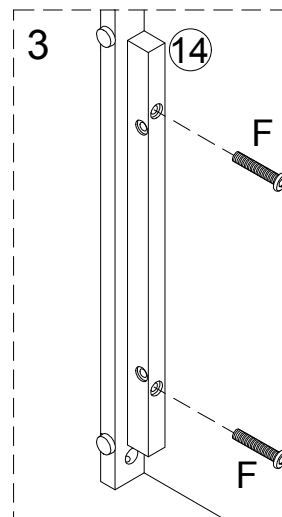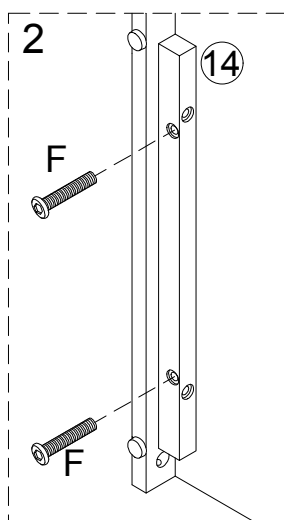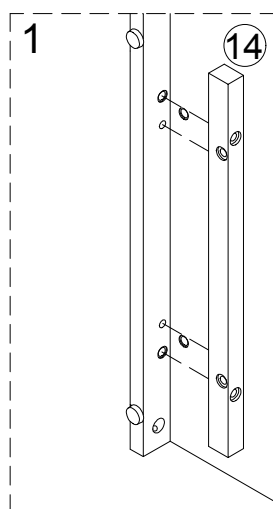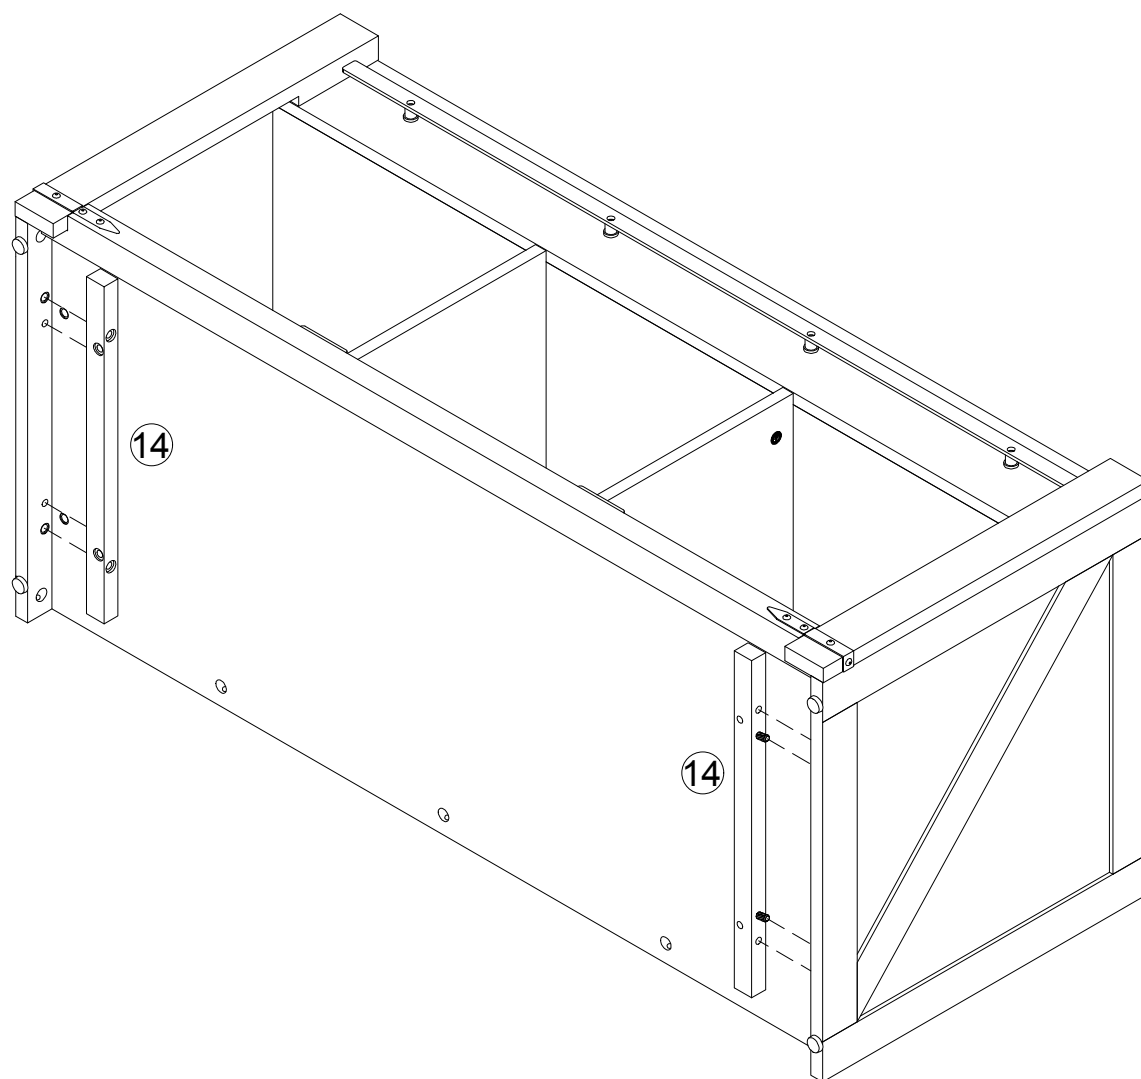

 
STEP 14

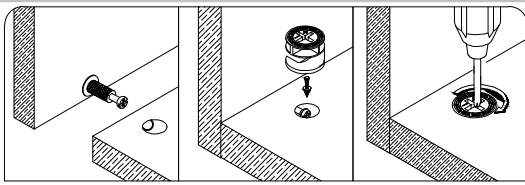



C
12 x



 H



U
12 x

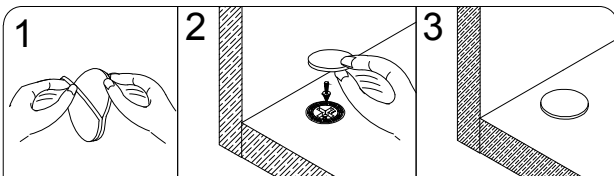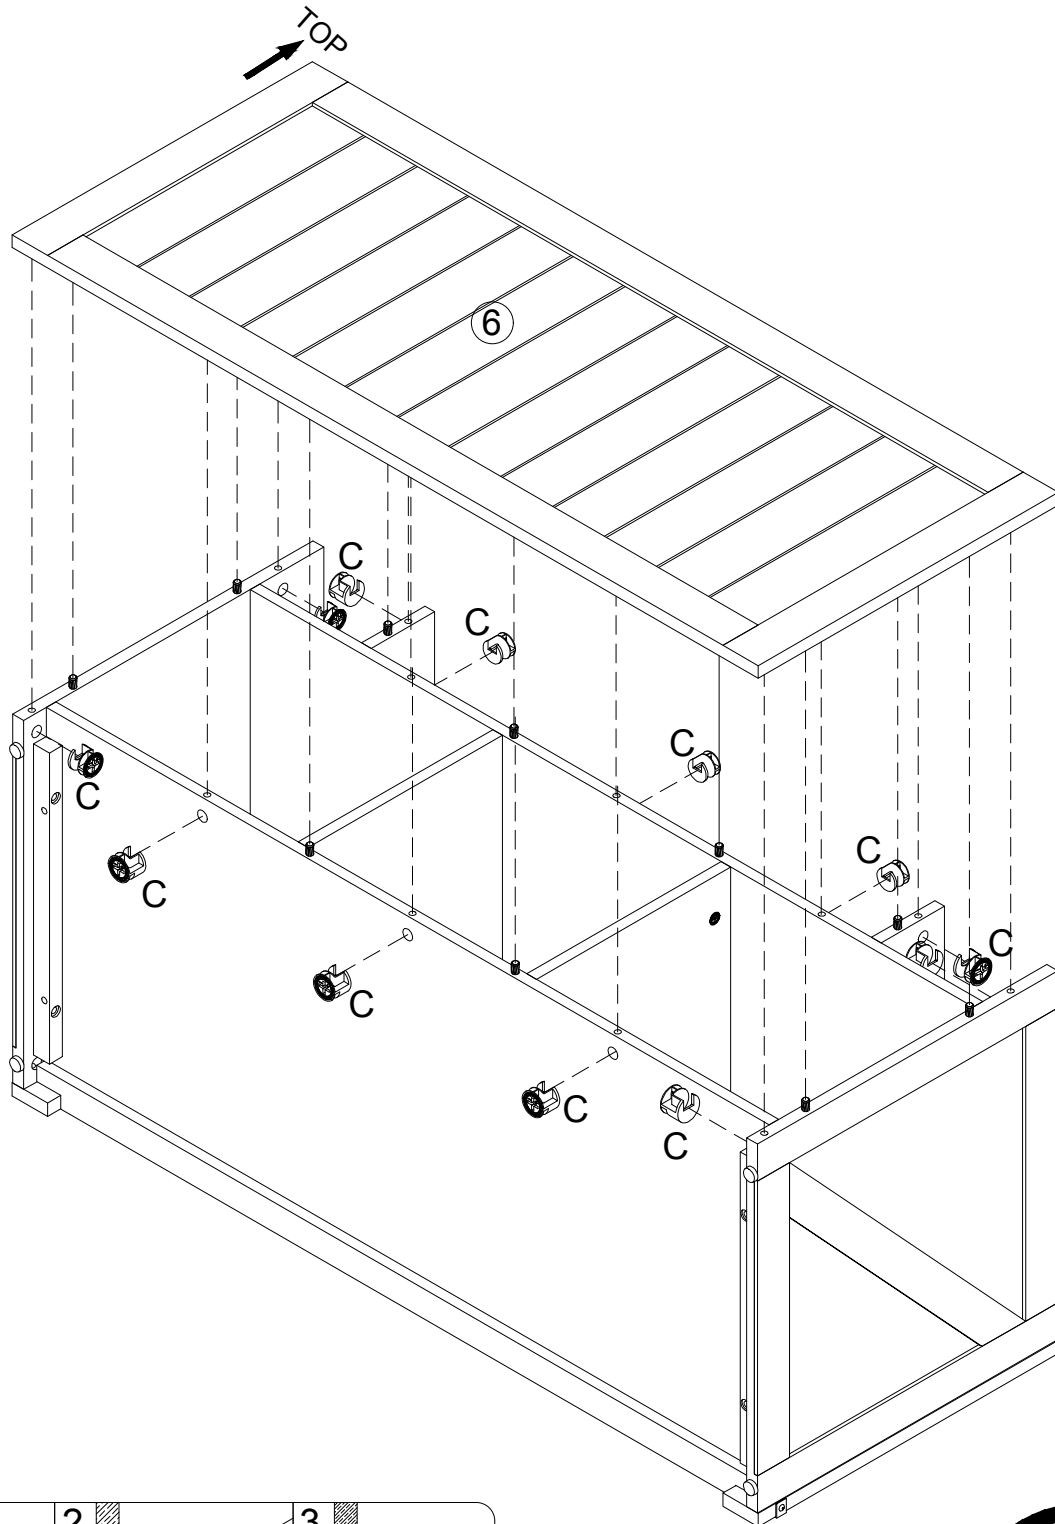  

STEP 15

 
G
4 x



H







M
2 x




C
4 x



    U
4 x

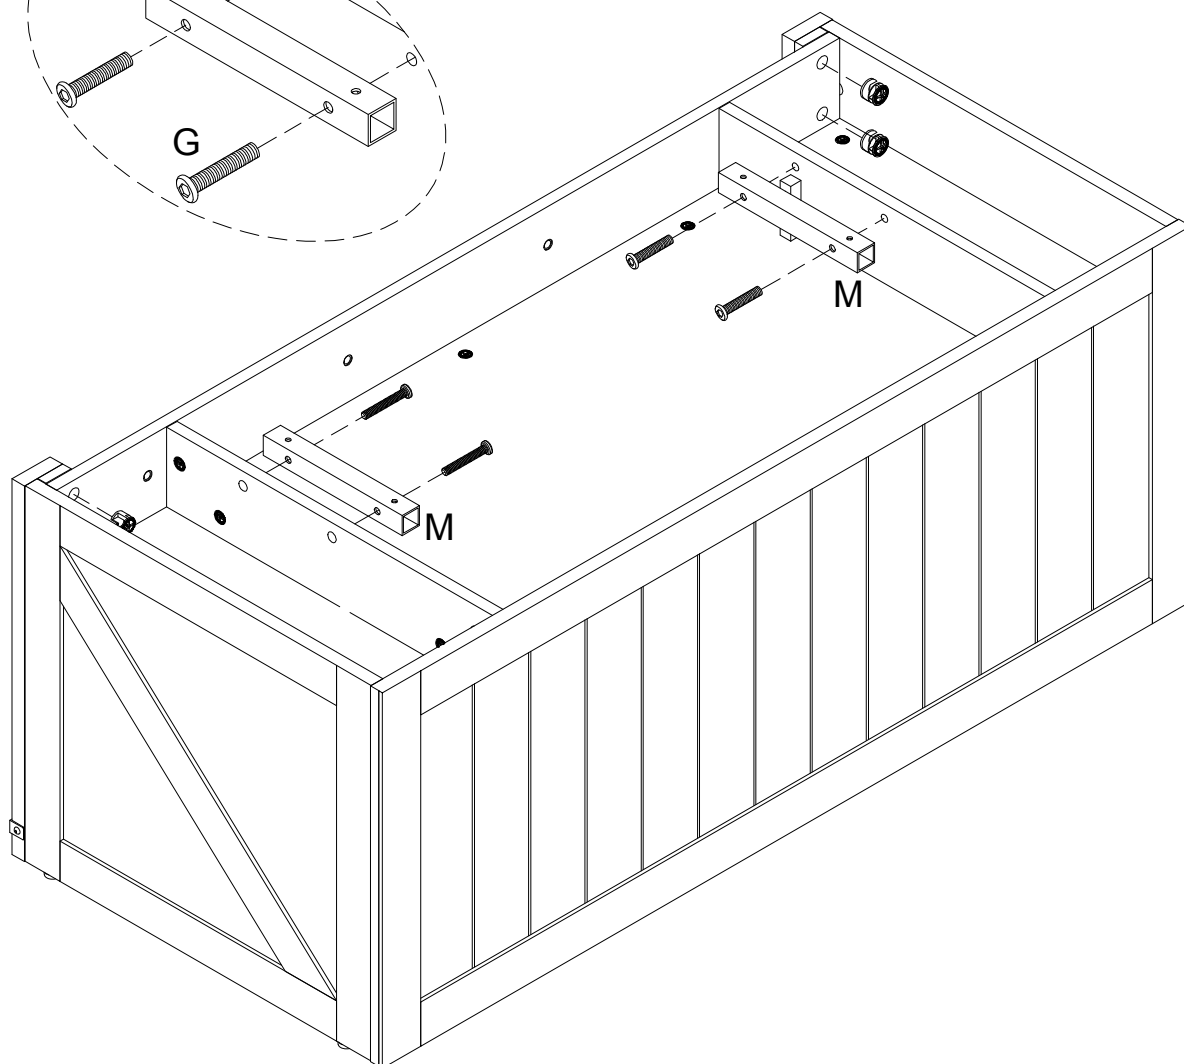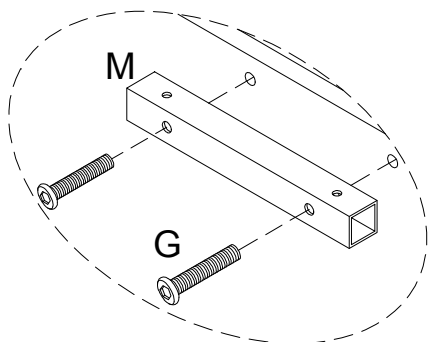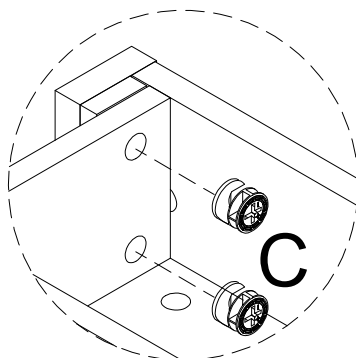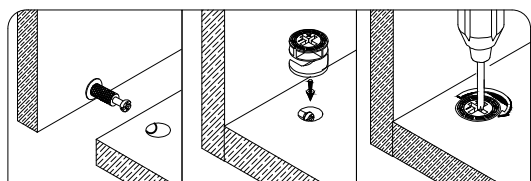

 Attach (M) to (9), (10) with (G) as illustrated.

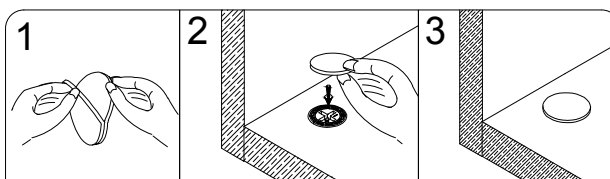


STEP 16

O
1 x



 
N
1 x



E
4 x



 H







K
6 x



Attach (N), (O) to (M) with (E) as illustrated.

    ⚠ CAUTION: Mechanism spring under tension. Use caution when removing.

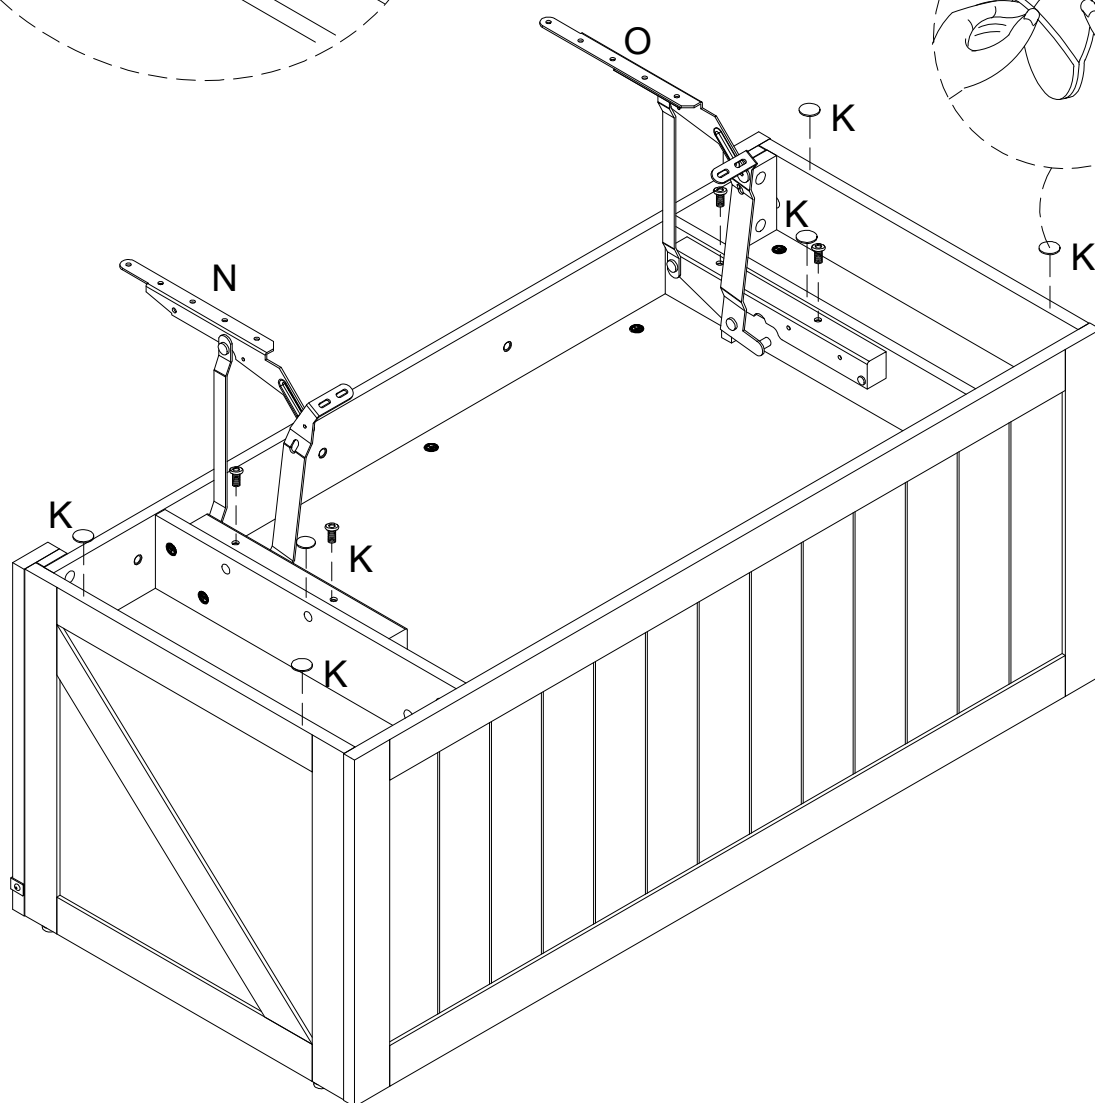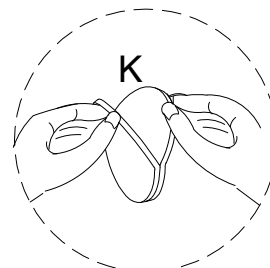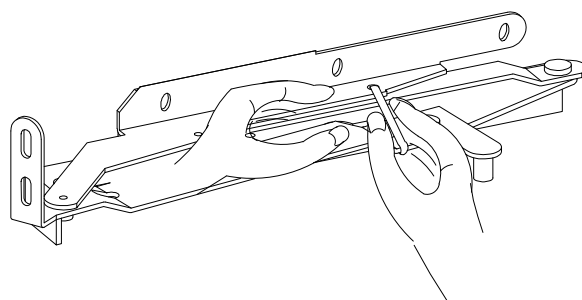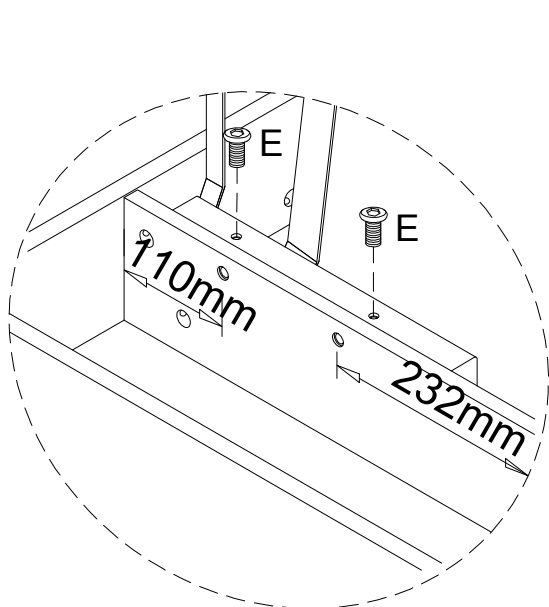


STEP 17



E
6 x



 H



  Attach (1) to (N), (O) with (E) as illustrated.

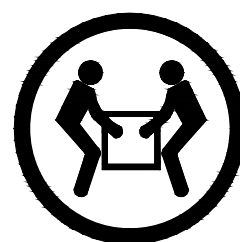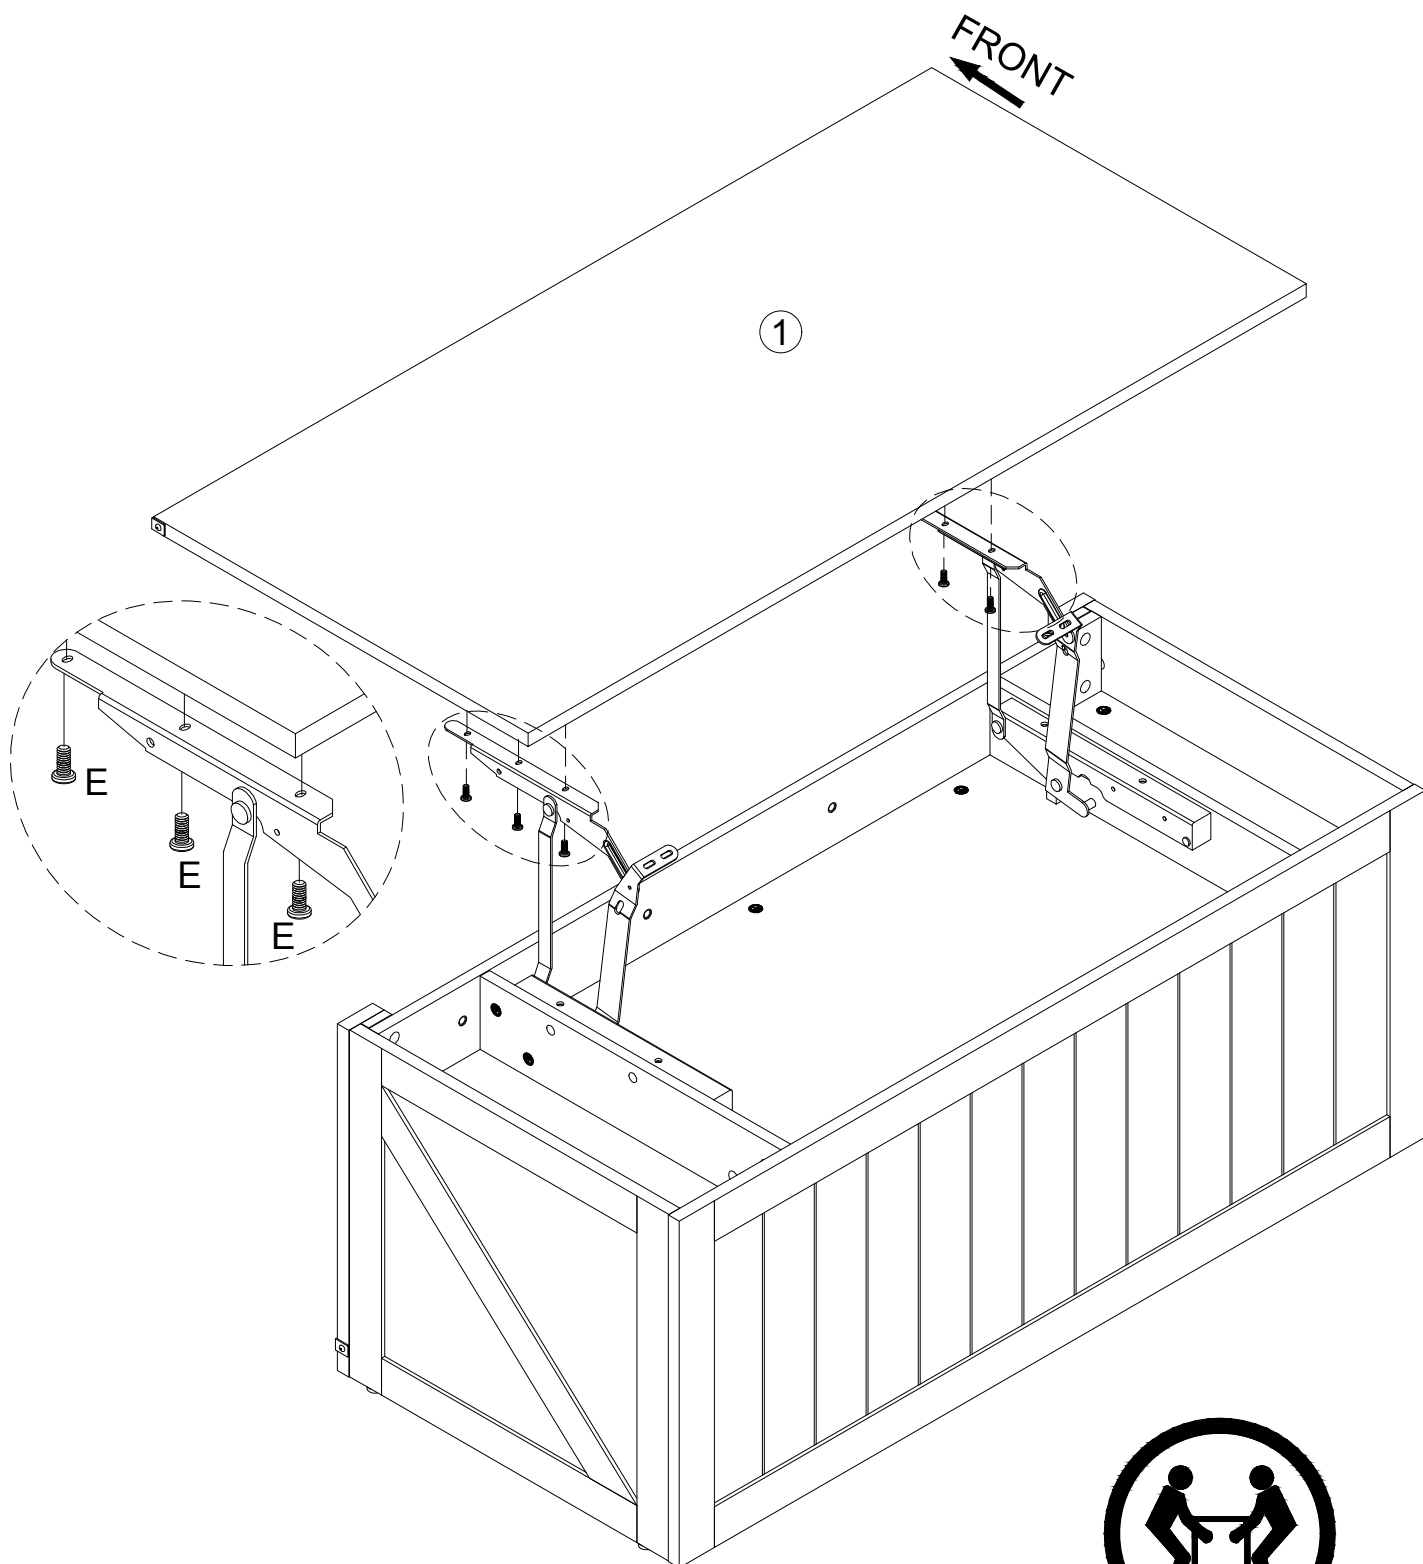


STEP 18

F
4 x



 H



I



J

4 x

 


L

1 x



Attach (L) to (N), (O) with (F) and (J) as illustrated.

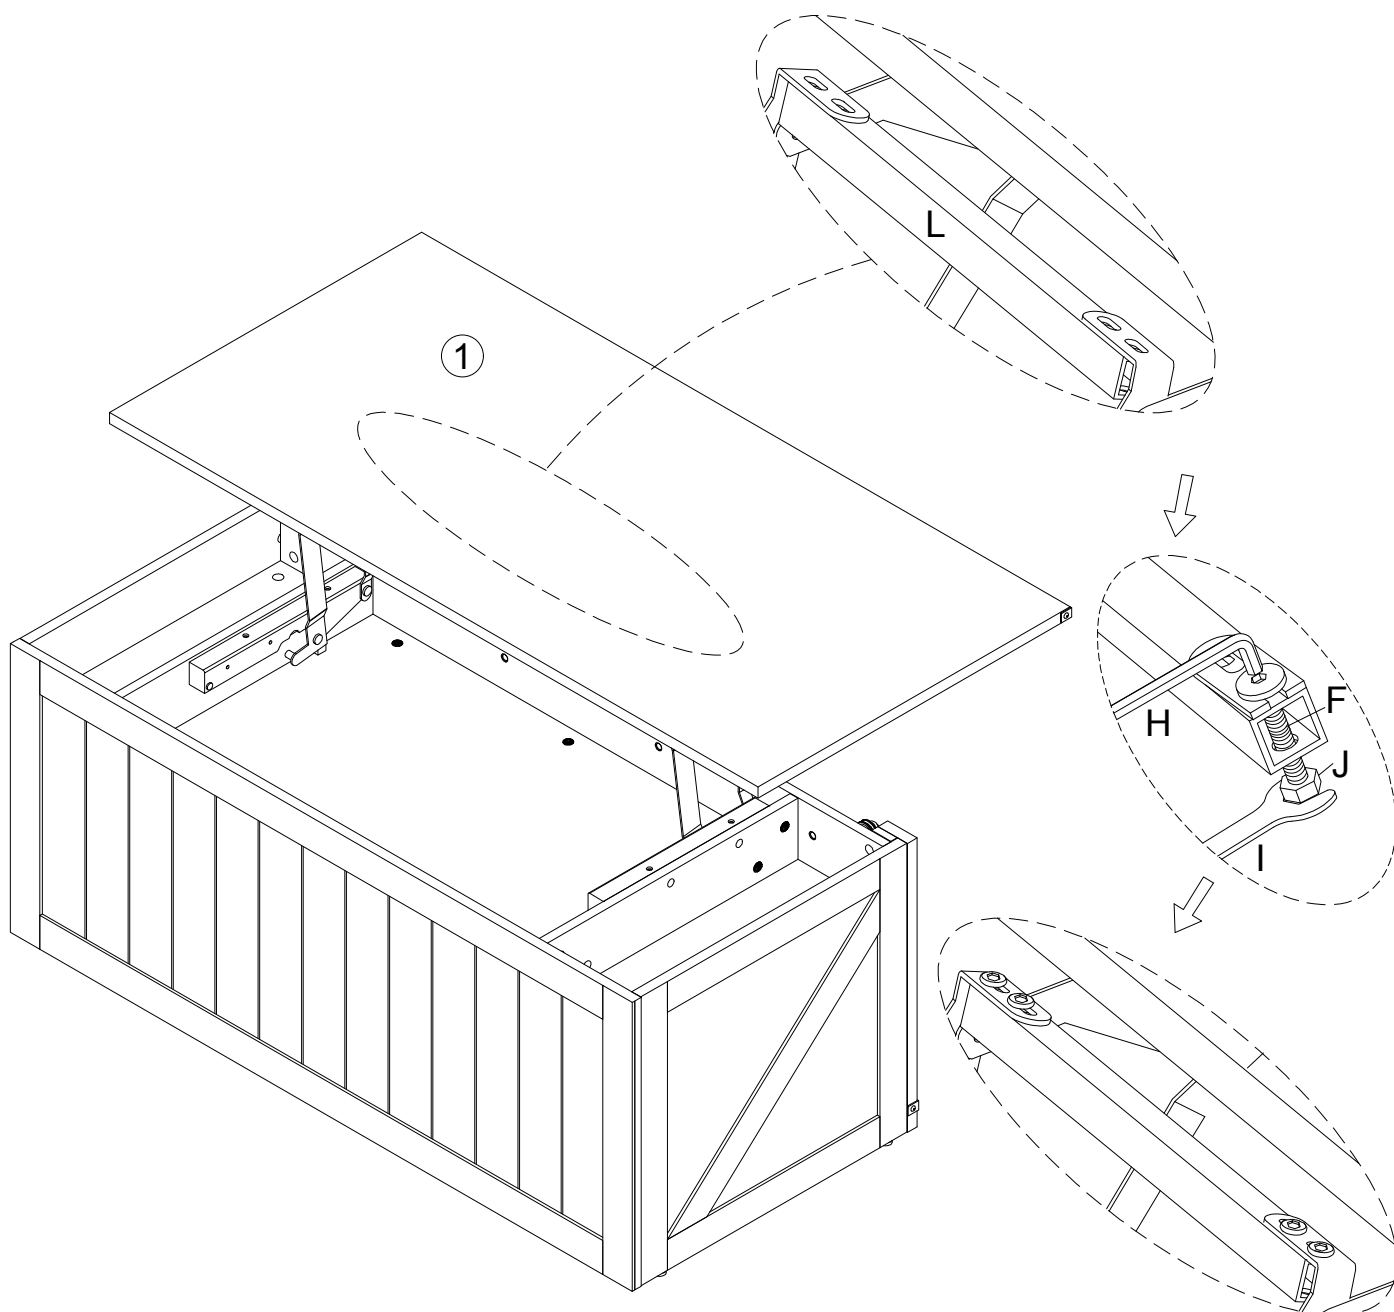

STEP 19

 
S

4 x




T


8 x

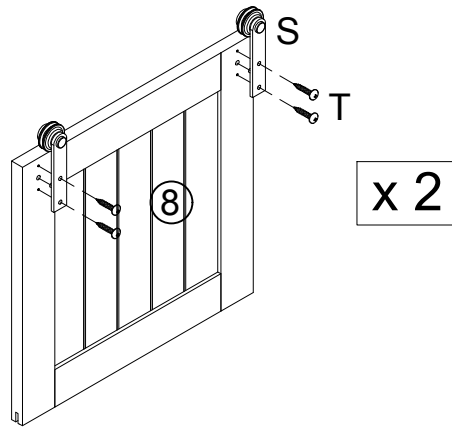

 How to install sliding door? Please refer to the below illustrations.

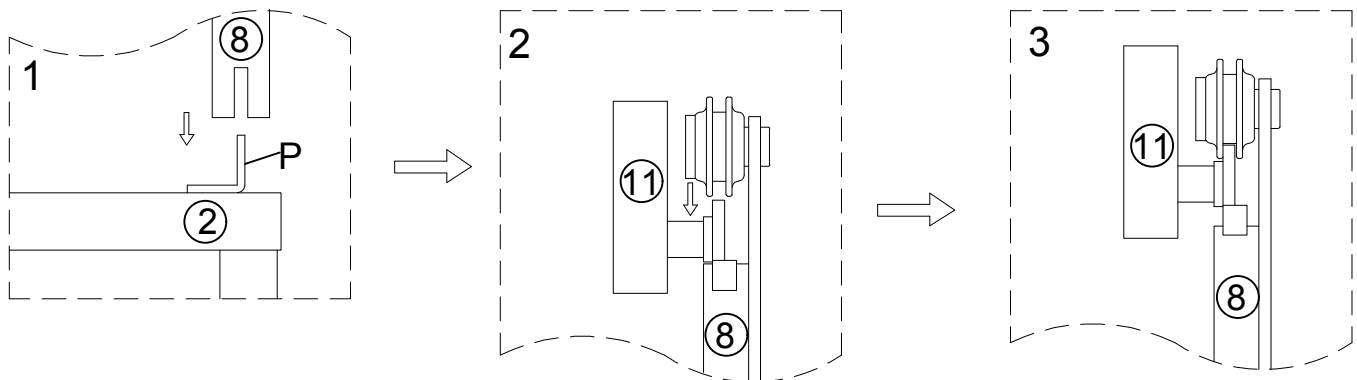

Part 2--Bottom frame Part 11--Door track Part 8--Sliding door Part P--Angle bracket

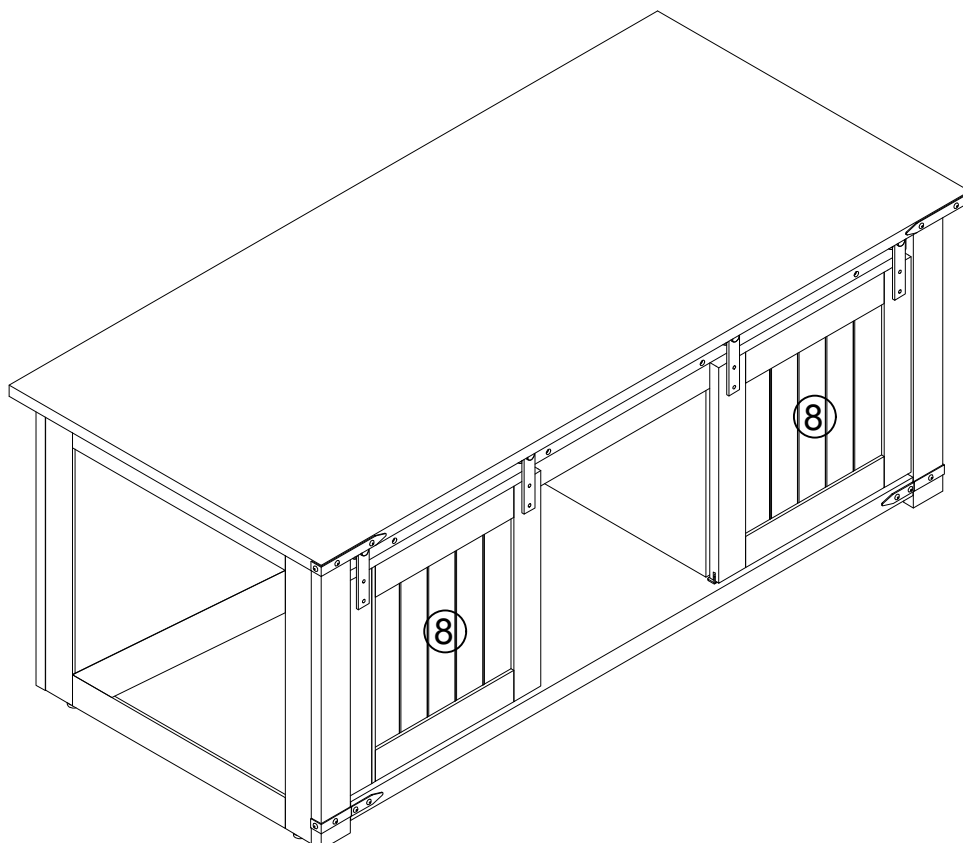 

Care and Maintenance

- Use a soft, clean cloth that will not scratch the surface when dusting.
- Use of furniture polish is not necessary. Should you choose to use polish, test first in an inconspicuous area.
- Using solvents of any kind on your furniture may damage the finish.
- Never use water to clean your furniture as it may cause damage to the finish.
- Always use coasters under beverage glasses and flowerpots.
- Liquid spills should be removed immediately. Using a soft, clean cloth, blot the spill gently. Avoid rubbing.
- Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture finish.
- Stains or marks from crayons or ink markers will be difficult to remove.
- In the event that your furniture is stained or otherwise damaged during use, we recommend that you call a professional to repair your furniture.
- Check bolts/screws and nuts periodically and tighten them if necessary.

Caring for Wood Furniture

It is best to keep your furniture in a climate-controlled environment. Extreme temperature and humidity changes can cause fading, warping, shrinking and splitting of wood. It is advised to keep furniture away from direct sunlight as sun may damage the finish.

Proper care and cleaning at home will extend the life of your purchase. Following these important and helpful tips will enhance your furniture as it ages.

Cleaning the Fireplace Trim

Clean the metal trim using a soft cloth, slightly dampened with citrus oil based product and buff with a clean soft cloth. DO NOT use brass polish or household cleaners as these products will damage the metal trim. Citrus oil based products can be obtained at supermarkets or hardware stores.