 


# Hanging Rack

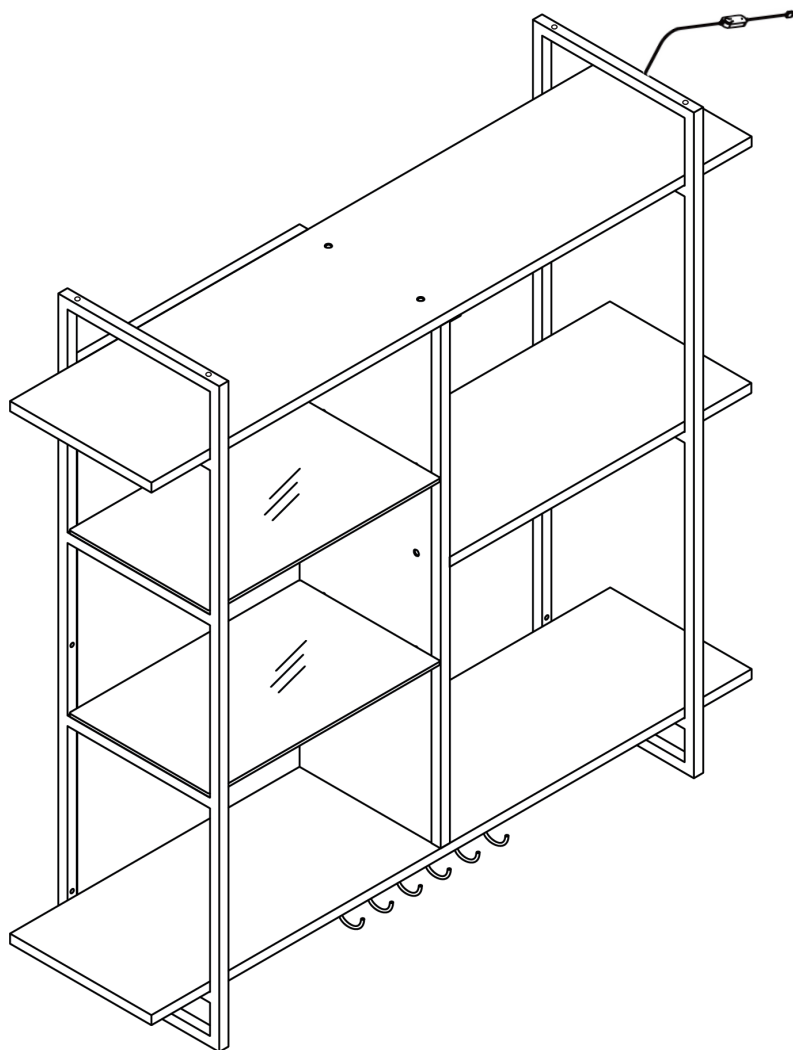

 


 
Estimated time for assembly:

**90 mins**



Weight limitations are as follows:

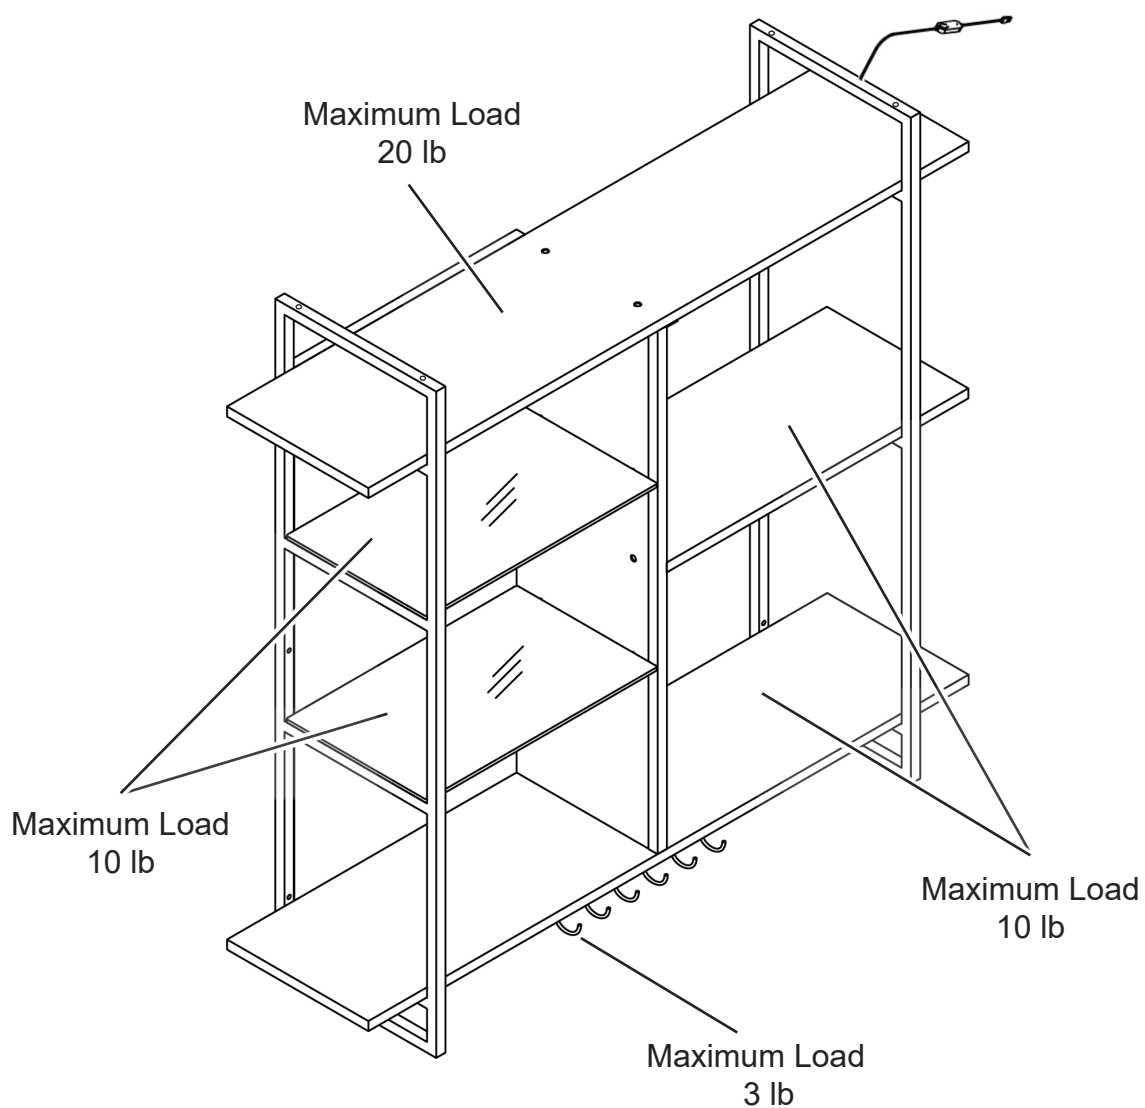


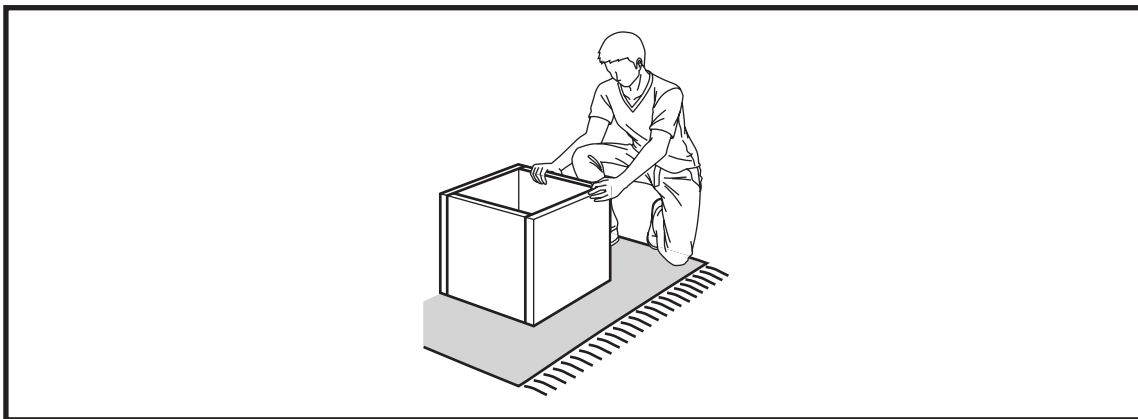

Assemble the furniture on an empty carton, carpet, or rug to prevent scratches or damage.

For safety, please keep pets and children away from the assembly area.

 Ensure the product is fully assembled before use. If you are missing any hardware or products, do not use it until you have restored the missing parts.

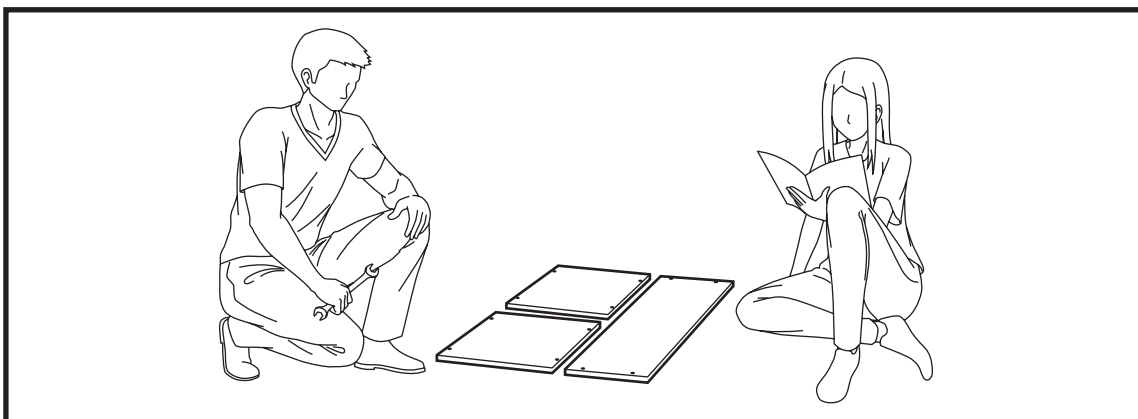

This furniture requires at least 2 people to assemble.

Read this instruction manual prior to assembly to familiarize yourself with the various steps.

Lay out all components and hardware separately on a flat surface and make sure that no parts are missing or damaged before assembly. Do not destroy or discard any packaging until you are certain that you have all the necessary parts for assembly.


Hand tight all hardware and careful not to over tighten to avoid damaging the product.

## **CAUTION**

 There are small components used in the construction of this product. Loose items should be kept away from pets and children to avoid a choking hazard.

Keep all plastic bags and packaging film away from pets and children to avoid suffocation.












# PACKAGE CONTENTS

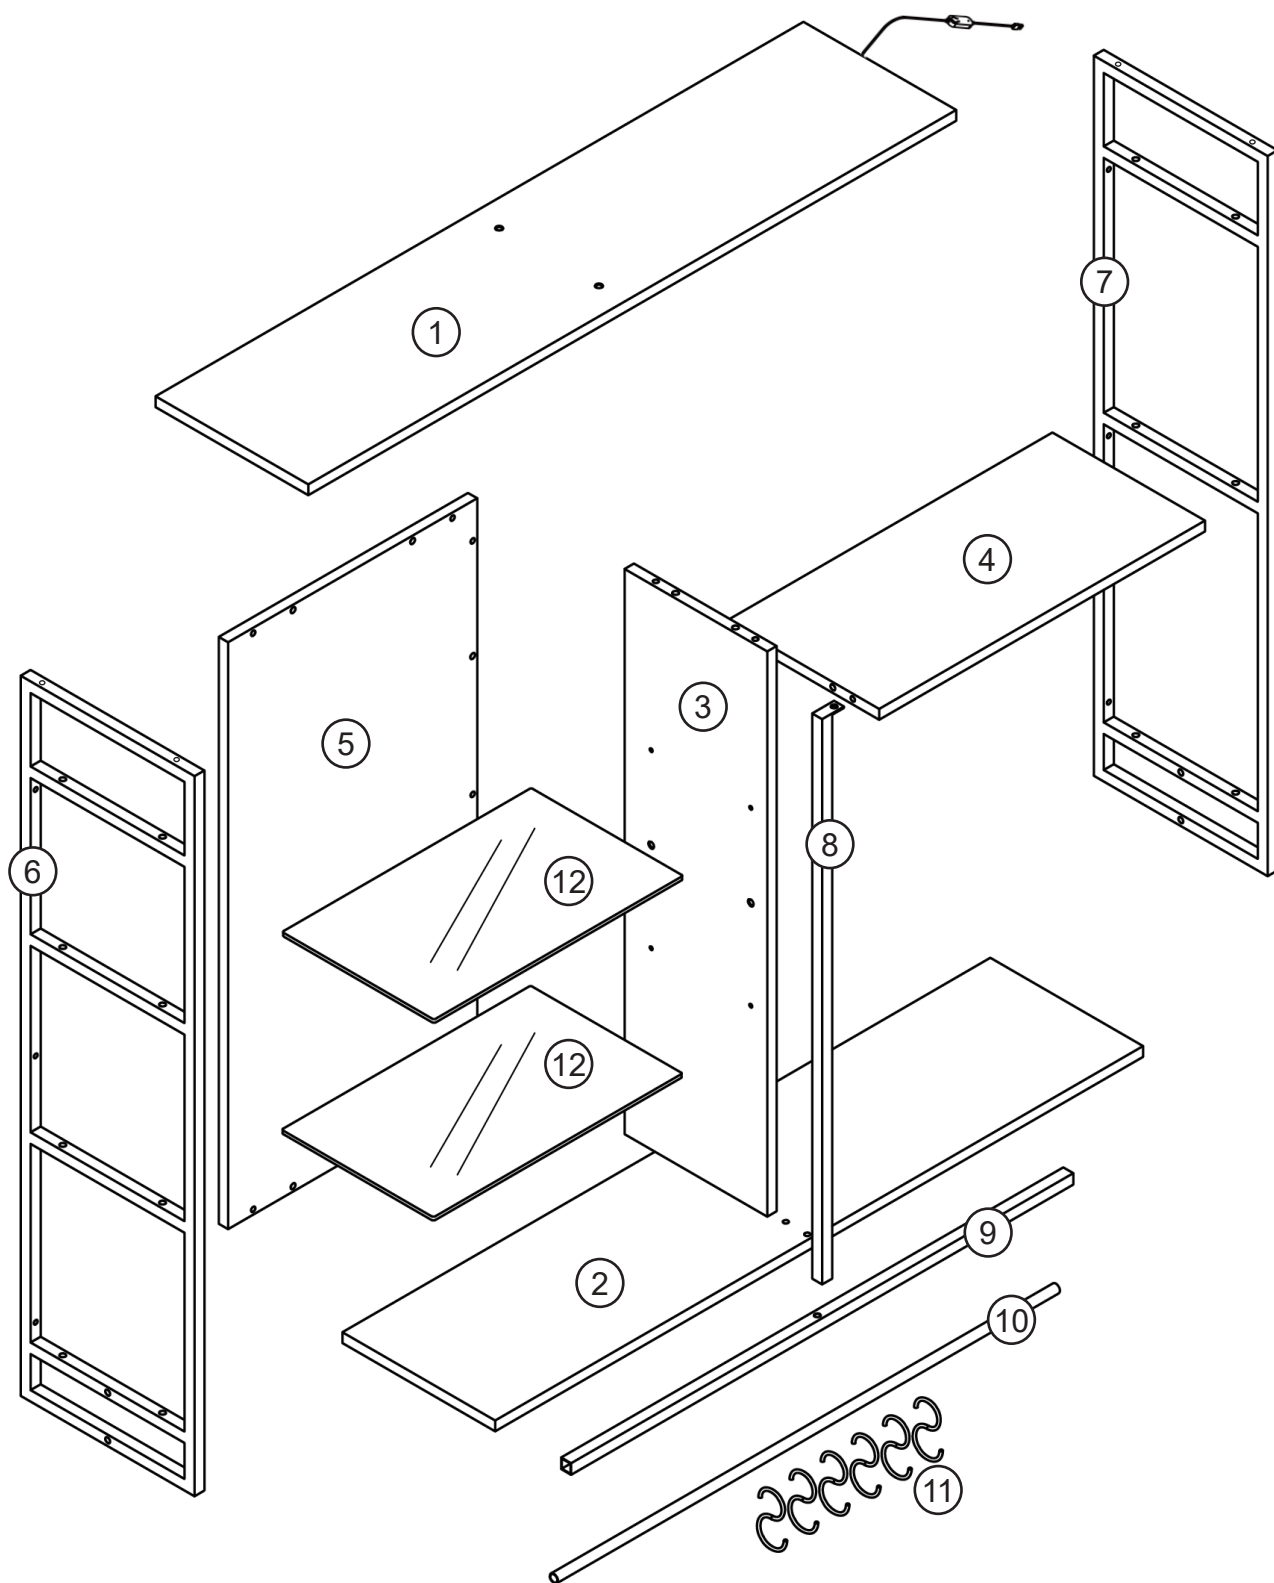

## PACKAGE CONTENTS


CODE	DESCRIPTION	QTY
1	Top Panel	1
2	Bottom Panel	1
3	Medial Panel	1
4	Right Shelf Panel	1
5	Back Panel	1
6	Left Frame	1
7	Right Frame	1
8	Support Bar	1
9	Bottom Crossbar	1
10	Hanging Rod	1
11	S-Hook	6
12	Glass Shelf	2
           
# PACKAGE CONTENTS

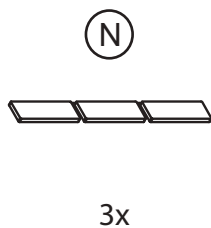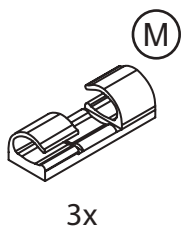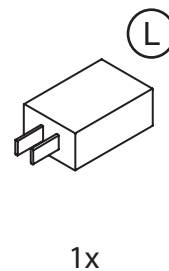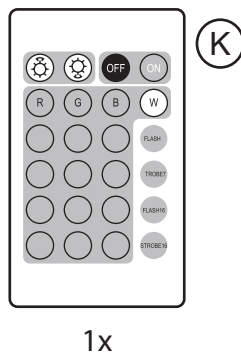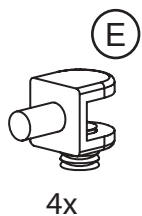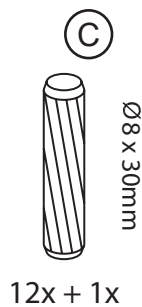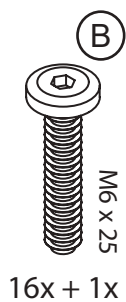

Install all hardware perpendicular to the opening.

 
Required tools for assembly (Not included)

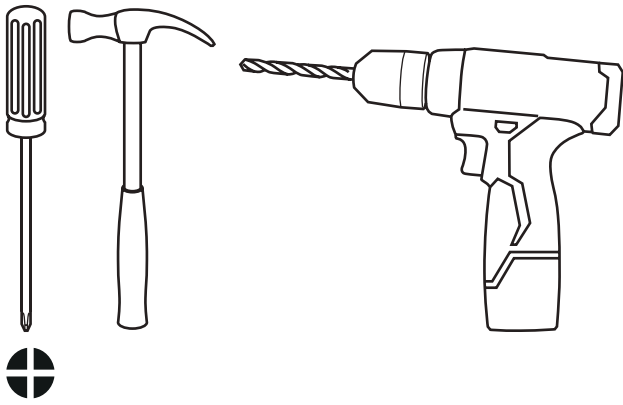

1





 Assemble bottom crossbar (9) to the bottom panel (2).

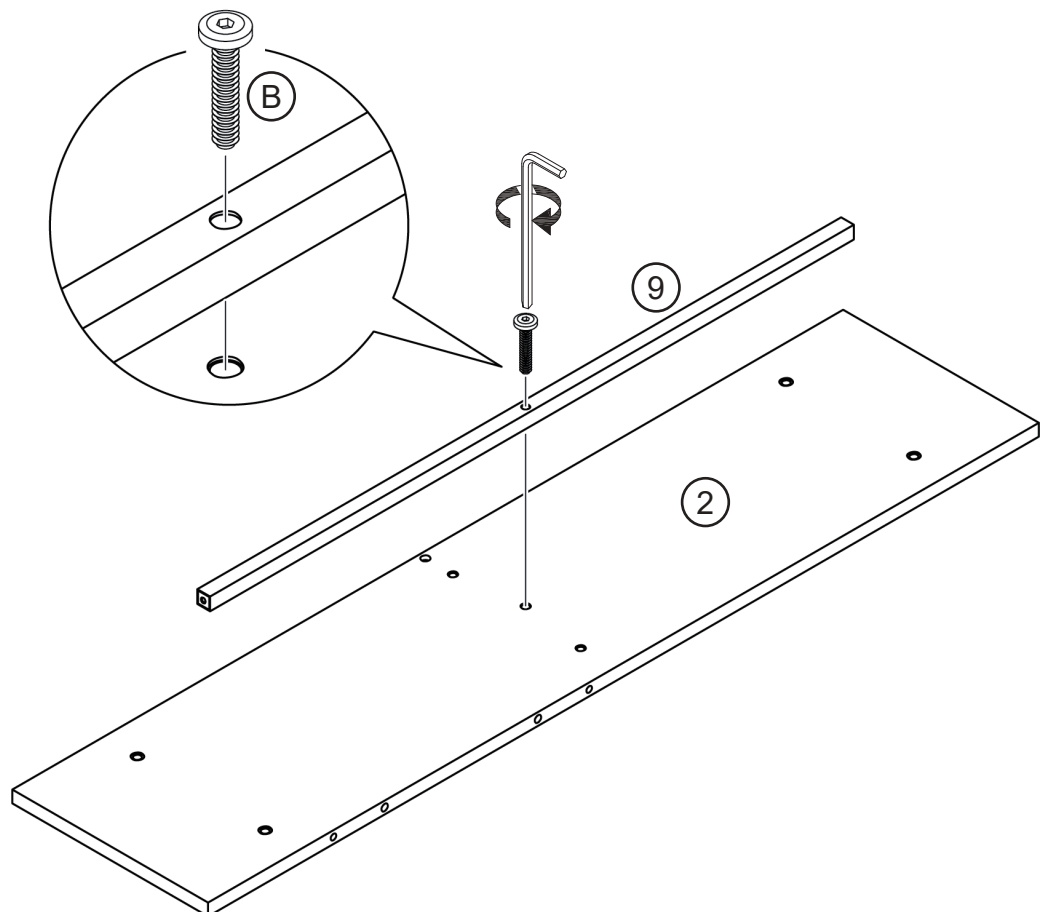



# 2

  Insert wood dowels to the medial panel (3).

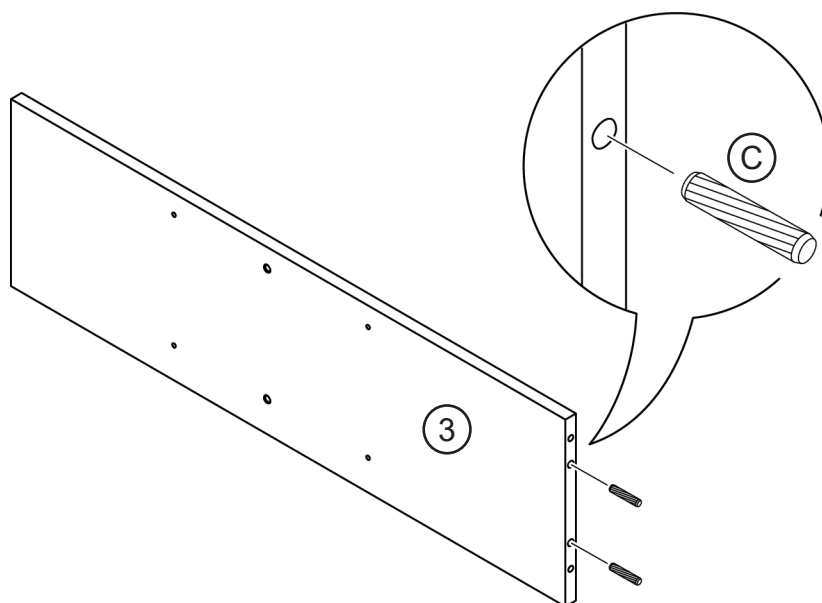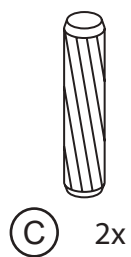


# 3

  Assemble medial panel (3) to the bottom panel (2).

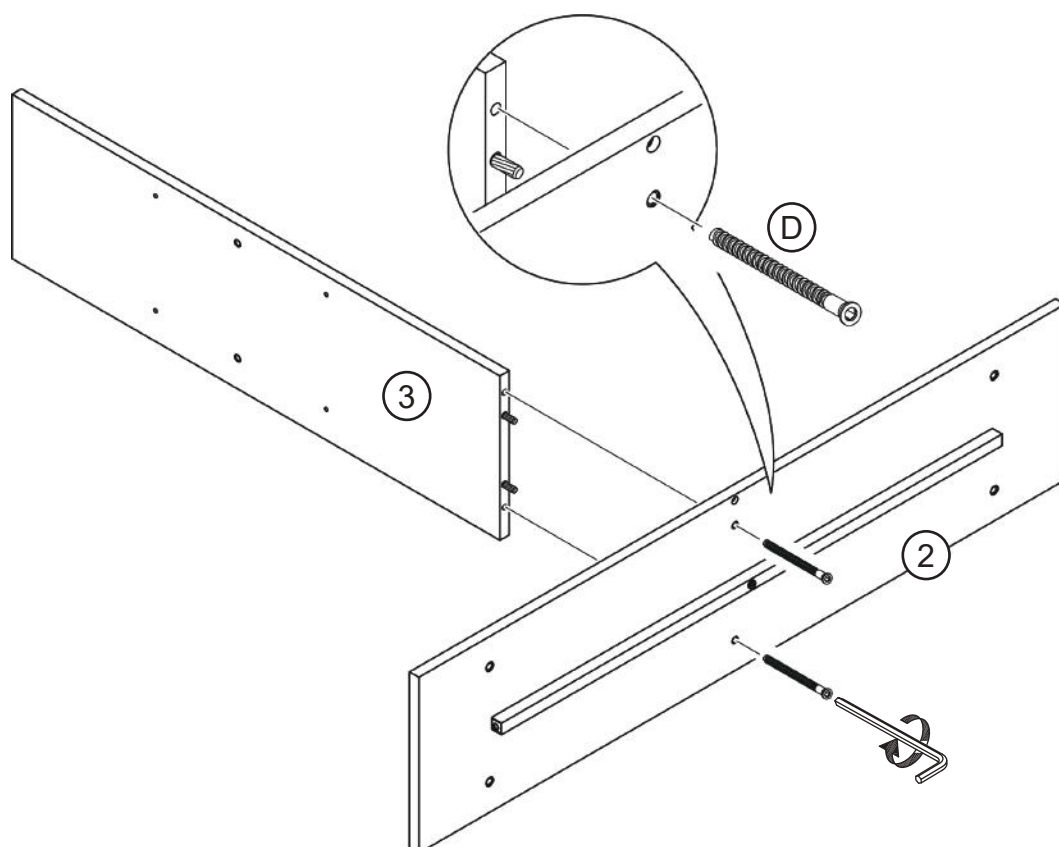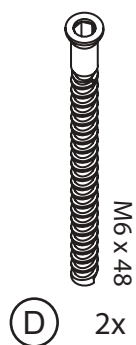




# 4

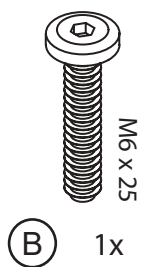 

 
Assemble support bar (8) to the bottom panel (2).

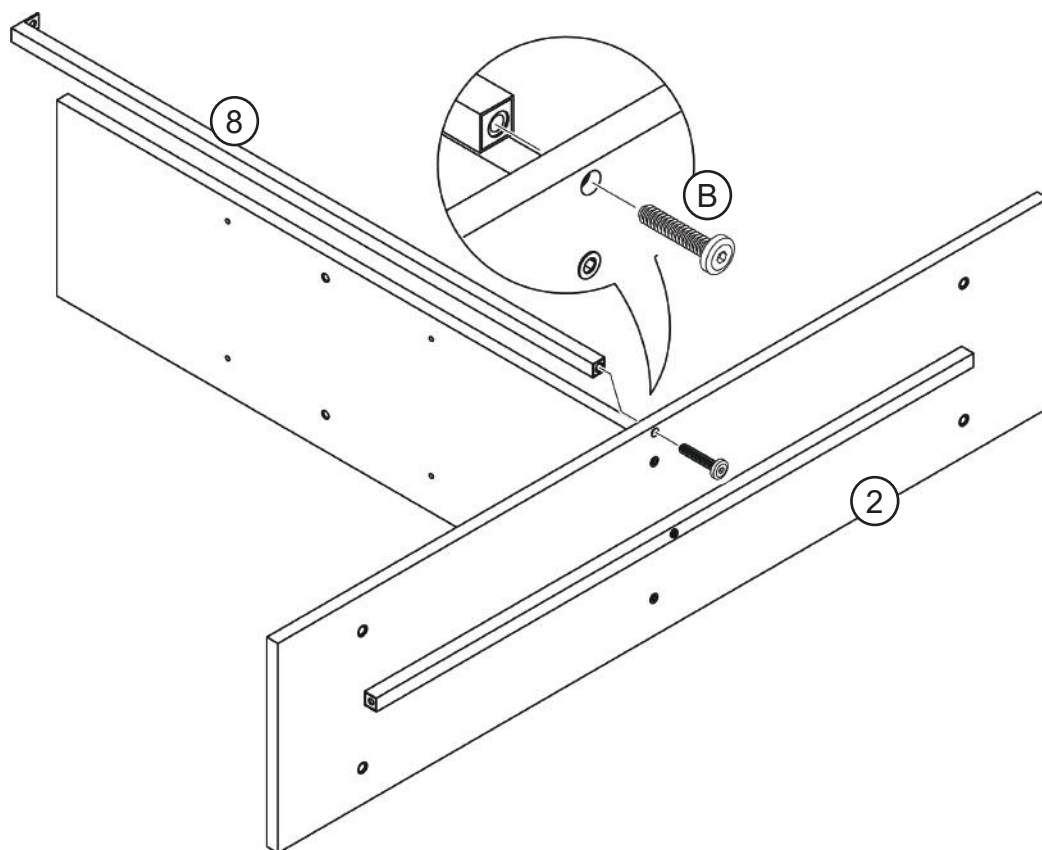

# 5





 Insert wood dowels to the right shelf panel (4).

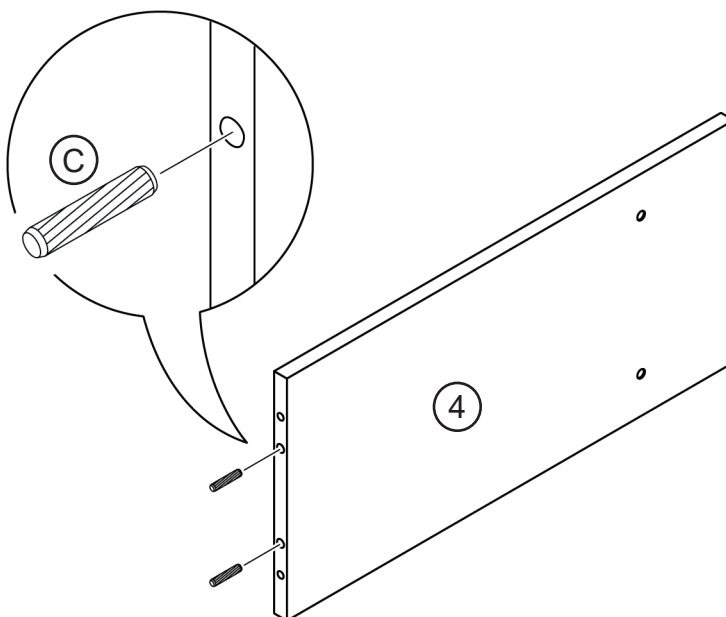


# 6

  Assemble the right shelf panel (4) to the medial panel (3).

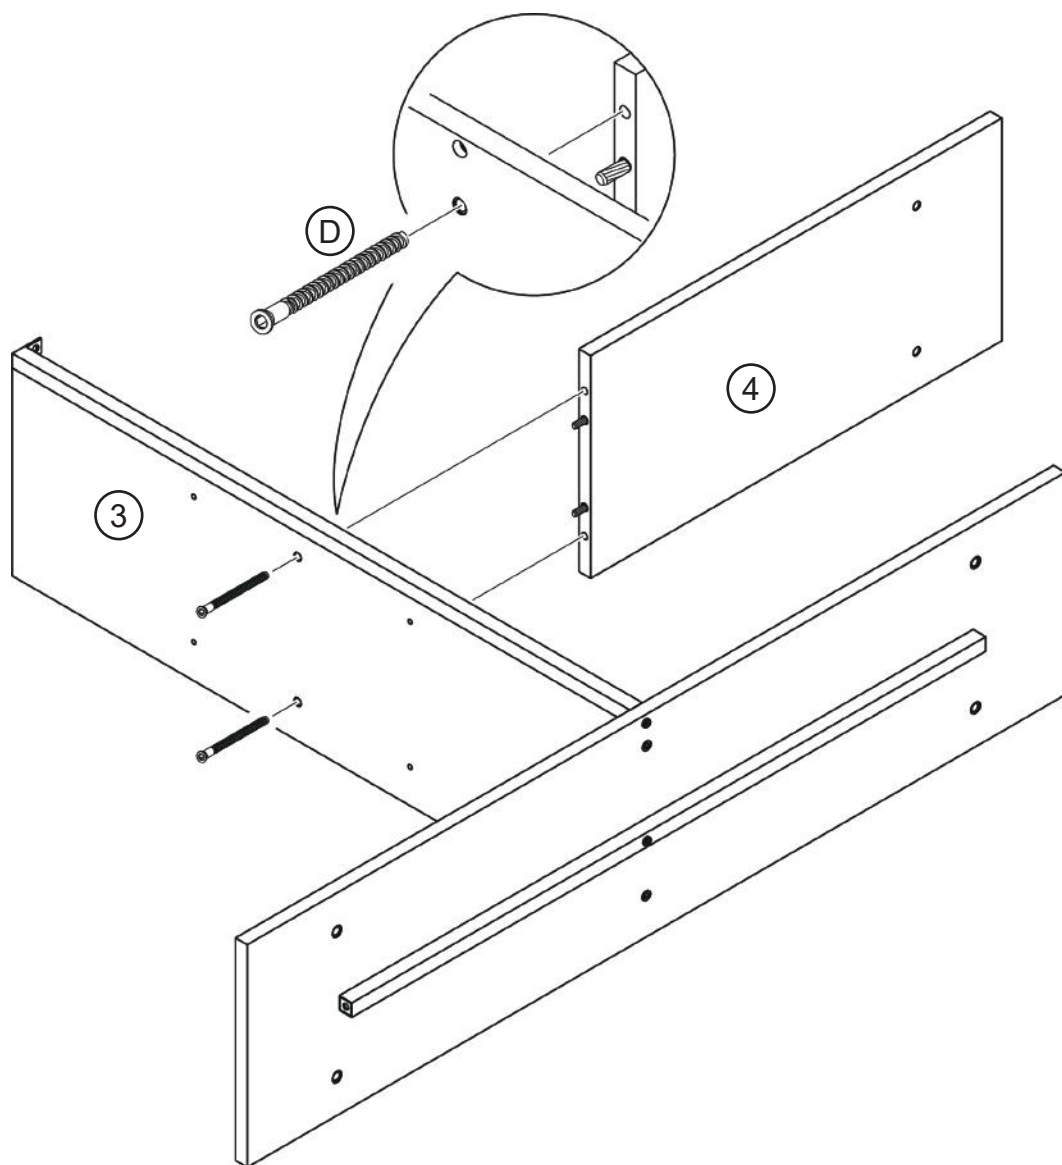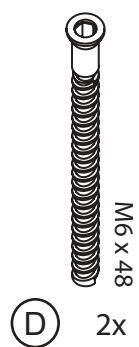



# 7

 Attach wood dowels to the top panel (1).

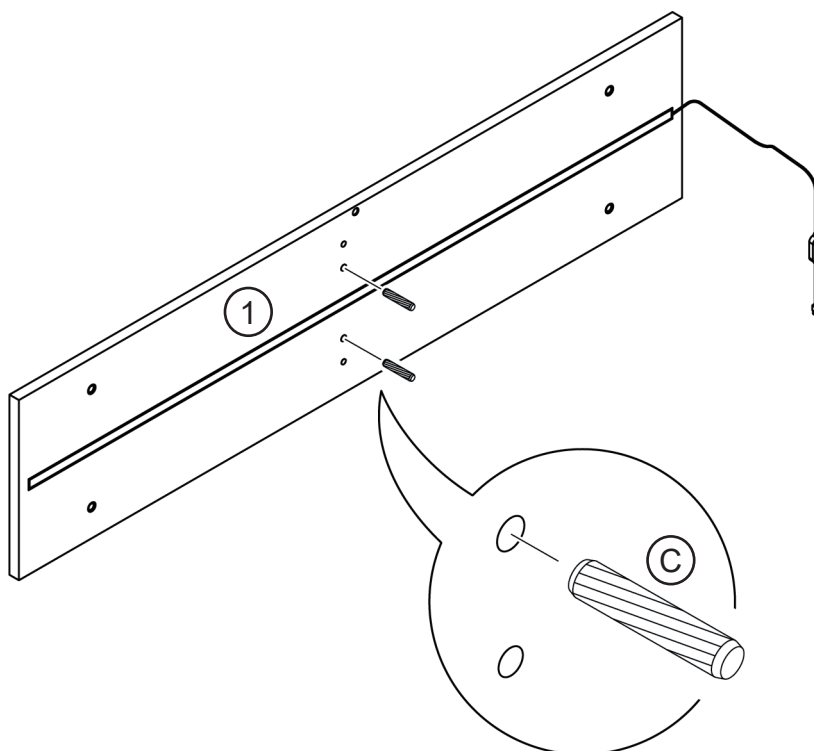



# 8

  Assemble top panel (1) to the medial panel (3).

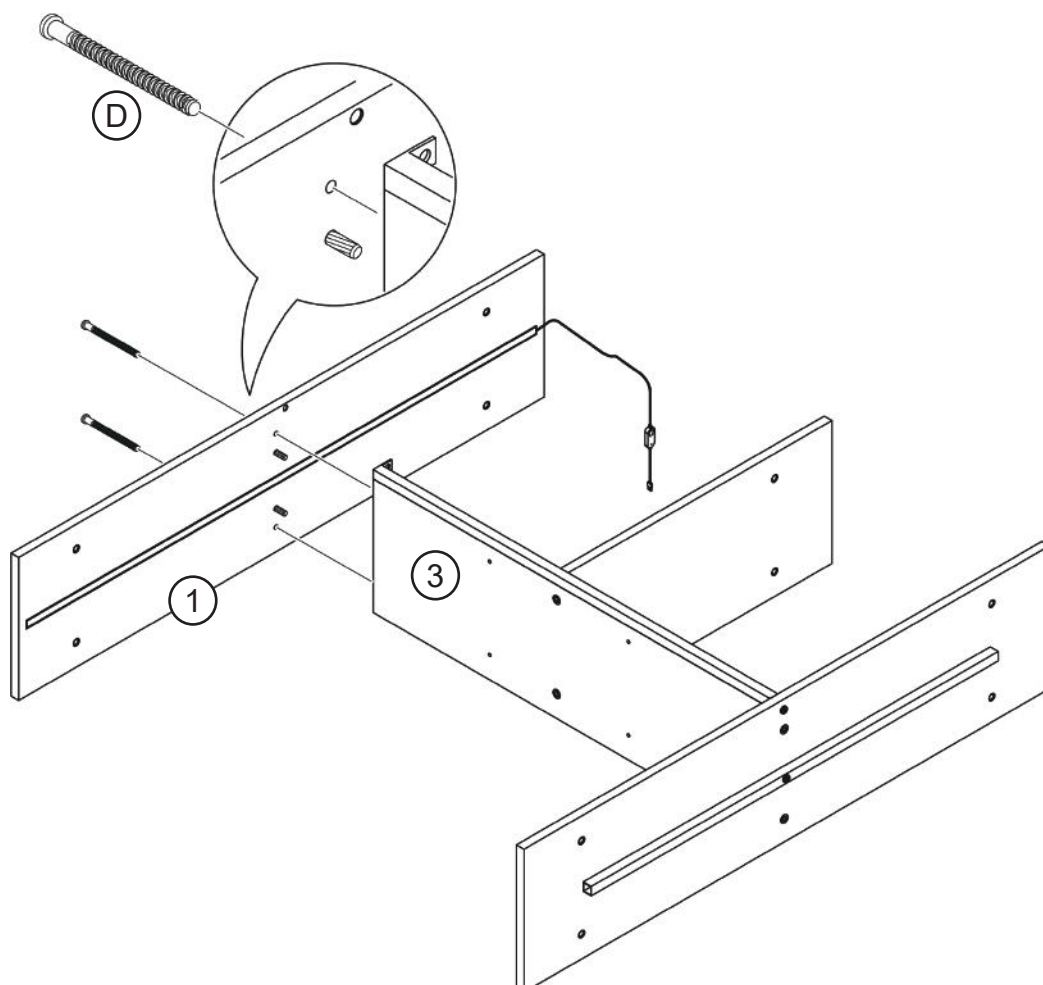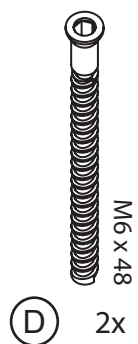


# 9

  secure the support bar (8) to the top panel (1).

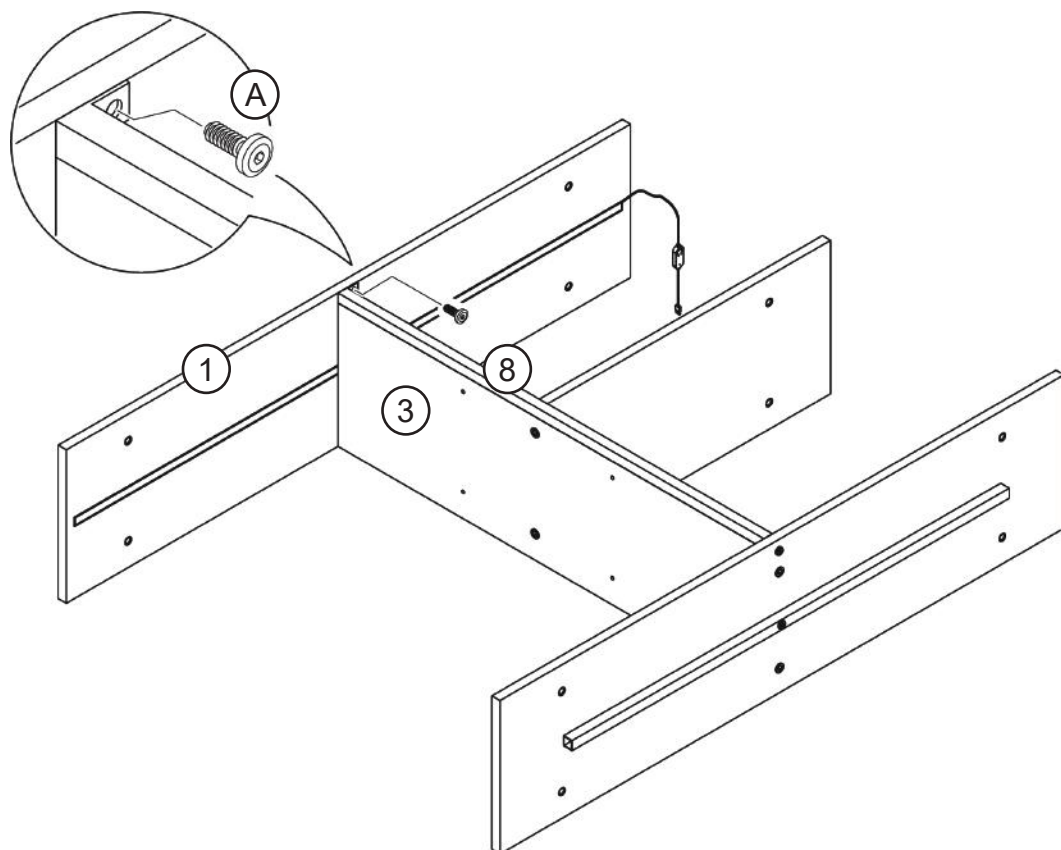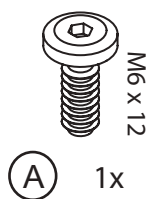



# 10

 Slide the left frame (6) to the left side of the rack.

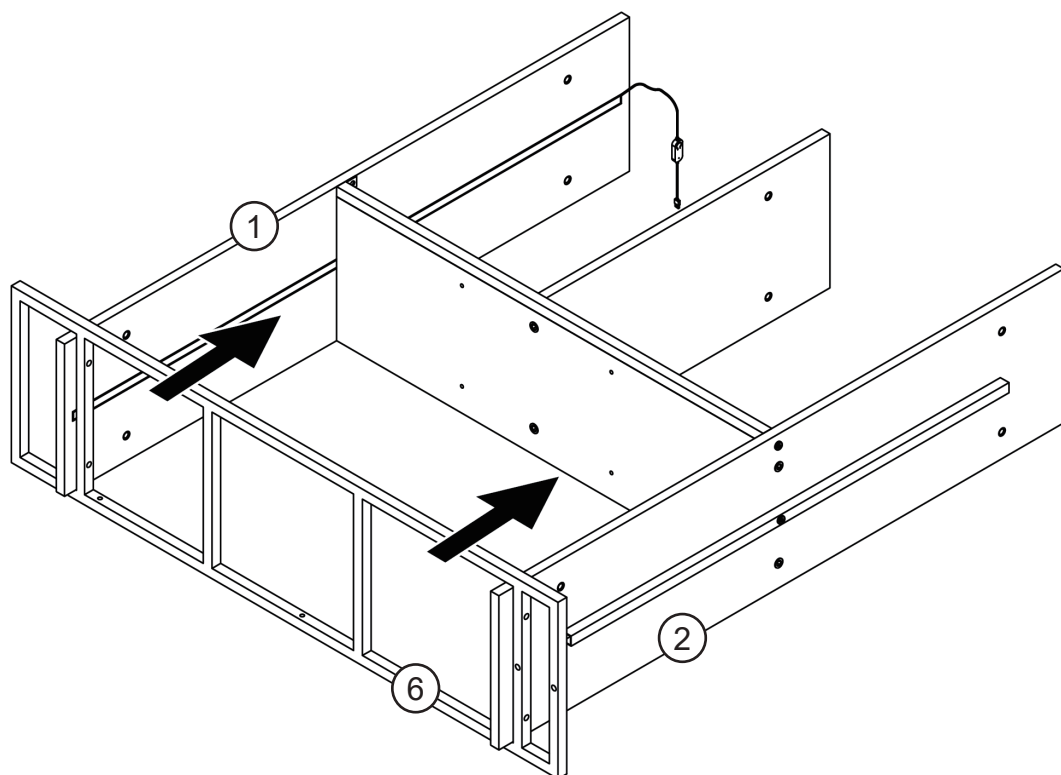



# 11

  Secure the left frame (6) to the top panel and bottom panel.

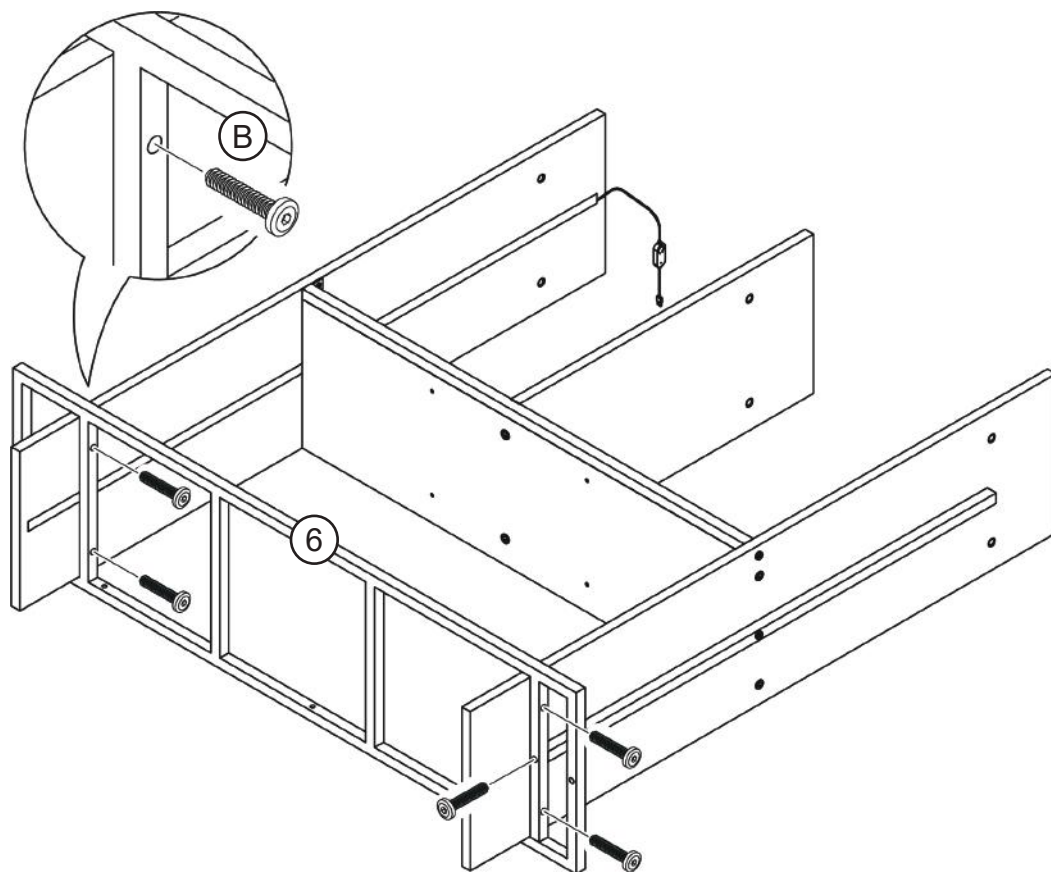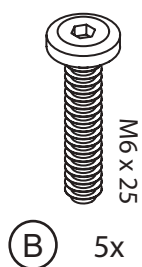


# 12

  Attach the hanging rod (10) to the left frame.

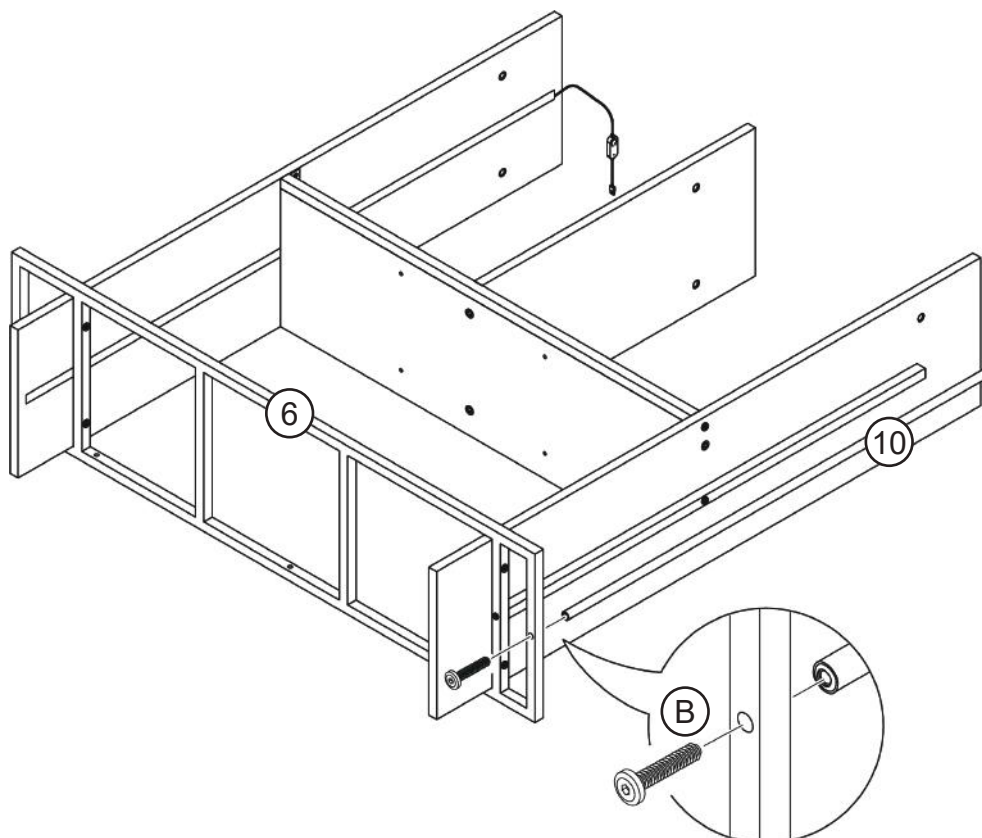
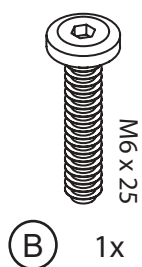


# 13

 
Slide and attach the right frame (7) to the rack assembly.

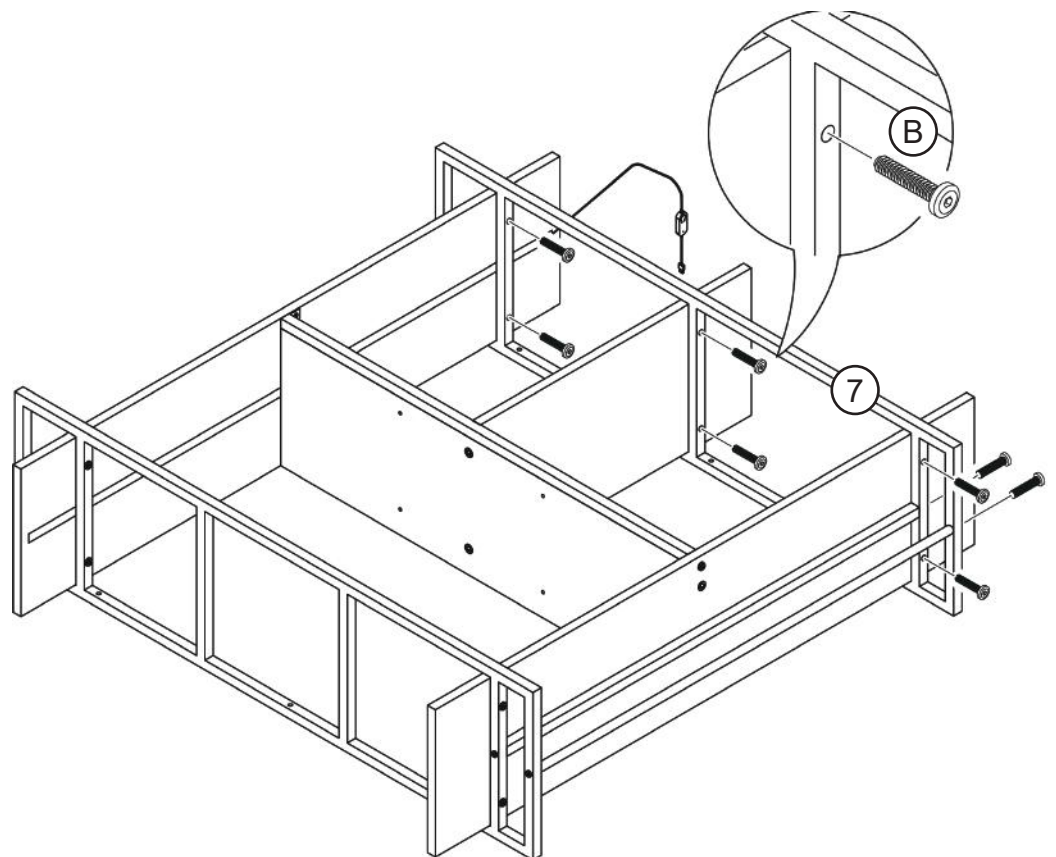

  Flip the rack around, and place it front side down. Then insert wood dowels to the back of the rack.

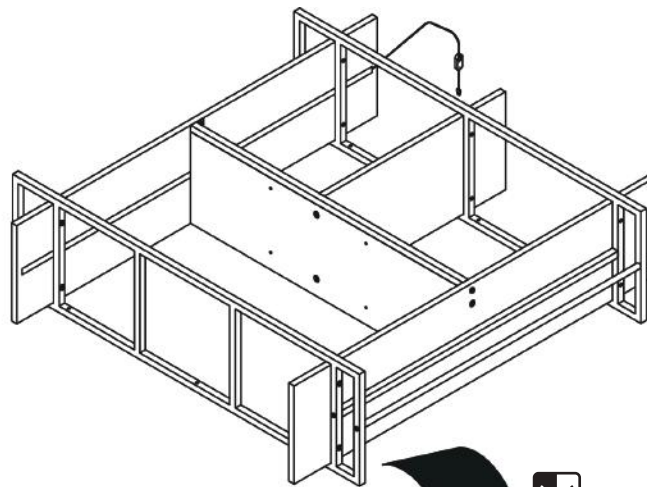
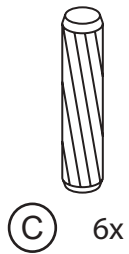


Flip

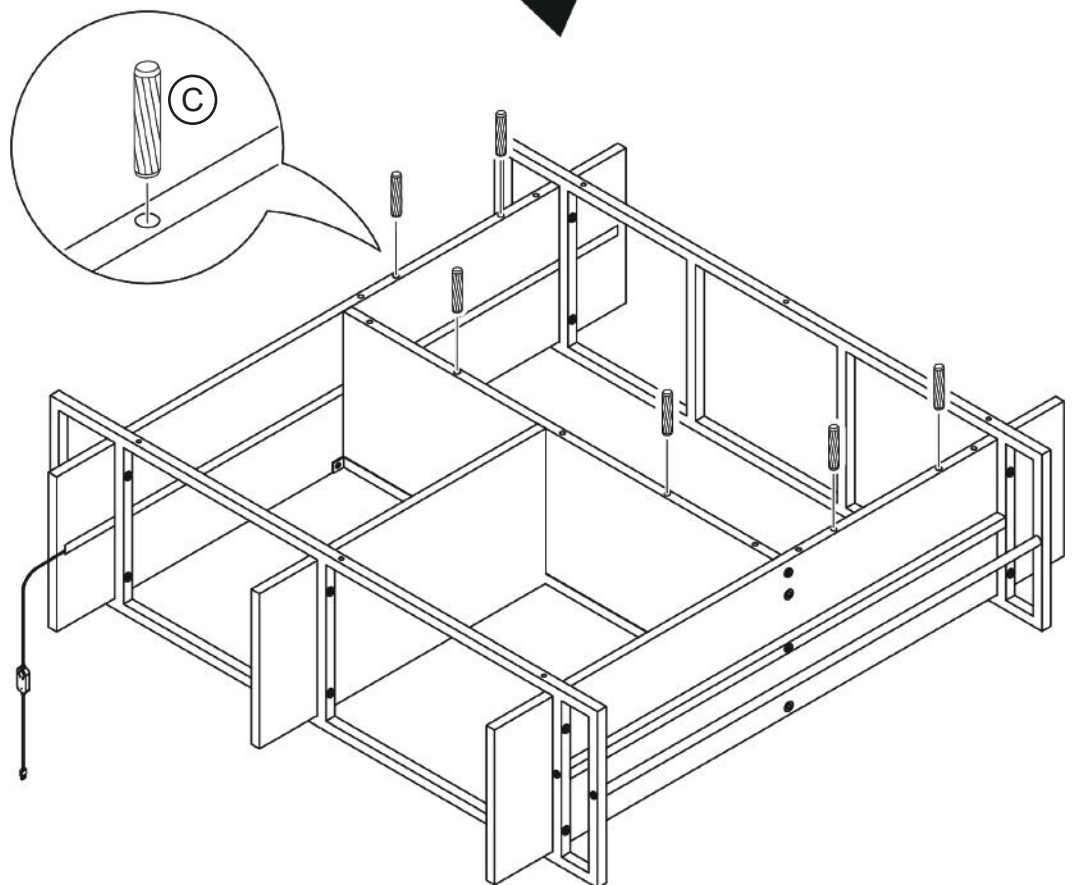 






  Attach the back panel (5) to the back of the rack.

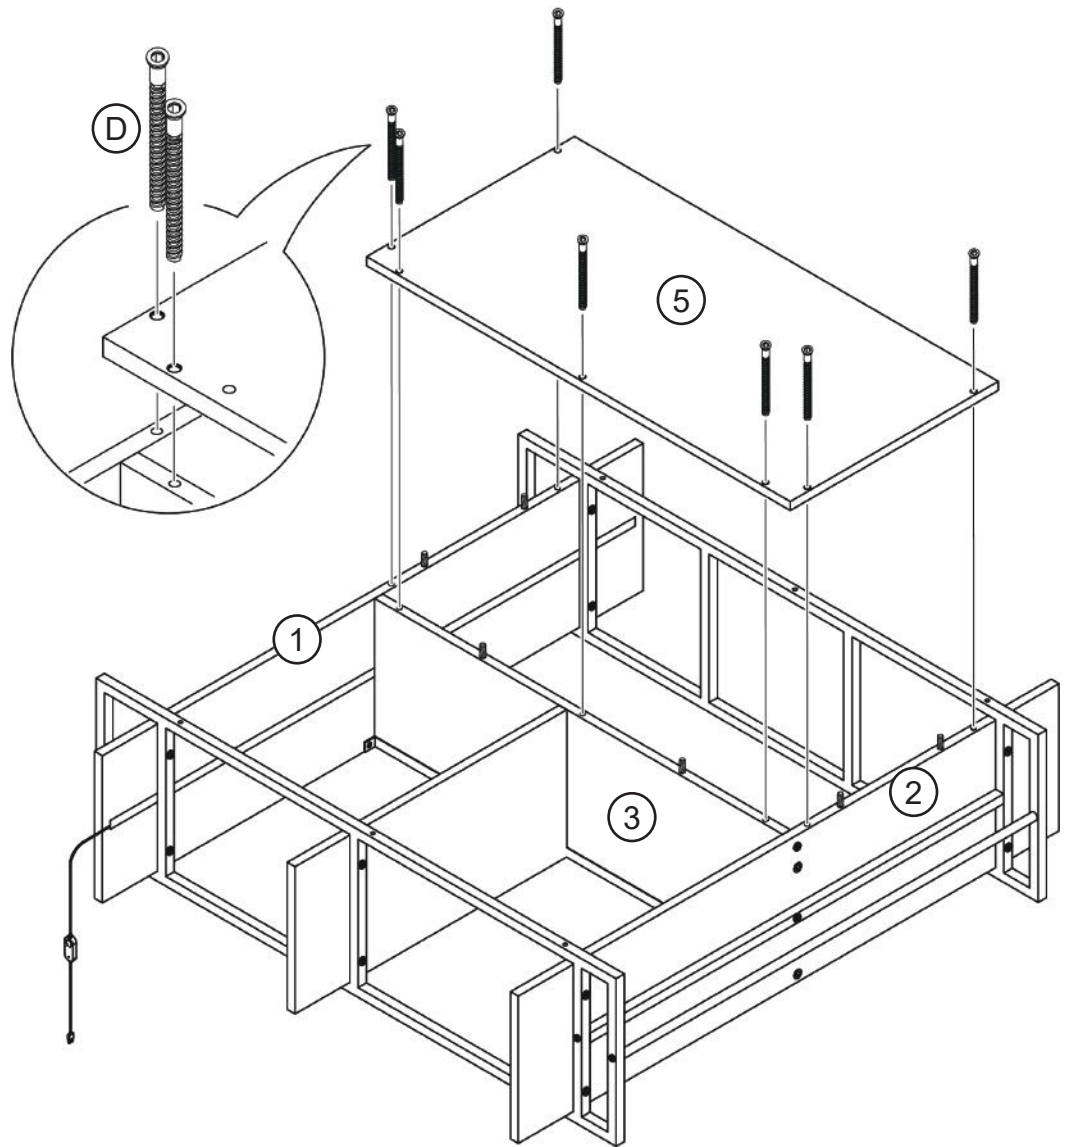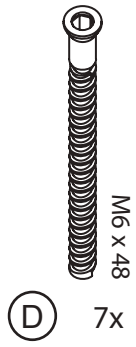



   
Attach glass shelf supports to the rack.

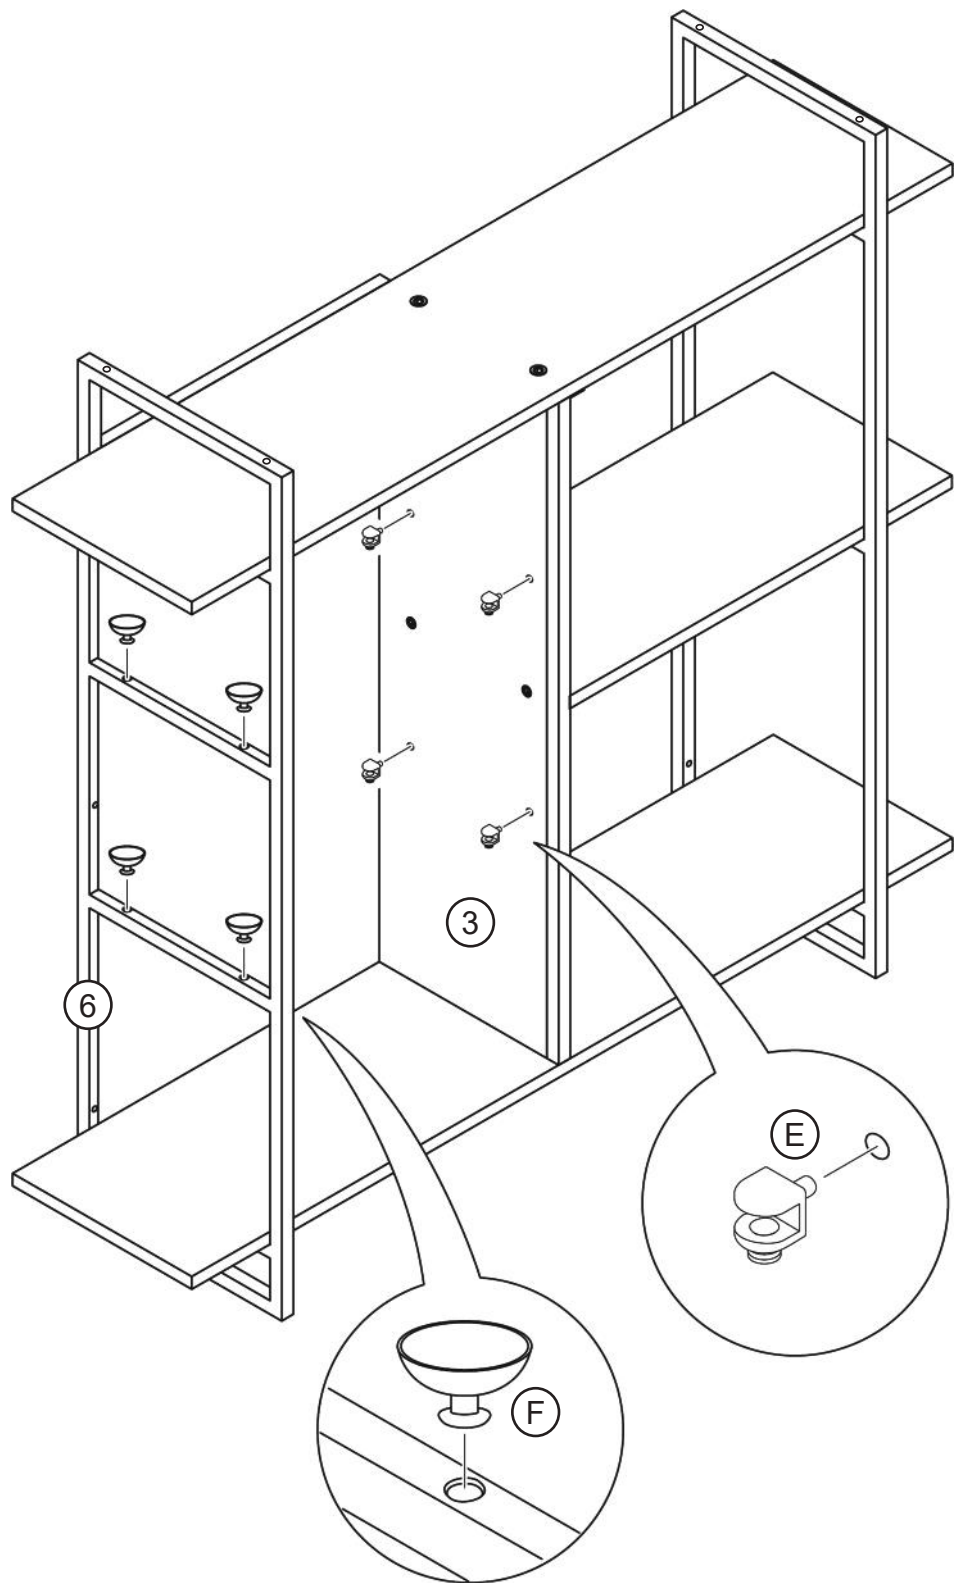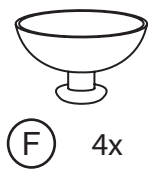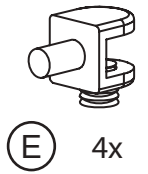

# 17


Mark the drill hole positions on the wall using the rack as a template. Make sure the rack is leveled.

 Drilling and mounting to the wall is recommended with the assistance of 3 people.


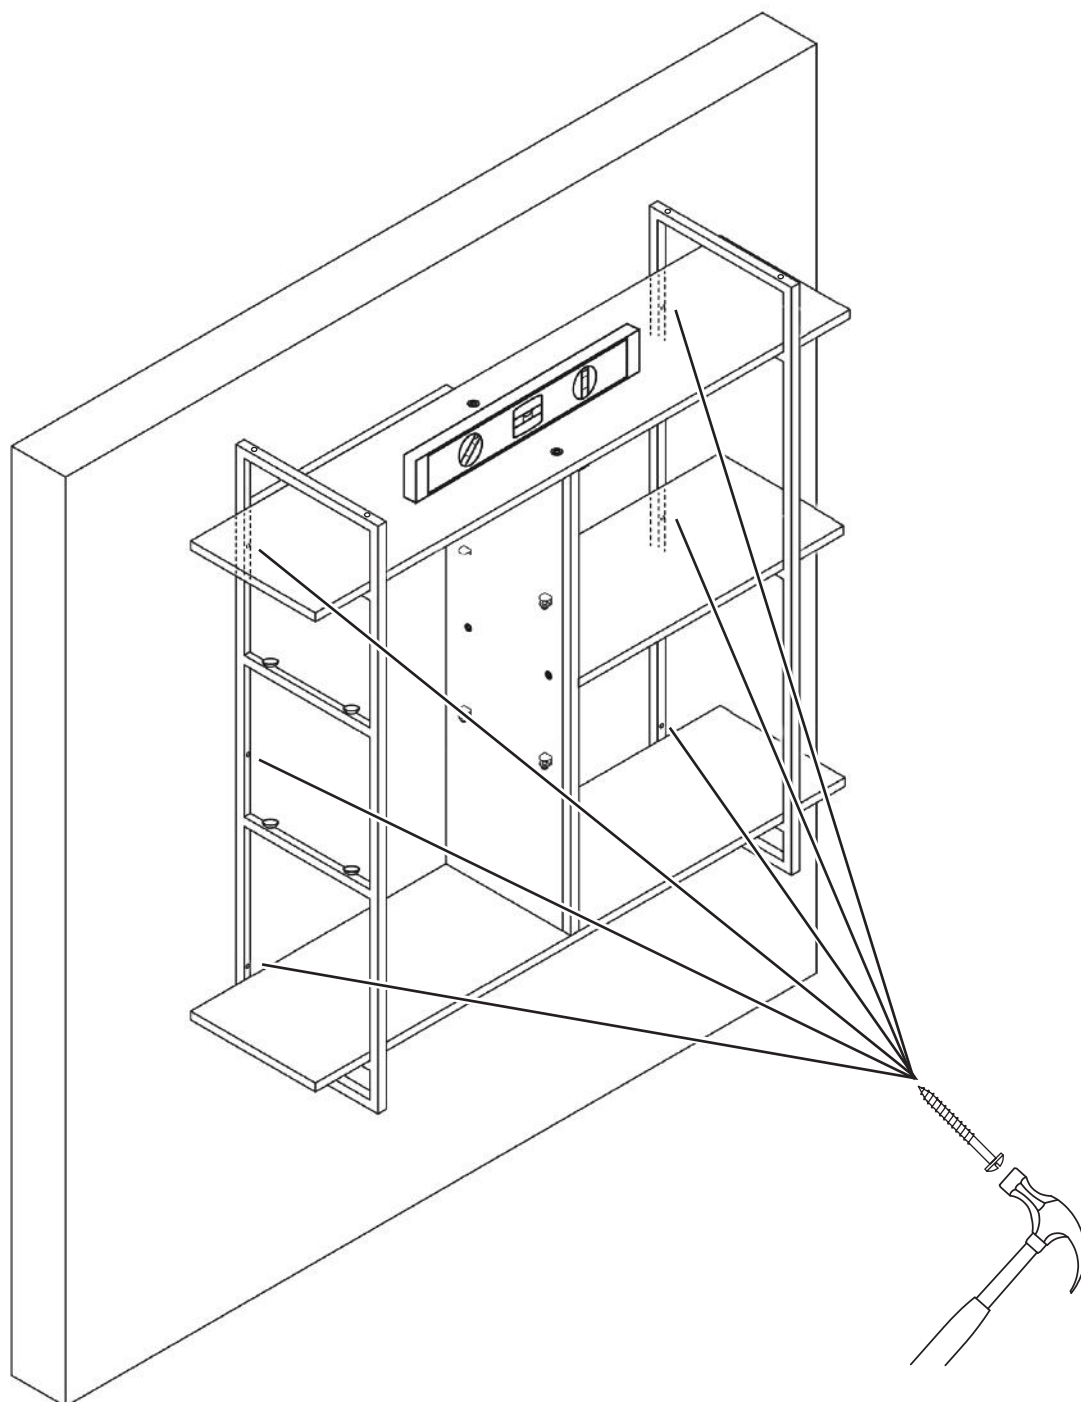


Note: Before marking the pilot holes, refer to step 18.

 
Different wall materials requires different types of wall anchors or screws.  
Use a suitable wall anchors or screws for your specific wall in order to secure the stability and load bearing capacity of the furniture.

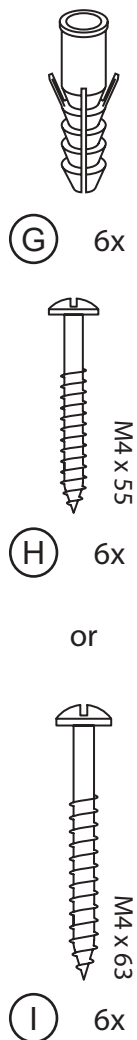



## Mounting on wood stud wall

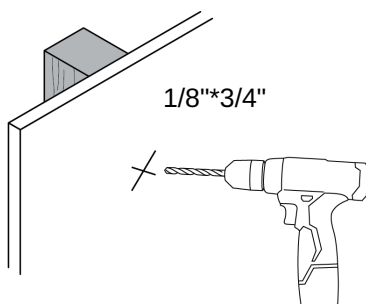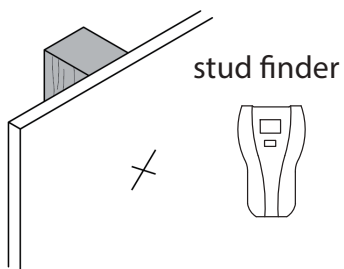  


 
A drill with a diameter of 3mm is recommended, at marked locations, drill (40mm) deep.

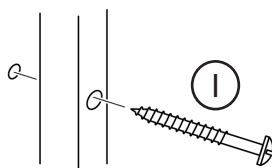


## Mounting on concrete wall

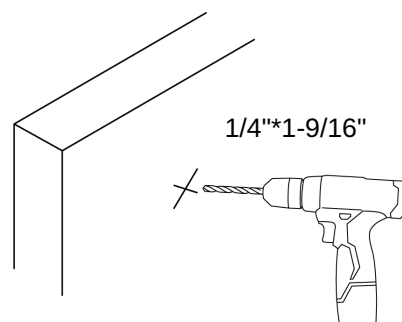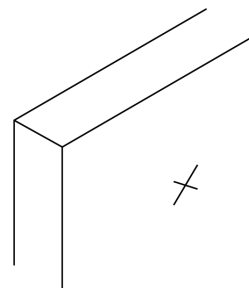  

  
A drill with a diameter of 6mm is recommended, at marked locations, drill (40mm) deep.

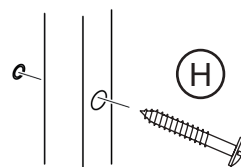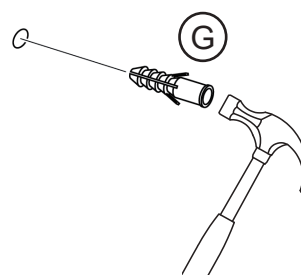

 Place glass shelves (12) onto the shelf supports.

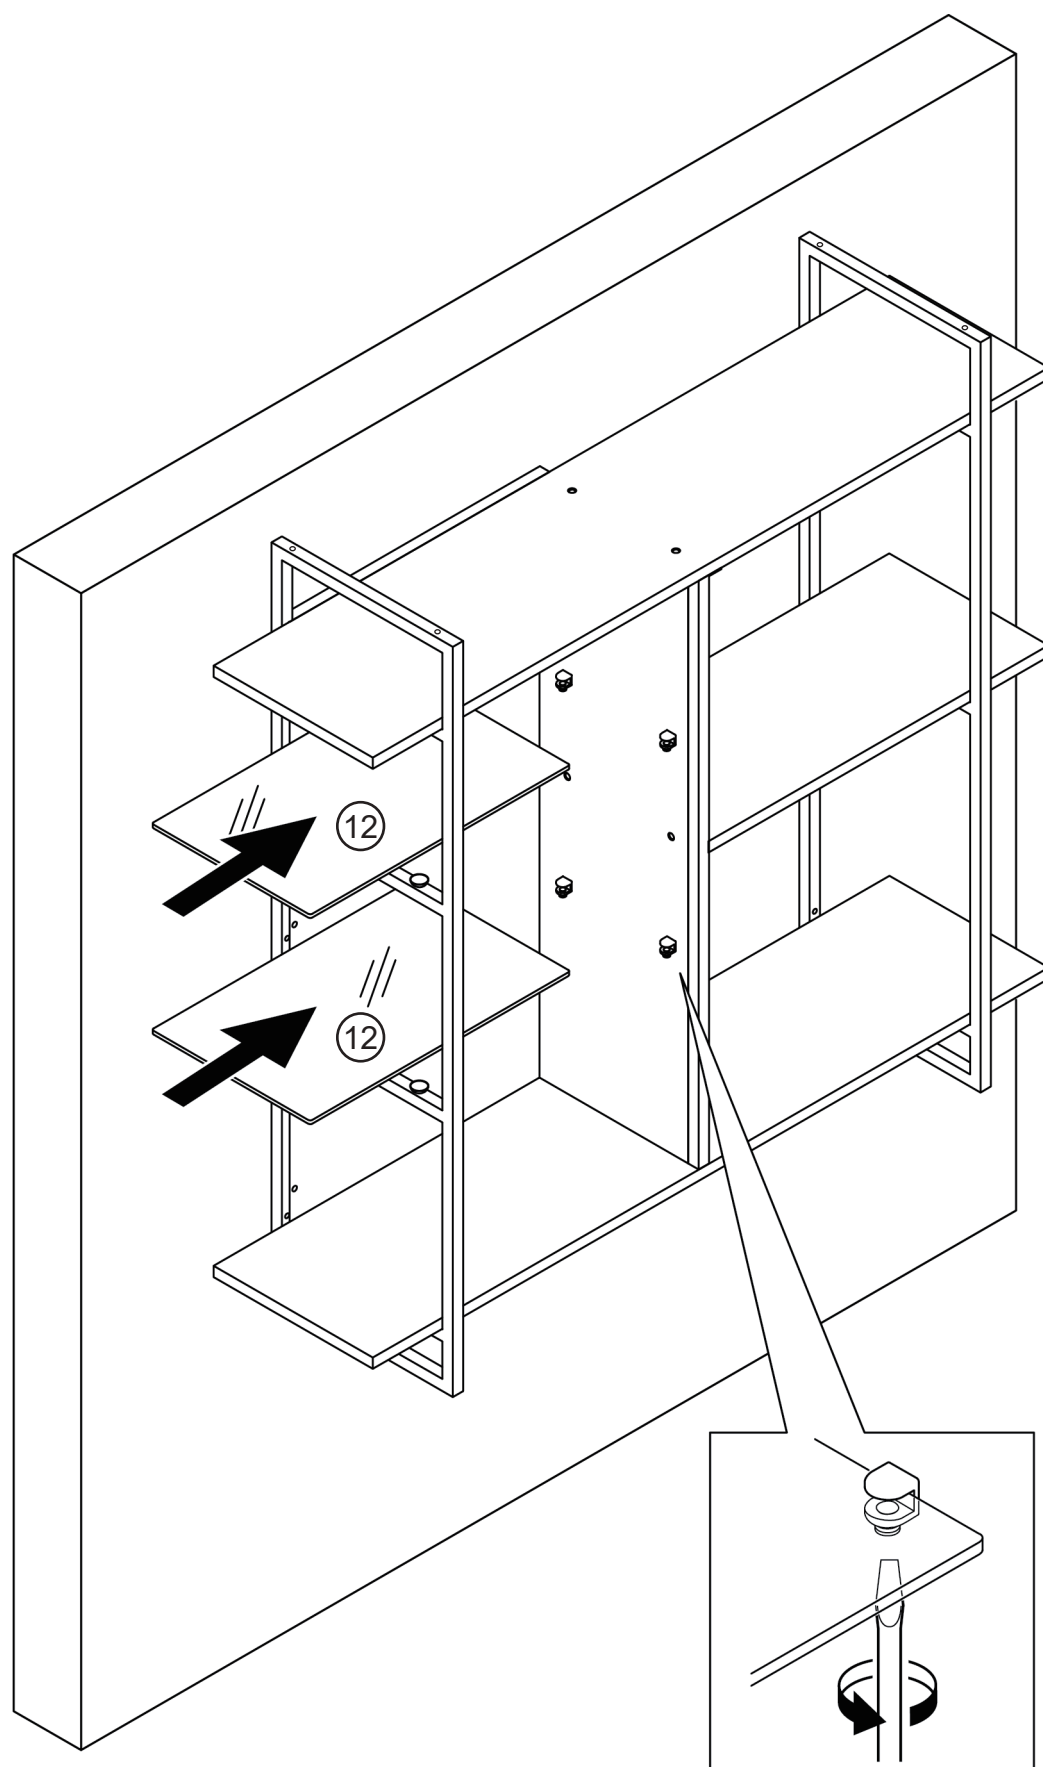

 
Hang S-hooks (11) onto the hanging rod, organize the LED light cable to the rack with the cable management clips, then plug the LED cable to power adapter and power outlet.

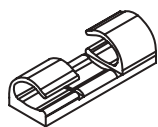


(M) 3x





 
(N) 3x

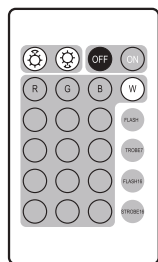

 (K) 1x

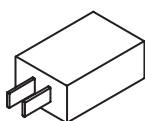

   
(L) 1x

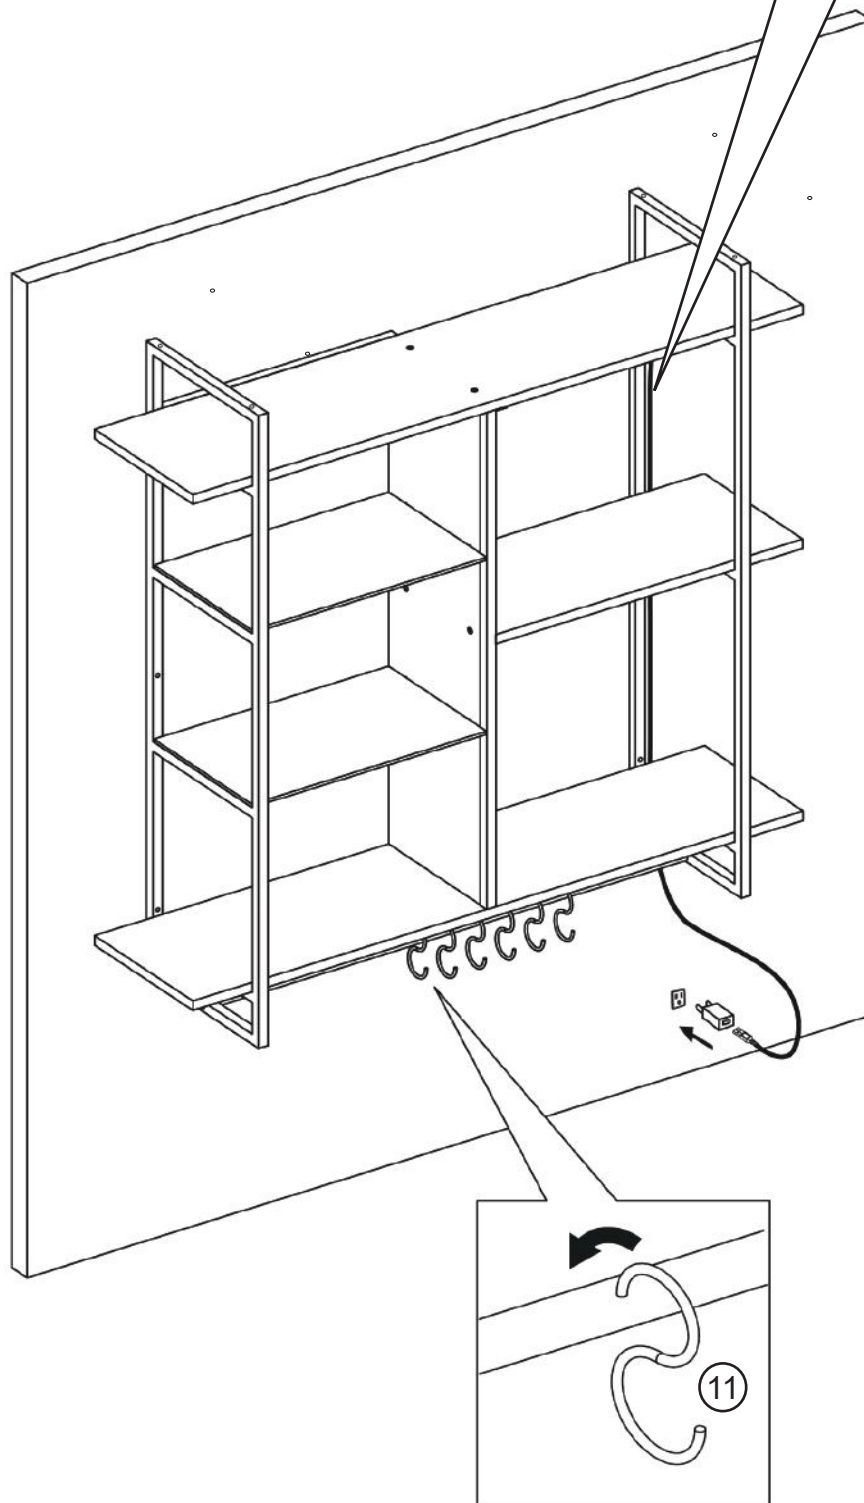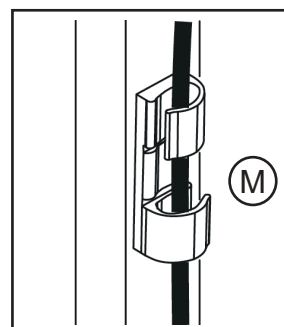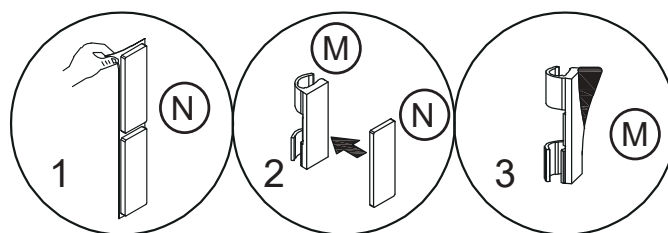


**YOU'RE FINISHED!**

## READ ALL INSTRUCTION BEFORE USE

 1. Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
2. Even used batteries may cause severe injury or death.
3. Call a local poison control center for treatment information.
4. Battery type: Button cell(CR2025).
5. Nominal battery voltage: (5-24)V.
6. Non-rechargeable batteries are not to be recharged.
7. Do not force discharge, recharge, disassemble, heat above 60 °C or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
8. Ensure the batteries are installed correctly according to polarity (+ and -).
9. Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
10. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.
11. Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.

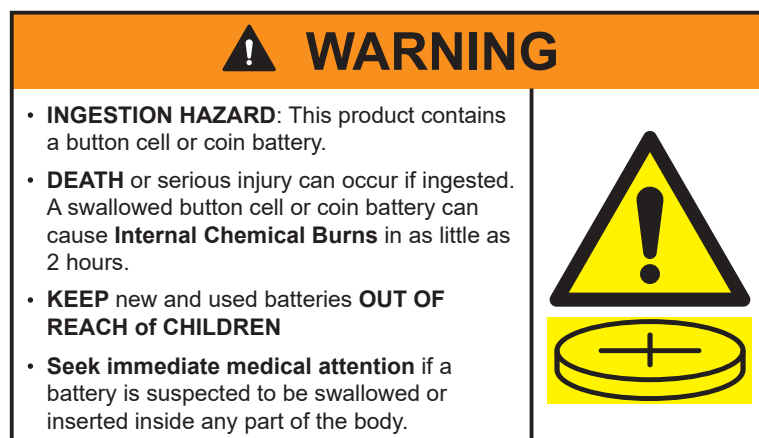

# USER INSTRUCTION (REMOTE CONTROL)

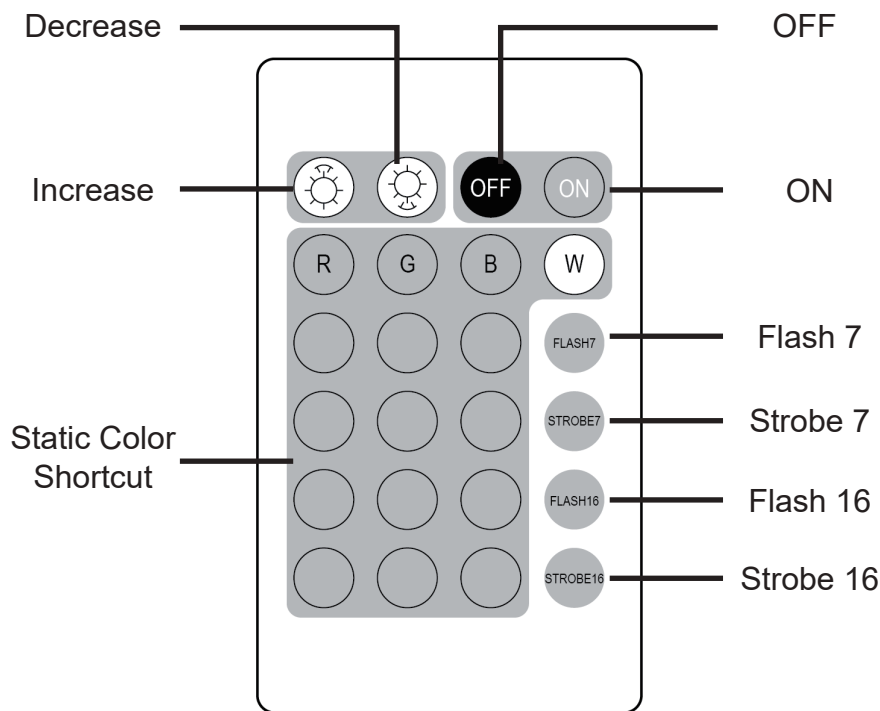 

## ON

Press the ON button to turn on the light.

## OFF

Press the OFF button to turn off the light.

## Static Color Shortcut

Each button is assign to a color, press the button to select your desire color.

## Increase

Press the increase button to increase brightness in static color mode.  
Press the increase button to increase effect speed in light effect mode.

## Decrease

Press the decrease button to decrease brightness in static color mode.  
Press the decrease button to decrease effect speed in light effect mode.

## Flash 7

Press the button to enable spectrum cycle mode.  
The colors will cycle between red, green, blue, orange, cyan, violet, and white.

## Strobe 7

Press the button to enable color breathing mode.  
The colors will cycle between red, green, blue, orange, cyan, violet, and white.

 
## Flash 16

Press the button to enable spectrum cycle mode.  
The colors will cycle between all 16 colors.

## Strobe 16

Press the button to enable color breathing mode.  
The colors will cycle between all 16 colors.

Different wall materials requires different types of wall anchors or screws. Use a suitable wall anchors or screws for your specific wall in order to secure the stability and load bearing capacity of the furniture. If you are uncertain about which type of device to use, please contact us or your local hardware store.

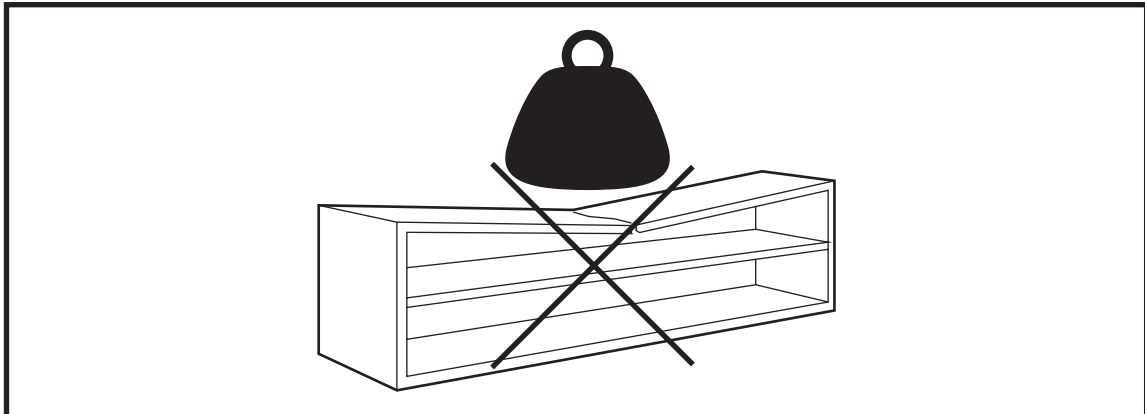

## **Warning**

Only place items on top of the product if they meet the recommended size and weight limits.

Climbing on, stepping on, or placing overweighted objects on the product may cause property damage and/or injuries.

Items placed onto this product must be resting on a support surface without hanging over the edges.



## FURNITURE CARE AND MAINTENANCE

### Medium - Density Fiberboard

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of longevity, please follow the recommendations in this care and maintenance guide.



#### MAINTENANCE

- Tighten all bolts and screws again within the first 2 weeks of assembly.
- Check the tightness of all bolts every 2 months and tighten them if necessary.



#### CLEANING

- Clean the surface of the MDF (medium - density fiberboard) with a lightly dampened cloth.
- A small amount of mild soap can be used if necessary.
- Dry the surface immediately after cleaning.

⚠ DO NOT use bleach or alcohol to clean the surface.

⚠ DO NOT apply wood treatment on parts made with MDF.

MDF will swell and distort when exposed to water damage. Make sure to dry the furniture immediately after cleaning.

## ⚠ WARNING

The manufacturer and seller are not responsible for any and all liability relating to personal injury, property damage or losses, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification or neglect of this product.

Products come with a 1-year warranty from the date of delivery. **Register your product on our website to enjoy our limited lifetime warranty!**

## AFTER-SALE SERVICE



Encounter any difficulties or missing parts?



Contact us



We will send you replacement.



Hassle free!  
No need to worry about repackaging and sending your item back.