 


FARINI

Assembly Manual

Side Buffet Cabinet


ST016

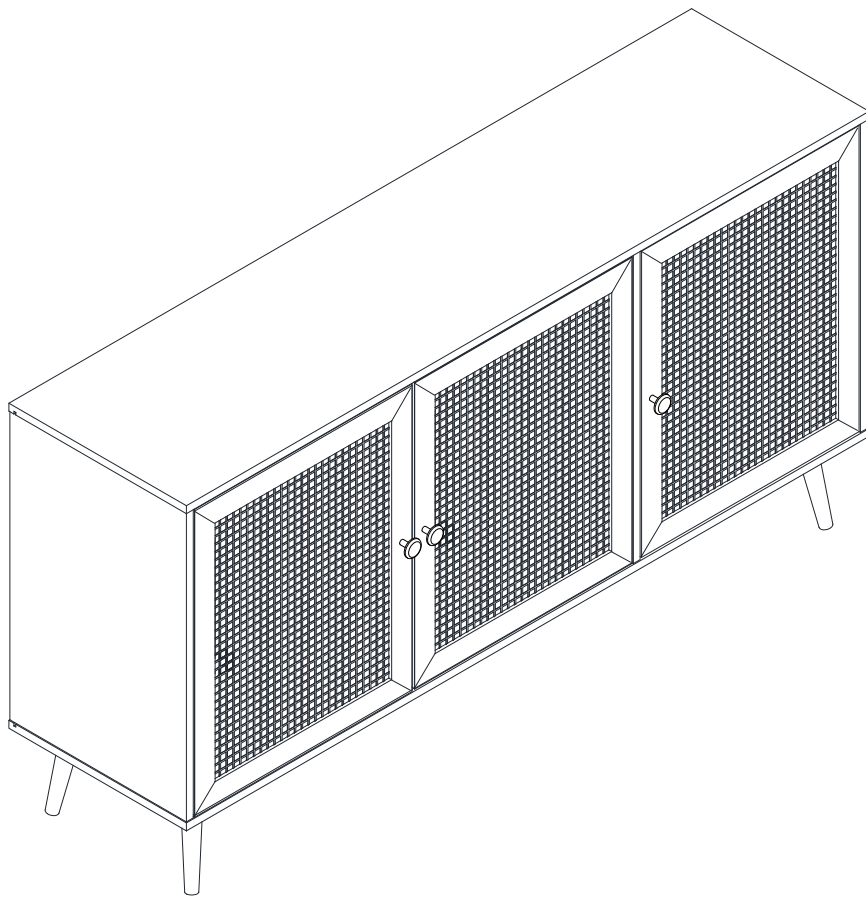

Please read this manual carefully before any operation and keep it properly for future use.

If any problems on our product, please feel free to contact us at [ecservice @isunon.com](mailto:ecservice@isunon.com).

 Exploded View

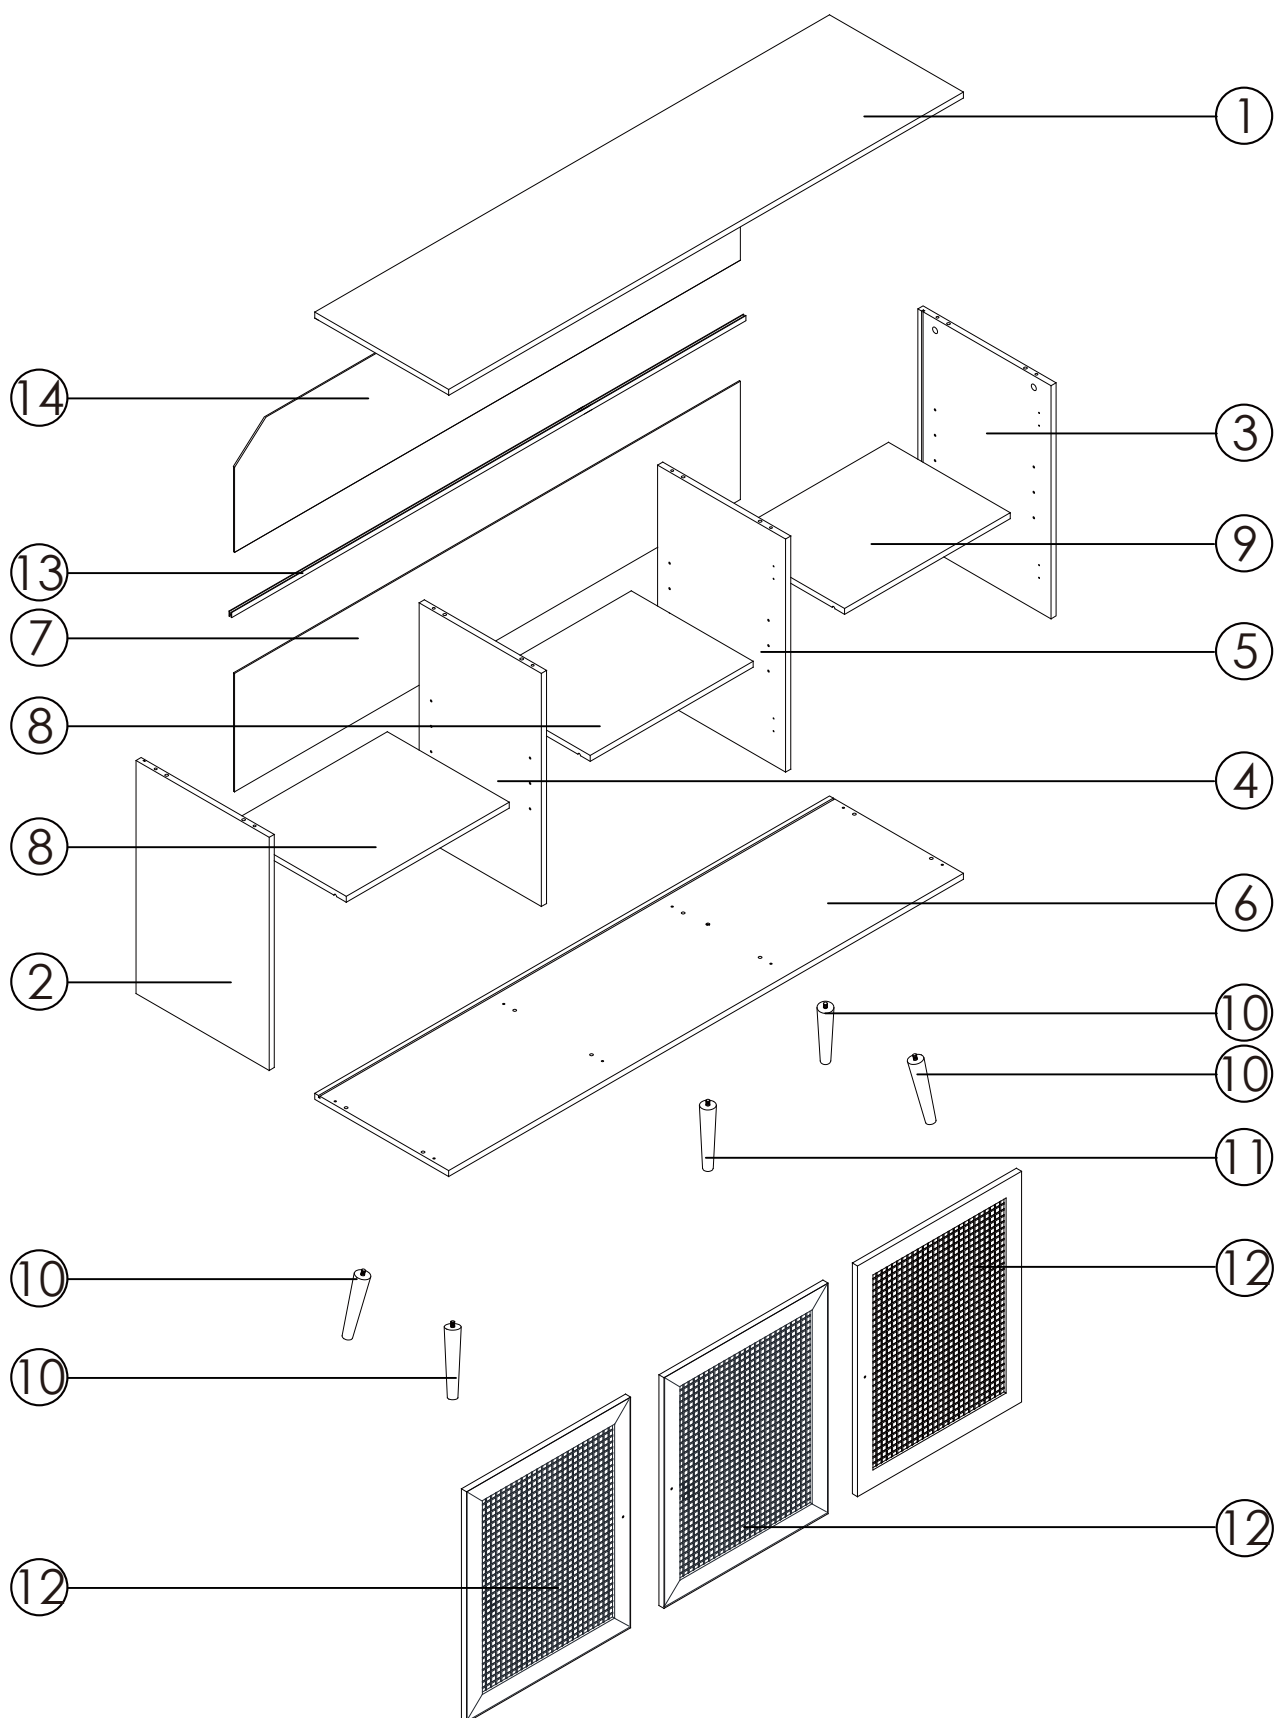


Components List

30 min


Assembly Time



 
One People

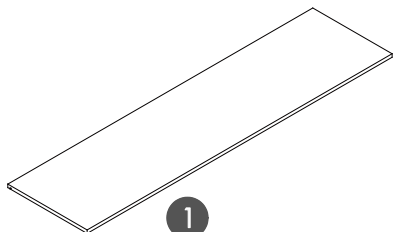


1
(X1)

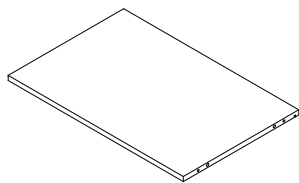 


2
(X1)

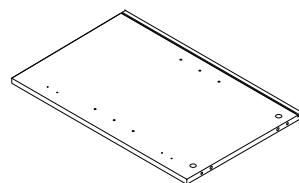 


3
(X1)

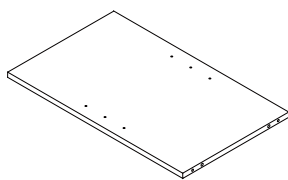 


4
(X1)

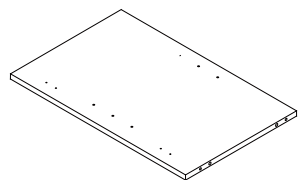 


5
(X1)

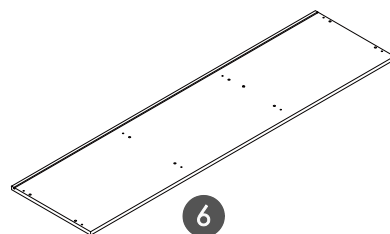 


6
(X1)

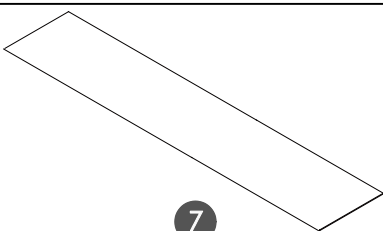 

7
(X1)

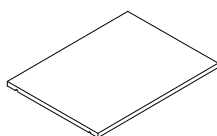 

8
(X2)

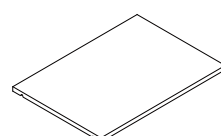 


9
(X1)




10
(X4)



 
11
(X1)

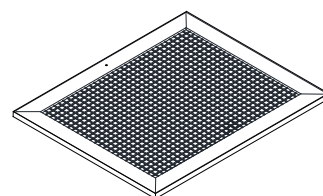

12
(X3)










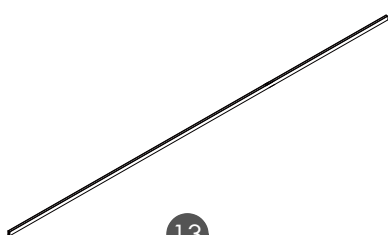 


13
(X1)

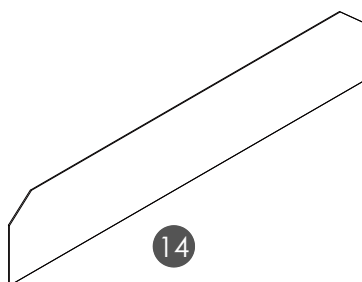 

14
(X1)

          Components list

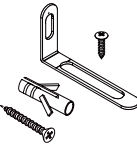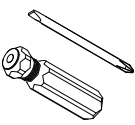A			B			C		
								
Wooden dowel	M8x30	16+2	Cam lock pin	M7x37	8+1	Klix cam	M15x12	8+1
D			E			F		
								
Screw	M5x40	8+1	Screw	M3.5x14	24+2	Screw	M4x14	20+2
G			H			I		
								
Metal plate		4	Door knob with screw	M4x19	3	Door Hinge		6
J			K			L		
								
Anti-tip kit	M4x14 M4x30	2	Stabilizer	M3x16	12+2	Board support		12+2
M			N			O		
								
Adjustable foot nail		1	Screwdriver		1	Bumper pad		1

 
Note:

- (1) The number after "+" sign indicates the extra piece(s).
- (2) How to use the 2-in-1 screwdriver with interchangeable Phillips and flat head bits:
 - (a) Insert the desired bit end (Phillips or flat head) into the handle and push firmly until it clicks into place. To remove the bit, push and hold the spring-loaded ring on the handle towards the base. This will release the bit from the handle.
 - (b) While still depressing the ring, pull the bit out of the handle. To replace with the opposite bit end, insert it into the handle until it clicks into the locking position. Make sure the bit is fully inserted before use.

Assembly Instruction

STEP 1

Insert cam lock pins(B) into the board(1) using screwdriver(N), attach anti-tip kits(J) to the board(1).

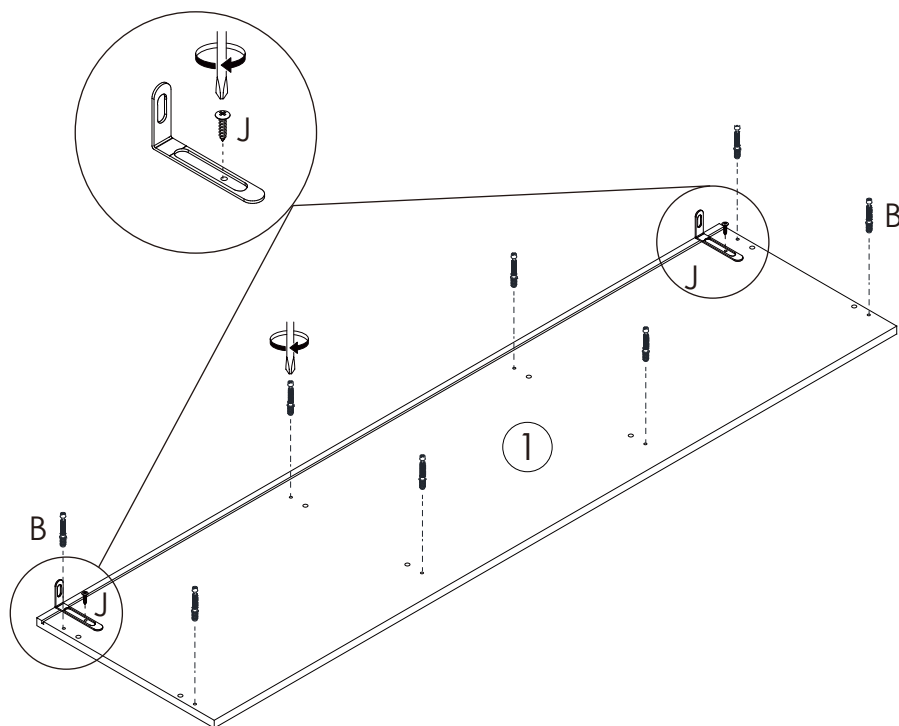

B*8



J*2



 
N*1



1*1

STEP 2

Insert the wooden dowels(A) and the klix cams(C) into the boards(2,3,4&5), then attach the boards(2,3,4&5) to the board(1), lock them tightly using screwdriver(N).

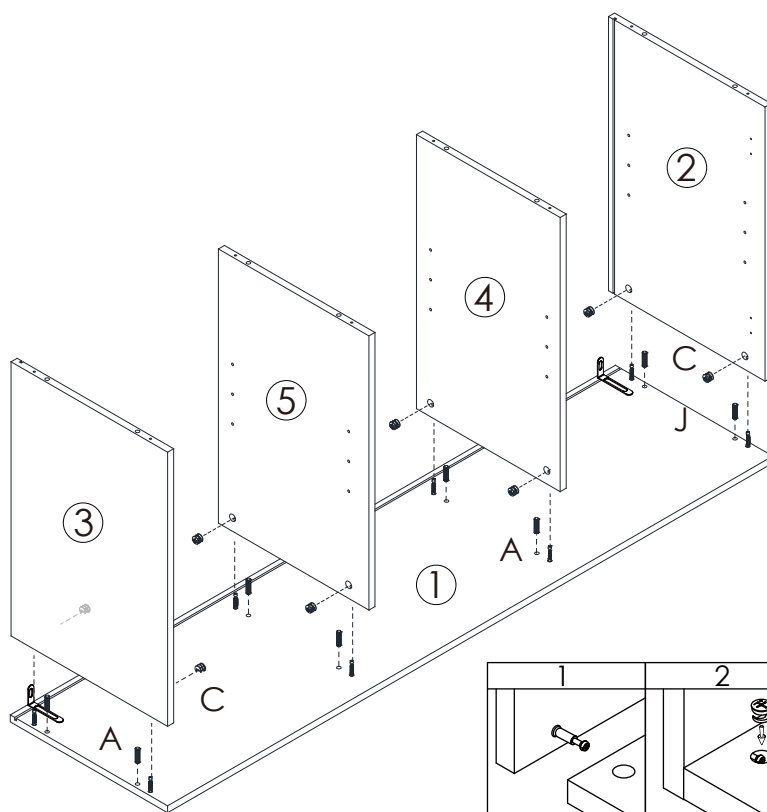

A*8



C*8



N*1



2*1



3*1



4*1

 


5*1

Assembly Instruction


STEP 3

Connect back boards(7&14) using plastic back board strip(13), and slide back boards into the slot of bottom and side board.

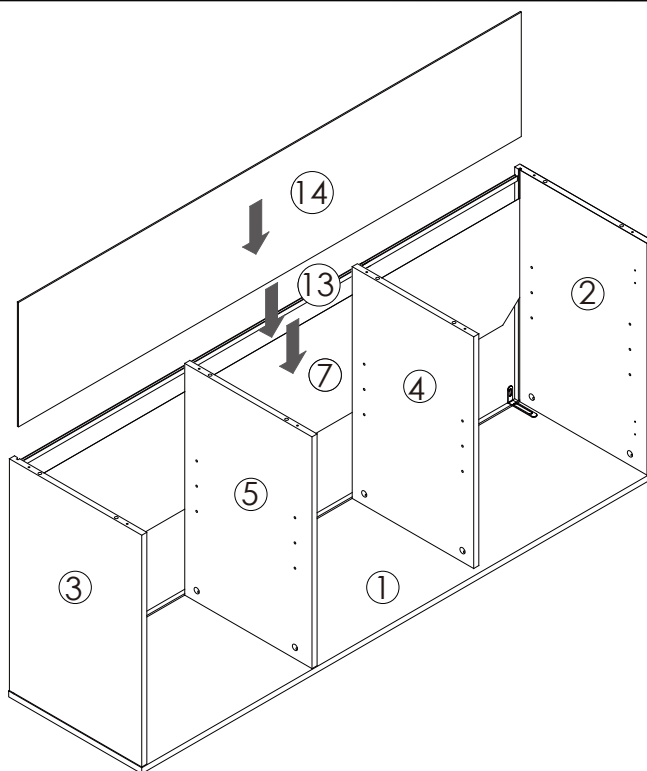

STEP 4

 
Insert the wooden dowels(A) into the boards(2,3,4&5), then attach the board(6)to the boards(2,3,4&5) using screws(D) and screwdriver(N).

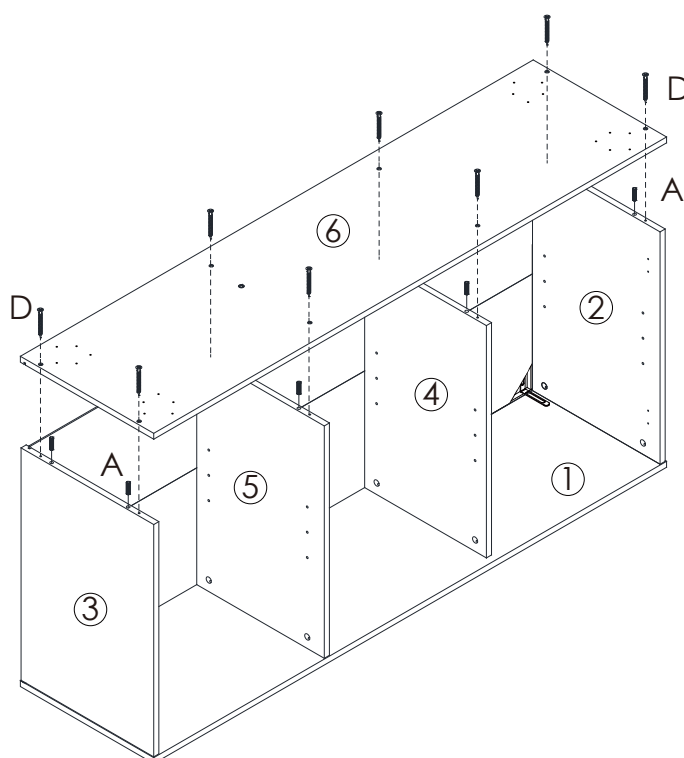

Assembly Instruction

STEP 5

 Attach metal plates(G) into bottom board(6) using screws(F) and screwdriver(N).

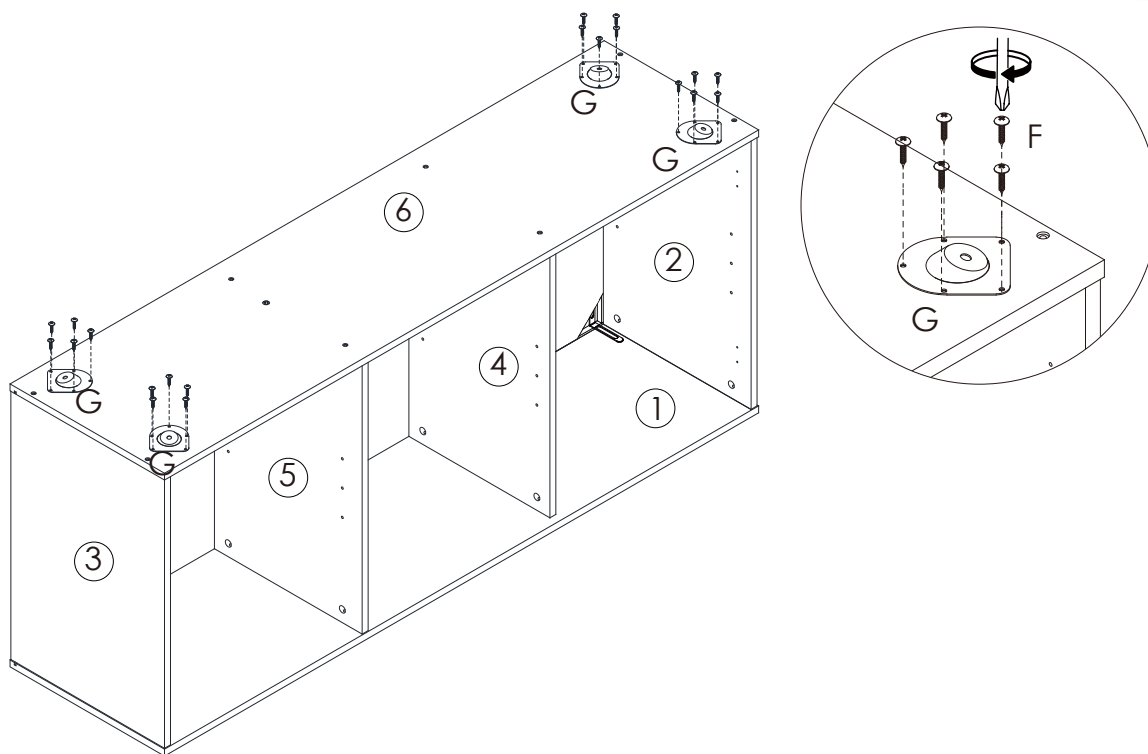

F*20



 
G*4



N*1

STEP 6

Attach adjustable foot nail(M) to the adjustable foot(11), attach wooden legs(10&11) to the bottom board(6) and metal plates(G).

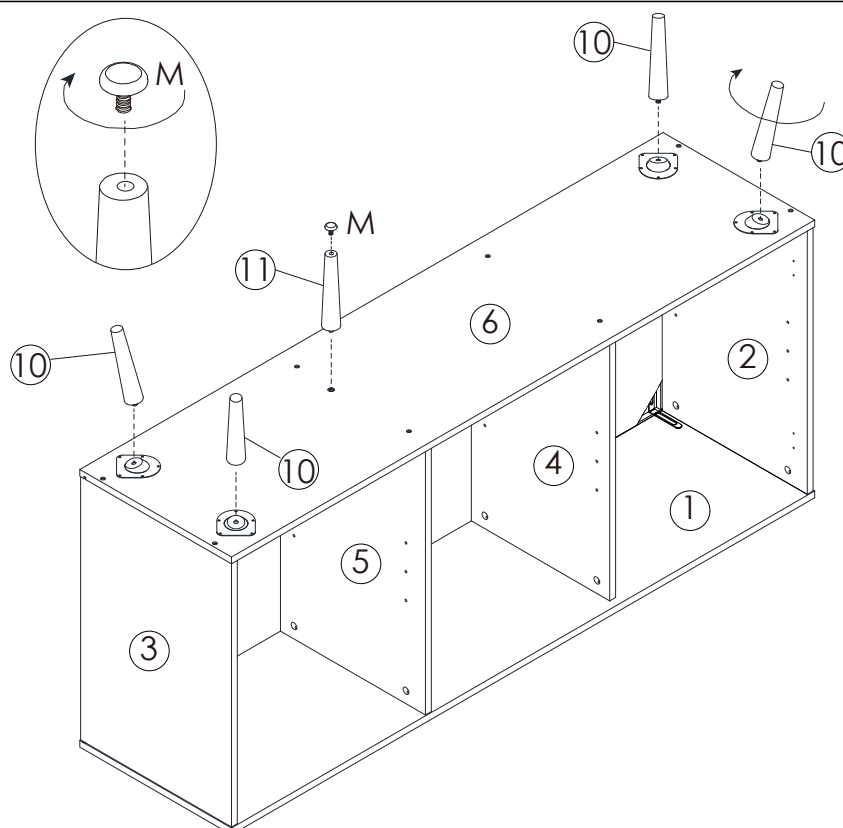

M*1



10*4

 


11*1

Assembly Instruction

STEP 7

Attach stabilizers(K) to the back board using screwdriver(N).

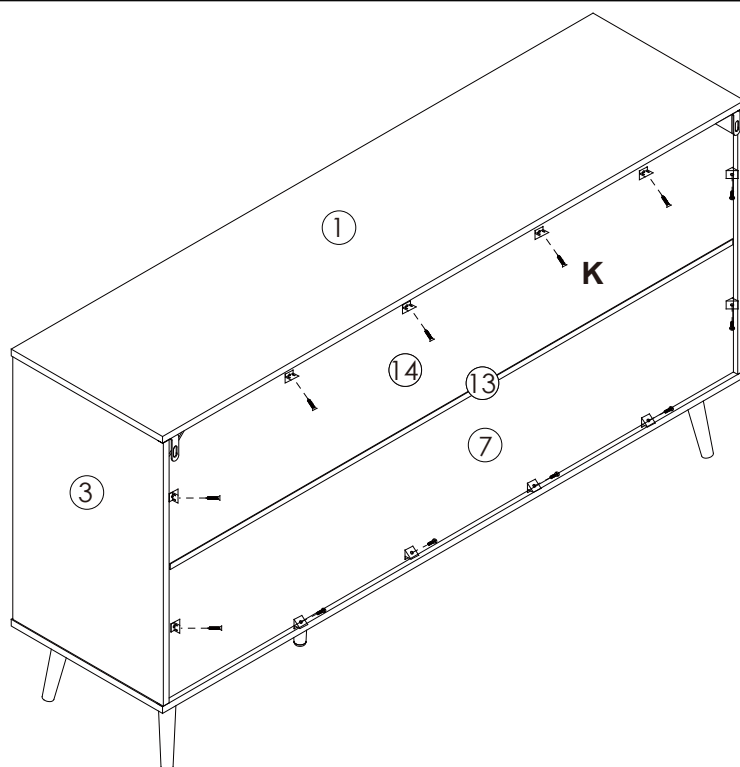


K*12



N*1

STEP 8

 Attach hinges(I) to the door boards(12) using screws(E) and screwdriver(N).

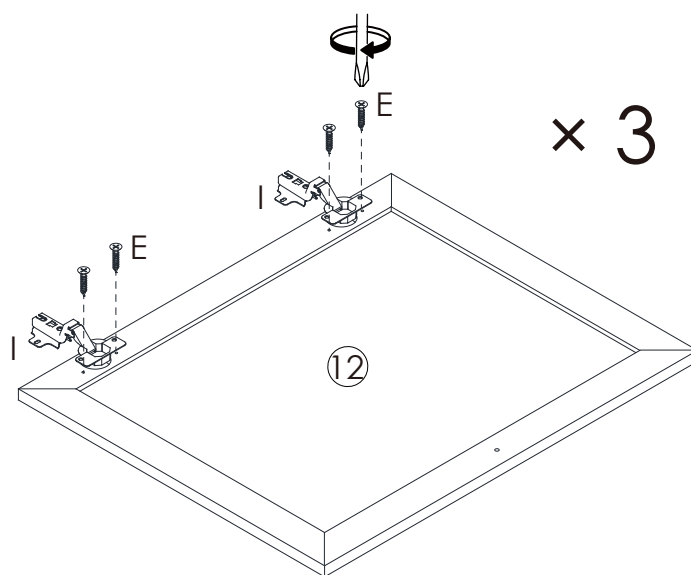

E*12



I*6



N*1

 


12*1

Assembly Instruction

STEP 9

Attach door boards(12)to the board(2,3,&5) using screws(E) and screwdriver(N), and attach handles(H) to the door boards(12) using screws(E) and screwdriver(N).

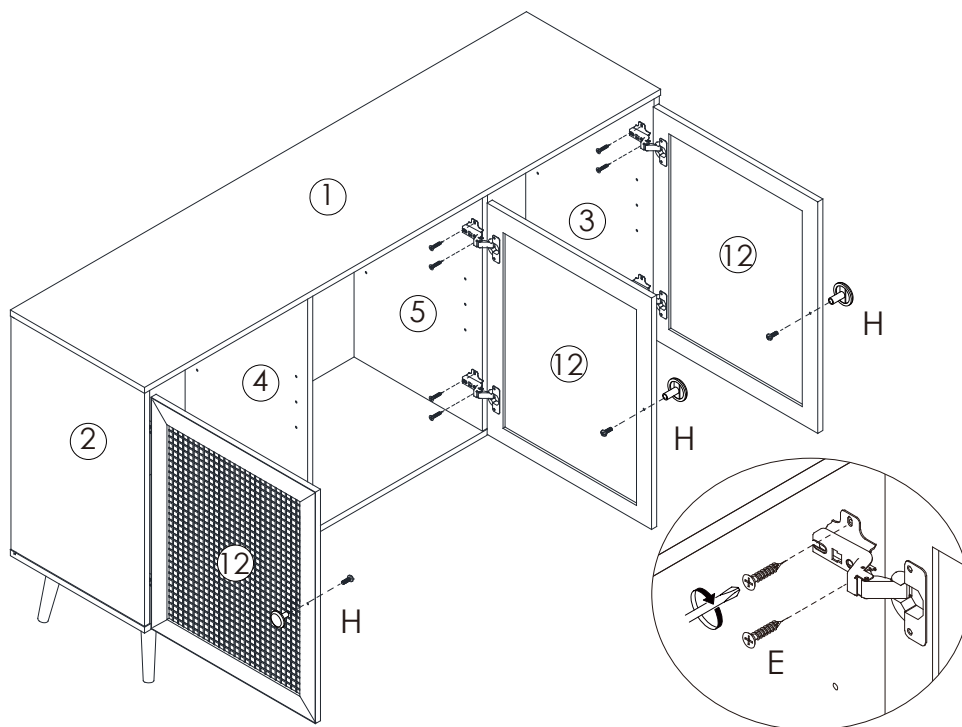

E*12



 
H*3



N*1

STEP 10

Insert board supports(L) to the hole of the boards(2,3,4&5), and put the boards(8&9) on the supports, then stick the doorstop bumpers(O) on the outside of the boards.

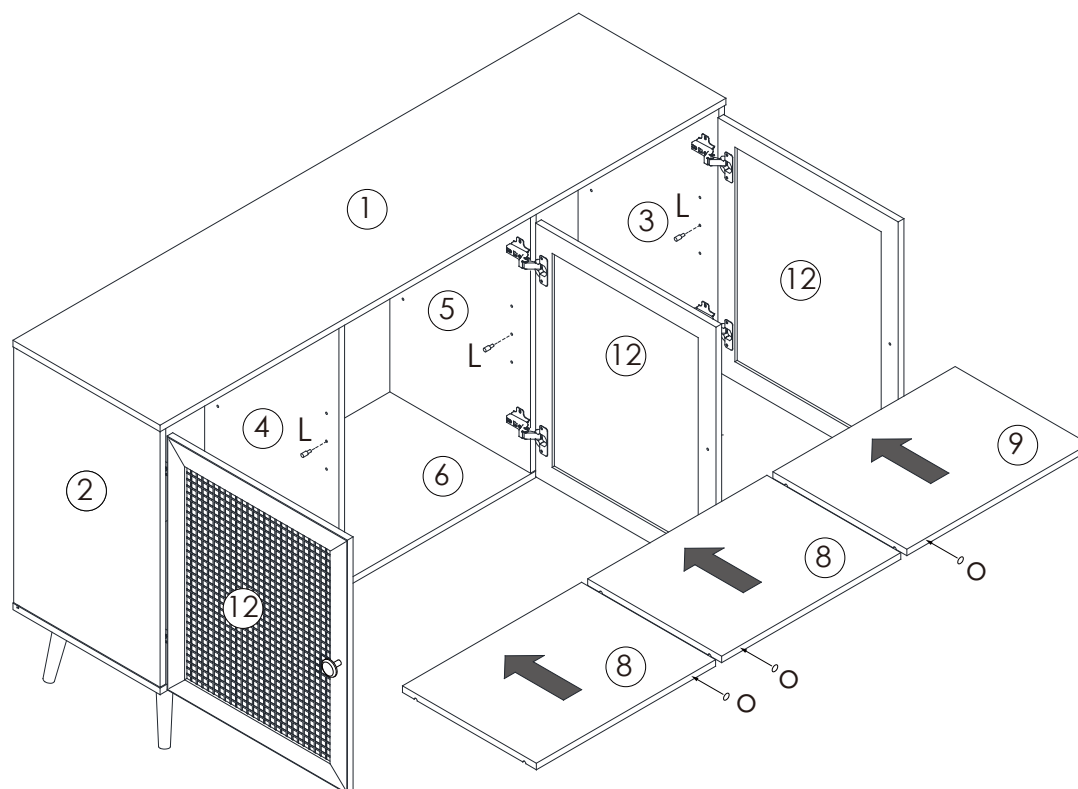

L*12



O*1



8*2

 


9*1

Assembly Instruction

STEP 11

Attach anti-tip kits(J) to the wall and the assembly is done.

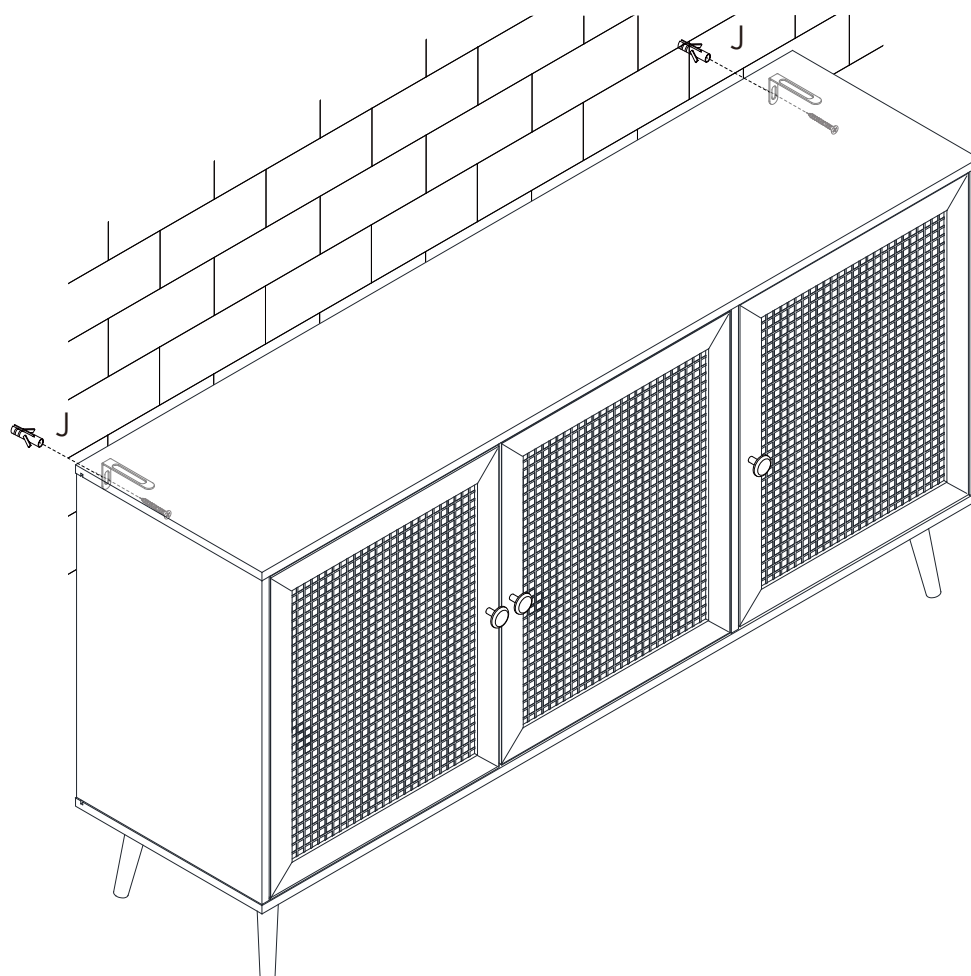



J*2





N*1

How to adjust the door position

 
 
To move the door up or down, loosen the top and bottom screws as shown in the diagram slightly and then move the vertical adjustable plate up or down. After that, tighten the screws. For example, to lift the door up, loosen the top and bottom screws (counterclockwise), and move the vertical adjustable plate up, then tighten all the screws (clockwise). Make adjustments in small increments and check the door placement each time.

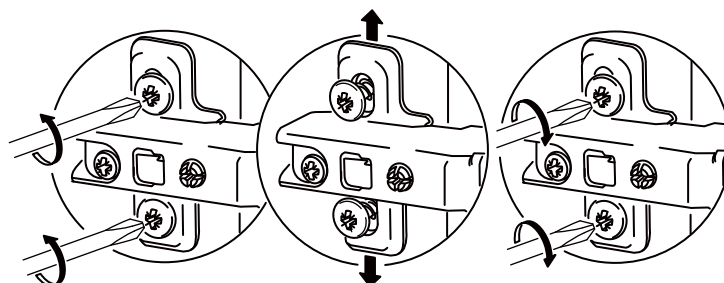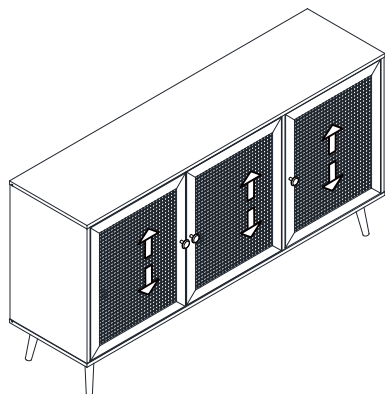

To move the door front or back, loosen the inside screw as shown in the diagram slightly and then move the horizontal adjustable plate front or back. After that, tighten the screw. For example, to move the door front, loosen the inside screw (counterclockwise), and move the horizontal adjustable plate front, then tighten the screw (clockwise). Make adjustments in small increments and check the door placement each time.

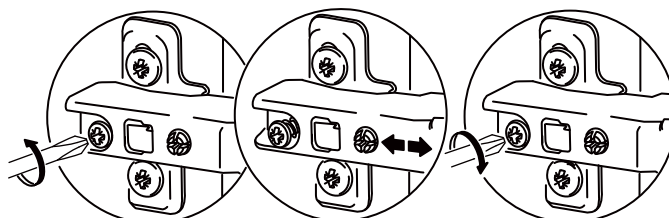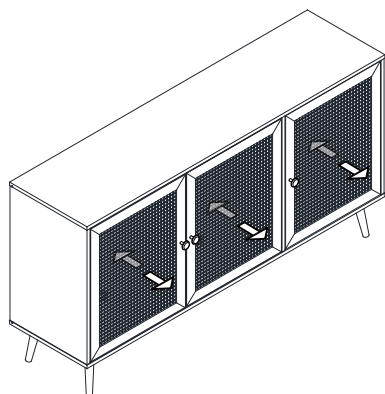  

To move the door left or right, loosen the outside screw as shown in the diagram slightly and then move the horizontal adjustable plate left or right. After that, tighten the screw. For example, to move the door left, loosen the outside screw (counterclockwise), and move the horizontal adjustable plate left, then tighten the screw (clockwise). Make adjustments in small increments and check the door placement each time.

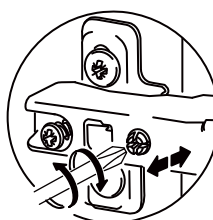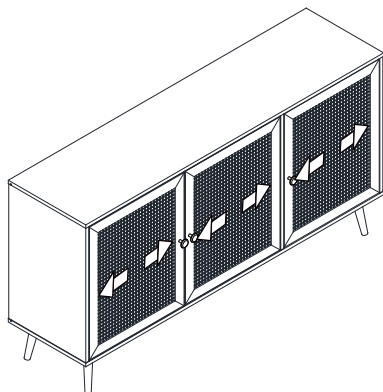  

Warning

- Please keep the product away from children while assembling.
- Do not let children play or jump on the product.
- Do not stand on the item or use it as a step ladder.
- Prior to use, please check for any loosening screws or parts.
- Make sure that each screw and part is correctly installed and securely fastened.

Care and Maintenance

- Use a soft clean cloth that will not scratch the surface when dusting.
- There's no need to use furniture polish, you need to test it first in an inconspicuous area.
- Using solvents of any kind on your furniture may damage the finish.
- Never use water to clean your furniture as it may cause damage to the finish.
- Liquid spills should be removed immediately.
- Gently blot the spill with a soft, clean cloth to avoid rubbing.

Further advice about the furniture care

- It is best to keep your furniture in a climate-controlled environment.
- Extreme temperatures and humidity changes can cause fading, warping, shrinking and spitting of wood.
- We recommend keeping furniture from sunlight exposure to avoid possible surface damage.
- Proper maintenance and cleaning at home will extend the life of your purchase.
- Following these important and helpful tips will help retain your furniture's performance even it ages.
- Periodically(every 90 days), make sure the screws are fully tightened.

Warmly after-sales service

- Please check all the hardware and furniture before assembling.
- If anything is missing, please feel free to contact us. If you only leave a message on the platform, we may not be able to effectively solve the problem.
- Timely communication helps us understand your situation and provides you with the best shopping experience.

Have a question for our company?

Thank you for supporting our company.

- If you have any issues with your purchase, please feel free to let us know.
- We will always do our best to work out a solution that you will be happy with.

Return Policy

Length of return period:

Items can be returned within 30 days of receipt of shipment. Who is responsible for the return shipping fee?

We will cover the return shipping fees if:

1. The item received is damaged or defective.
2. The wrong item was shipped to you.
3. The item received is materially different from what was described on the product page.

If the return is for any other reason, the customer will be responsible for the return shipping fees.

However, we always hope to work with you to find a better solution instead of a return. Please don't hesitate to contact us.

If the return is due to reasons other than the ones listed above, the customer will be responsible for the return shipping fees, if:

1. You are not satisfied with the product(s) after receiving the box(es).
2. You no longer need the product(s), but you have already received the box(es).
3. You purchased the product(s) by mistake, but you have already received the box(es).
4. Before FedEx picks up the package, please make sure that everything is returned to the original packaging and that the prior opening will not affect the reselling of the product.

You can try to get Amazon prepaid labels for UPS express return. Alternatively, we can provide prepaid shipping labels after you provide photos of the package before and after repackaging. Just stick the label on the box and call FedEx to pick it up.

When will I be refunded?

The refund will be issued once the goods have been received and processed at our warehouse. If you have any questions, please don't hesitate to contact us, and we will work with you to find a solution that ensures your satisfaction.