





 


 




 



 





 
 





 










| NO. | DESCRIPTION  | Q'TY  |
|-----|--|-------|
| A   |  M6x12mm  | 18    |
| B   |  M6x18mm  | 4 set |
| C   |  M6x30mm  | 2     |
| D   |  M6*32mm  | 4     |
| E   |  M6x38mm  | 10    |
| F   |  Ø23  | 2     |
| G   |  M6   | 3     |
| H   |  Ø12x2.0  | 16    |
| I   |  M3.5x10mm  | 4+4   |
| J   |   | 4+4   |
| K   |  Ø30xM8   | 7     |
| L   |   | 7     |
| M   |  M4 +  | 1set  |
| N   |   | 2     |
| O   |   | 1     |

| NO. | DESCRIPTION   | Q'TY |
|-----|---|------|
| P   |  | 1    |
| Q   |  | 2    |
| R   |  | 1    |
| S   |  | 1    |
| T   |  | 1    |
| U   |  | 1    |
| V   |  | 1    |
| W   |  | 1    |
| X   |  | 1    |
| Y   |  | 2    |

| NO. | DESCRIPTION   | Q'TY |
|-----|---|------|
| Z   |  | 1    |


## TV Mounting Hardware
 
| NO. | DESCRIPTION  | Q'TY |
|-----|--|------|
| S1  |  M4x12mm  | 4    |
| S2  |  M5x12mm  | 4    |
| S3  |  M6x12mm  | 4    |
| S4  |  M8x15mm  | 4    |
| S5  |  M4x32mm  | 4    |
| S6  |  M5x32mm  | 4    |
| S7  |  M6x32mm  | 4    |
| S8  |  M8x32mm  | 4    |
| S9  |  Ø19xØ6.2 | 4    |
| S10 |  Ø22xØ8.2 | 4    |
| S11 |  Ø14x14mm | 4    |
| S12 |  Ø25x13mm | 4    |
| S13 |  Ø25x2mm  | 4    |

## STEP 1

 \* Attach the top frame(Part O) to the wood frame(Part N);


\*Check the "Bottom" mark on the metal frame is on the bottom side of the frame

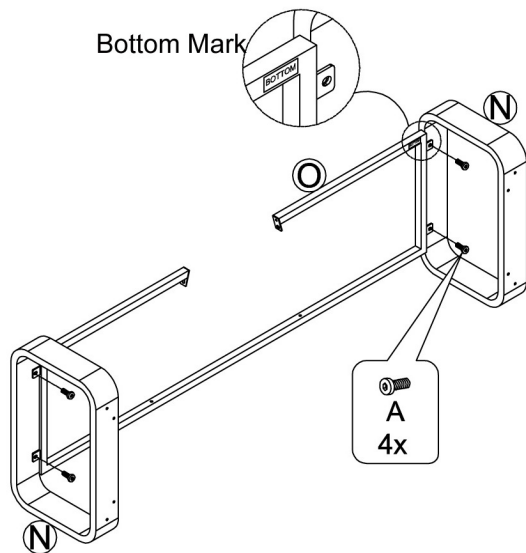

## STEP 2


\* Attach the bottom frame(Part P) to the wood frame;

 \* Check the "Bottom" Mark is on the bottom side of the frame

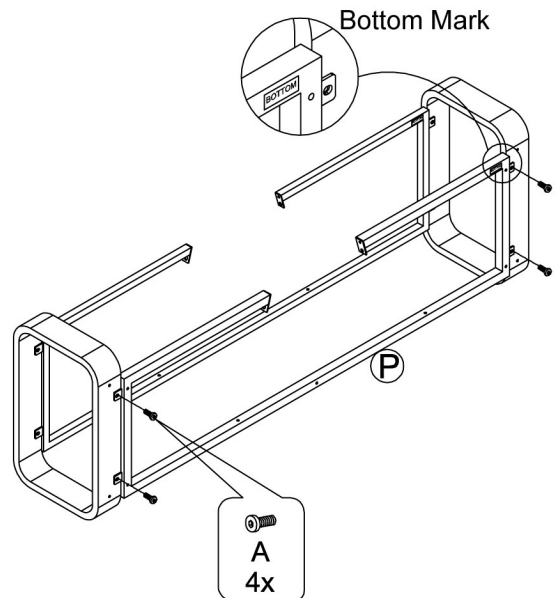

## STEP 3

 \* Install the casters ( Part L )  
or the adjustable feet ( Part K )  
to the bottom frame as shown.

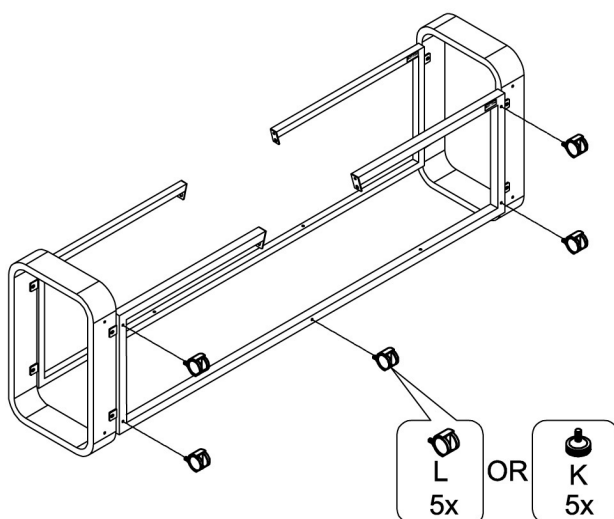


## STEP 4

\* Install the caster or the adjustable foot to the support poles(Part V & Part W);


\* Install the wood panel(Part Z) as shown. Do not tighten the screws to 100% at this point to ensure easy alignment and installation of the whole unit.

 \* Install the adjustable mounting base(Part U) as shown.

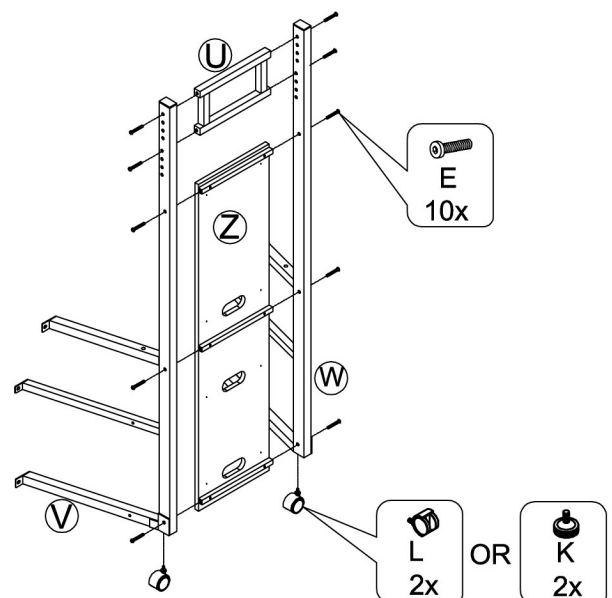


## STEP 5

 \* Attach the back support poles to the top and bottom frames as shown. If it's difficult to align the screw holes, loosen the screws on the back support poles.

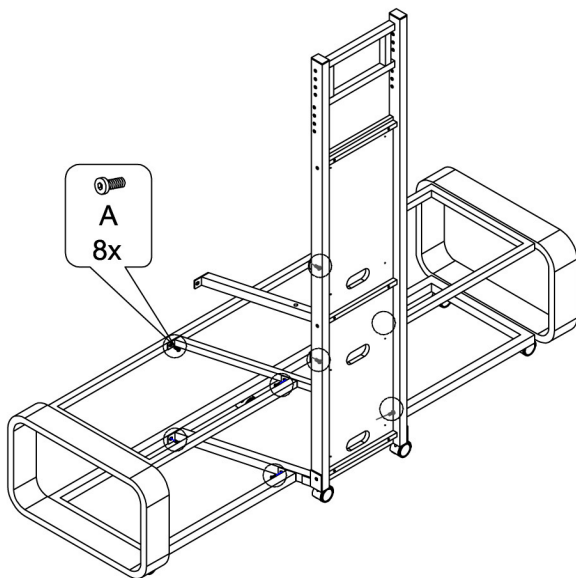


## STEP 6

 - \* Install the glass shelf support metal bar (Part T)
- \* Install the cable management velcro (Part J) as shown
- \* Tighten all the screws including those did not tightened in previous steps.

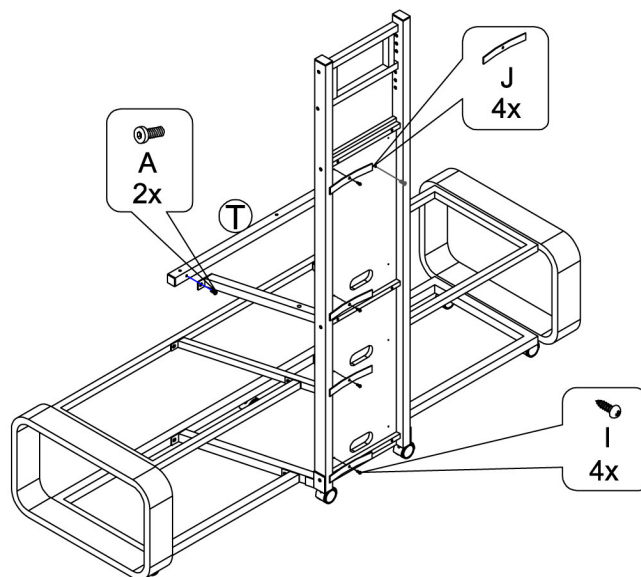


## STEP 7

 \* Install the pivot device (Part R) as shown

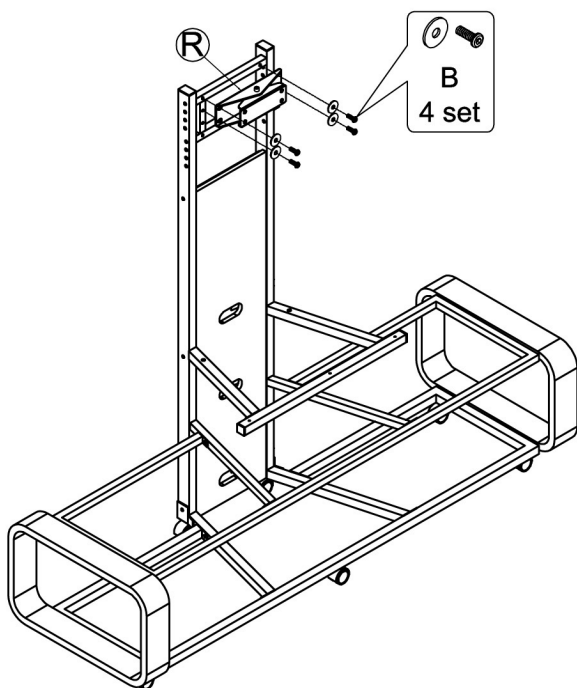


## STEP 8

 - \* Install the mounting bracket (Part S);
- \* Level the bracket and fasten all the screws

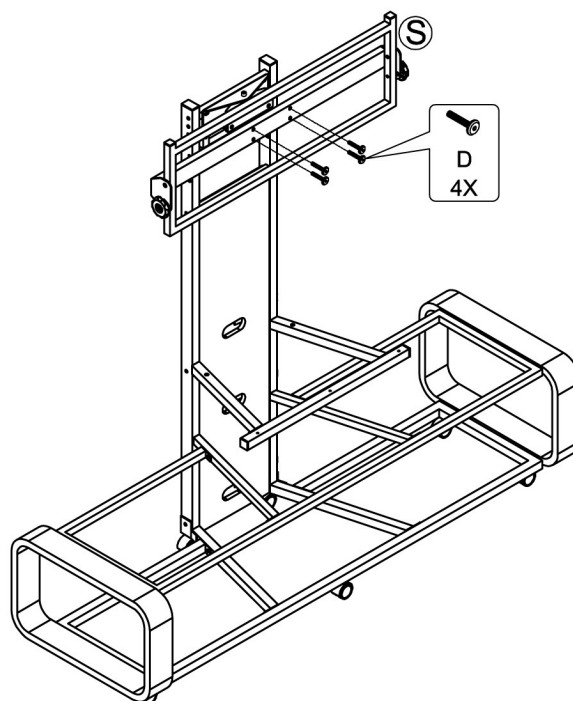


## STEP 9

 - \* Install the glass support screws(Part G) as shown
- \* Affix the silicon(Part H) on the metal frame as shown

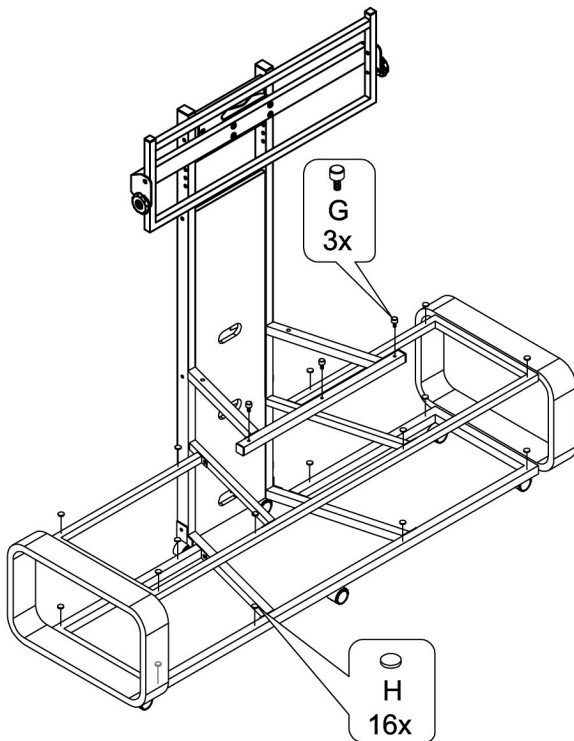

## STEP 10

 
- \* Install the top glass shelf as shown and check the adjustable knobs to ensure it's supporting the glass
- \* Install the bottom glass shelf and the middle shelf

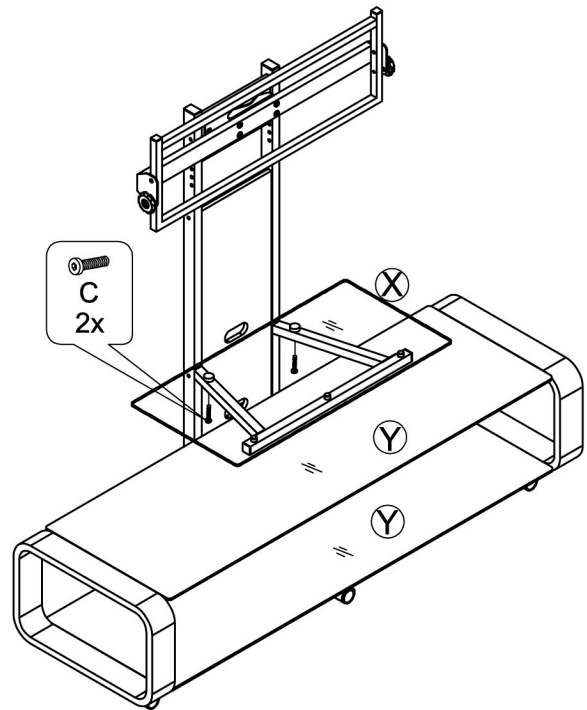


## STEP 11

- \* Attach the mounting bracket(Part Q) to the TV

 1. Secure the mounting bracket without a spacer (Recommended)

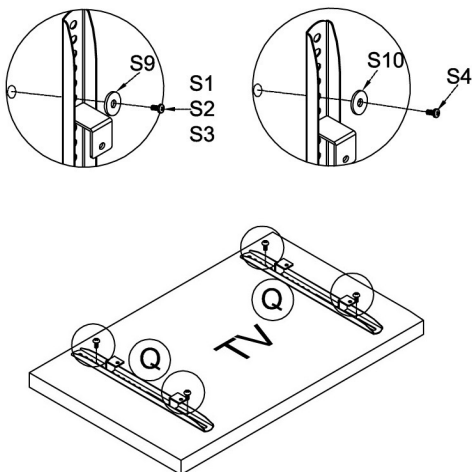

 2. Secure the mounting bracket with a spacer if needed

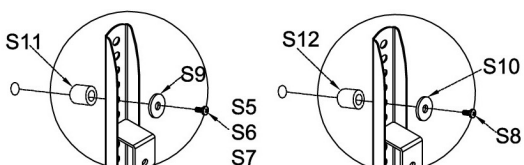

## STEP 12

- \* Install the safety bolts to the top anchor only as shown

Note: If the TV is tilting to one side or the other it can be adjusted via balance the mounting bracket or the pivot device

