

CARE AND MAINTENANCE

Always use felt pads under all articles all articles to prevent discoloration or softening or the lacquer.

Plastic and rubber bases on items on items can discolor wood.

Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives.

Cleaning should be done with a soft line free cotton cloth dampened with water or furniture polish.

On highly used surfaces we recommend applying a quality paste wax, which should be used on a regular basis to provide additional protection from scratches and spills .

 
 

 
 
How often you apply the wax depends on how much wear the furniture receives.


NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.

Product dimensions: 71"Wx20"Dx30"H

Part List and Hardware List

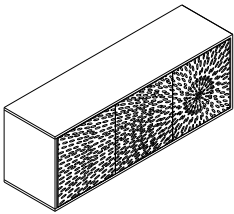PIECE	DESCRIPTION	PICTURE	QUANTITY
A	CABINET		1X
B	LEGS		4X
C	WASHERS + LOCK WASHERS		16X
D	ALLEN BOLTS		16X
E	ALLEN KEY		1X

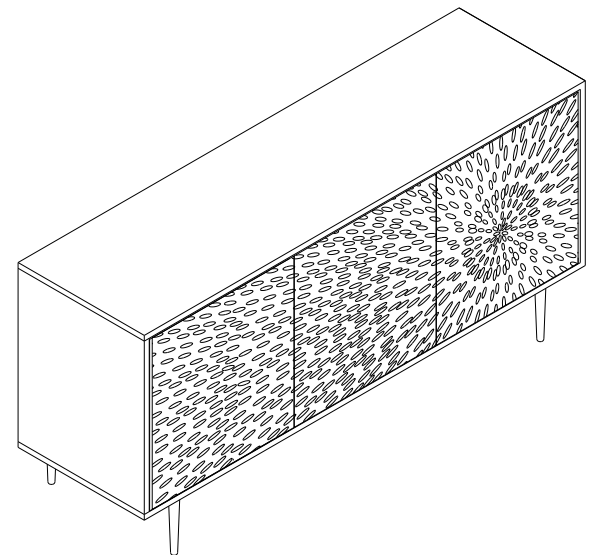 

PREPARATION

 
Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.

If any is part missing or damaged, do not attempt to assemble the product.

Estimated assembly time: 12 minutes.

Tools required for assembly (included): Allen key

Step 1 Put the cabinet (A) upside down on soft surface, attach the legs(B) to the cabinet(A), use Allen key(E) to tighten all the washer and bolts (C-D).

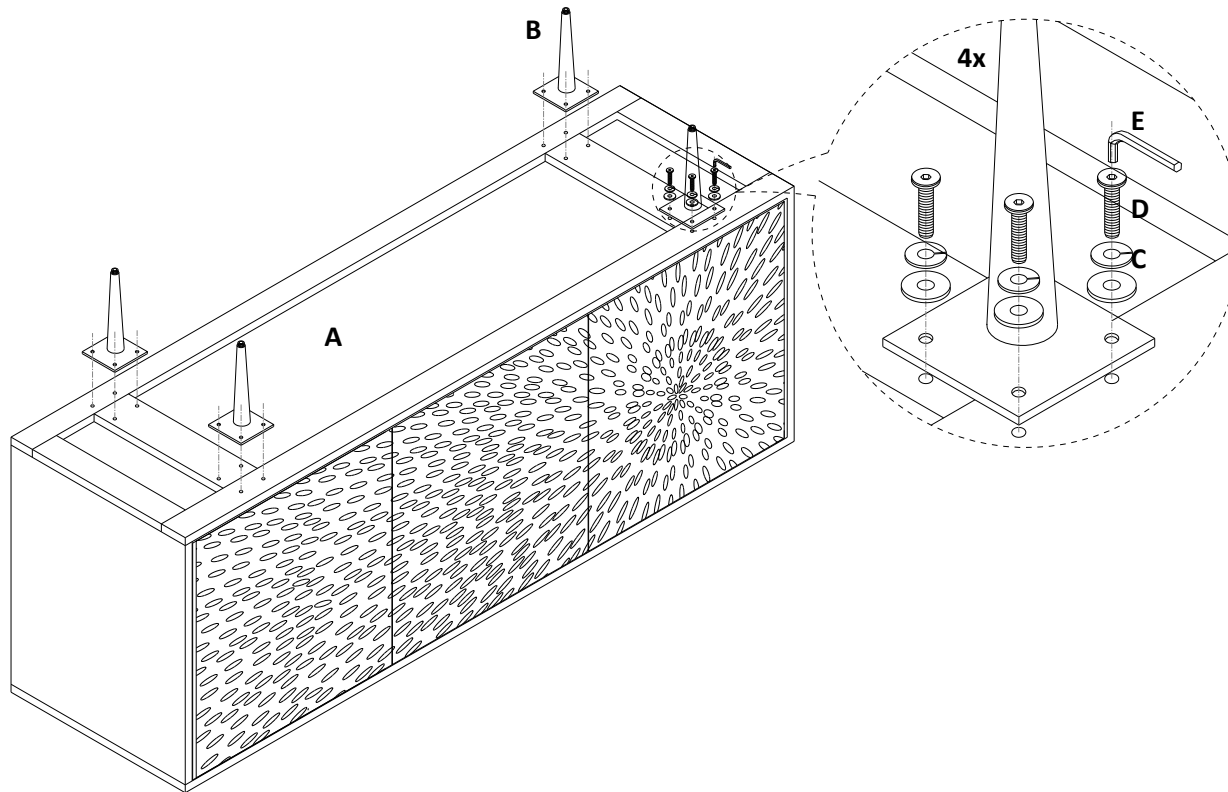

Step 2 Stand the cabinet upright with the help of other person and product is ready to use.

