 





 

 
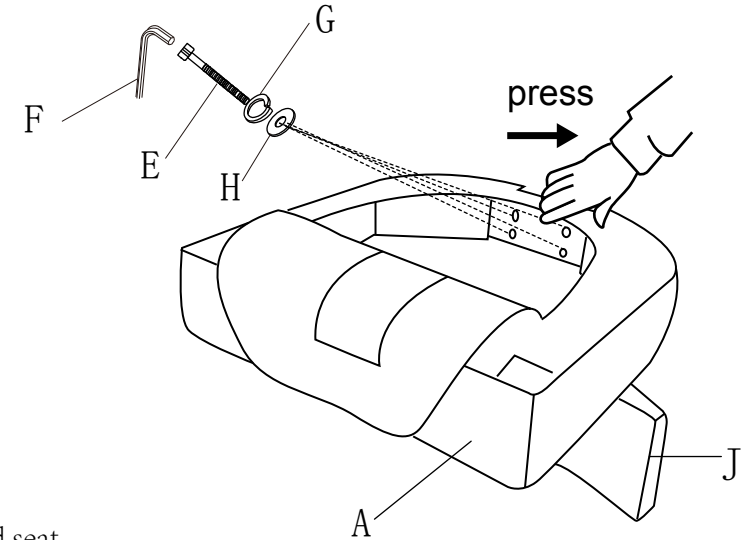
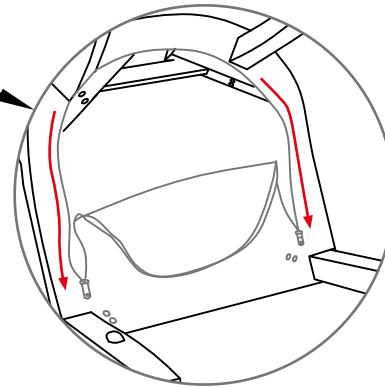


# ASSEMBLY INSTRUCTIONS


|      |   |
|------|---|
| Ax1  | <br>Seat                     |
| Jx1  | <br>Back                     |
| Bx2  | <br>Front leg                |
| Cx2  | <br>Rear leg                 |
| Dx2  | <br>Adjust cap               |
| Ex12 | <br>M8*60mm<br>Screw         |
| Fx6  | <br>M8<br>Allen key          |
| Gx12 | <br>M8<br>Spring washer     |
| Hx12 | <br>M8*22mm<br>Flat washer |

- ① Unzip the zipper  
The legs are hidden in the seat frame





First, use 4pcs screw(E) into the washer(G, H)connect the back and seat.

- ②


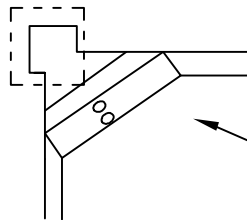


Put the front legs (B) into the dotted box place, if you put it in the wrong place, it still can work, but the uneven force will cause the leg to break.

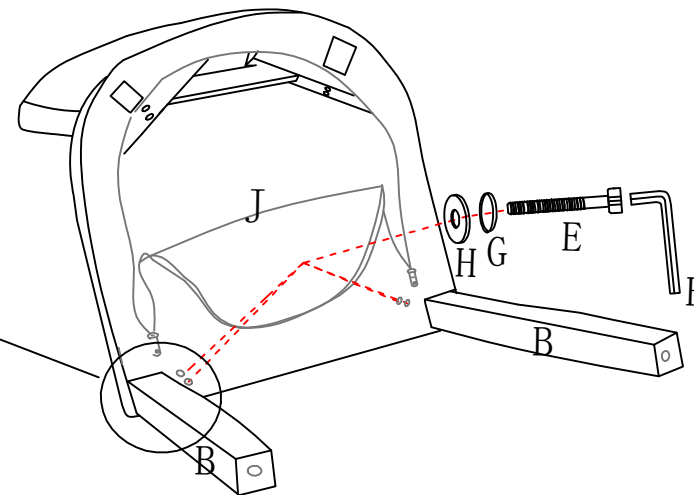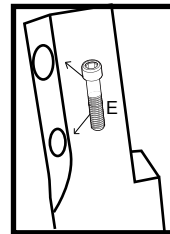


Install the screws according to the directoin by the arrows.  
Tighten all the screws to 80% of maximum tightness.

③

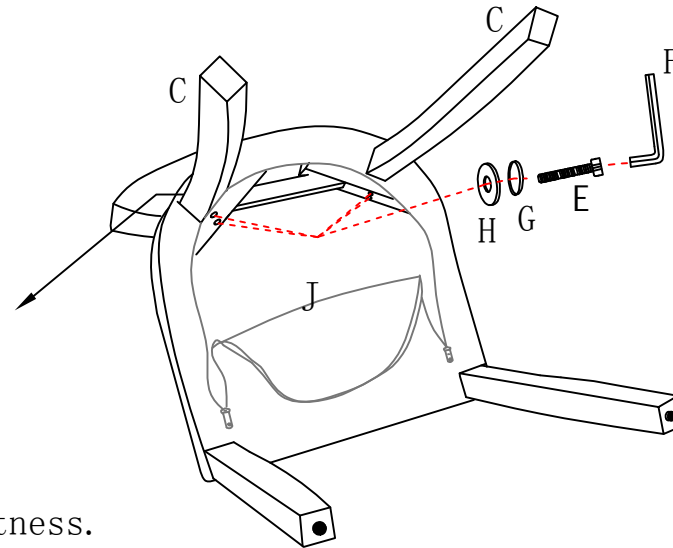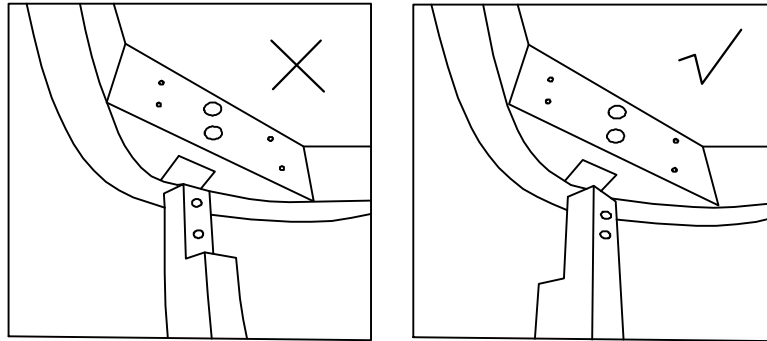


Tighten all the screws to 80% of maximum tightness.

④

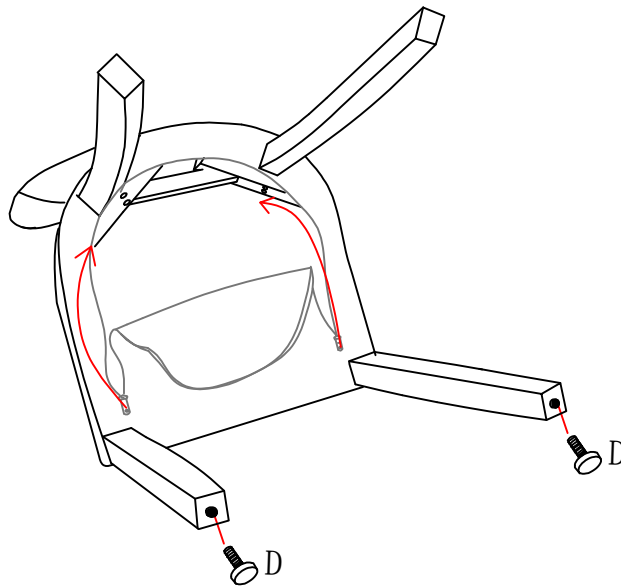

Close the zipper of bottom Non-Woven fabric.  
Tighten all the screws to  
100% of maximum tightness.

⑤

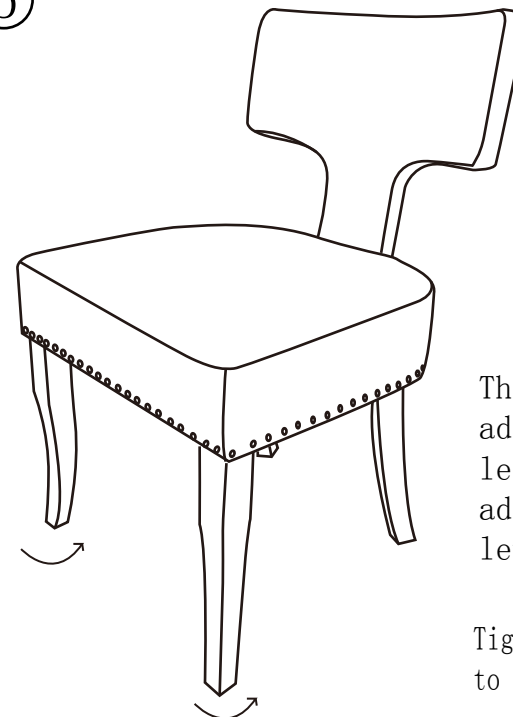

There are 2 small  
adjusters on the front  
legs , ensure these are  
adjusted so the chair sits  
level.

Tighten one and loosen the other.  
to adjust to level.

**WARNING:**

DO NOT STAND ON THE PRODUCT, DO NOT USE THIS PRODUCT AS A STEP LADDER.  
DO NOT USE THIS PRODUCT UNLESS ALL BOLTS, SCREWS AND KNOBS ARE FIRMLY SECURED.  
PLEASE DO NOT USE KNIFE TO OPEN ANY PARTS OF THE BOX OR PRODUCT.