 


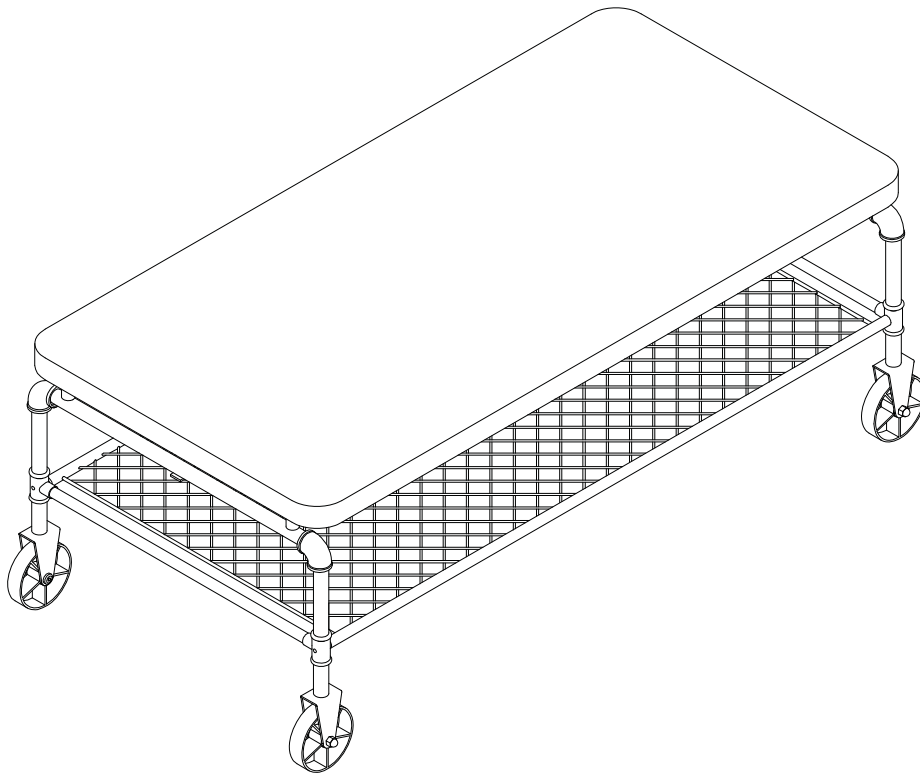

Assembly Instructions

WI4139C



ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

 
EASY



DIFFICULT

Tools Required For Assembly:

Allen Wrench




2 PERSONS RECOMMENDED

ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.

 BASIC ASSEMBLY TECHNIQUES

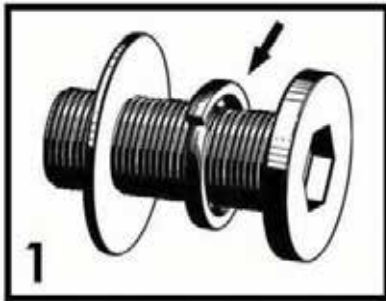


When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.




Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.



 
Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

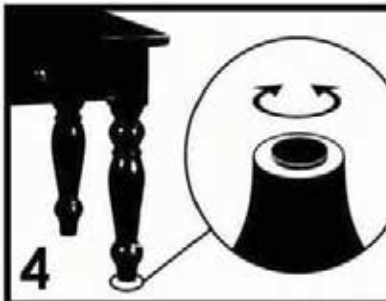

 Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

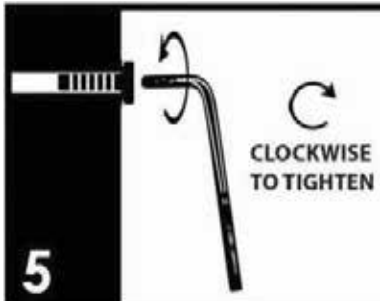


 Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

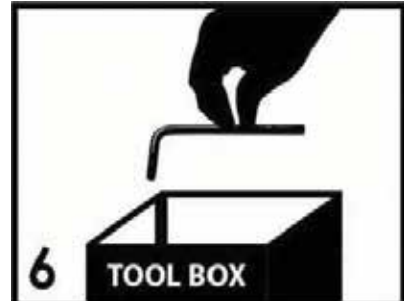

Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

 IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

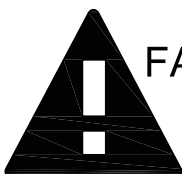


FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.




Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

 
Parts List



#1 x 2pcs
Side Frame

 

#2 x 1pc
Top Panel

 

#3 x 1pc
Shelf



#4 x 2pcs
Top Support plate



#5 x 4pcs
Wheel

Hardware List



#A x 4pcs
Bolt 1/4" x 5/8"



#B x 4pcs
Bolt 1/4" x 1-3/4"



#C x 4pcs
Bolt 1/4" x 2-1/2"



#D x 4pcs
Flat Washer



#E x 1pc
Allen Wrench M4



#F x 4pcs
Bolt 5/16" x 1-3/4"



#G x 4pcs
Nut M8

 


#H x 1pc
Allen Wrench M5




#F x 4pcs
#G x 4pcs

1. Insert the wheels (#5) into the slots along the ends of the side frame (#1) and align the holes.

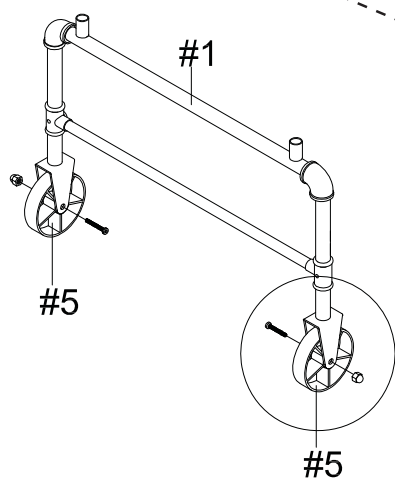

x 2

 
2. Insert a bolt (#F) from within into the wheels and secure using the Allen wrench (#H).

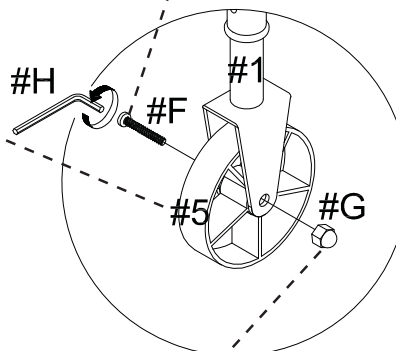

3. Apply a nut (#G) onto the end of the bolts and secure.





#B x 4pcs

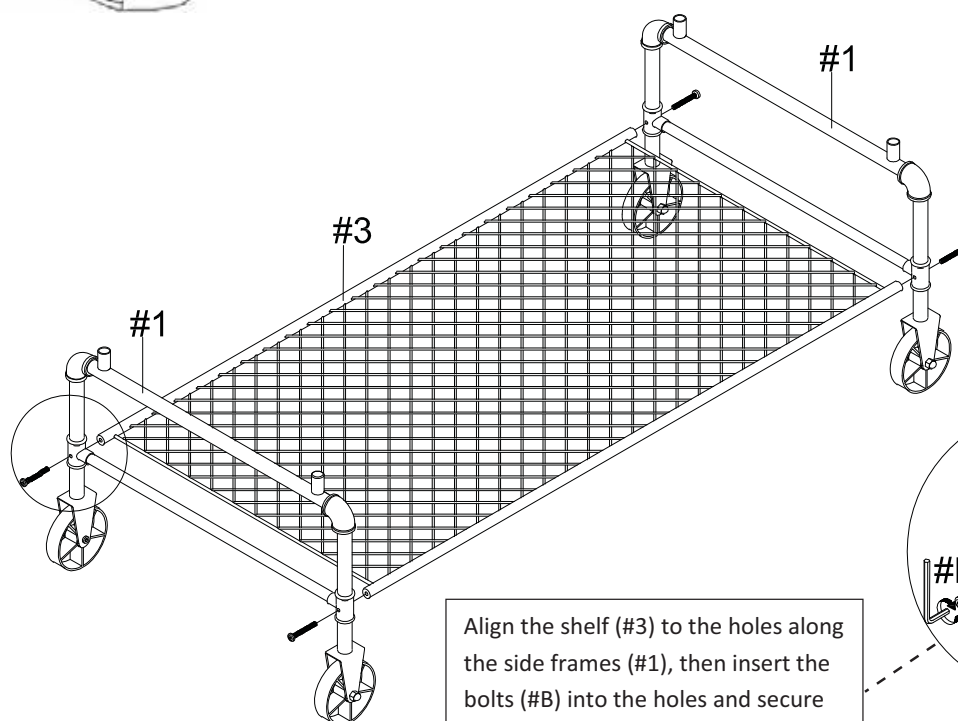 

Align the shelf (#3) to the holes along the side frames (#1), then insert the bolts (#B) into the holes and secure using the Allen wrench (#E).




  1. Place the top panel (#2) face down onto a protected surface, then align a flat washer (#D) to each hole and place the side frames (#1) faced down onto those flat washers. Insert a bolt (#C) into each hole and secure.

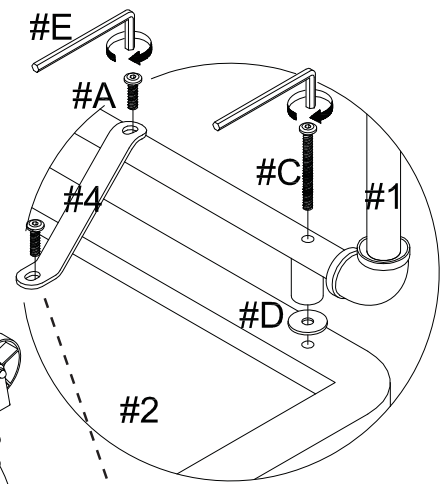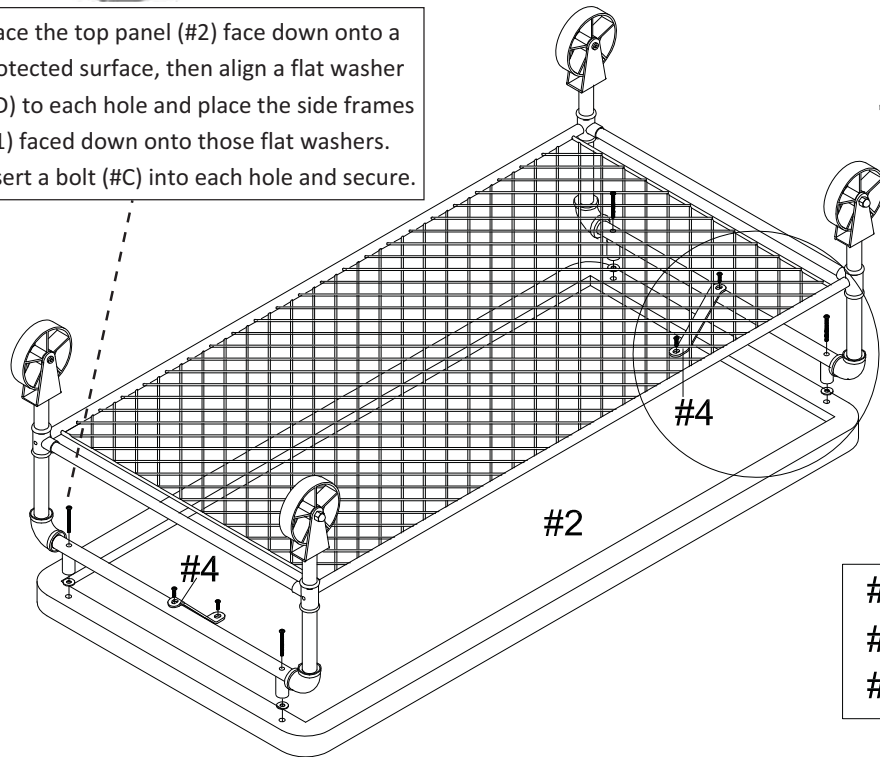

2. Align the top support plates (#4) to the center holes along the top panel and side frames. Insert the bolts (#A) and secure.

#A x 4pcs
#C x 4pcs
#D x 4pcs

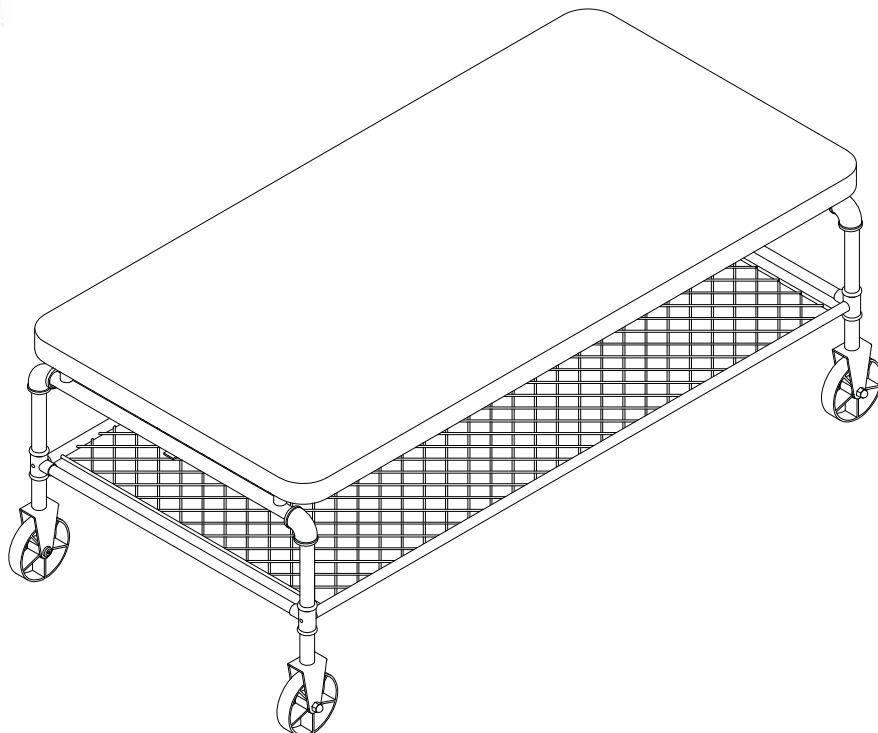 

ASSEMBLY IS COMPLETED