

OPERATION INSTRUCTION

Make Drip Coffee with Coffee Beans

1. Put your desired amount of water into the carafe according to its marking, then open the water tank cover and pour the water in.
2. Open the bean box cover and wipe the box with a dry cloth to make sure it is dry inside.
3. Put proper coffee beans (not more than 200g) into Coffee Bean Box, then cover its lid. To avoid the coffee beans turning moist, we suggest not placing too many coffee beans in Coffee Bean Box.
4. Replace and firmly press down the lid to prevent beans from spilling out from the bean box.
5. Press Funnel Press Key once and rotate the funnel support to the left, ensuring the filter is inside of the Funnel support.
6. Turn the funnel support to the right until it is locked.
7. Insert the Power Plug into a 120V AC power outlet.
8. According to added water volume, press the  2-10 Button to select the required amount of coffee cups.
9. Set the grind regulator to the required grind size.
 - Turn the regulator anticlockwise to grind the coffee coarser.
 - Turn the regulator clockwise to grind the coffee finer.
10. Press the  button to select coffee concentration. There are 3 levels of strength, and the default level is .
11. Place the coffee carafe on the warming plate.
12. Press the  Button to start making coffee, the display will show the photo of  when the brewing process begins. Wait for about 3 seconds, the grinder will start grinding.
13. Buzzer will sound 3 times to notice you when the coffee is done.
14. When finished brewing, if you do not unplug the power cord from the power outlet, coffee in the carafe can be warmed on the warming plate for up to 120 minutes.

Make Drip Coffee with Coffee Powder Directly

1. Put your desired amount of water into the carafe according to its marking, then open the water tank cover and pour the water in.
2. Don't exceed the "MAX" line of the water tank, and also do not add too little water.

3. Take out the Coffee Carafe.
4. Press Funnel Press Key once and rotate the funnel support to the left, ensuring the filter is inside of the Funnel support.
5. Make sure the tube of the filter assembly aligns with groove of the swing-out filter basket.
6. Add your desired coffee powder into the filter but not past the max line.
7. Turn the Funnel support to the right until it is locked
8. Insert the Power Plug into a 120V AC power outlet.
9. Place the coffee carafe on the warming plate.
10. Press the ☕ button once, the red ☕ indicator will be illuminated, then press the ☺ button once, the display will show the ☺ then the coffee maker will brew directly.
11. Buzzer will sound 3 times to notice you when the coffee is done.
12. Press the edge of the lid with your thumb and pour the coffee at the correct angle.
13. When finished brewing, if you do not unplug the power cord from the power outlet, coffee in the carafe can be warmed on the warming plate for 0/15/30/60/120 minutes.(refer to Warming Time setting).

Notice:

Cleaning after every use guarantees the flavors of your coffee refer to "CLEANING AND MAINTENANCE".

Notice:

- 1 - Do not place parts of the body under the drip stop while the machine is in operation.
- 2 - Do not open the Swing-out Filter Basket while the machine is brewing coffee, otherwise, the steam will wet the powder at the powder outlet which possibly damages the grinding system.
- 3 - While the coffee is brewing you can remove the carafe to pour a cup or two. The drip stop will close automatically. To avoid any overflow, replace the carafe within 30 seconds.
- 4 - If the coffee drips onto the warming plate, it should be used a clean cloth to wipe off the coffee stain in time to avoid oxidation of the coffee erosion layer.

Warming Time Setting

Long press Grind Coffee button for 3S, and two beeps can be heard. Then press Hour button or Minute button to cycle the warming time within 0, 15, 30, 60, and 120 minutes. After choosing the desired warming time, short press  button to confirm.

The custom setting of the warming time has power-off memory. After this setting is completed, it will be set as the default warming time.

Automatic Start Function

1. Insert the Power Plug into the power outlet.
2. The display only indicates  button at first, press  button once, all the buttons illuminate. The display will show "12:00" on the control panel, at the same time, the number will flash, then press  (Hour) and  (Minute) button to set current time.

Note: Number will flash until pressing  (Hour) and  (Minute) button to set time, Automatic function cannot be available when number is flashing.

3. Long press  button until the time into timer mode (the number flashes again) setting the time of AUTOMATIC START you want through pressing  (Hour) and  (Minute) button.
4. Press  button again, the  will show on the display, the red  indicator will be illuminated, the appliance enters into automatic mode.

Note: the time cycle is 12 hours.

5. The coffee maker will start to brew at the preset time, the red indicator of  will go out and the  indicator will turn to red. If you want it to operate immediately, you just need to press  button, then the appliance will start to work automatically.

Cancel the Presetting Program

If the coffee maker is at the state of presetting (the red indicator of  is on), but you want to cancel the automatic mode, you just need to press  button once, then the red indicator will go out, the automatic mode will be canceled.