


Gun Safe Cabinet

SKU: DX145-04

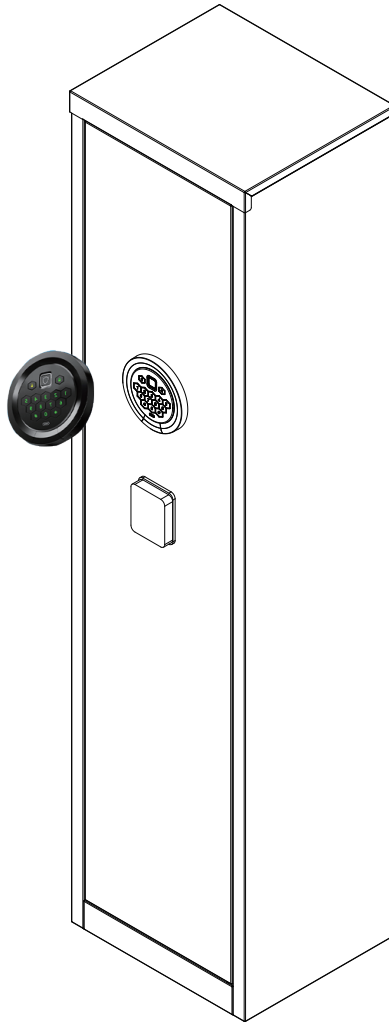

Instruction Manual



NOTICE: *Do not lock the emergency key into your safe!!!*

Thank you for your purchase!

We hope you've enjoyed your shopping experience.

If you experience any issues with your order regarding:

Product compatibility

Damaged packaging

Installation issues

 
 
 
 
 
 
 
 
Other problems

Please Contact us using the below email

shangya.service@outlook.com




Contents:

 Left side panel ① X1	 Right side panel ② X1	 Back panel ③ X1
 Door header ④ X1	 Door threshold ⑤ X1	 Top panel ⑥ X1
 Bottom panel ⑦ X1	 Shelf panel ⑧ X2	 Door ⑨ X1
 Door Basket ⑩ X3	 Flat washer ⑪ X4	 Gun rack ⑫ X1
 Adjustable feet ⑬ X4	 Door hinge ⑭ X1	 Washer ⑮ X1
 Screws ⑯ X56	 Adjustable hook ⑰ X8	


Safety Warning:

- Without safety reinforcement prior to installation, tipping can cause serious injury to children and adults.
- Children should not play near the gun cabinet.

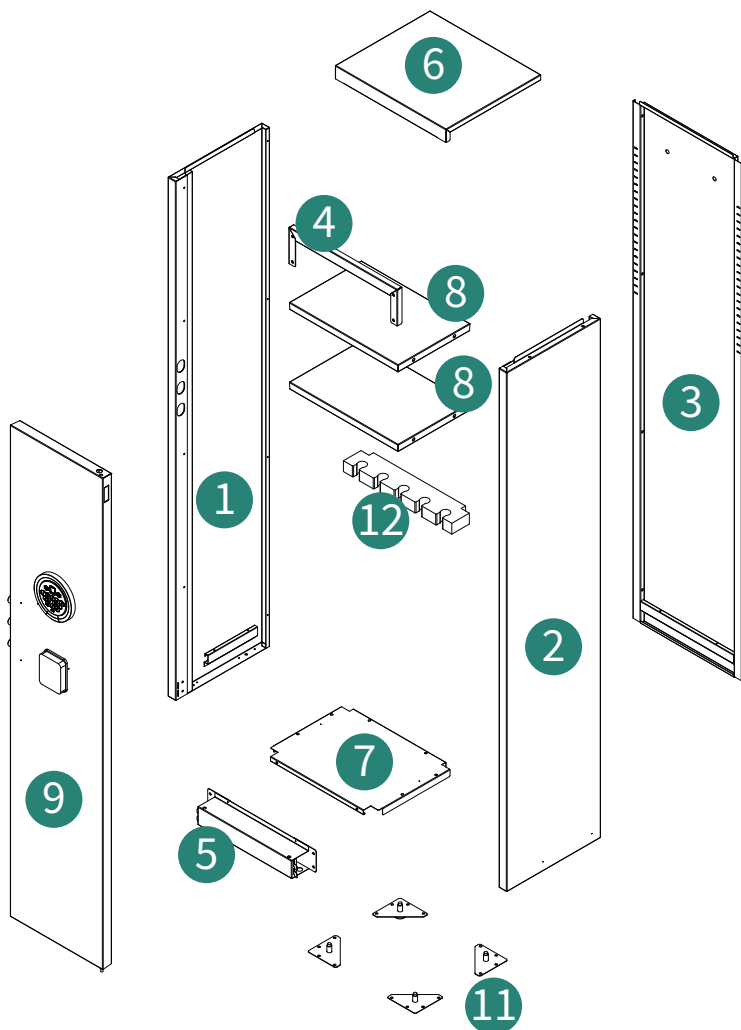


STEP : 1

Secure the left 1 side panel to the back panel
3 using screws D

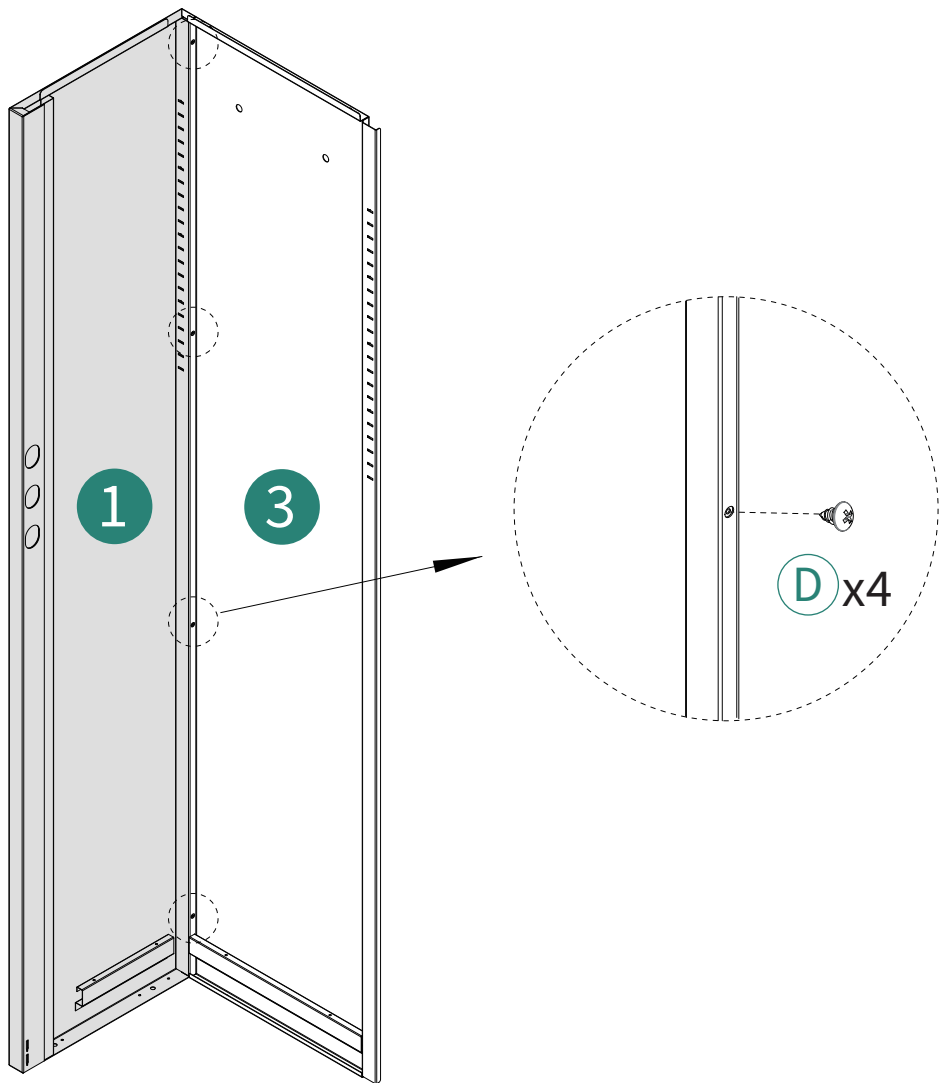


STEP : 2

Secure the right side 2 panel to the back 3panel using screws D

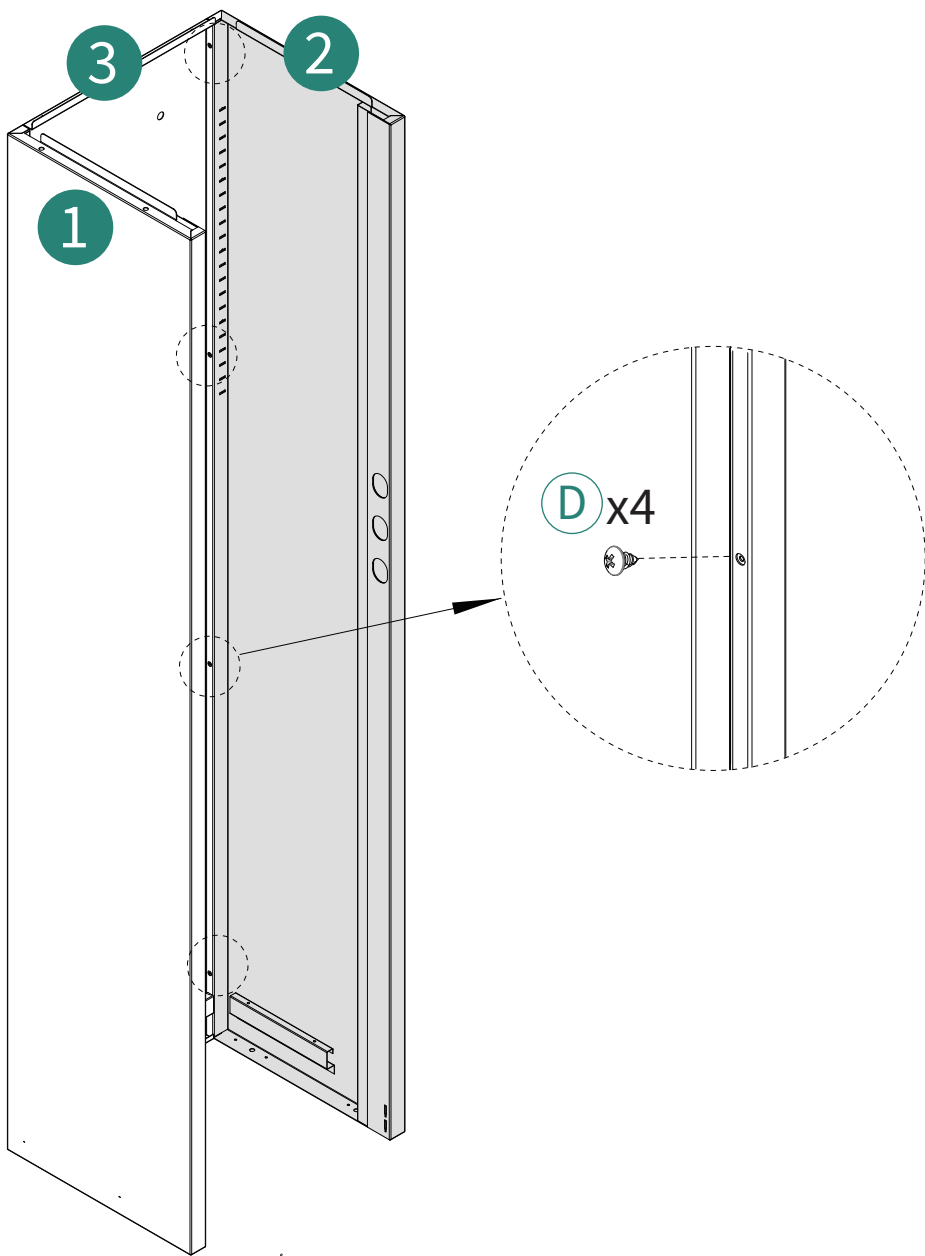

STEP : 3


Secure the Door header 4 to the left panel and right panel using screws D

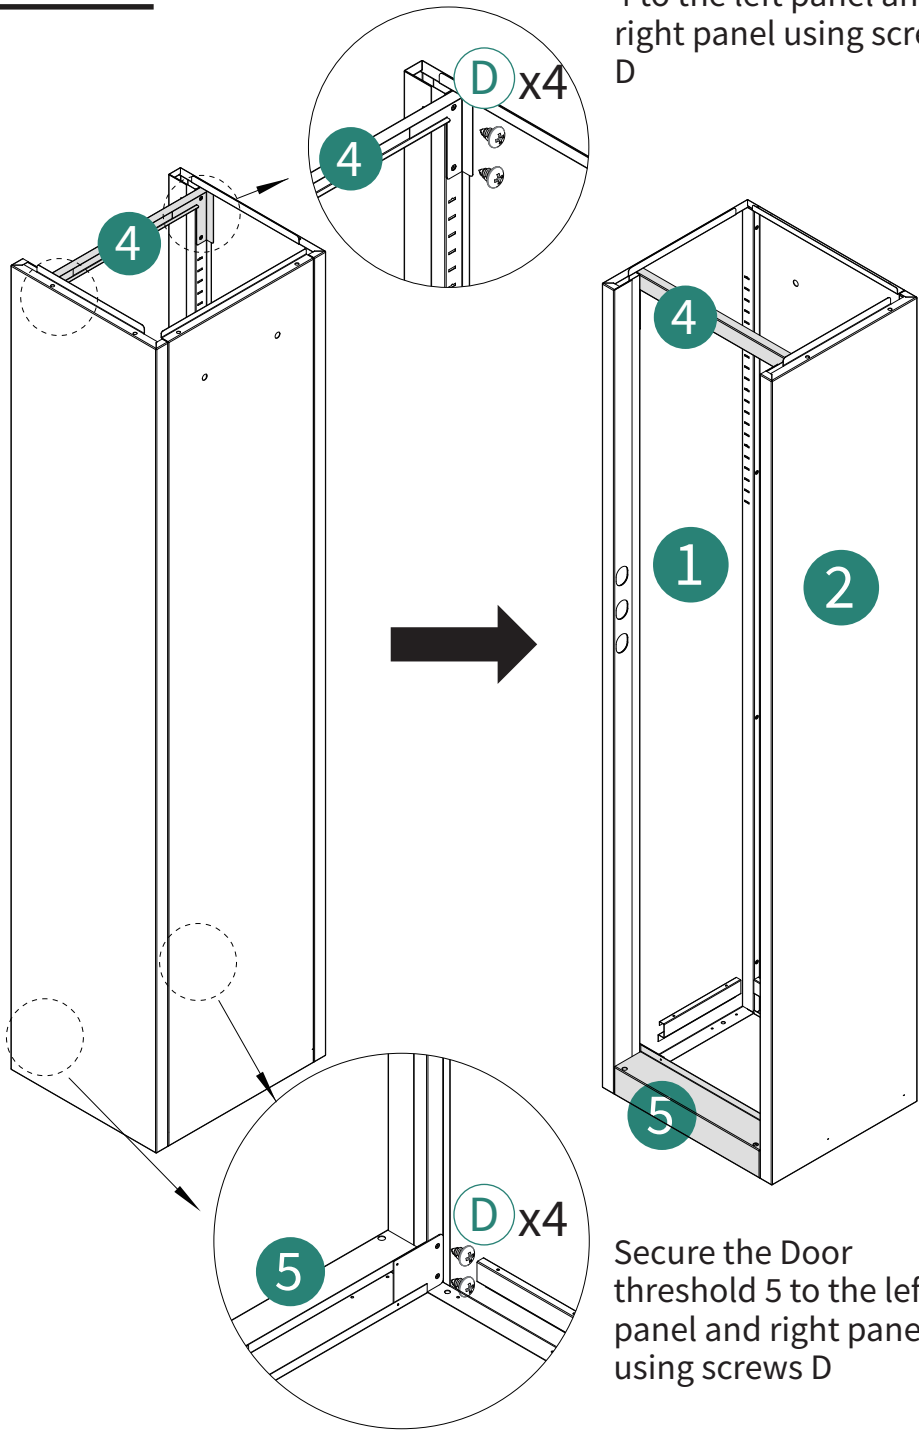

Secure the Door threshold 5 to the left panel and right panel using screws D


STEP : 4

Secure the top panel 6 using screws D

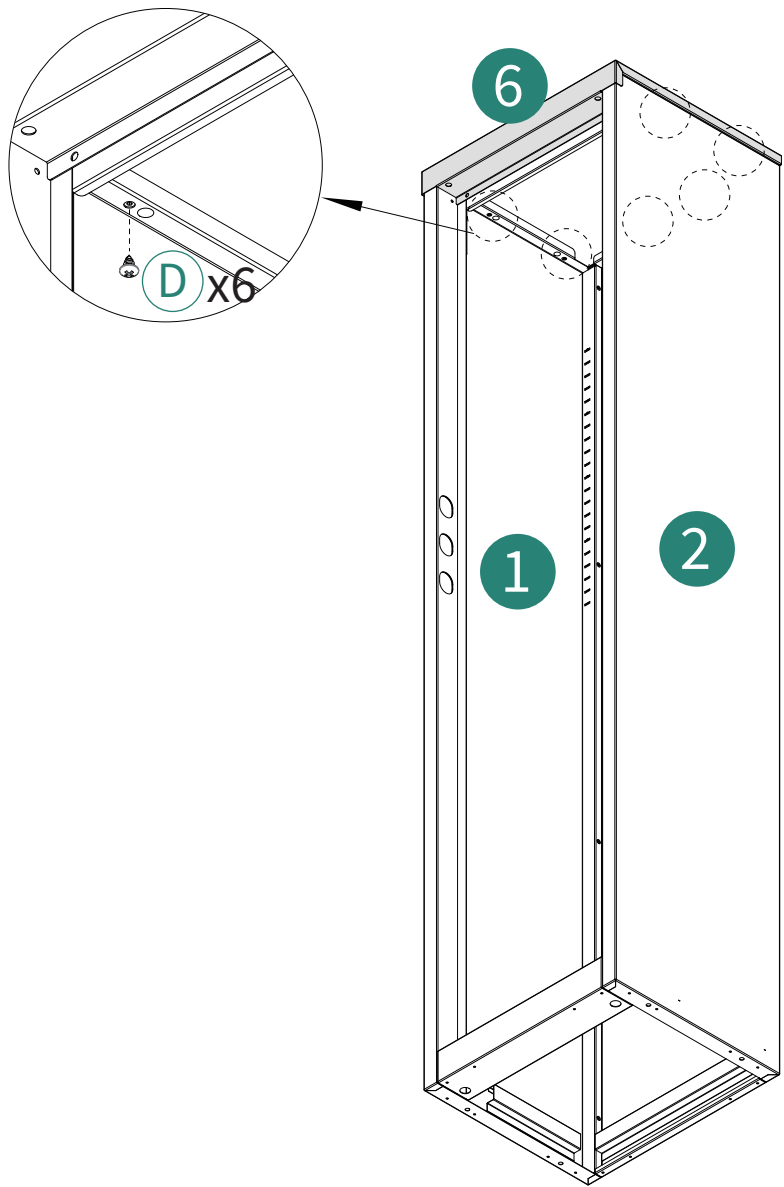




STEP : 5

Secure the bottom panel 7 using screws D

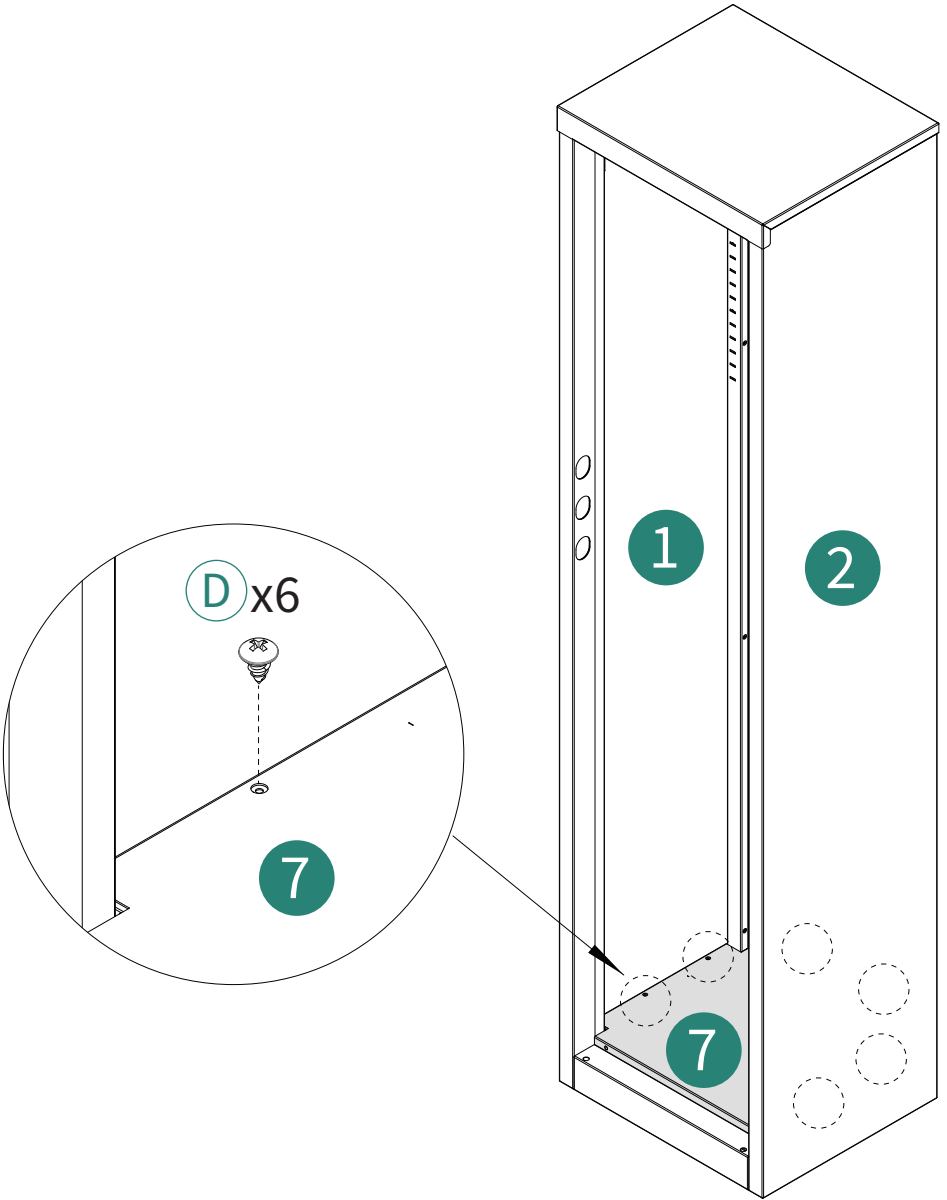


STEP : 6

Install the adjustable feet: first, secure the four fat washer (11) to the bottom of the cabinet with screws D. Then attach the adjustable feet A to the washers

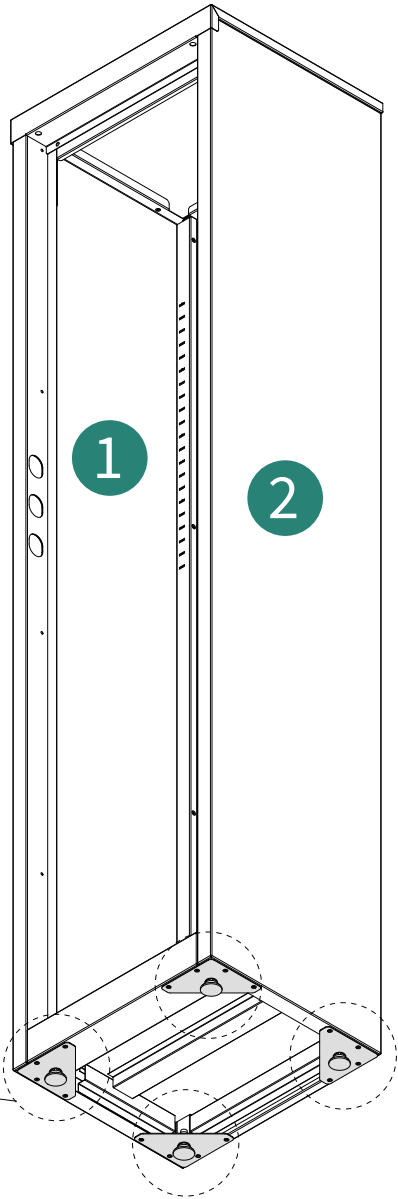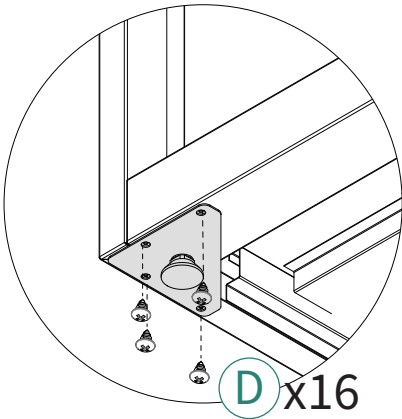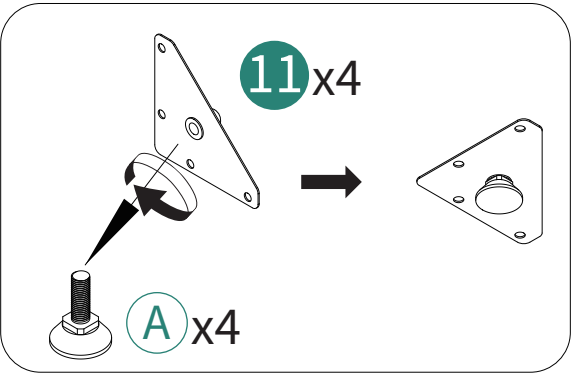


STEP : 7

Install the adjustable hook E, and then place the shelf 8 on top of the hook.

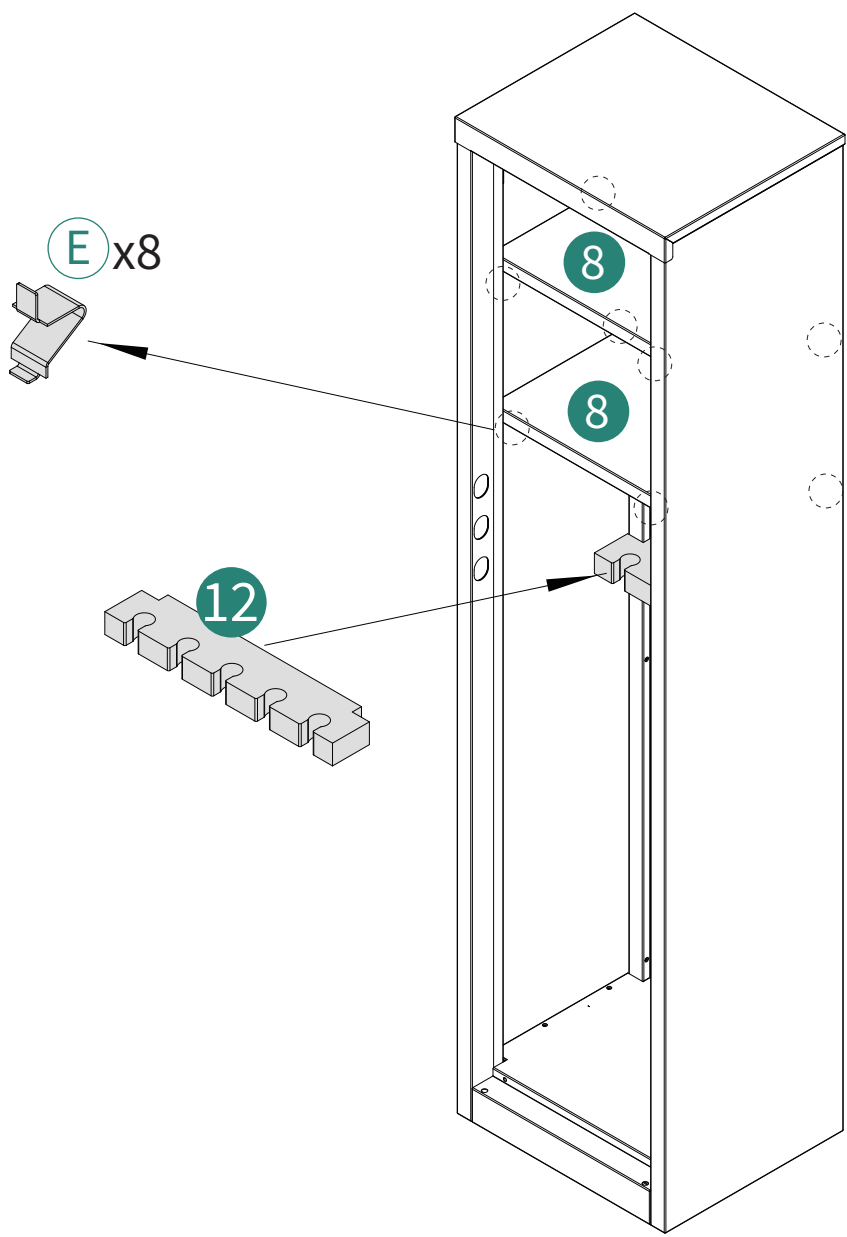


STEP : 8

Combine door hinge B with washer C and install them into the top and bottom hinge holes of the door panel As shown in the figure

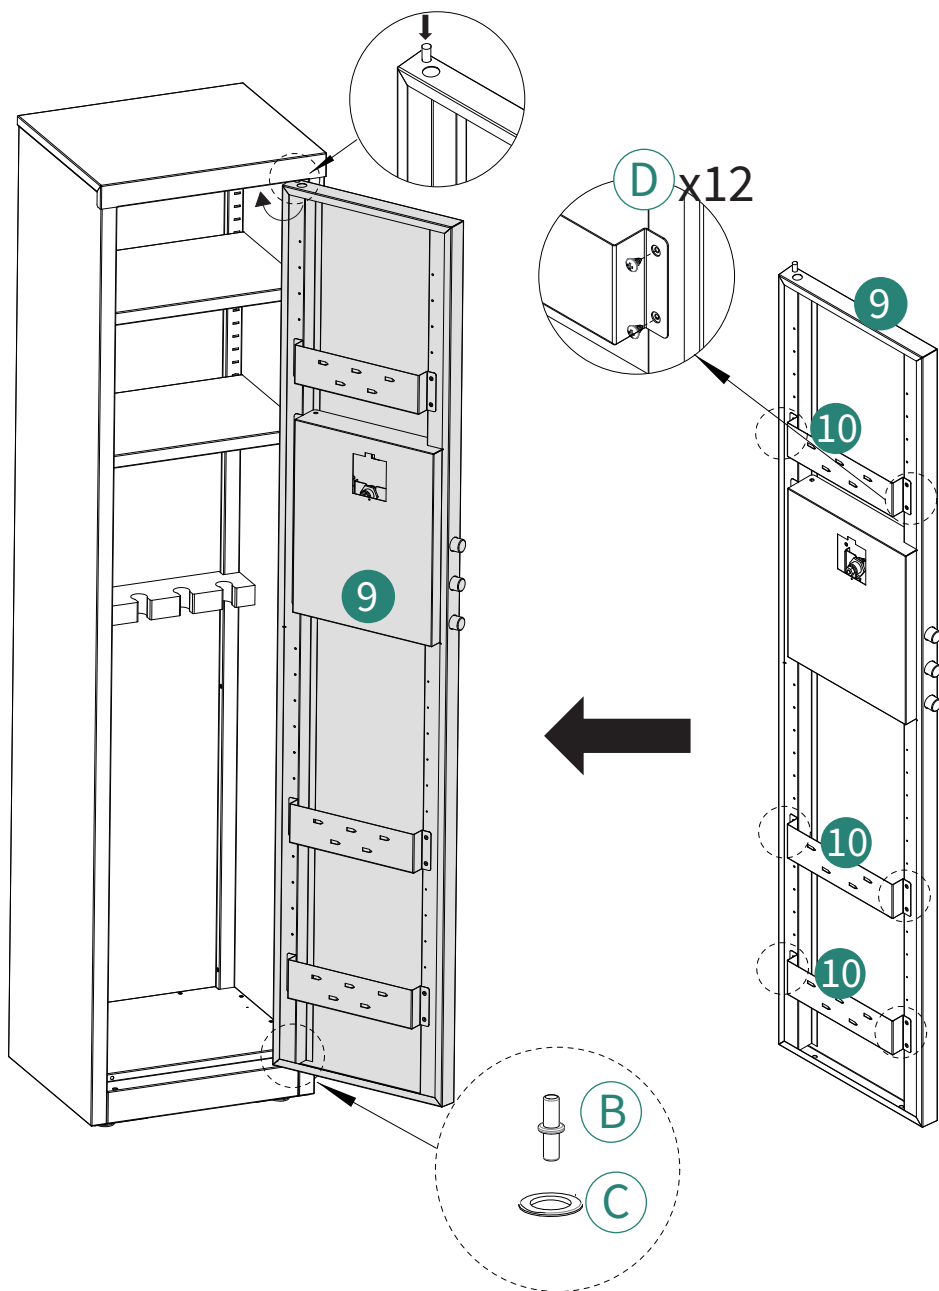

STEP : 9

Installation completed

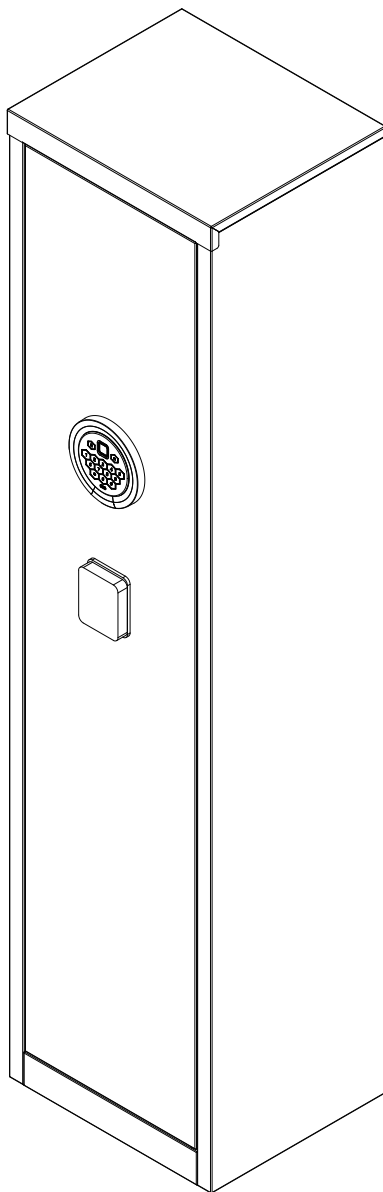

System Setting

Opening Your Cabinet For The First Time

NOTE:

Please use the emergency key to open the cabinet for the first time.



1



2



3

Open the keyhole cover to expose the emergency keyhole. Insert the emergency key into the keyhole, turn it counterclockwise to the limit. Turn the door handle clockwise to open the door for the first time.

Insert The Battery

Remove the internal battery case cover. Install 4 AA batteries (not included) and restore battery case cover.

NOTE:

1. If batteries are too low to open the door, please use the emergency battery box that comes with the cabinet.
2. Rechargeable battery is not recommended, as it may destroy the internal electronic components of the cabinet.

I: Set the user code

Press the set button, hear a "beep", enter a 3-8 digit password and press #. Hear a "beep" and the green light flashes twice. The user code is set successfully.

Note: If the operation is wrong, the buzzer will sound three short "beep" sounds and the red LED light will flash three times.

II: Set the master password

Wake up the system, input 00, press the setting button again, hear a "beep", input a new main password of 3-8 digits and press #, hear a "beep", and at the same time, the green light flashes twice. It indicates that the new main password is set successfully.

Note: If the operation is wrong, the buzzer will sound three short "beep" sounds and the red LED light will flash three times.

III: How to Restore factory Settings

Press the reset button for 3 seconds without letting go, until you hear two "beep" sounds, and the LED green light flashes twice, indicating that the system is restored successfully (factory setting: password 1234, main password blank, sound mode)

IV: How to turn on/off the mute function

1: Turn on mute: wake up the system, input "11#" and see the green light flash twice without sound prompt, indicating that the mute function is on.

2: Turn off the mute: wake up the system and input "11#" to see the green light flash twice and hear two "beep" sounds at the same time, indicating that the mute function is turned off.

V: System lock alarm function

1: If the wrong password is entered for three consecutive times, the system will be locked for 20 seconds and the alarm will be sounded for 20 seconds. During the system lock, other functions cannot be operated.

VI: Shock alarm function

After pressing the wake-up button, press the "*" key and hear "beep". At the same time, the green light flashes twice, indicating that the vibration alarm function is successfully activated. The main board speaker will vibrate for 20 seconds. During the alarm period, you can enter a password to open the door and cancel the alarm.

VII: Function of the lighting lamp in the box

When the correct password is entered to open the door, the box lighting lamp will be on for 30 seconds.

VIII: Low power warning

Enter the correct password, the electromagnet will be sucked for 6 seconds and then released. After that, the buzzer will ring five times in a row "drip", and the red light will flash five times at the same time, indicating that the battery is low. Please replace the battery in time.