 
 


ASSEMBLY INSTRUCTIONS


TV STAND

(BOX 1)


BOX OF TV STAND

NO	ITEM	QTY
	TV STAND	
A		1 pc
	LEG	
B		4 pcs


STEP 1 : Take out the Leg carton (B) from bottom TV Stand (A) as shown . Attach the Leg (B) at the bottom TV Stand (A) used JCBC (1) with Spring Washer (2) Flat Washer (3) and tighten with Allen Wrench (4).

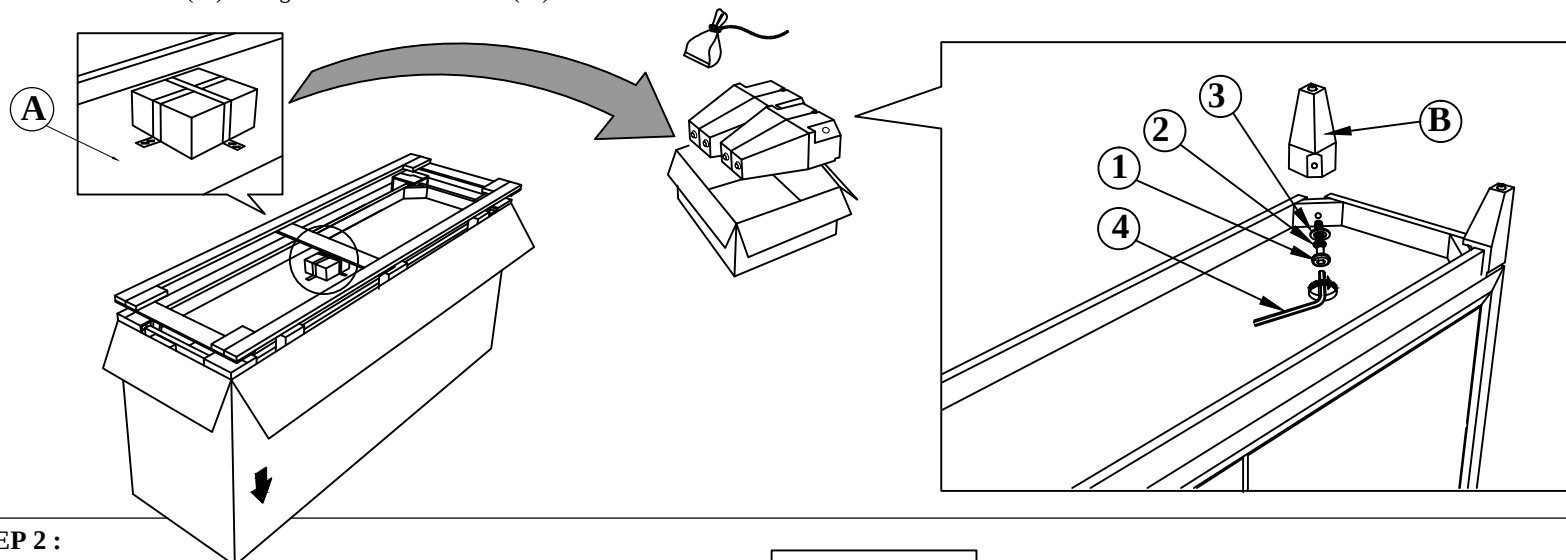

STEP 2 :

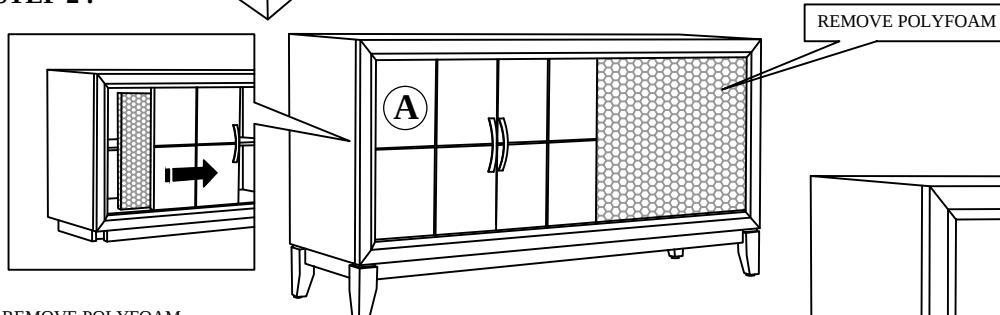

REMOVE POLYFOAM
AT THE BACK OF SLIDING DOOR AS SHOWN.

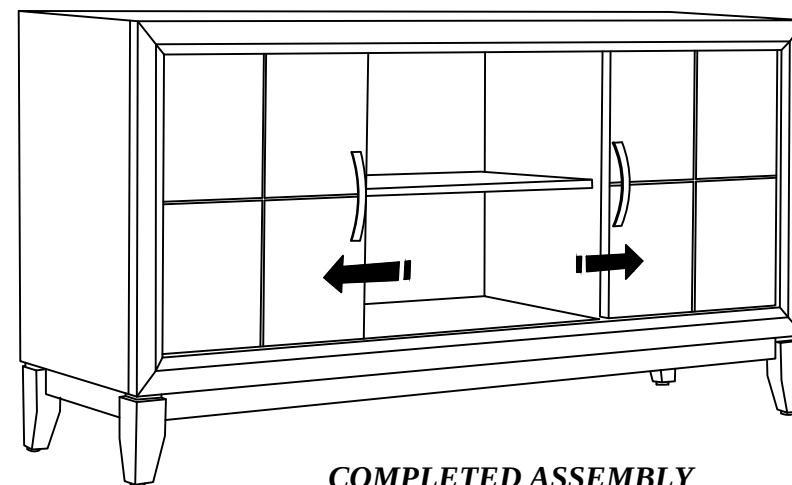

COMPLETED ASSEMBLY

(BOX 1)

HARDWARE LIST

NO	ITEM	QTY
1	JCBC M6 x 50mm 	4 PCS
2	Spring Washer 1/4" Rbw 	4 PCS
3	Flat Washer 1/4"ID x 19mmOD Blk 	4 PCS
4	ALLEN KEY m4x65mm Blk 	1 pc

NOTE : MUST TIGHTEN SCREWS **PERIODICALLY** WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.