


Assembly Instruction Sheet for Model 517395

Package Contents

Part	Description	Quantity
A	Arm Support Plate	1 pc.
B	Fixture Arm	6 pcs.
C	Rod	1 pc.
D	Antlers Decoration	1 set.
E	Metal Sleeve	6 pcs.
F	Hanging Chain	1 pc.
G	Ceiling Canopy	1 pc.
H	Mounting Bracket	1 pc.

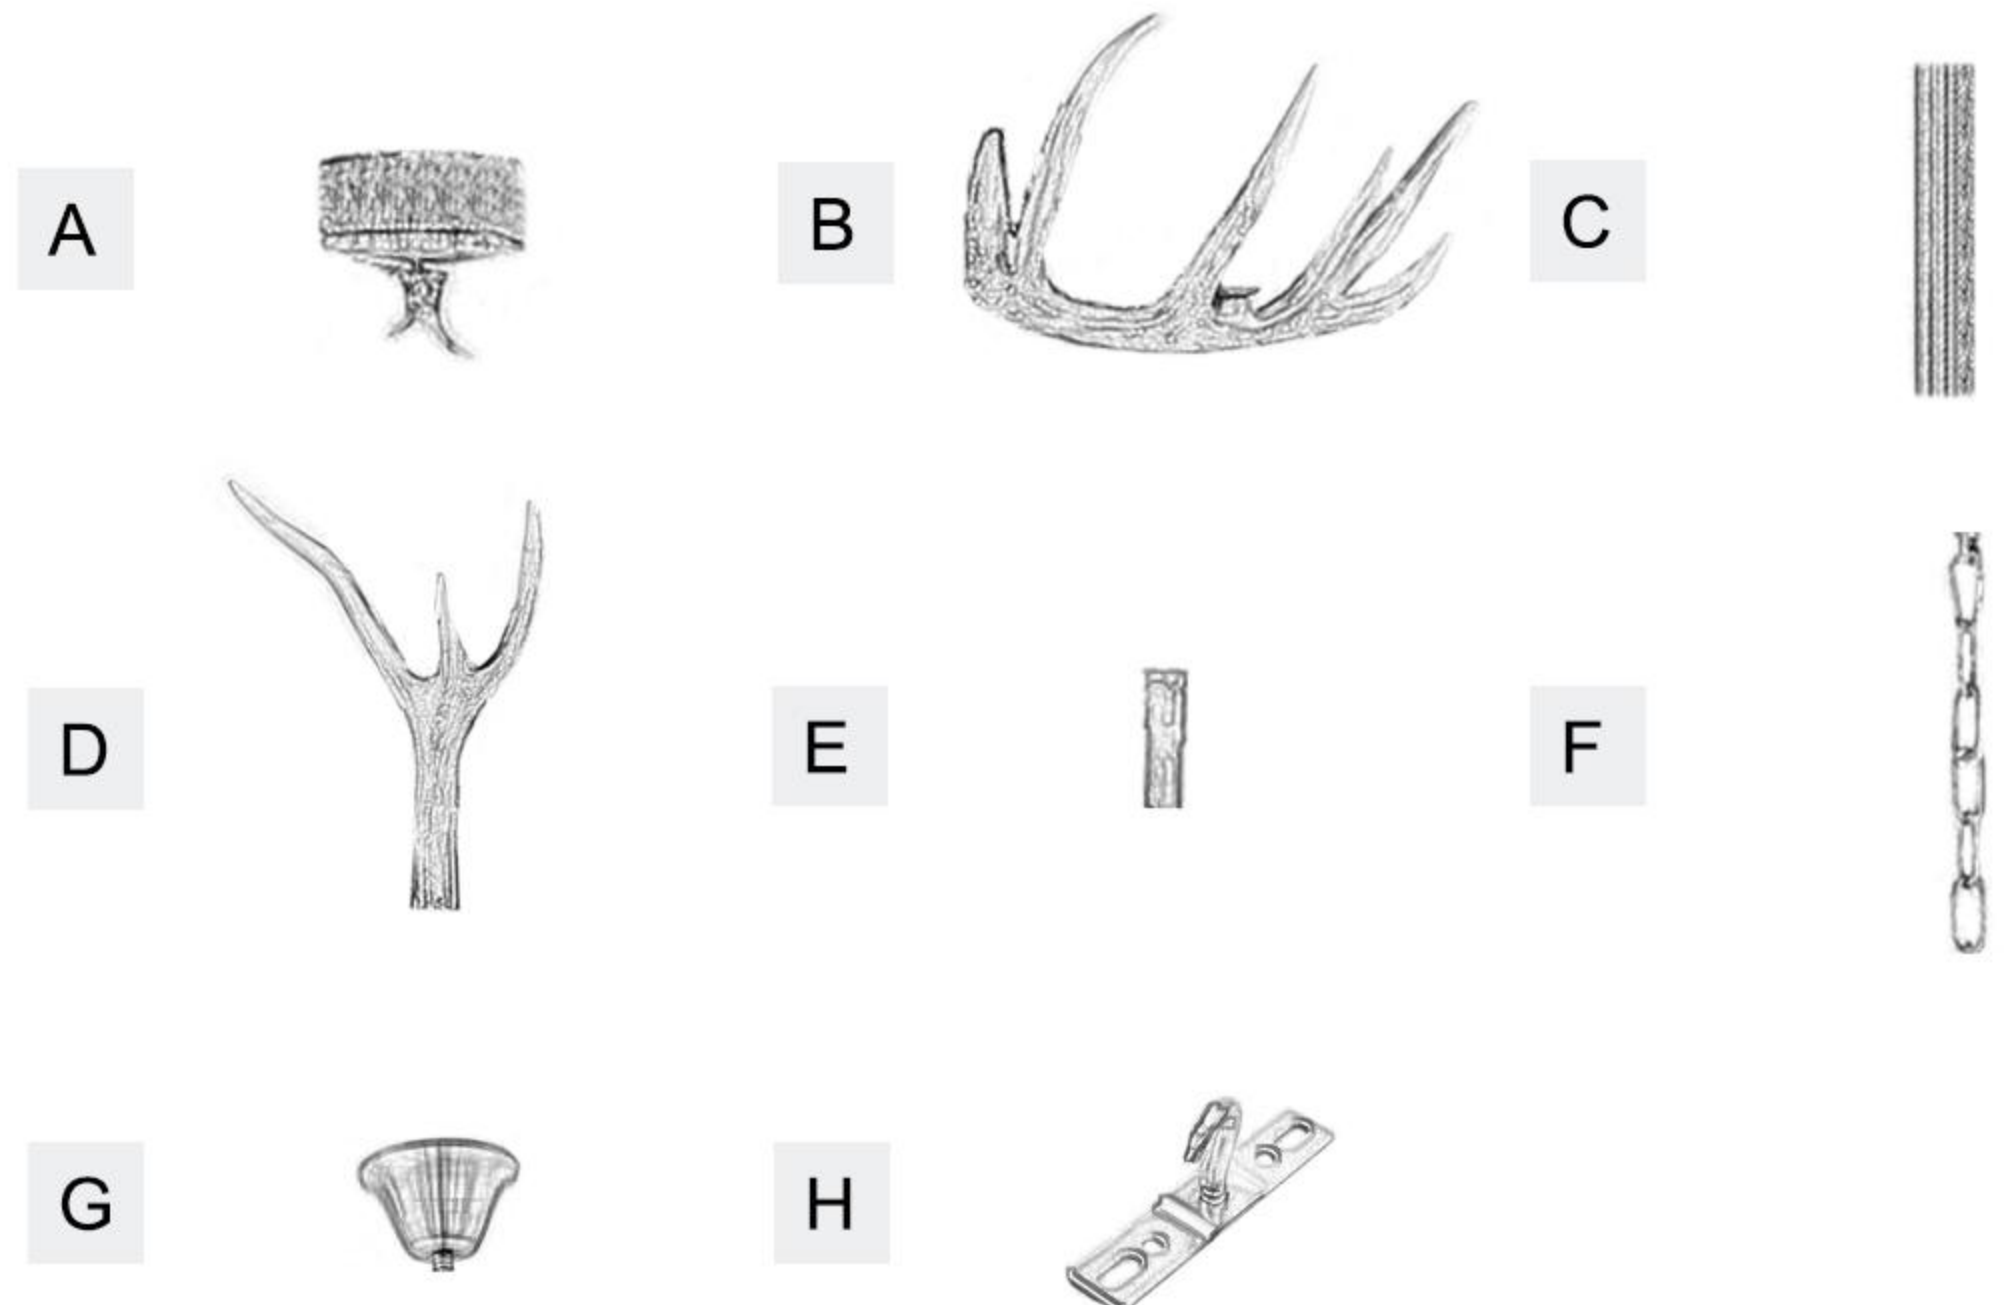

STEP 1

Remove the cover plate from the Arm Support Plate(A).
Fix all Fixture Arms(B) to the Arm Support Plate(A).

STEP 2

Connect wire color Black/Red from the Fixture Arm(B) as one strand of wire.
Connect wire color White/Blue from the Fixture Arm(B) as the other strand.
Connect the two strands of wire with the main wire.

STEP 3

Thread the main wire through the Rod(C).
Install the Rod(C) and Antlers Decoration(D) to the Arm Support Plate(A).
Fix the cover plate back to the Arm Support Plate(A).

STEP 4

Install all Metal Sleeves(E) to the saucers of the Fixture Arms(B).

STEP 5

Connect the Hanging Chain(F) to the Rod(C).
Thread the main wire through the holes of the Hanging Chain(F).
Fix the other end of Hanging Chain(F) to the Ceiling Canopy(G).

STEP 6

Remove the Mounting Bracket(H) from the Ceiling Canopy(G).
Mark the drilling position on ceiling with the help of the Mounting Bracket(H).
Drill holes on the marks and stick the expansion anchors into the holes.
Fix the Mounting Bracket(H) to the expansion anchors with self-tapping screws.

STEP 7

Hold the fixture close to ceiling.
Connect live line to wire color Black/Red from the Ceiling Canopy(G).
Connect neutral line to wire color White/Blue from the Ceiling Canopy(G).

STEP 8

Attach the Ceiling Canopy(G) to the Mounting Bracket(H).

STEP 9

Insert the bulb(not included) to the bulb base.

Your fixture is now assembled and ready to use.