 



Plow & Hearth[®]

59C25 Coat Rack Assembly Instruction

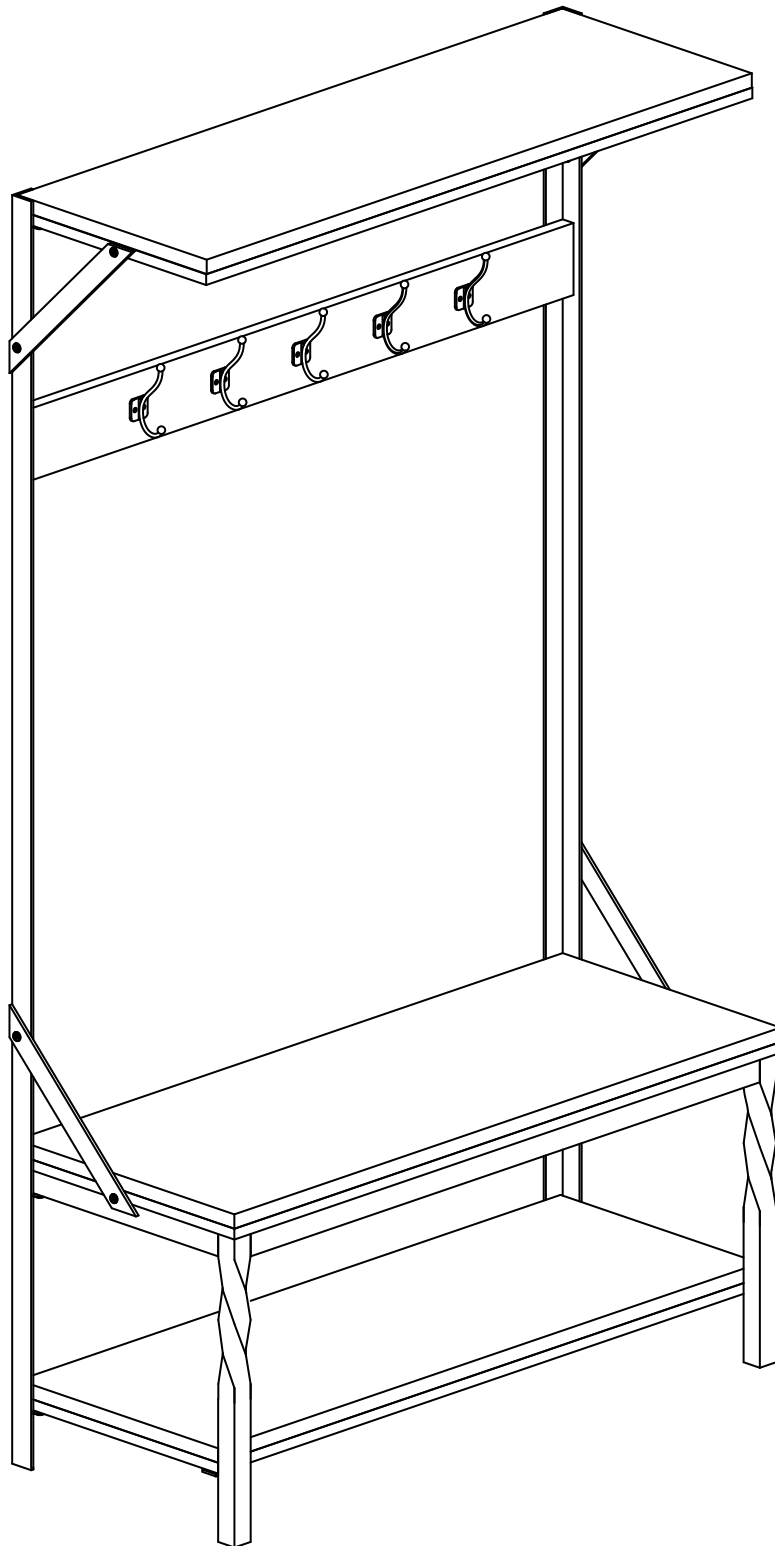


PARTS AND HARDWARE LIST

 01




x 1pc

 02




x 1pc

 03




x 1pc

 04

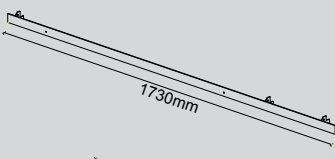

x 1pc

 05

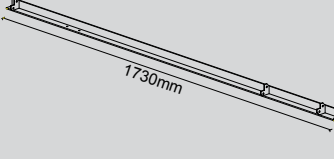

x 1pc

06



 
x 2pcs

07




x 4pcs

08



x 1pc

 A



x 2pcs

B



x 26pcs

C



 
x 28pcs

D



x 28pcs

E



x 1pc

F



x 1pc

G



x 1pc

H



x 1pc

I



x 1pc

 
J



x 2pcs

Step 1


Note: Do not fully tighten bolts.

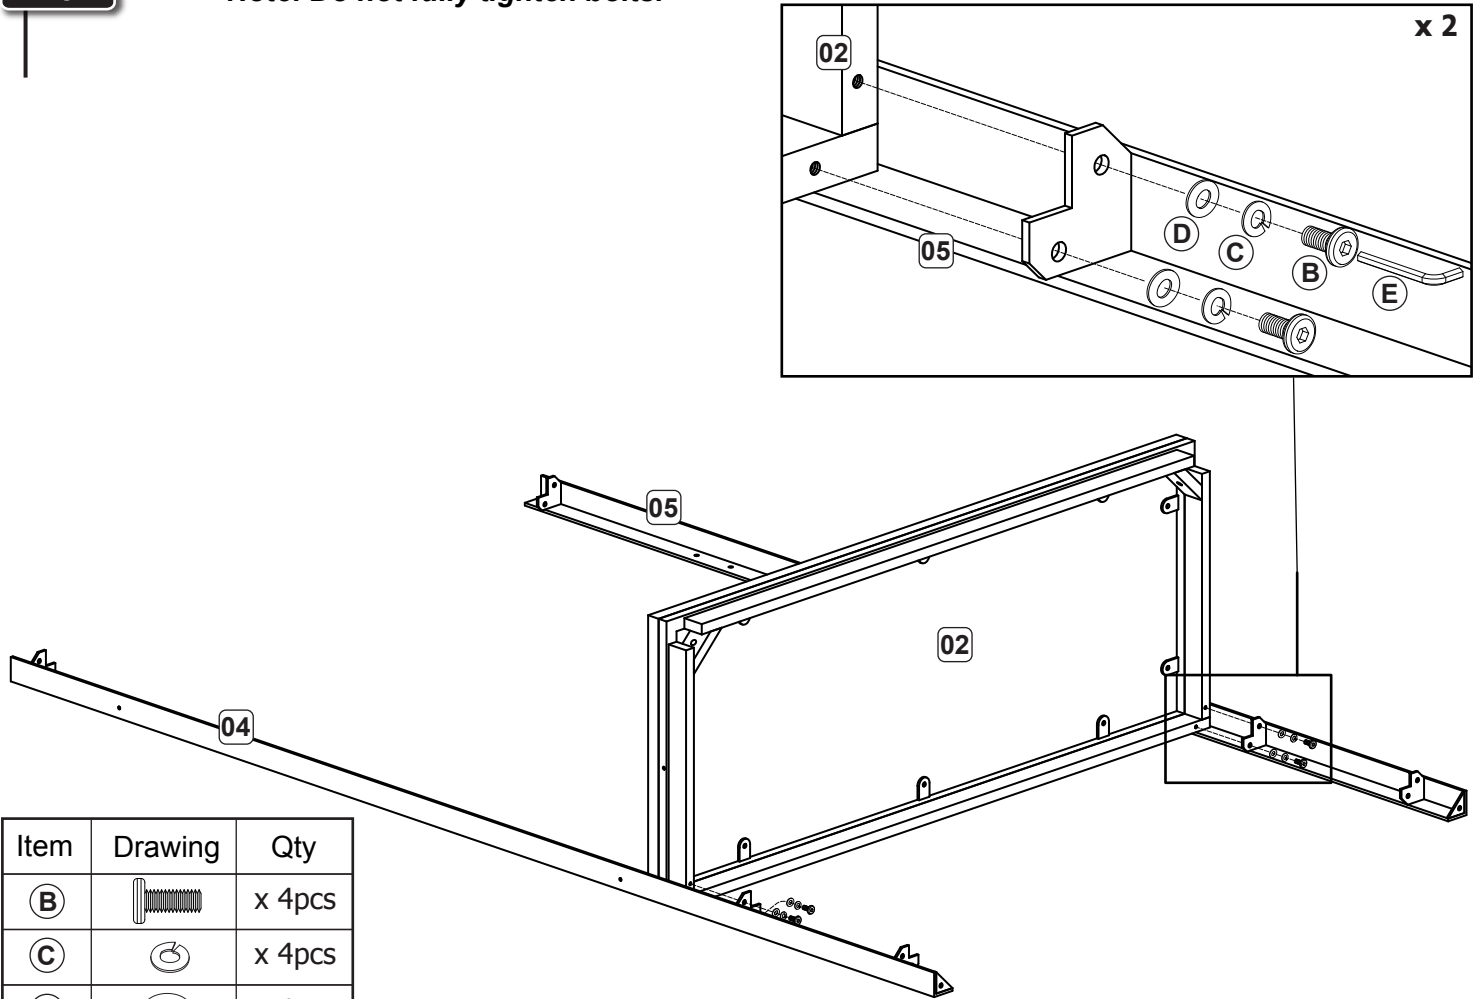

Item	Drawing	Qty
B		x 4pcs
C		x 4pcs
D		x 4pcs
E		x 1pc


Step 2

 Note: Do not fully tighten bolts.

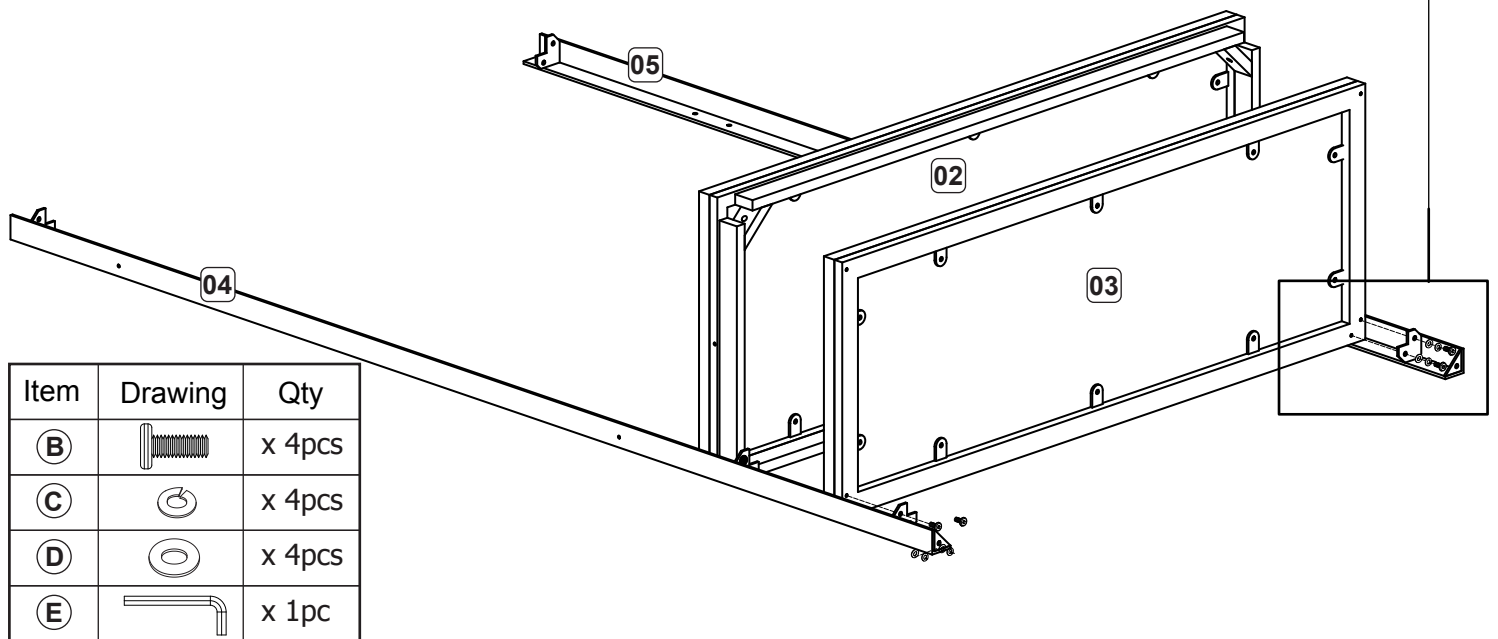


Step 3

 Note: Do not fully tighten bolts.

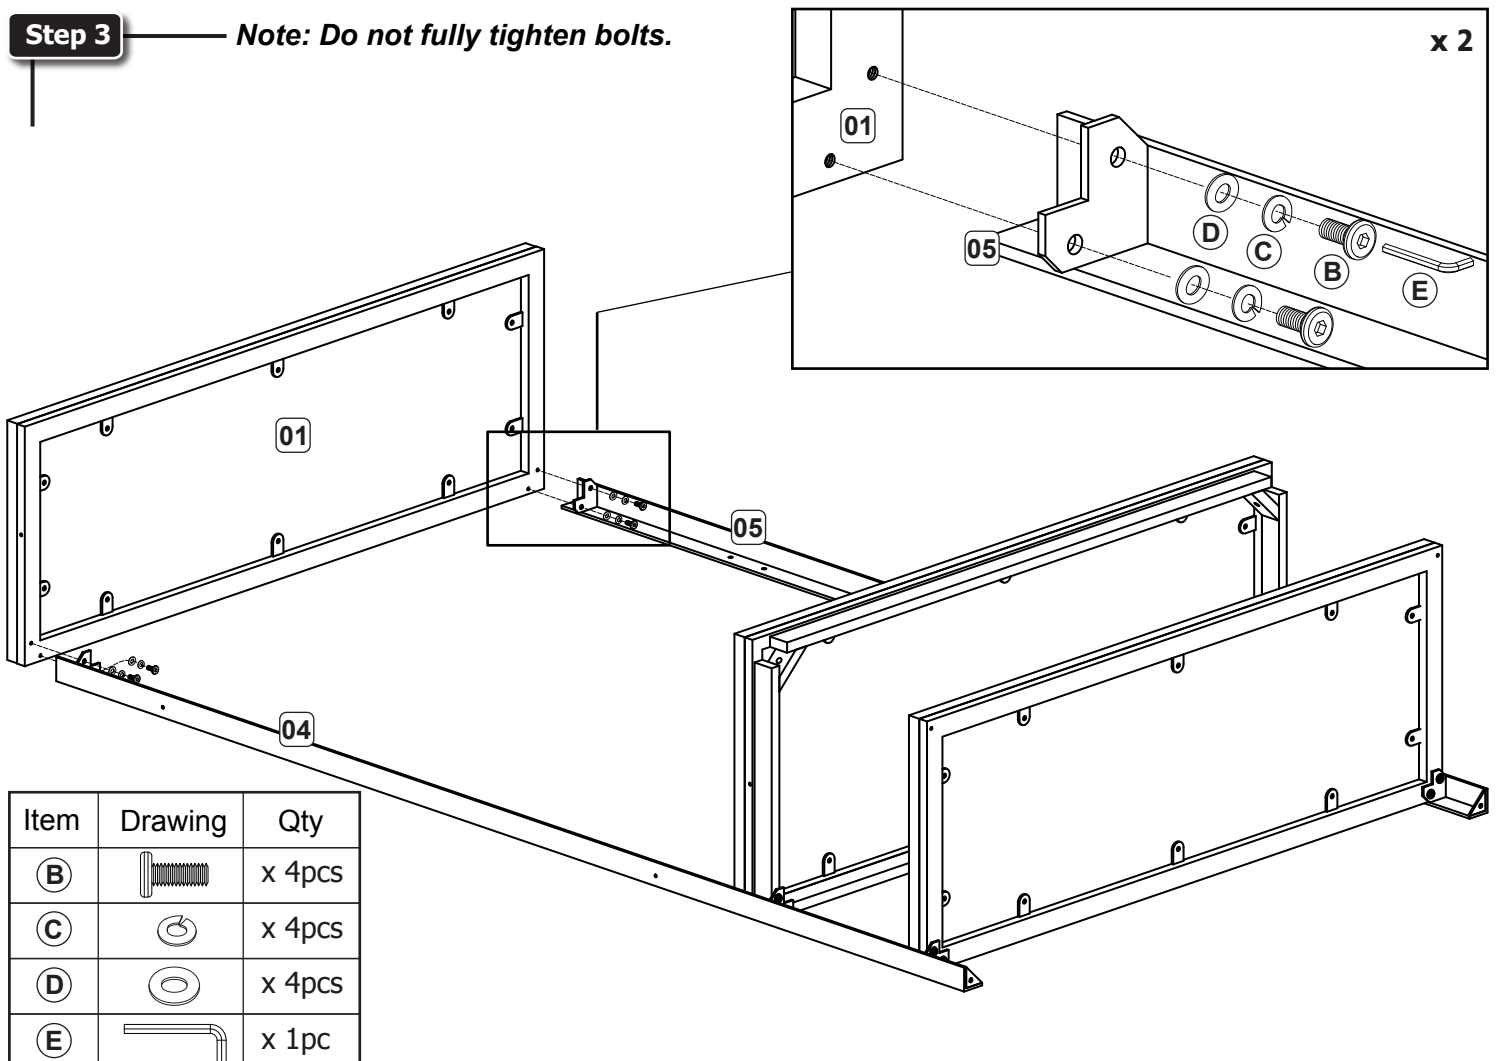


Step 4

 Note: Do not fully tighten bolts.

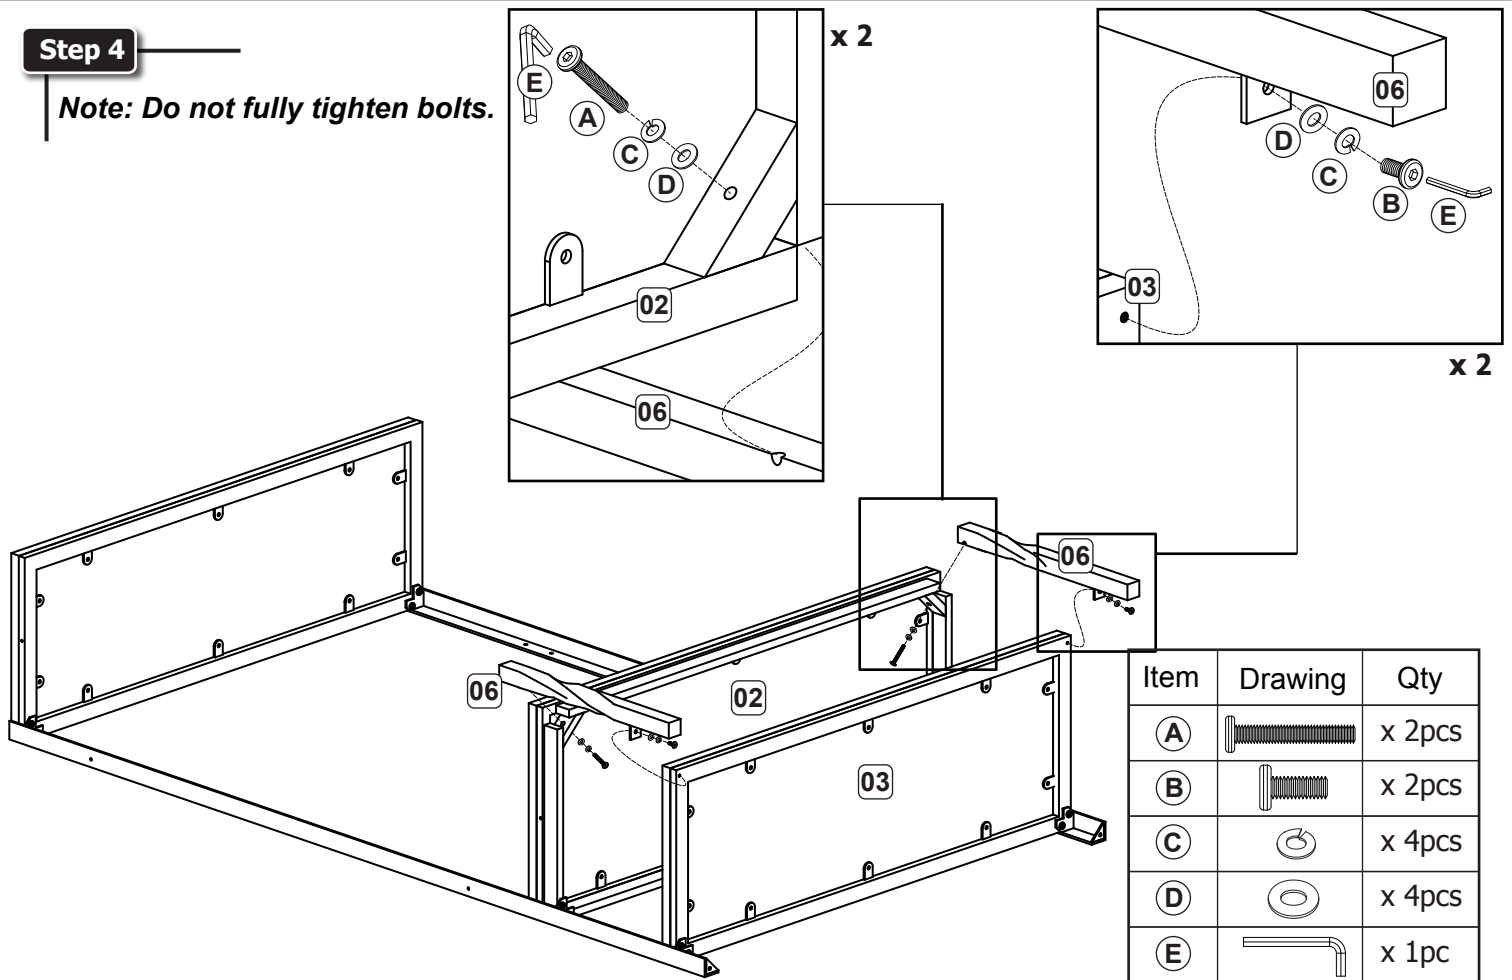


Step 5

 Note: Do not fully tighten bolts.

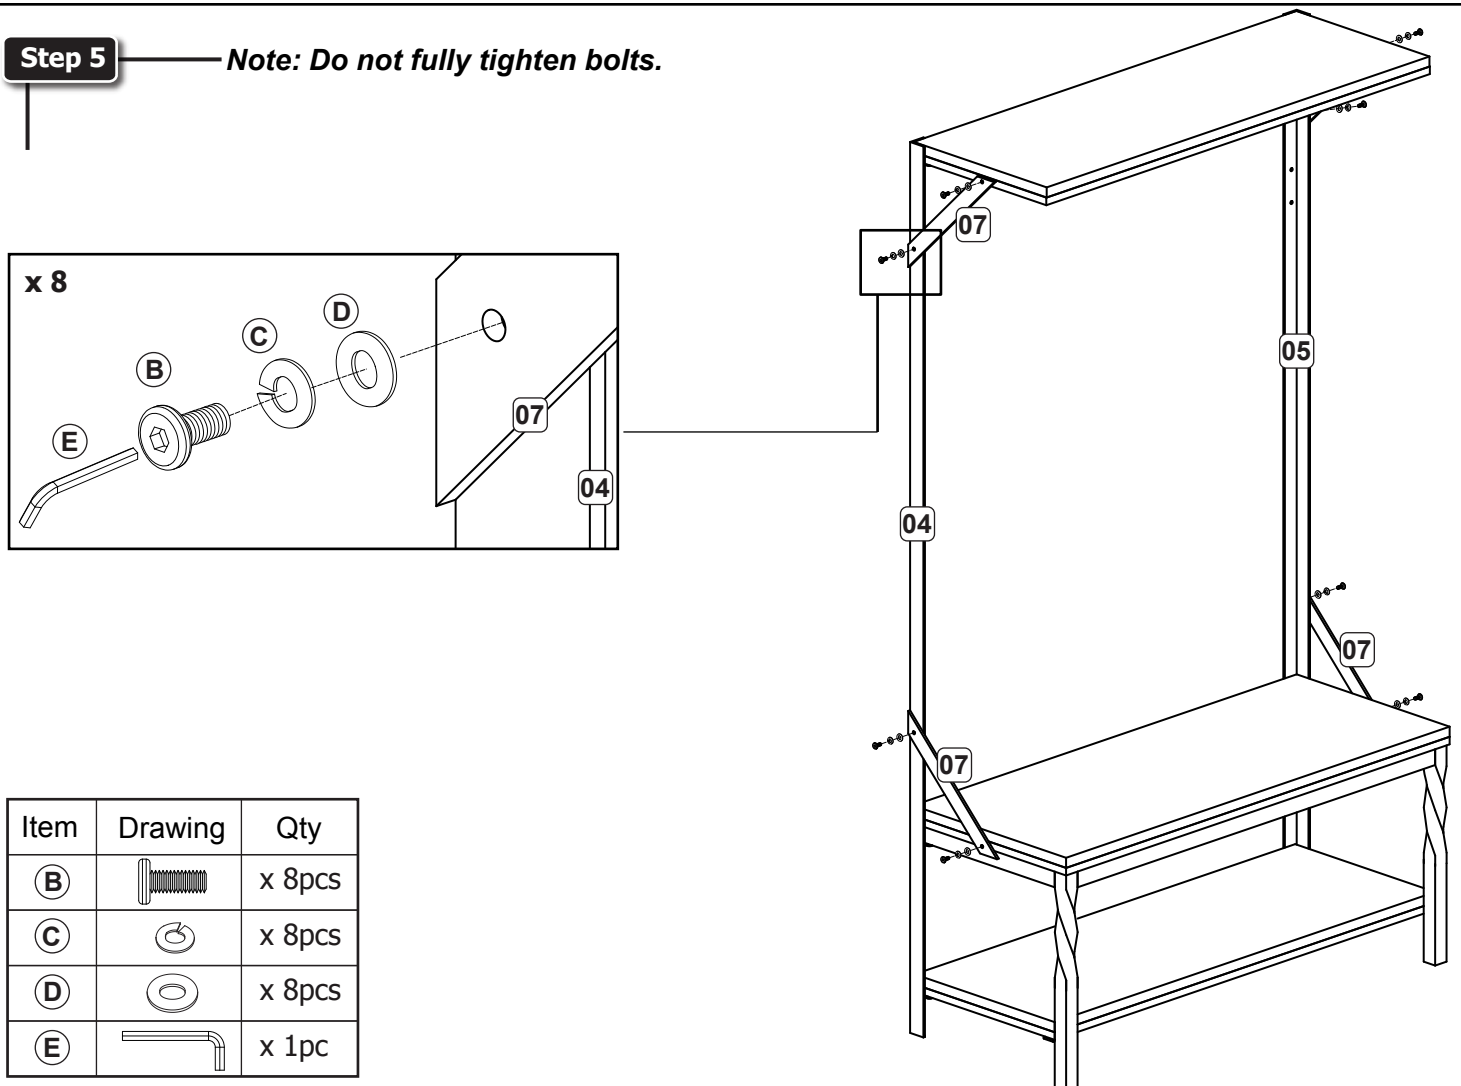

Step 6

 Note: Fully tighten all bolts.


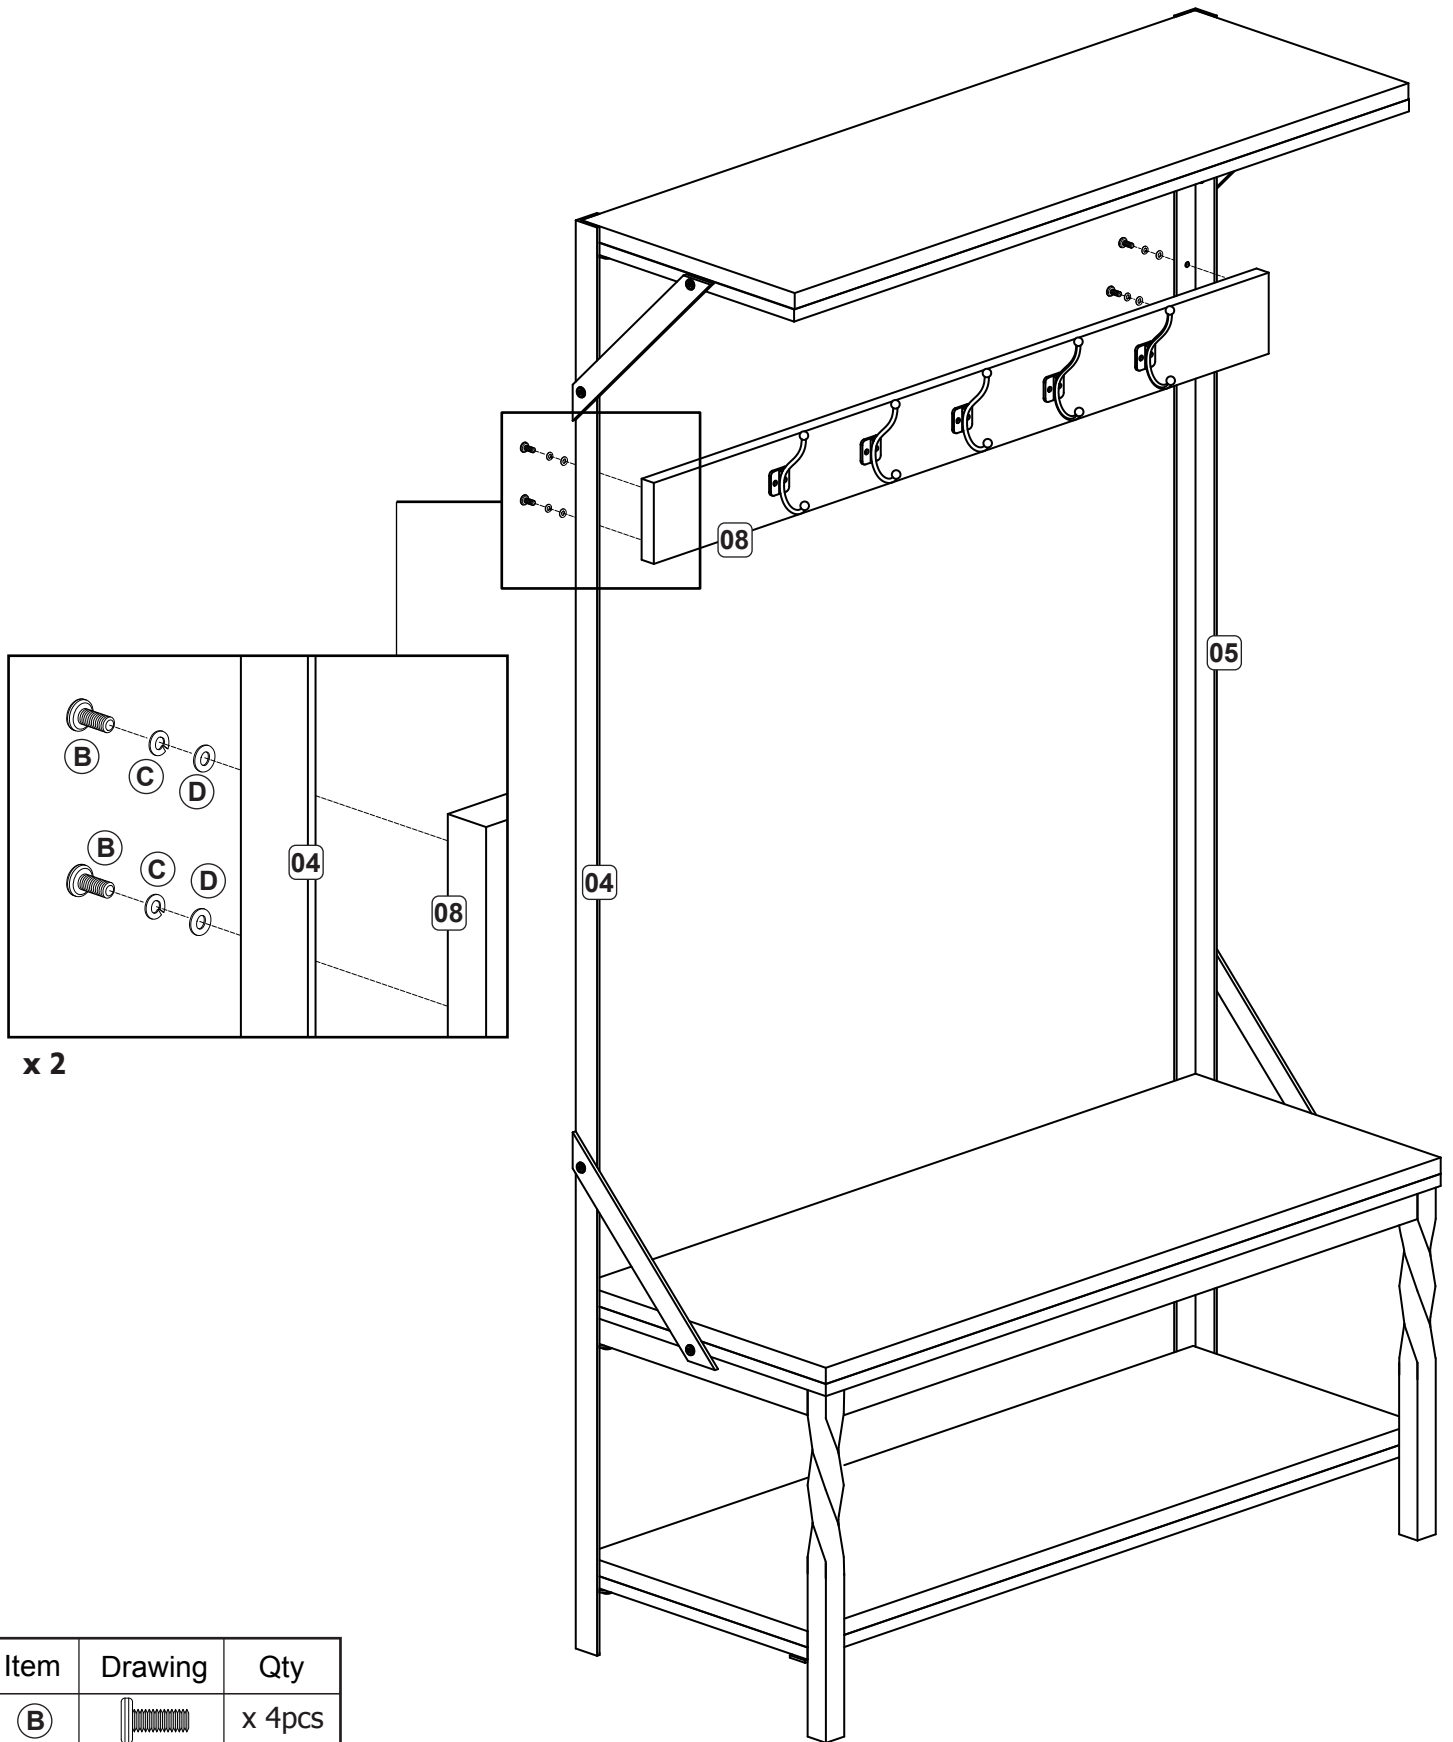


x 2

Item	Drawing	Qty
(B)		x 4pcs
(C)		x 4pcs
(D)		x 4pcs
(E)		x 1pc

Step 7

  Wall

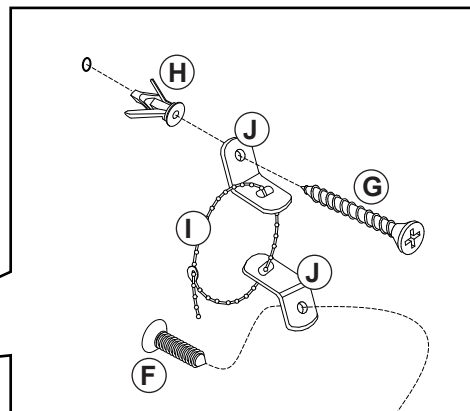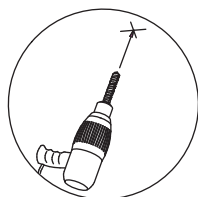

Item	Drawing	Qty
(F)		x 1pcs
(G)		x 1pcs
(H)		x 1pcs
(I)		x 1pcs
(J)		x 2pcs

