




INSTALLATION INSTRUCTIONS FOR THE FIREPLACE

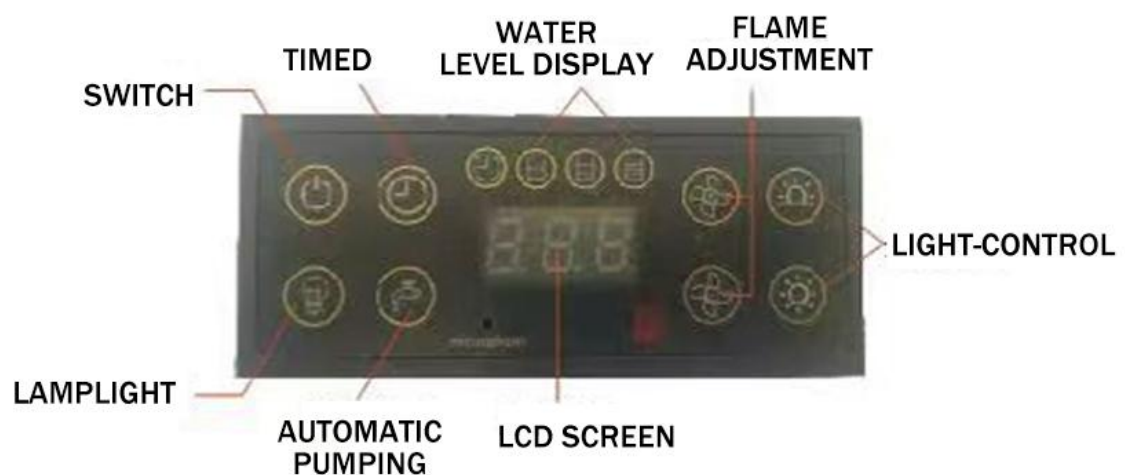

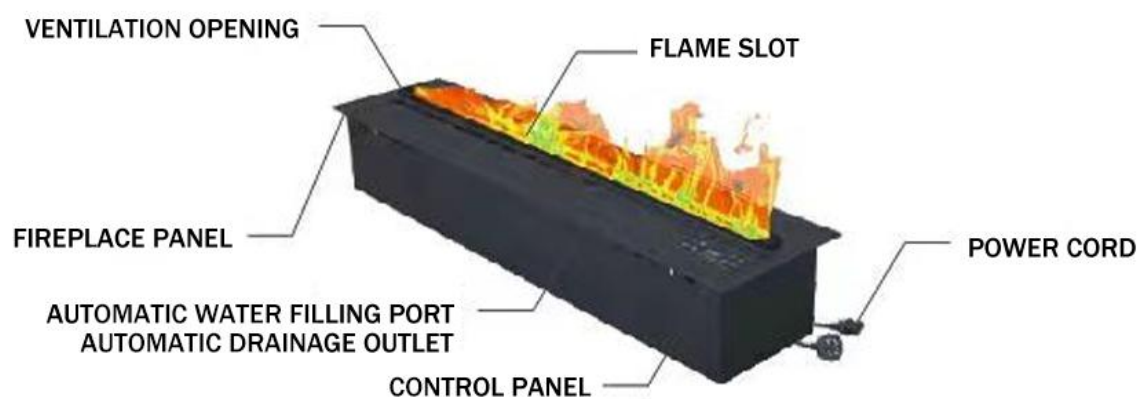

THE PROCESS OF AUTOMATIC WATER FILLING

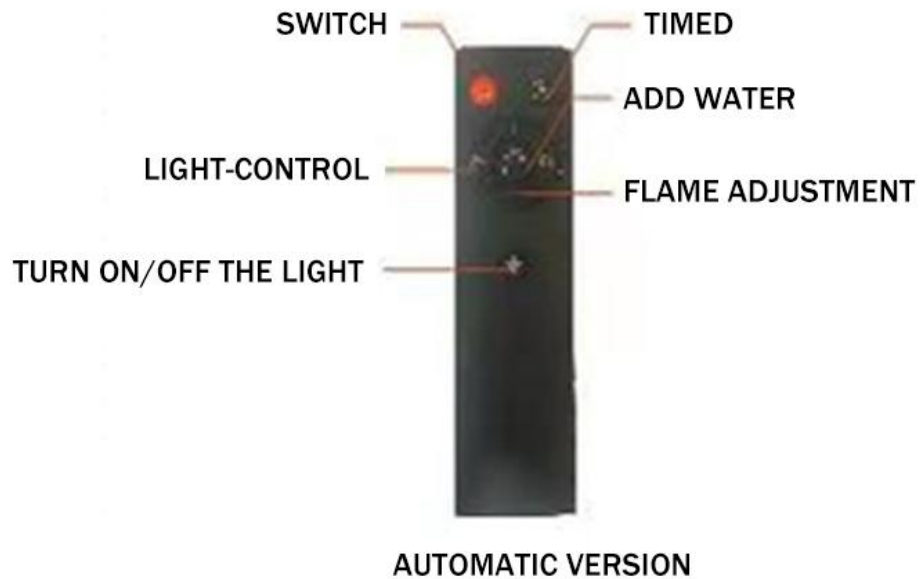

**1.THE SYSTEM WILL FIRST DISPLAY A PROMPT
INDICATING THAT THE WATER LEVEL IS INSUFFICIENT**



**2.INSERT THE WATER PIPE INTO THE INLET
PORT TO INITIATE AUTOMATIC WATER FILLING
CONTINUE UNTIL THE TANK IS FULL
THEN A "WATER FULL" PROMPT WILL APPEAR**

THE PROCESS OF AUTOMATIC DRAINAGE



**1.FIRST TURN ON THE MACHINE, THEN
INSERT THE WATER PIPE INTO THE DRAINAGE OUTLET**



2.LONG-PRESS THE WATER ADDITION BUTTON FOR 6 SECONDS



3.DRAINAGE COMPLETED SUCCESSFULLY