



Please do not hesitate to contact us whenever you want,
we are always more than happy to help you!

 support@tasvac.com

MADE IN CHINA



User Manual


R5S

**CORDED STICK
VACUUM CLEANER**

■ CONTENTS

Product Parts	01
Installation Instructions	02
Usage Instructions	02
Cleaning and Maintenance	04
Main Technical Parameters	04
Packing List	05
Attention	05
Trouble-shooting	07
Warranty	07

Product parts

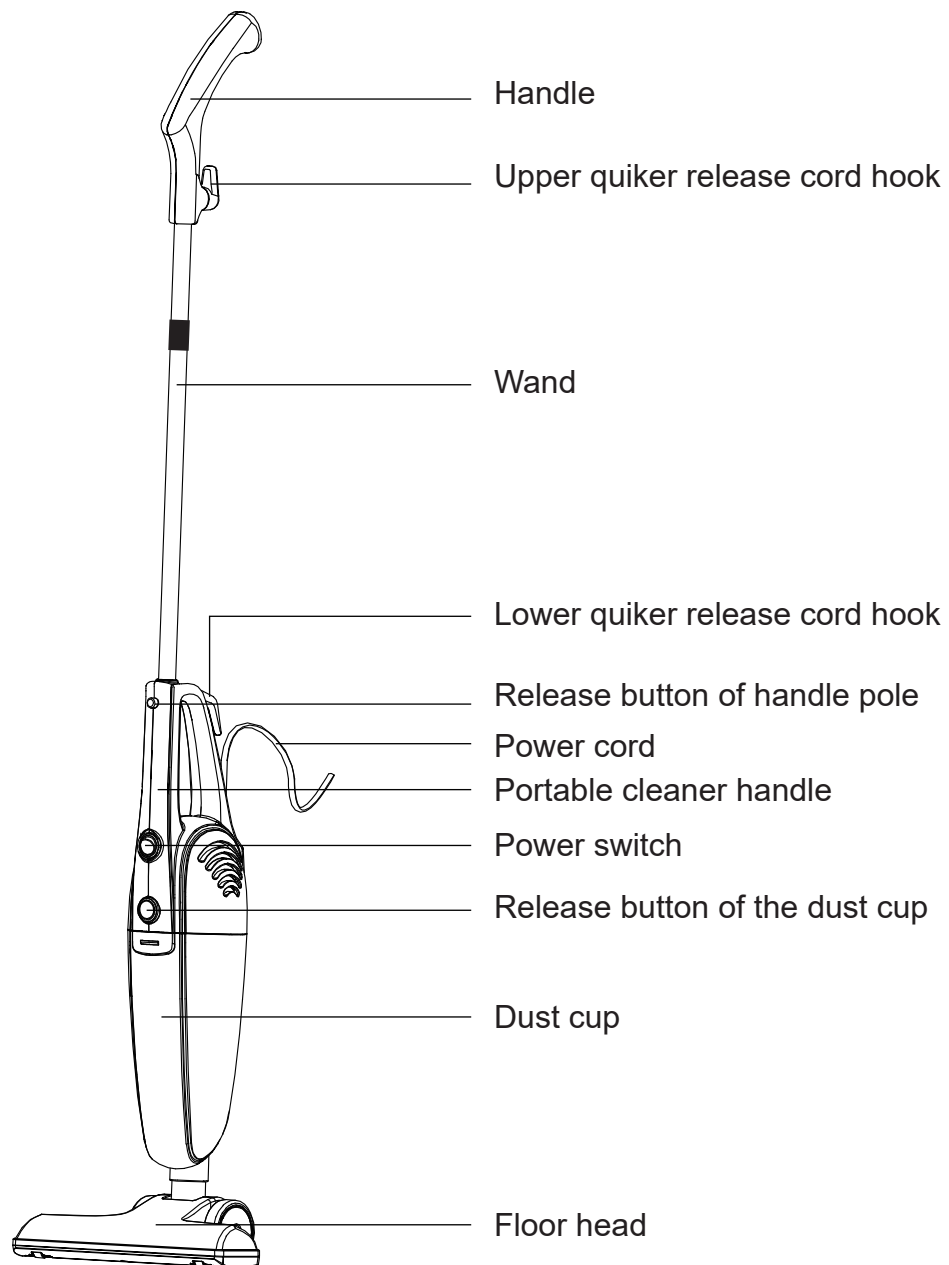


01


Installation instructions

Note: The installation or removing the parts, please unplug!

Step 1. Connect the wand with the cleaner

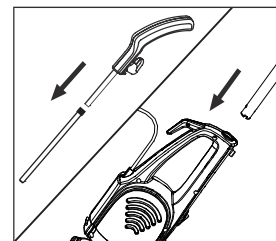


Insert the handle into the wand.
Directly insert the wand into the handle hole until a clicking sound is heard.

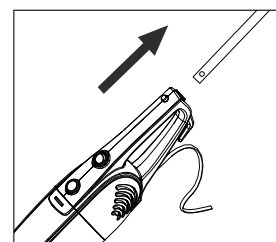

If you want to disconnect them, long press the release button of handle pole and take out the wand by pulling it.


Step 2. Connect the cleaner with the brush

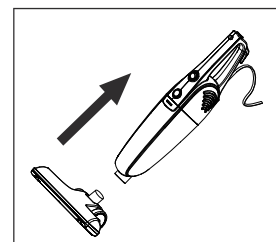

Turn the front side of the cleaner head toward the power switch, insert its short pole into the suction port and make sure they are firmly connected.

Usage instructions


Installation of washable HEPA filter

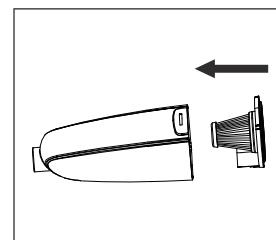

Please must insert the HEPA filter in the dust cup before using the vacuum.

02

Connect the cleaner with the dust cup

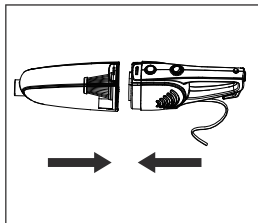


Directly connect the duct cup with the cleaner until a clicking sound is heard. If you want to disconnect them, press the release button and pull them into opposite direction.

Winding power cord




The vacuum cleaner is equipped with upper and lower winding hooks for easy storage, which can be used for winding power cord.

Vertical use

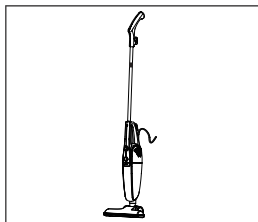

1. Install the handle and wand, and then insert it into the cleaner.
2. Connect the cleaner head with the dust cup.
3. Connect the vacuum to the electricity supply.
4. Press the "I" of the power switch to turn on the vacuum and start to clean.
5. Press the "O" of the power switch to turn it off when finished.

Portable use

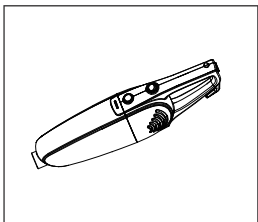


1. Take off the wand from the cleaner.
2. Remove the cleaner head from the dust cup.
3. Turn on the cleaner and you can start to clean.
4. Insert one accessory into the suction port if necessary.
5. Turn off the cleaner when finished.

Cleaning and maintenance

Important: If the suction cup at the suction port blocked, turn off the vacuum cleaner and remove the bulk material before use.


1. Do not use a vacuum cleaner near heat sources, radiation or burning cigarette butts.
2. When plug or unplug, make sure your hands are not wet.
3. Before using the vacuum cleaner, be sure to move away from large or sharp objects, to avoid harm dust cup filter.
4. When pulling the plug, pull the plug not the power cord;
5. Do not suction burning cigarettes, matches or other burning objects;
6. Do not use the machine until the dust cup fitted properly.

Clean dust cup

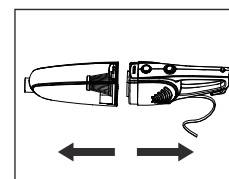

1. Remove the dust cup
2. Remove HEPA
3. Pour out the trash from the dust cup
4. Wash it if necessary
5. Make sure the cup is dry before installation

Clean HEPA filter

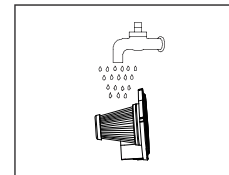


1. Gently knock the dust out off the HEPA filter
2. Wash it gently with only water if necessary, not with a brush in order to protect its filter material

ATTENTION!

Make sure the filter is dry (air dry only) before installation.
Do not use the washing machine to clean the dust cup filter!
Do not use hair blower to dry filter, it needs to dry naturally.

Clean sponge pad (which is right below air inlet of the cleaner)

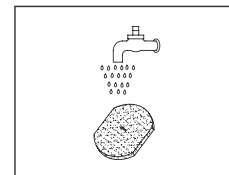

1. Gently knock the dust out off the sponge pad
2. Wash it gently with water if necessary, not with a brush

ATTENTION!

Make sure the sponge is dry (air dry only) before installation.

Main technical parameters

Rated voltage, Rated frequency	AC110-120V~, 50/60Hz	Rated power	400W
Dust cup capacity	1L	Cord length	6M

Packing list

Item Name	Quantity	Item Name	Quantity
Portable vacuum cleaner	1	Wand + Handle	1
Cleaner head	1	Crevice tool	1
User manual	1	HEPA filter (in vacuum)	1

ATTENTION

1

If the suction port or filter components get stuck badly during use, the motor's temperature might reach over 105°C. Due to the inner temperature protector, the machine will automatically stop working to protect the motor from being burnt. In this case, please refer to the trouble-shooting below first. Usually the machine can start to work again after 35 minutes due to temperature drop.

2

Do not use other accessories that are not approved by the manufacturer. If the machine malfunctions in this case, the warranty will be automatically suspended.

3

If the product is damaged or the accessories are incomplete after opening the box, please contact the seller at once for replacement.

4

Children and incapacitated persons should use this product under the supervision of their guardian.

5

If the machine malfunctions, immediately unplug the power cord and contact the seller with this problem.

6

It is not recommended to use this product to pick up a large amount of fine particles such as cement, gypsum powder, wall powder, etc., as which would easily block filter components and further cause louder noise or sudden shutdown. In this case, please stop using and clean or replacement the filter components in time, otherwise it lastly cause damaged motor.



Prohibition Sign

It means the behavior must be prohibited, otherwise it may cause damage to the product or endanger the safety of the user.



Warning Sign

It means the operation must be strictly carried out, otherwise it may cause damage to the product or endanger the safety of the user.



Household use only.
Do not use this product outdoors.



Please must install the HEPA filter and sponge pad before use.



Do not use this product to vacuum liquid like detergent, gasoline or paint, etc., to prevent the liquid from entering the motor and causing motor malfunction.



Make sure the plug and power cord is intact before use.



Do not use the product to pick up a huge clot of hair or big spitball, smoking cigarette butts or uncooled coal cinder, which easily block the suction port or pipe or deform the shell.



Make sure the local voltage is the same with the voltage indicated on the product's nameplate and connect this product to safe grounding power supply.



Do not bend or step on this product.



Please unplug the power cord before clean this product. When unplugging, hold the plug, don't drag the power cord.



When cleaning this vacuum cleaner, use a wet cloth with water or neutral detergent. Do not use gasoline, banana oil etc., as this may cause the shell to crack or fade.



Keep this product away from heat sources to protect its plastic.



Before disposing of this product, it is suggested to cut off its power cord to indicate that the product is no longer usable. You can also take the same treatment for any component that may cause danger to who pick it, especially children.

TROUBLE-SHOOTING

ISSUE	POSSIBLE CAUSE	SOLUTION
The motor stop running	The plug is not firmly connected to power outlet The power outlet has no power The power switch is not turned on	Connect the plug to power outlet again Confirm there is power supply Turn on the power switch
No suction or weak suction	The dust cup is too full The HEPA filter and the inlet sponge pad is covered with dust	Empty the dust cup Clean or replace the filter components
Hear unusual sound from the running motor	The cleaner head, suction port or air inlet port is blocked	Remove the blockage in time. If this doesn't help, stop using it and contact the seller for help
The product stops working suddenly	The suction port or filter components are blocked badly	Remove the blockage, wait for the product to cool for 35 minutes and then use it again
Dust falls out from the cleaner head during use	The dust cup is too full The HEPA filter is not installed The HEPA filter is broken	Empty the dust cup Install the HEPA filter Replace the HEPA filter

WARRANTY

NOTE: THIS WARRANTY TERM GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

24-month Warranty & Lifetime Customer Support

Only apply to eligible purchases made directly from the TASVAC authorized distributors. Warranty coverage applies to the original owner and to the original product only and is not transferable.

How to initiate a warranty claim

If your appliance operates improperly while in use under normal household conditions within the warranty period, please contact our customer support [support@tasvac.com]