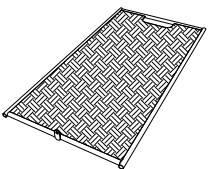 
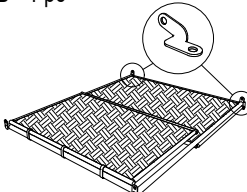 
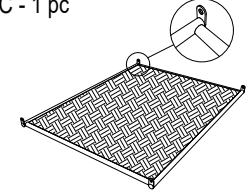 
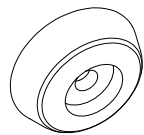 
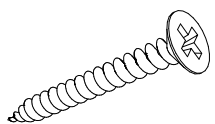 
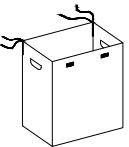 



I - PARTS AND HARDWARE

<p>A - 2 pcs</p> 	<p>B - 1 pc</p> 	<p>C - 1 pc</p> 	<p>D - 4 pcs</p>  <p>Foot button D17x7</p>	<p>E - 8 pcs</p>  <p>Screw M5x40</p>	<p>F - 1 pc</p>  <p>1 Compartment</p>
---	--	--	---	---	--


- * Please check you have all the parts listed below. Contact Beefurni if you have damaged or missing components.
- * The screws quantities below are the correct amount to assemble this stool. In some cases more screws may be supplied than are required.
- * PLEASE help us prepare A SCREWDRIVER to assemble.

II - PRODUCT ASSEMBLY:

 
STEP 1:

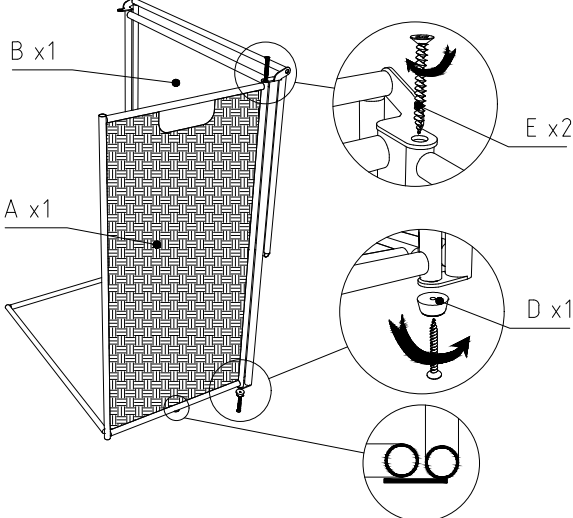

 
STEP 2:

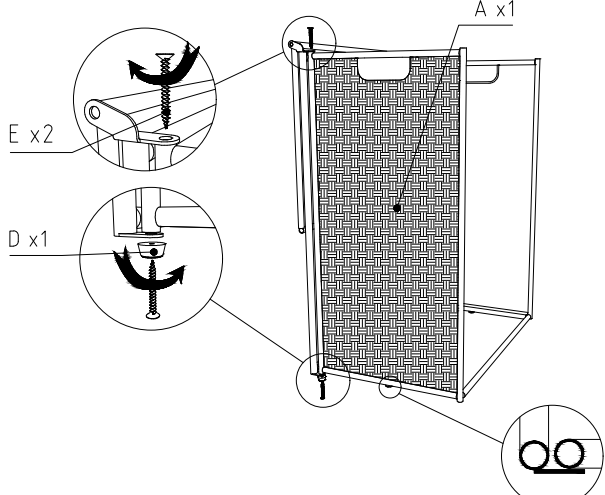

 
STEP 3:

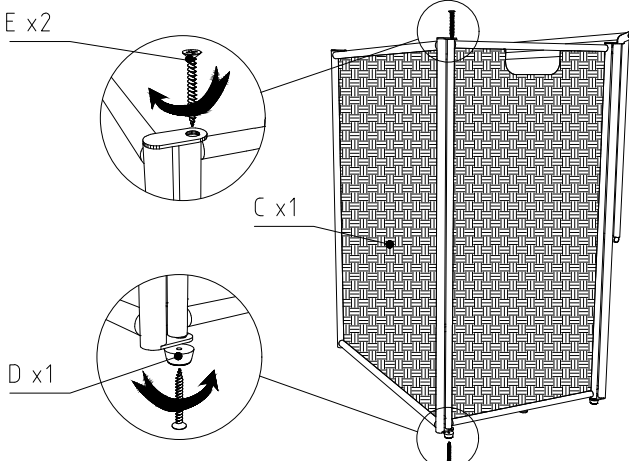

 
STEP 4:

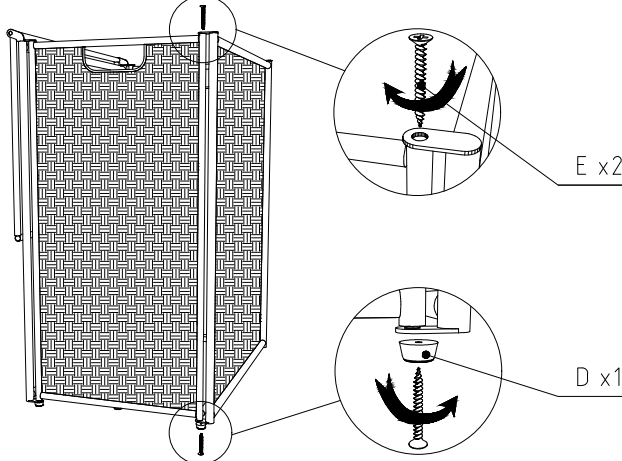

 STEP 5:

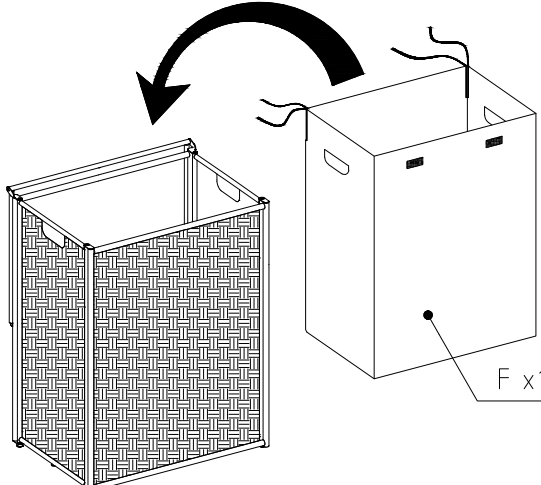

 STEP 6: FINISH

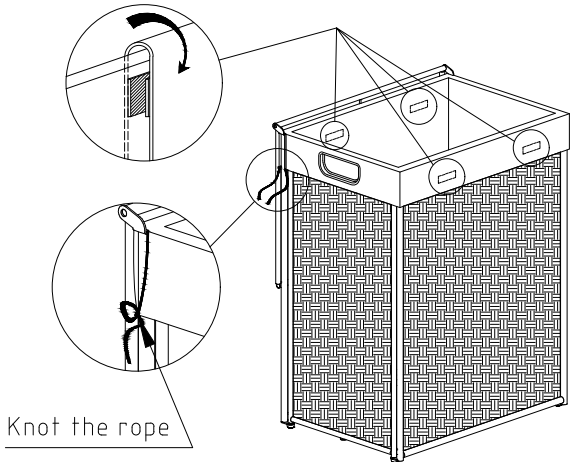

Knot the rope

THANK YOU FOR CHOOSING US

Thank you for your order. If you are satisfied with our product, please leave a positive review. Our goal is to provide high quality outdoor furniture with outstanding customer service - all at an affordable price.

One year warranty

If there is a manufacturing defect, we will send you a FREE replacement within 1 year of your purchase date. Register your product warranty by sending an email to customerservicesW2319@gmail.com or scanning QR code below:

1. Email title "Warranty Registration"
2. Write "order platform, PO number, order date, product name"
3. Click to send

