

Thank you for choosing us. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control.

If you have any questions, comments or concerns, feel free to contact us.

INFLATABLE DECORATION

Read this manual carefully before use and save it for future reference.

EASY ASSEMBLY AND OPERATION INSTRUCTIONS

This item should take 15 minutes to assemble, when assembled by the following instructions



Ensure all parts
are accounted for.

PARTS
Inflatable Product
Blower
UL Adapter
Lawn Stakes
Tether Ropes
LED Lights

WARNING:

This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children.

CARE AND STORAGE INSTRUCTIONS

For Indoor and Outdoor Use.

For best performance, operate this item indoors or in a sheltered outdoor area. It is also recommend that you bring this item indoors during adverse weather (extreme cold, strong winds and/or rain). When not in use, store this product in its original packaging. Keep away from heat and moisture.

1. Only use the transformer supplied by the manufacturer.
2. Adults should supervise children while this product is in use. Keep children away from the transformer, as it heats up during operation.
3. Assemble the product according to the instructions and read all instructions carefully before assembly.
4. Spot clean fabric with a damp cloth. Do not use harsh chemicals or abrasive materials.

SAFETY INSTRUCTIONS

Please read and follow all instructions carefully before using the product and retain for future reference.

1. This product is not intended for permanent installation or use.
2. Do not mount or place near gas or electric heaters, fireplace, candles, or other similar heat sources.
3. Do not secure product wiring with staples or nails or place on sharp hooks or nails.
4. Unplug the product when leaving the house, when retiring for the night, or if left unattended.
5. This is an electrical product and not a toy! To avoid risk of fire, burns, personal injury or electric shock, this product should not be played with or placed where children can reach it.
6. Do not hang ornaments or other objects from the cord.
7. Before using or reusing, inspect the product carefully. Discard and DO NOT operate the product if cuts, cracks, damages or frayed wire insulation cord, loose connections, or exposed copper wire are visible.
8. Do not remove or change the bulb(s) inside while the power is on.
9. Replace failed bulb(s) immediately. Purchase bulb(s) of the same rated voltage and wattage to prevent overheating.

ASSEMBLY INSTRUCTIONS

STEP 1: Remove all contents from packaging and lay out the deflated inflatable in a clean, clear area that is away from sharp objects.

STEP 2: Ensure the zipper at the base of the inflatable is zipped shut.

STEP 3: Locate the blower air intake on the inflatable and make sure it is clear of fabric or other obstructions, and that it is facing upright.

STEP 4: Plug the adapter plug into a properly grounded GFCI wall outlet. The blower/fan will immediately begin to fill the inflatable product with air. **NOTE:** It is helpful to lift up on the blower by hand to avoid clogging the blower air intake.

STEP 5: Once fully inflated, clip the included tether ropes into the loops located on the sides of the inflatable. Gently pull on the tether ropes to extend and straighten out with the loose ends lying on the ground. Position the extended tether ropes with equal spacing distance.

STEP 6: Push the lawn stakes through the loops sewn to the bottom of the inflatable to secure the inflatable into the ground. Push the additional lawn stakes into the ground a few inches out from the loose ends of the tether ropes that are lying on the ground and then attach the loose ends of the tether ropes to the tops of the lawn stakes. Gently pull and tighten each tether rope to adjust the inflatable to an upright and fully secure position.

TROUBLESHOOTING CHECKLIST

Carefully read and follow all Care and Storage, Safety, and Assembly Instructions; the most common troubleshooting tips are referenced under each set of instructions.

If your inflatable is not inflating, please check the following:

1. The power source may have been interrupted, or the cord may be unplugged.
2. Blower airflow may be obstructed. Unplug the blower and check that the intake vent is free from debris. Also ensure the inflatable product is not blocking the intake vent.
3. Check that the zipper near the blower is closed.
4. Inspect fabric for holes and tears. Do not use if product if fabric is damaged.

Any modification to the product or failure to follow recommended care will void the product warranty.

WARNING!

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.