



ASSEMBLY INSTRUCTIONS

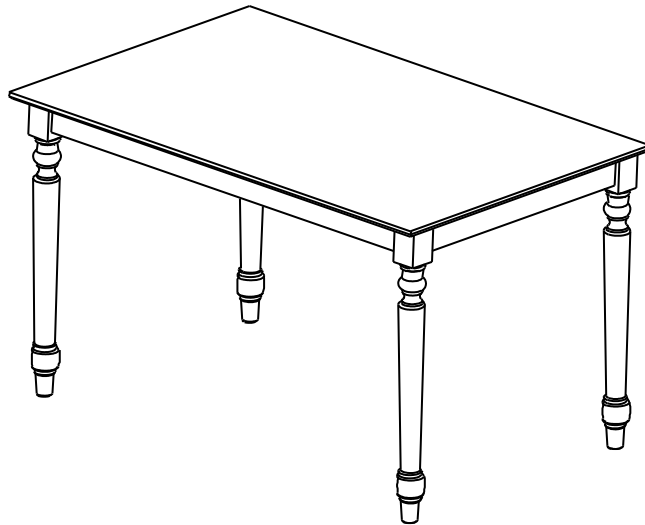

T-3030T OR T-3042T OR T-3048T OR T-3636T AND T-330T OR T-336T OR T-342T

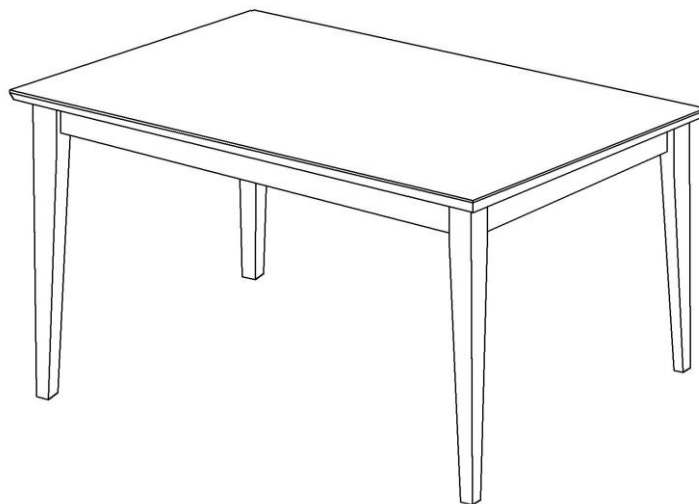

T-3030T OR T-3042T OR T-3048T OR T-3636T OR T-4242T AND T-30S OR T-36S OR T-42S

Description	: FIXED TOP TABLE
Item No.	: T-3030T, T-3042T, T-3048T, T-3636T AND T-330T, T-336T, T-342T OR T-30S, T-36S, T-42S (PACKED IN SEPARATE BOX)

ITEM NO.: T-3030T, T-3042T, T-3048T, T-3636T AND
T-330T, T-336T, T-342T OR T-30S, T-36S, T-42S
REVISED DEC 23, 2024

Printed in Vietnam
THIS ITEM IS PACKED IN TWO CARTONS

BEFORE ASSEMBLY

Thank you for purchasing this quality product. This product has been designed for easy assembly and constructed for durability. All parts were checked prior to packaging to insure quality. Prior to beginning assembly, however, make sure all parts and hardware are included and free of obvious defect. If a part is missing or defective, hardware is missing, or you need help with assembly, please call toll free 888-944-8396.

IMPORTANT NOTE:


- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until completely assembled.
- Keep all hardware parts out of reach of children.

WARNING:

Long exposure to rubber or soft plastic may cause a chemical reaction and damage the finish of your product. Protect the surface of the product with cloth if you are using any product with rubber feet or base.

PART LIST T-3030T OR T-3042T OR T-3048T OR T-3636T

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have all of the following parts:

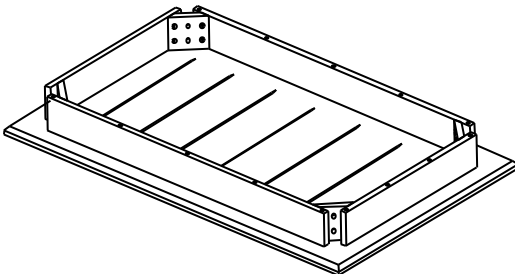NO	Description	Qty	Sketch
A	Top	1	

PART LIST T-30S OR T-36S OR T-42S

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have all of the following parts:

 
NO	Description	Qty	Sketch
B	Shaker Legs	4	

ITEM NO.: T-3030T, T-3042T, T-3048T, T-3636T AND
T-330T, T-336T, T-342T OR T-30S, T-36S, T-42S
REVISED DEC 23, 2024

Printed in Vietnam
THIS ITEM IS PACKED IN TWO CARTONS

 
PART LIST T-330T OR T-336T OR T-342T

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have all of the following parts:

NO	Description	Qty	Sketch
B	Turned Legs	4	

HARDWARE LIST


When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have all of the following hardware:

NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
1	Hexagon Nut (M8 x 13mm)	8		3	Lock Washer (Φ8.5 x 13mm)	8	
2	Flat Washer (2 x Φ8.5 x 22mm)	8		4	Wrench (13mm)	1	

NOTE: HARDWARE IS PACKED IN CARTON OF LEGS T-30S, T-36S, T-42S OR T-330T, T-336T, T-342T.

STEP 1

Attach legs (B) to top (A) with washers (2), and (3) and nuts (1) as shown below. Tighten with wrench (4).

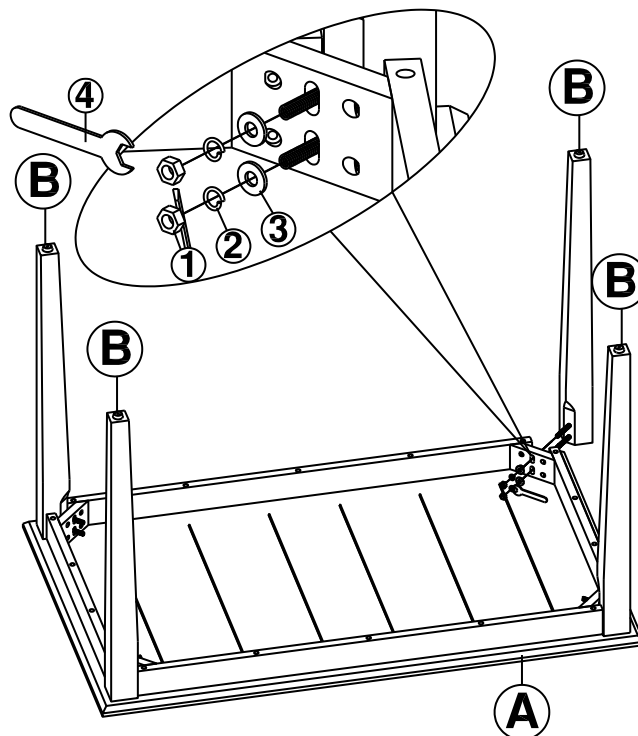

ITEM NO.: T-3030T, T-3042T, T-3048T, T-3636T AND
T-330T, T-336T, T-342T OR T-30S, T-36S, T-42S
REVISED DEC 23, 2024

Printed in Vietnam
THIS ITEM IS PACKED IN TWO CARTONS

STEP 2

Adjust the levelers to the appropriate height to level the table.

