



# Phonograph User Manual

\*Thank you for reading this manual. We wish you a pleasant journey with its use!

## User manual

Thank you very much for purchasing the series of vintage phonographs. For your benefit, please read this user manual carefully before using the product for the first time and follow the instructions provided.

### Precautions:


- ◆ This product is only suitable for use in a gentle indoor environment; do not expose it to direct sunlight or place it near radiators, stoves, or other high-temperature heat sources.
- ◆ Keep away from environments such as bathrooms and swimming pools; do not use in running water, damp, dripping, or misty conditions.
- ◆ Do not place objects containing liquids on top of this product, such as vases, water glasses, etc.!
- ◆ Keep away from open flames, such as candles, etc.!
- ◆ Do not touch the power cord with wet hands. To avoid electric shock, do not touch the internal components. Do not attempt to repair this product unless you are a professional technician.
- ◆ Do not deliberately pull or twist the power cord.
- ◆ Do not alter the power cord in any way or connect any peripheral products not originally designed for this device.
- ◆ If the machine does not work properly or the cabinet has been damaged by a fall, please contact your local dealer or our authorized after-sales service unit.
- ◆ For safety and environmental protection, as well as energy saving, please remember: In case of thunder and lightning, or when the machine is not in use for a long period, make sure to completely disconnect the power supply or unplug the power cord from the socket.
- ◆ Our company reserves the right to make changes or modifications to any model in the future without prior notice, and the current version shall prevail.

### Placement requirements for the machine:


- ◆ To ensure proper ventilation and heat dissipation, maintain a gap of at least 3.94 inches around the machine's cabinet. When using this machine, prevent items such as tablecloths, curtains, etc., from blocking the ventilation holes. Do not place the machine's cabinet on thick carpets or in areas with poor air circulation.
- ◆ If you need to move the machine while it is in use, please turn off the power and wait for 2 hours before proceeding.

### Phonograph configuration table

1. Vinyl record playback function; three adjustable speeds of 33/45/78 RPM, compatible with all vinyl records on the market.
2. Radio function; capable of tuning into FM and AM radio stations.
3. CD playback function: Sanyo mechanism, latest decoding board technology, with superior error correction.
4. HiFi-grade Bluetooth playback function: High-fidelity audio reproduction.
5. USB playback function: Decodes lossless formats such as WAV/FLAC/APE, as well as AAC/WMA/MP3 audio formats.
6. Original TOSHIBA high-power fully symmetrical amplifier with THD  $\leq$  0.1%.
7. 5-inch subwoofer + independent bass and treble adjustment system, capable of satisfying the sound quality of different audio sources.

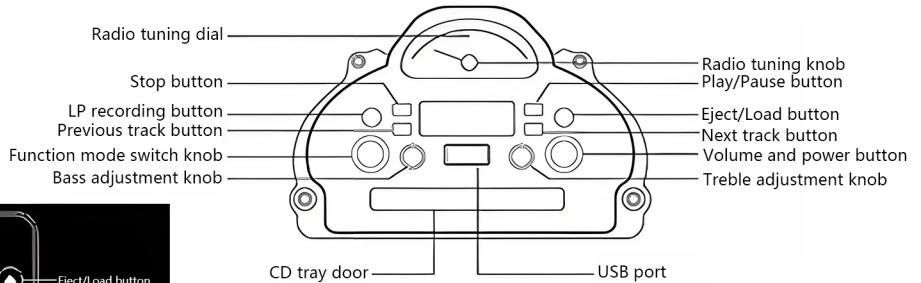

CD panel diagram

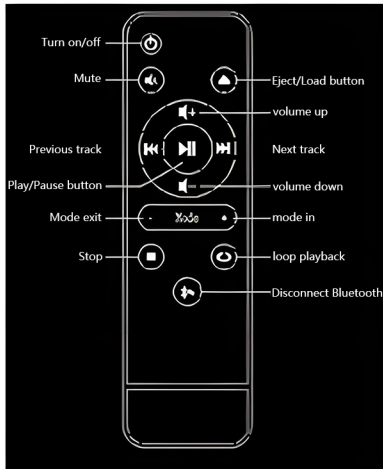

Remote Control Diagram

#### Radio Function Operation Methods:

Turn on the power and adjust the function selection knob to the AM (or FM) position. The corresponding indicator light for the radio function will light up. Rotate the main volume knob to a suitable volume level. Slowly turn the radio tuning knob located below the frequency display window to find your desired radio station. Once you have found a station you like, you can then adjust the bass and treble. To do this, press the bass/treble button once. Then, turn the volume knob to adjust the bass or treble. Press the button again to return to volume control. Adjust the bass and treble until the sound quality of the radio station is optimized for the best listening experience!

#### CD Function Operation Methods:


Turn on the power, rotate the main volume knob to a suitable volume level, and adjust the function selection knob to the CD position. The corresponding indicator light for CD will light up. Gently press the eject/load button on the panel (or remote control) to insert the CD disc. The machine will start playing the tracks in sequence from the first one. You can press the previous or next button on the panel (or remote control) to select your preferred tracks. Then, adjust the bass and treble knobs to achieve the best audio quality for the listening experience!

#### CD Maintenance and Cleaning Methods:


- ◆ Use a clean, soft cloth to wipe away dust or fingerprints from the surface of the disc.
- ◆ Wipe and clean in straight lines from the center to the outer edge. Minor scratches generally will not affect the playback quality of the disc.
- ◆ Never use chemical solvents, such as anti-static sprays or gasoline.
- ◆ To minimize damage to the disc, please place the disc into a disc sleeve after use.
- ◆ Never leave the disc in an environment with direct sunlight, high temperature, or high humidity for extended periods.
- ◆ Never stick labels or write on either side of the disc.
- ◆ Do not use a dirty disc, as prolonged use of unclean discs can reduce the lifespan of the CD system.
- ◆ Never manually force the tray door open or closed at any time.
- ◆ Never insert any objects other than CDs to avoid damaging the CD drive system.
- ◆ Press the stop button to halt playback before switching to another function.

#### How to Use the Turntable Function:

Turn on the power, rotate the main volume knob to a suitable volume level, and adjust the function selection knob to the LP (PH) position. The corresponding indicator light for LP will light up. Follow the operation diagram below, and then adjust the bass and treble knobs to achieve the best audio quality for the listening experience.

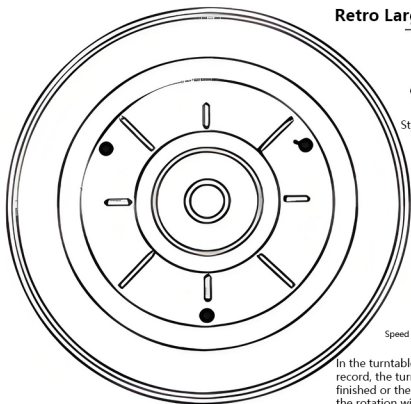

### Retro Large Tonearm Operation Diagram

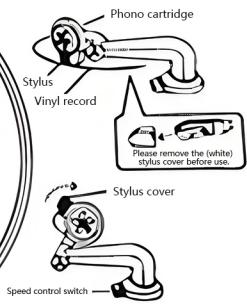

In the turntable mode, when the tonearm is moved to the vinyl record, the turntable will start to rotate. When the playback is finished or the tonearm is moved back to the far right position, the rotation will stop.

### Function and Maintenance of Consumables:

1. When using the phonograph turntable function, it is best to limit playback time to within 3 hours.
2. The turntable stylus and needle are consumable items. The normal playback time for 33.33 RPM is about 300 hours. Please take care to extend their service life. When not using the phonograph turntable function, please return the tonearm to its rest position and cover the stylus with the translucent protective cap. To clean the needle, you can use a weakly alkaline cleaning solution to gently wipe the needle area. (For detailed instructions on replacing the stylus and needle, please refer to the turntable user manual placed on the turntable at the time of purchase.)
3. Since existing vinyl records are all collector's items and have been around for a long time, it is recommended to use a soft, dust-free cloth dipped in a small amount of weakly alkaline cleaning solution to wipe the vinyl record from the outside to the inside along the edge in a clockwise direction several times until it is clean before use. After enjoying a vinyl record, please place it vertically on a well-ventilated, dry vinyl record shelf.

### How to Use the Bluetooth Function:

Turn on the power and rotate the main volume knob to a suitable volume level. Adjust the function selection knob to the Bluetooth position. The corresponding Bluetooth indicator light will flash. Turn on the Bluetooth device you want to connect and put it into pairing mode. The device will search for available Bluetooth devices. When "LP-10" or "youidison" appears in the list, tap to connect. Once the connection is successful, the Bluetooth indicator light will change from flashing to solid. You can now open the music player on your Bluetooth device and start playing the tracks you want to enjoy!