


Organize your parts and hardware. You will need a Phillips head and flat head screw driver and rubber mallet.

Hardware :

A: Mounting Bracket(8) • **C:** Hinge(8) **D:** Lock Lip(2) • **E:** Small Screw(4)

F: Cam Pins(20) • **G:** Medium Screws(56) • **H:** Shelf Pins(16) • **I:** Adjustable Glides(6) **J:** Large Screws(8)

K: Door Handles(4) • **L:** Keys(2)

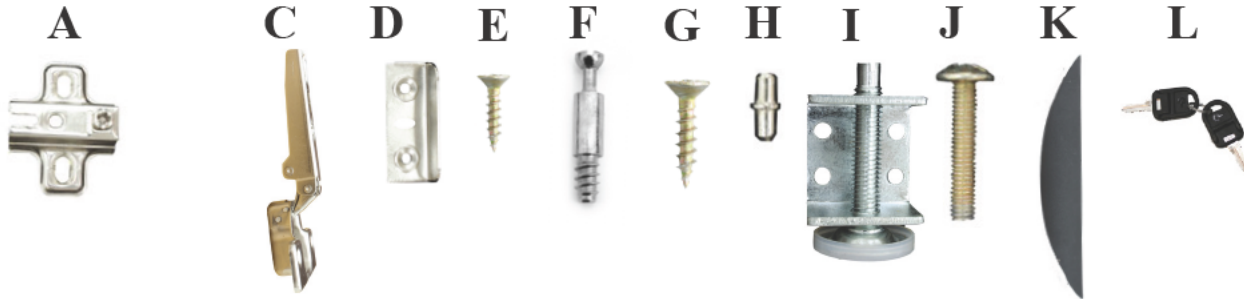

Parts :

M: Back • **N:** Front support • **O:** Middle Support • **P:** Bottom • **Q:** Left Side • **R:** Right Side • **S:** Shelves (4)

T: Top • **U:** Right side Door(2) • **V:** Left side Door(2) • **W:** Center wall

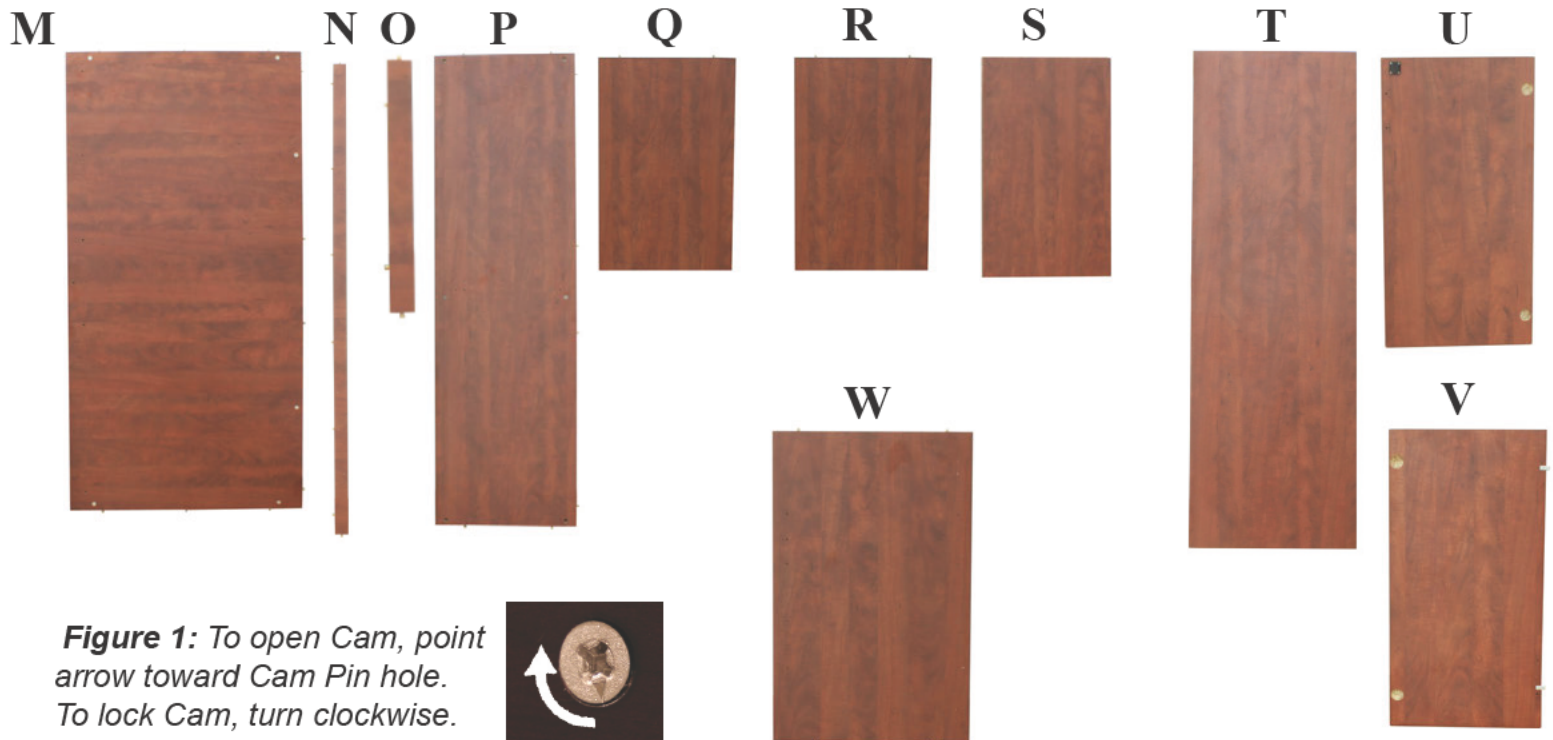


Figure 1: To open Cam, point arrow toward Cam Pin hole.
To lock Cam, turn clockwise.



IMPORTANT NOTICE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws/bolts until completely assembled.
- Keep all hardware parts out of reach of children.

STEP 1 : Attach front support(N) to middle support(O) by inserting the dowel rod on the end of(O) into the middle of(N).




STEP 2 : Connect dowel rods on Front support(N) and Middle support(O) to the bottom(P).



Cam locks on(P) facing (N) →

STEP 3 : Insert 2 cam pins(F) into back(M) and connect(M) to bottom(P) by inserting and locking cams (Fig1).

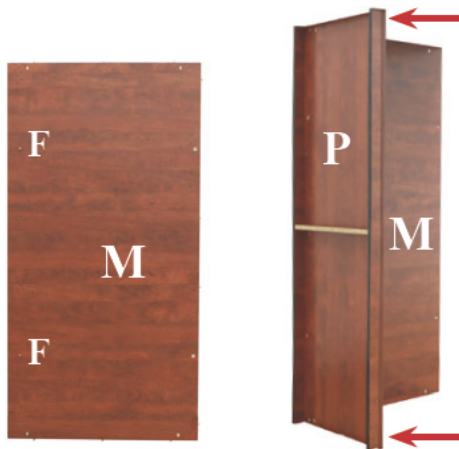

STEP 4 : Insert 4 cam pins(F) into both left(Q) and right(R) side.



STEP 5 : Attach left(Q) and right(R) side to back(M) and bottom(P) by inserting and locking cams located on (Fig1)



IMPORTANT NOTICE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws/bolts until completely assembled.
- Keep all hardware parts out of reach of children.

STEP 6 : Screw in 6 adjustable glides(I) in the locations shown below with 4 medium screws(G) each.




STEP 7 : Place 2 cam pins(F) in bottom(P) and attach center wall(W) with banded edge facing out by inserting and locking cams (Fig1).




STEP 8a : Screw 8 cam pins(F) into top(T). Use 2 small screws(E) each to attach locking lips(D).

STEP 8b : Attach top by inserting and locking cams (Fig1).

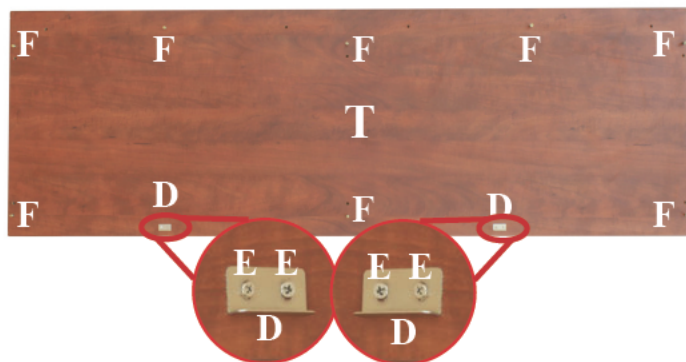

STEP 9 : Attach 8 mounting brackets(A) to the pre drilled holes in the sides(Q,R) and center wall(W) with the open end facing out. Mount the inner hinges to(W) and outer hinges to(Q,R) by sliding the bolt on the underside of the hinges into the open end of the mount while sliding the screw on the mount into the open end of the hinge. Tighten the screw on the back to lock into place.

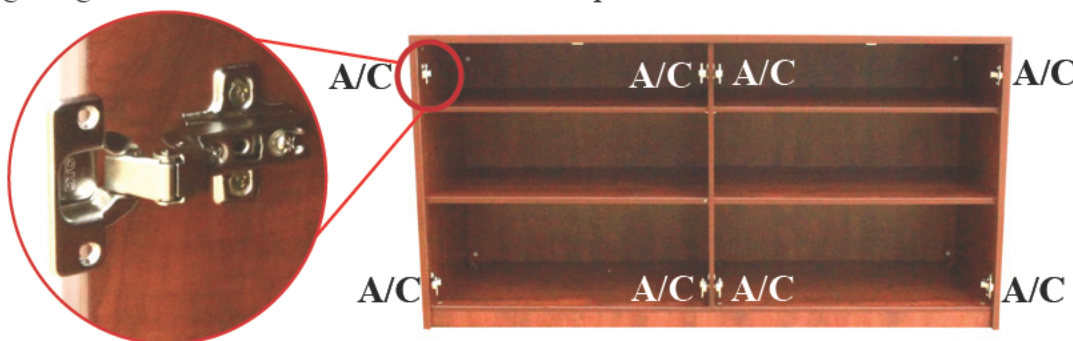


IMPORTANT NOTICE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws/bolts until completely assembled.
- Keep all hardware parts out of reach of children.

STEP 10 : Mount the right side doors(U) to the sides(Q,R) with 2 medium screws(G) each hinge. Also mount the left side doors(V) to the center wall(W) in the same manner.



STEP 10a : Use 2 Large screws(J) per handle(K) and attach (K) to doors(T,U) using the 2 pre drilled holes per door.

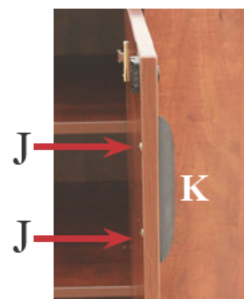

IMPORTANT NOTICE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws/bolts until completely assembled.
- Keep all hardware parts out of reach of children.