


Backrest Pin – This ensures the backrest can't just be pulled out whilst adjusting the backrest. The button has to be pushed in manually to remove the backrest.



Insert the backrest with the mesh facing the front. The plastic cover is not required for the mesh back.

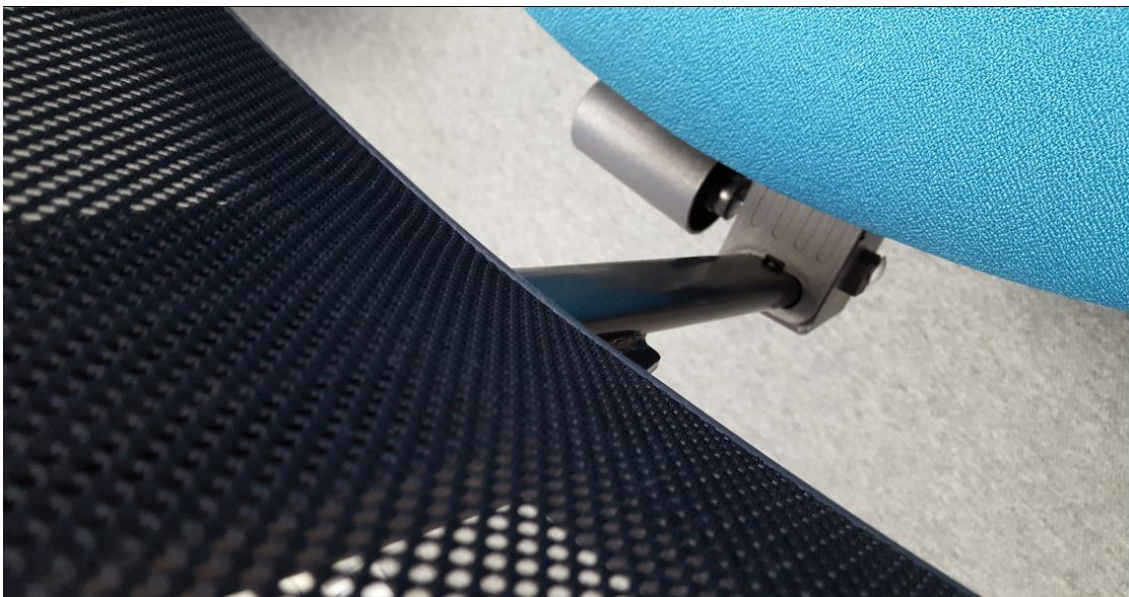

Push the backrest down firmly. Slide the backrest into the ideal place and twist the hand lever to lock the backrest into place.

