

Manual

Notice



Read this assembly manual carefully, and verify that you have all the parts listed before you begin. Keep your assembly manual for future reference.



Move this stand gently with 2 persons.



Protect finishes by placing furniture pieces on a soft carpeted surface during assembly.



Do not place very hot/cold objects on top of any surface. Always use a coaster or mat. Never leave liquids on the surface: Clean immediately with a mild soap and a damp cloth. Never use scouring powder based cleanser. Don't touch the glass surface with a hard/acute object it may cause the glass to shatter.




DO NOT ASSUME CHILD SAFETY WITH ANY PIECE OF FURNITURE!

Do not allow children to climb on furniture. Improper use can cause death or serious injury. If you are placing a TV on top use safety straps on your TV to prevent the risk of a toppling television. Furniture straps fastened to a wall can also be used to help ensure safety.

Damaged parts or furniture put together incorrectly can lead to serious injuries. Make sure to follow instructions correctly.


Parts list

① x1 	② x1 	③ x2 	④ x1 	⑤ x2
⑥ x1 	⑦ x1 	⑧ x2 	⑨ x2 	
A A1 X3 A2 X4	B B1 X4 B2 X4 B3 X4	C (Rubber washer) C1 X2 C2 X2 C3 X2	D D1 X2 D2 X2 D3 X2 D4 X2	
E E1 X1 E2 X1 E3 X1 E4 X1	F F1 X8 F2 X8	G G1 X6 G2 X6	S Screws for TV Tools Required(Not included) 	

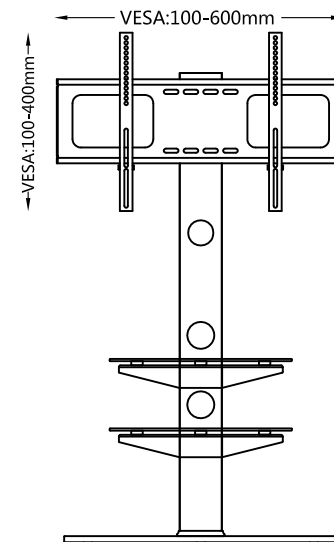


1

F	F ₁		x8	②		x1
	F ₂		x8	⑧		x2
G	G ₁		x6	⑨		x2
	G ₂		x6	E	E ₄	x1

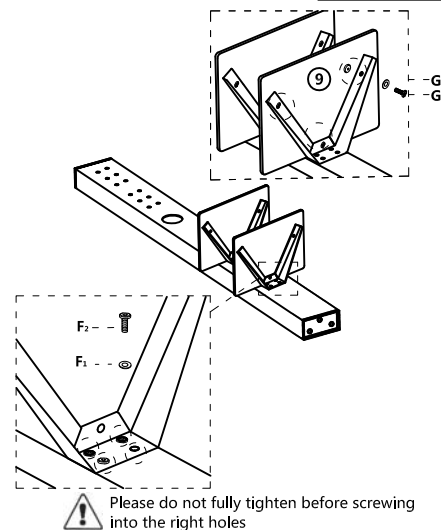

2

A	A ₁		x3	①		x1
	A ₂		x4	⑥		x1
E	E ₃		x1	⑦		x1

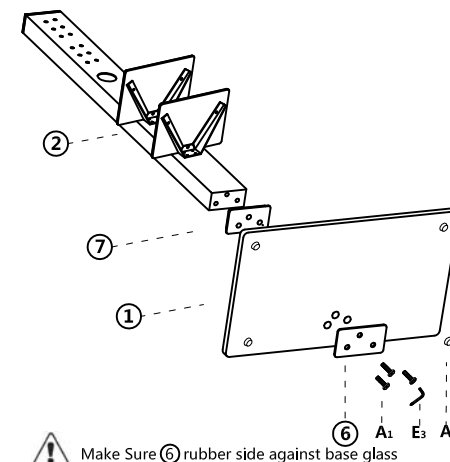


Make Sure ⑥ rubber side against base glass

Please do not fully tighten before screwing into the right holes

3

B ₁		x4	E ₁		x1
B ₂		x4	E ₄		x1
B ₃		x4	③		x2


⚠ Attach ③ to main pole. Notice, there are three height options.

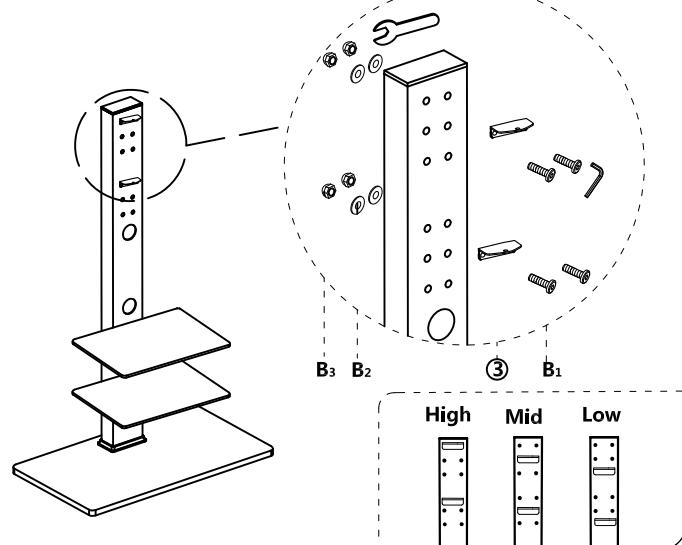

4

④		x1
C	C ₁ 	x2


⚠ Stick C1 on top and bottom center of steel bracket.

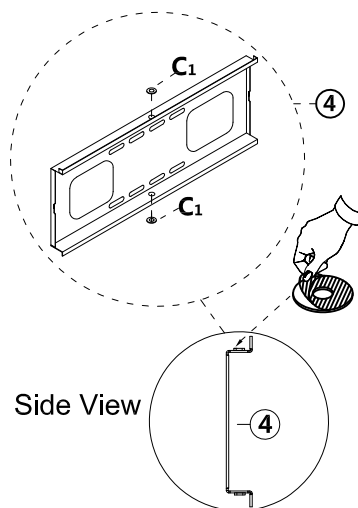

5

C	C ₂		x2
E	E ₂		x1
	E ₃		x1


⚠ Make Sure fully tighten all screws before putting on your TV.

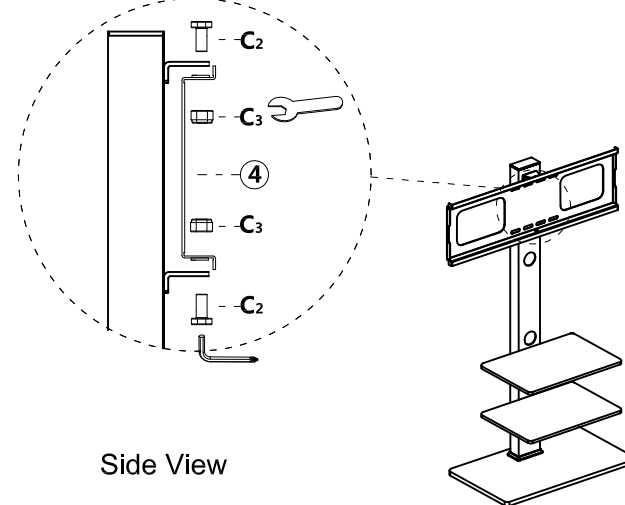


6

S1		M6	x4	S5		x4
S2		M6	x4	S6		x4
S3		M8	x4	5		x2
S4		M8	x4			

⚠ Variant screws and spacers provided to fit your TV, however not for all brands. Maybe you need to use the original screws comes with your TV or buy the special screws by yourself.

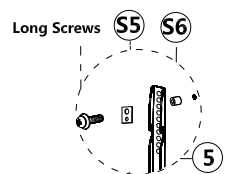


Curved or Recessed TV

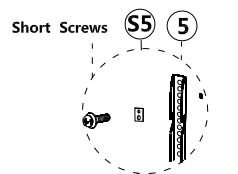

Flat Panel TV

7

⚠ Attach your TV onto the main pole, select the best height for yourself.

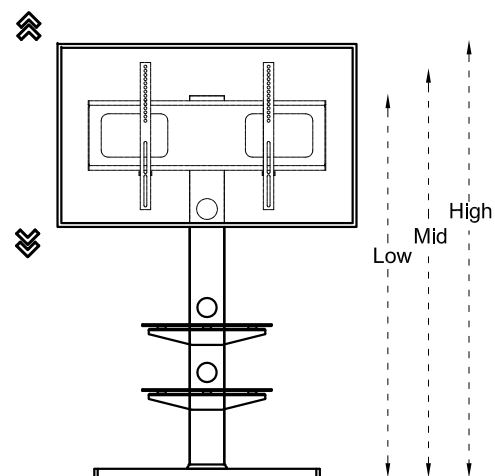

8

D ₁		x2
D ₂		x2
D ₃		x2
D ₄		x2

⚠ Important: Lock your TV before using

