


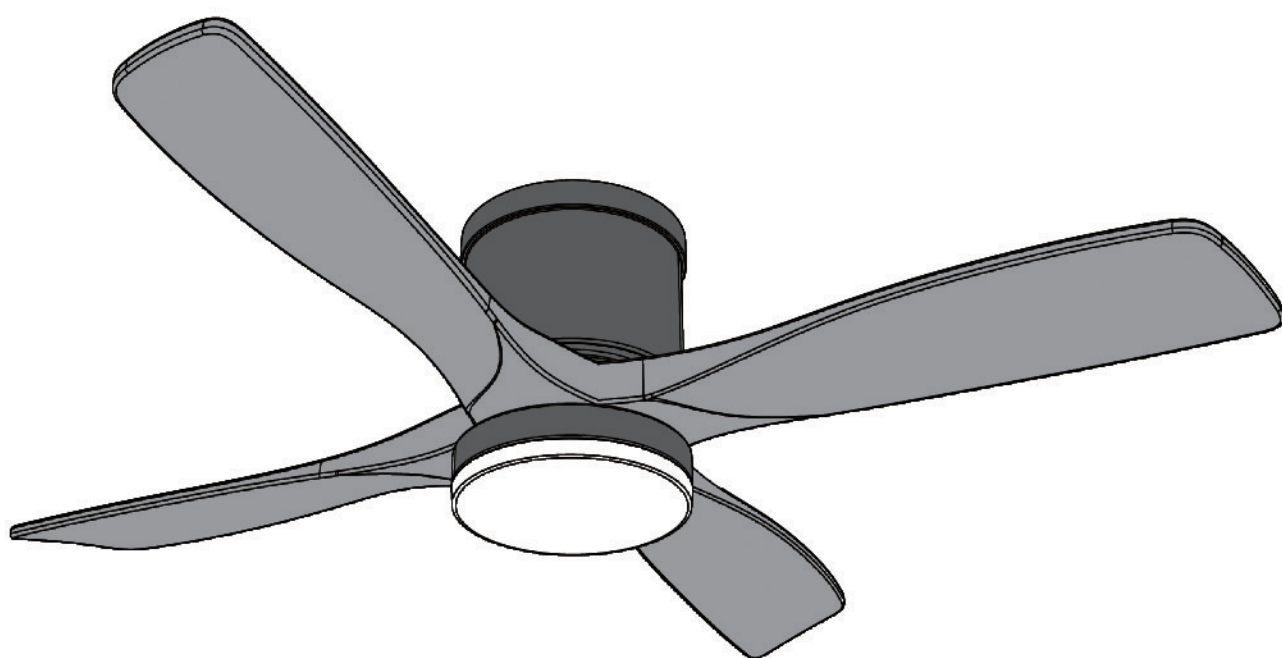

Ceiling Fan

Installation Instruction



SAFETY INFORMATION

Please read all safety information and instructions before installing the ceiling fan and save this manual for future reference.

SAFETY INFORMATION	01
PRE-INSTALLATION	02
INSTALLATION INSTRUCTION	04
OPERATION INSTRUCTION	08
SPECIFICATIONS	09
TROUBLESHOOTING	10




SAFETY INFORMATION



WARNING

- Before connecting the power supply, make sure that the power supply used matches the specifications of the ceiling fan.
- All wiring must comply with national and local electrical codes ANSI/NFPA70. If you are not familiar with wiring, please use a qualified electrician.
- To reduce the risk of fire or electric shock, turn off the power to the fuse box or circuit breaker before installing the fan.
- To reduce the risk of personal injury, attach the fan directly to the building's support structure and ensure that it can accept at least 35 pounds (15.9 kg).
- Make sure that the installation location allows the fan blades to rotate without obstacles.

Installation Location

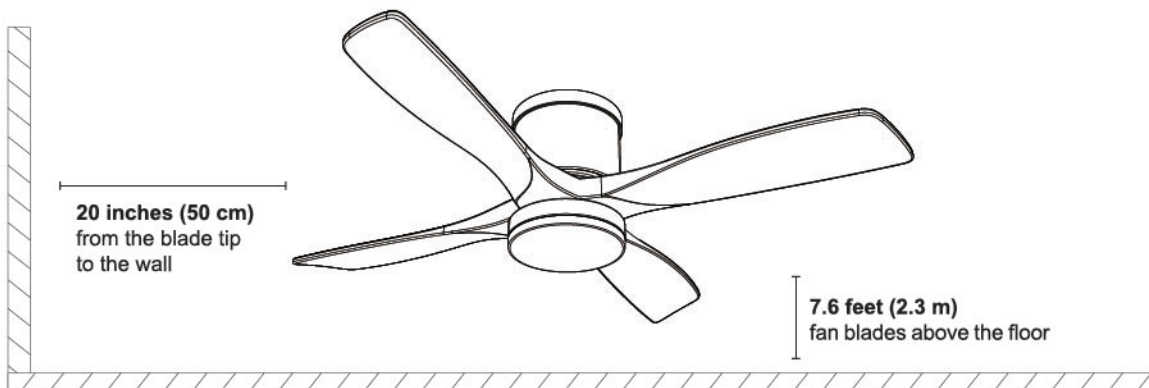

WARNING


- Do not operate this fan with a variable (Rheostat) wall controller or dimmer switch.
- Doing so could result in damage to the ceiling fan's remote control unit.

PRE-INSTALLATION

Tools Required (Not Included)



Power Drill

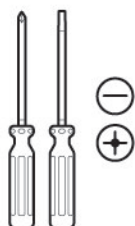

Screwdriver



Step Ladder



Wire Stripper



Electrical Tape



Parts List



Motor X1



Recevier X1



Fan blades X4



LED light pan X1



LED light X1



Lampshade X1



Controller
(Battery NOT Included) X1




Accessories X1




INSTALLATION INSTRUCTION

Step 1: Fan Blade Installation

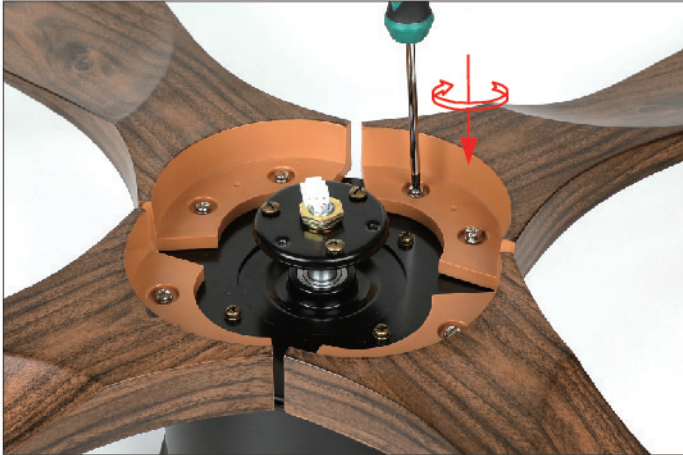

Install 4 fan blades. Place the fan blade on top of the motor, align the holes and tighten the screws.

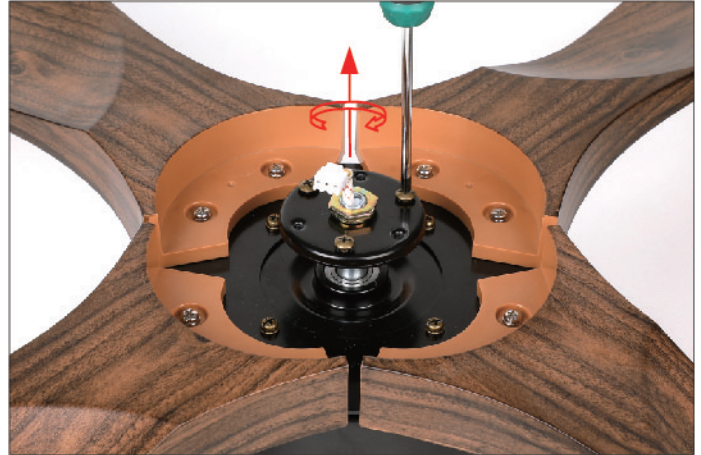

Loosen 3 screws on the light kit mounting plate.

Step 2: Light Kit Installation



Thread the motor line through the LED light pan.



Tighten 3 screws on the light kit mounting plate.



Plug in the light wire connectors.



Place the LED panel in the center of the light canopy; the panel is magnetic for easy attachment.




Step 3: Mounting Installation



Remove the ceiling canopy from the back of the motor.



Mount the ceiling canopy onto the ceiling.

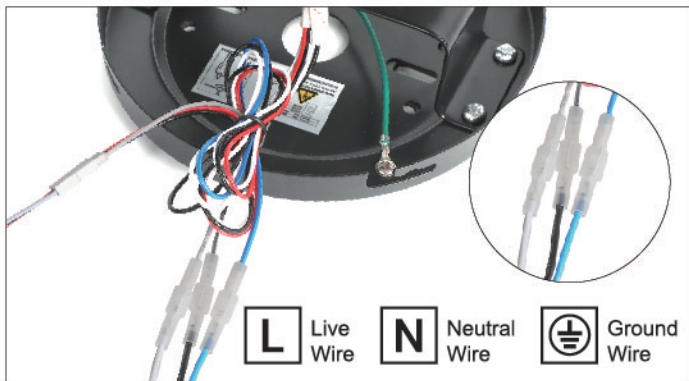


Complete all wire connections.



Tighten the mounting plate screws and install the light shade to finish.


How to Operate Your Ceiling Fan

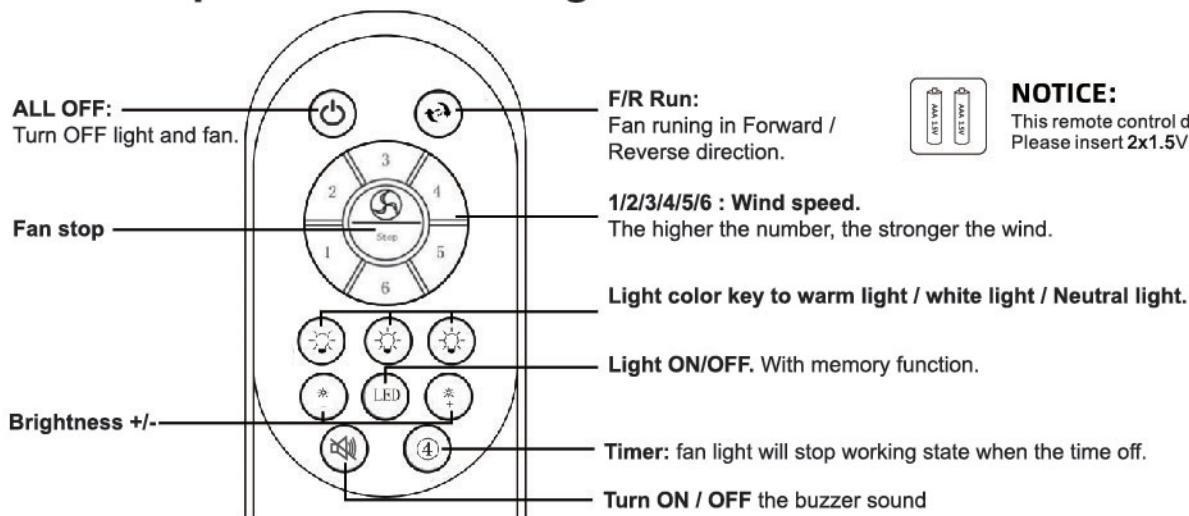


NOTICE:

This remote control does not contain batteries. Please insert 2x1.5V batteries before use.

Reversible Function

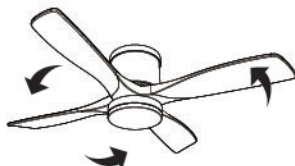

Summer (Forward): A downward airflow creates a cooling effect.

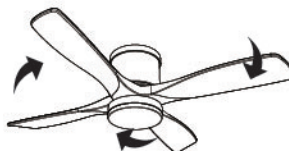

Winter (Reverse): An upward airflow increases the indoor temperature.

PS: If you want to change the fan's rotation direction, please press the button while the fan is running.

Timing Control


2H: The fan will automatically shut off after 2 hour.

Close the Timing Control: Press the button "FAN ON/OFF"




How TO Use the Mobile APP


1. Scan the barcode and download the APP (Android could download from GOOGLE PLAY STORE)

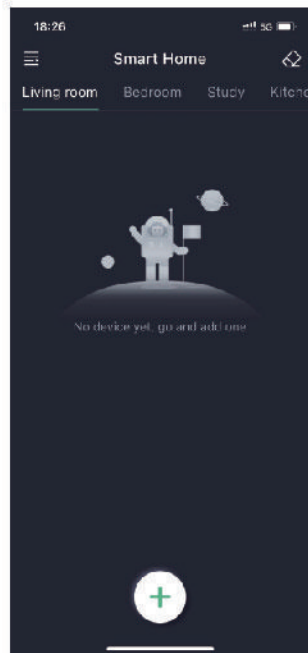


2. Choose the Language and Manage room information

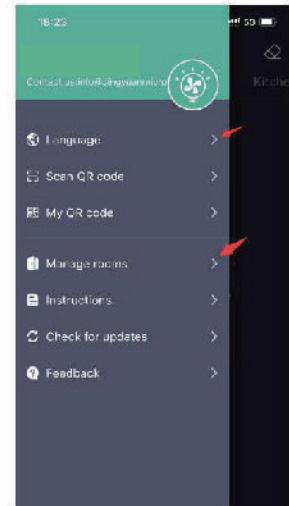


3. Add a new fan.

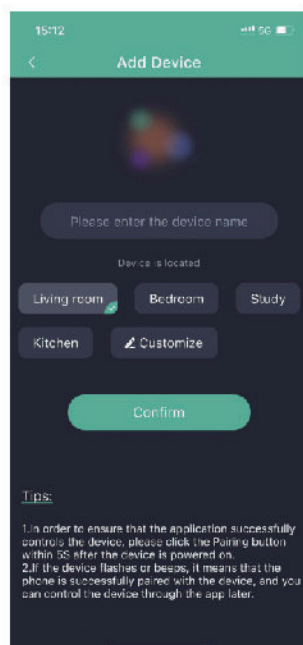

4. Choose a name for a new fan and select the room where it is located


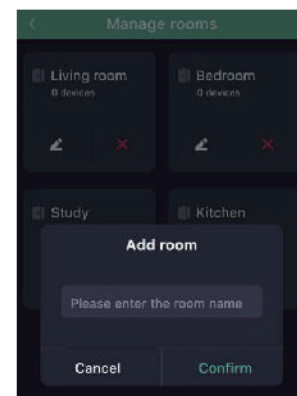


5. In case, it isn't located in one of the predetermined locations, select the Personalize option and add a new room.

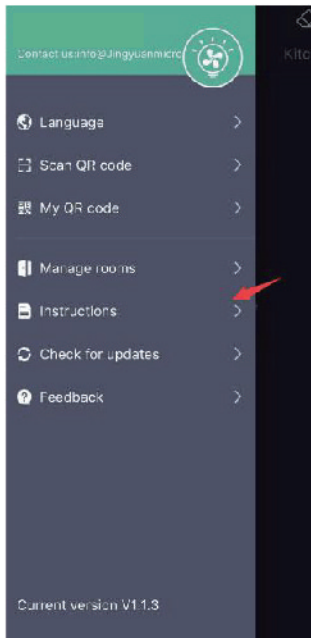

6. Follow APP's instruction to operate the ceiling fan.
NOTE: Only one device can be paired.
Once a new device is paired,the previous device will no longer be.

7.Enter the main control interface,turn on the Bluetooth from smart phone, turn off the electric power supply, and then turn on the electric power supply again, the LED of the ceiling fan is bright and the Bluetooth of device is ready for connecting to smart phone. Finally, click the Pairing Button in APP within 5 seconds of power. If the pairing button is green, the ceiling fan has been connected with smart phone. APP can control the ceiling fan now.

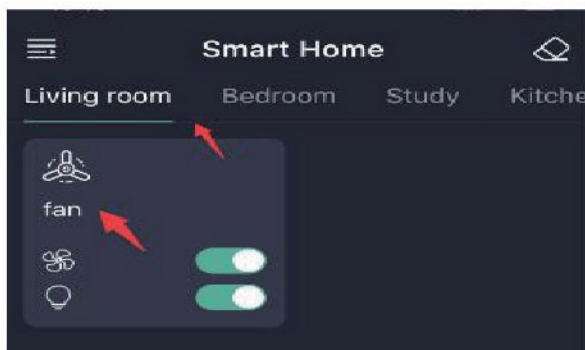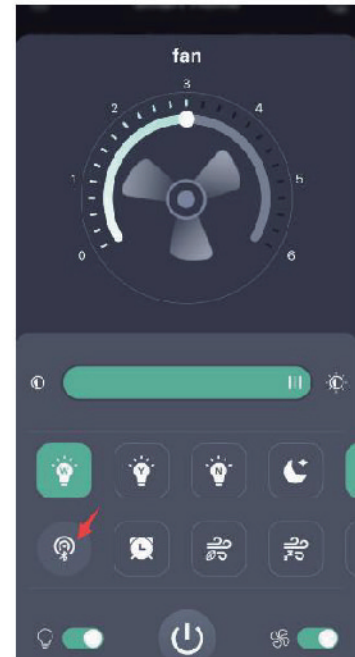

8.Enter room and Click the Fan control interface.



Troubleshooting

Warning: For your own safety turn off power at fuse box or circuit breaker before trouble shooting your fan.

TROUBLE	Probable Cause	Suggested Remedy
FAN AND LIGHT DO NOT WORK BUT WIRES CONNECTED WELL	The AC power from wall controller or dimmer switch.	Do not operate this fan with a variable (Rheostat)wall controller or dimmer switch. Choose the switch as this introduction showed.
FAN WILL NOT START	1.Fuse or circuit breaker blown. 2.Loose power line connections to the fan, or loose switch wire connections in the switch housing. 3.Reversing switch in neutral position. 4. Dead battery in remote control.	1.Check main and branch circuit fuses or circuit breakers. 2.Check line wire connections to fan and switch wire connections in the switch housings. CAUTION: Make sure main power is turned off ! 3.Make sure reversing switch position is all the way to one side. 4.Replace with new battery.
FAN SOUNDS NOISY	1.Loose screws in motor housing. 2.Wire connectors inside housing rattling. 3.Motor noise caused by solid state variable speed control.	1.Check to make sure all screws in motor housing are snug (do not overtighten). 2. Check to make sure wire connectors in switch housing are not rattling agai nst each other or against the interior wall of the switch housing. CAUTION: Make sure main power is turned off ! 3.Some fan motors are sensitive to signals from solid-state variable speed controls. Solid-state controls are not recommended, choose an alternative controlmethod.
FAN WOBBLES EXCESSIVELY	1.Setscrew in downrod support is loose. 2.Setscrew in downrod/hanger ball assembly is loose. 3.The groove hanger ball not lined up with the tab. 4.Hanger bracket and/or ceiling outlet box is not securely fastened.	1.Tighten both setscrews securely in downrod support. 2.Tighten the setscrew in the downrod/hanger ball assembly. 3.Re-hanging the hanger ball secure the tab into the groove. 4.Tighten the hanger bracket screws to the outlet box, and secure outlet box.