

E-mail:
eleappliance-service@outlook.com

HOT&COLD WATER DISPENSER WITH ICE MAKER

OPERATING INSTRUCTIONS (MODEL: HSM-315)


★ Family-expense electrical equipment must use tri-hole socket and leakage of electricity protecting device with ground wire.

Returning Policy

If the item needs to be returned, please contact our Customer Service Team. We will provide a prepaid returning label.

NOTE: We are not responsible for any costs incurred if the buyer returns the item themselves.


Parts Notes

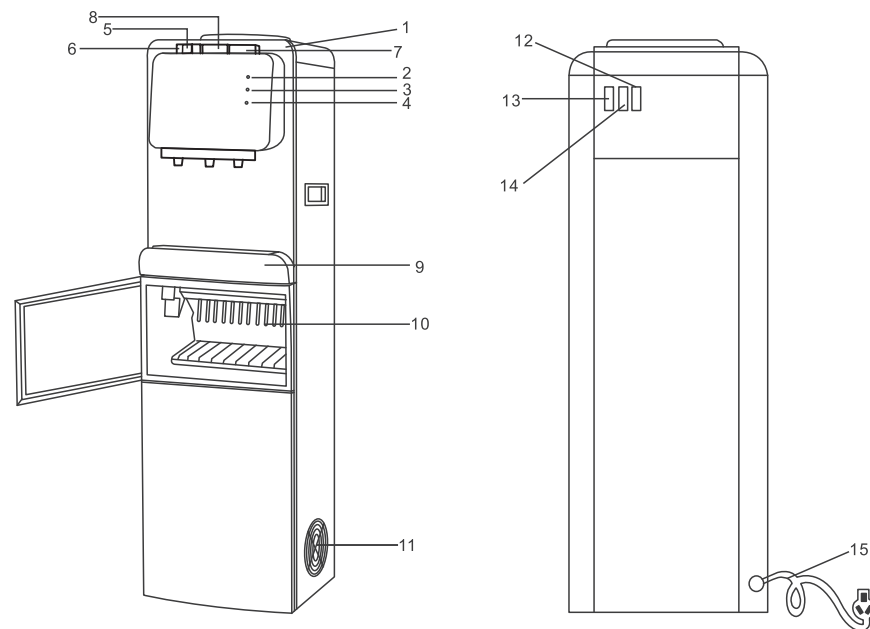

- | | | |
|-------------------|-------------------|--------------------|
| 1.TOP COVER | 6.HOT TAP | 11.RADIATOR FAN |
| 2.HEATING | 7.COLD TAP | 12.HOT BUTTON |
| 3.COOLING | 8.NORMAL TAP | 13.ICE MAKE BUTTON |
| 4.ICE MAKING | 9.DRAIN WATER BOX | 14.COLD BUTTON |
| 5.CHILD-SAFE LOCK | 10.ICE MAKER | 15.POWER PLUG |

1

Circuit diagram

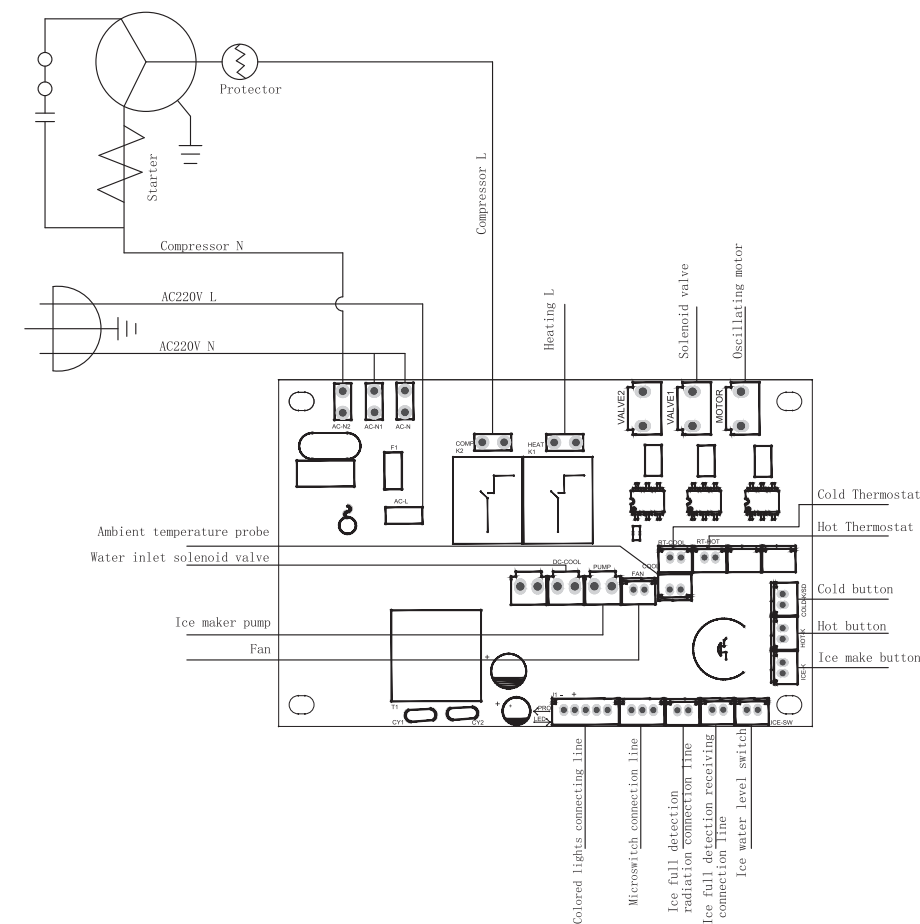

6

Technical data

Water Dispenser		
Model	HSM-315	 C ETL US LISTED Intertek 5019293 CONFORMS TO UL STD.399 CERTIFIED TO CSA STD.C22.2#120
Rated Voltage	115V/60Hz	
Total Power	640W	
Heating Power	550W	
Cooling Current	1.5A	
Refrigerant	R600a/0.49ounces	
High Side Pressure	120psig	
Low Side Pressure	60psig	
Date Code	2025.08	
Ningbo Feter Electrical Appliance Co.,Ltd		For Indoor Use Only

5

Installation

- 1、Tear off the hygienic sleeve on the bottle cap of pure water bottle, then insert upside down directly on the valve on top of water dispenser.
- 2、Press the water tap to let off the air in the tank until water comes out. Knock the tap for several times in order to prevent the water channel from being clogged with air bubbles.
- 3、When the water dispenser is used at the first time or after a long time stopping, wash the tank inside for 2 times with pure water.
- 4、It is only after finishing the above processes that you can connect the power.

Operation

- 1、Turn round the hot water switch (red) at the place of “on” and the red light flashes. If you do not want to use hot water, turn the switch at “off” and the water coming out is normally warm.
- 2、Turn the cold water switch (blue) round at the place of “on” and the green light flashes.
- 3、When the red light turns off automatically, the hot water has got to 90-95 degrees to be fit for drinking. When the hot water temperature is below 80 degrees, the red light flashes and the water temperature is below 80 degrees, the red light flashes and the water is going to be heated up automatically.
- 4、When the green light turns off automatically, the cool water temperature is below 10°C to be fit for drinking.

2

- 5、If you need ice cubes, you can turn on the green switch to start the ice making process. After the switch is turned on, the water in the upper water dispenser will flow into the bucket of the ice maker through the pipe. Then, the water is pumped into the diseased plate of the ice maker for ice making. After 14 minutes of ice making, the ice cubes begin to fall off and fall into the ice bucket. This reverse copies the ice until the ice bucket is filled with ice and automatically stops ice making.

Caution

1. The ground wire be connected well.
- 2.Keep children away from the machine to avoid hurting them during your usage.
3. If the drinker is not yet watered up and the power is switched wrong, the machine may be over-heated then. The protection switch will cut off the power automatically to protect the heating series. Just waiting for 15 minutes, the user can operate the machine normally again according to the correct installing process.
- 4.Place the water dispenser on level ground ,keep it 15 cm away from the wall to let air through.
- 5.Don t keep combustibles near the water dispenser please.
6. Don't turn the tap at will to avoid making a leaking or a water-cut.
7. Cut off the power at a long time of no using. Drain the left water in the machine. Open the cupboard door of the refrigerator. Clean the drinker inside and outside, close the door again after about 2 days and cover the machine with a dust cover.
- 8.Pull out the power socket before repairing or maintaining.

3

9. If there are dust and dirt on the condenser surface, use a piece of watered soft cloth to clean it up.
- 10.Replacement cord instructions, type Attachment. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 11.The appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- 12.Children being supervised not to play with the appliance.
- 13 .Keep ventilation openings, in the appliance enclosure or in the built-instructure, clear of obstruction.
- 14.Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- 15.Do not damage the refrigerant circuit(only applicable to appliances with refrigerating circuits which are accessible to the user).
- 16.Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- 17.This appliance is not suitable for outside use.
- 18.The working ambient temperature for this appliance as 16-43 centidegree.

4