 


TV STAND

USER MANUAL

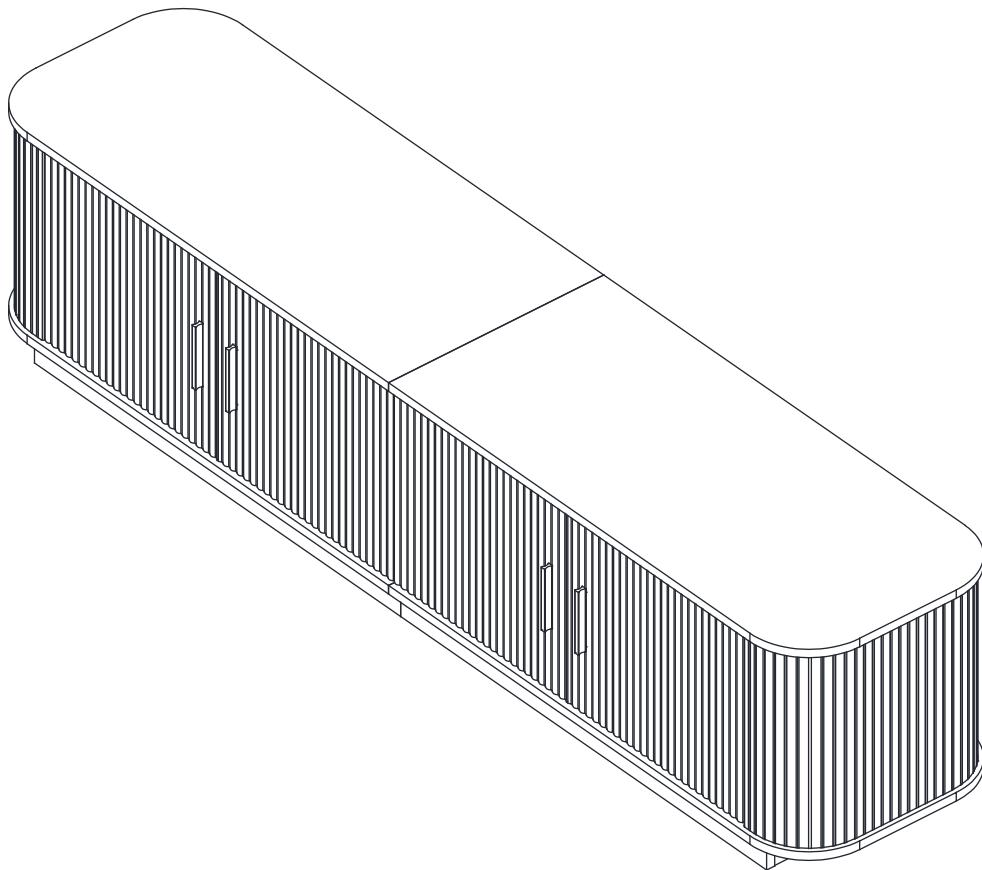

SAVE THESE INSTRUCTIONS FOR FUTURE USE

PLEASE DO NOT RETURN TO STORE



**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

 
 
 
 
 
 
 
 
 
Before Installation

 
Important – Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


 
Cam Lock Assembly Instructions

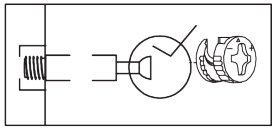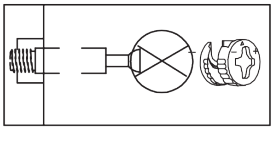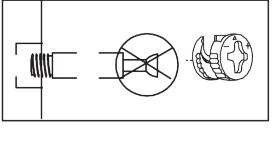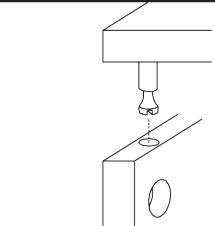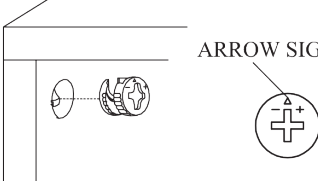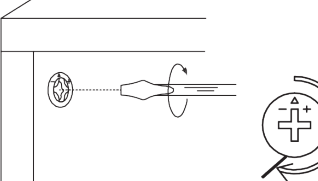 	Diagram A Insert Cam Bolt into hole as shown in diagram A.	
 	Diagram B Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.	
 	Diagram C Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.	
		Connect the panels together.
		ARROW SIGN Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
		To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>


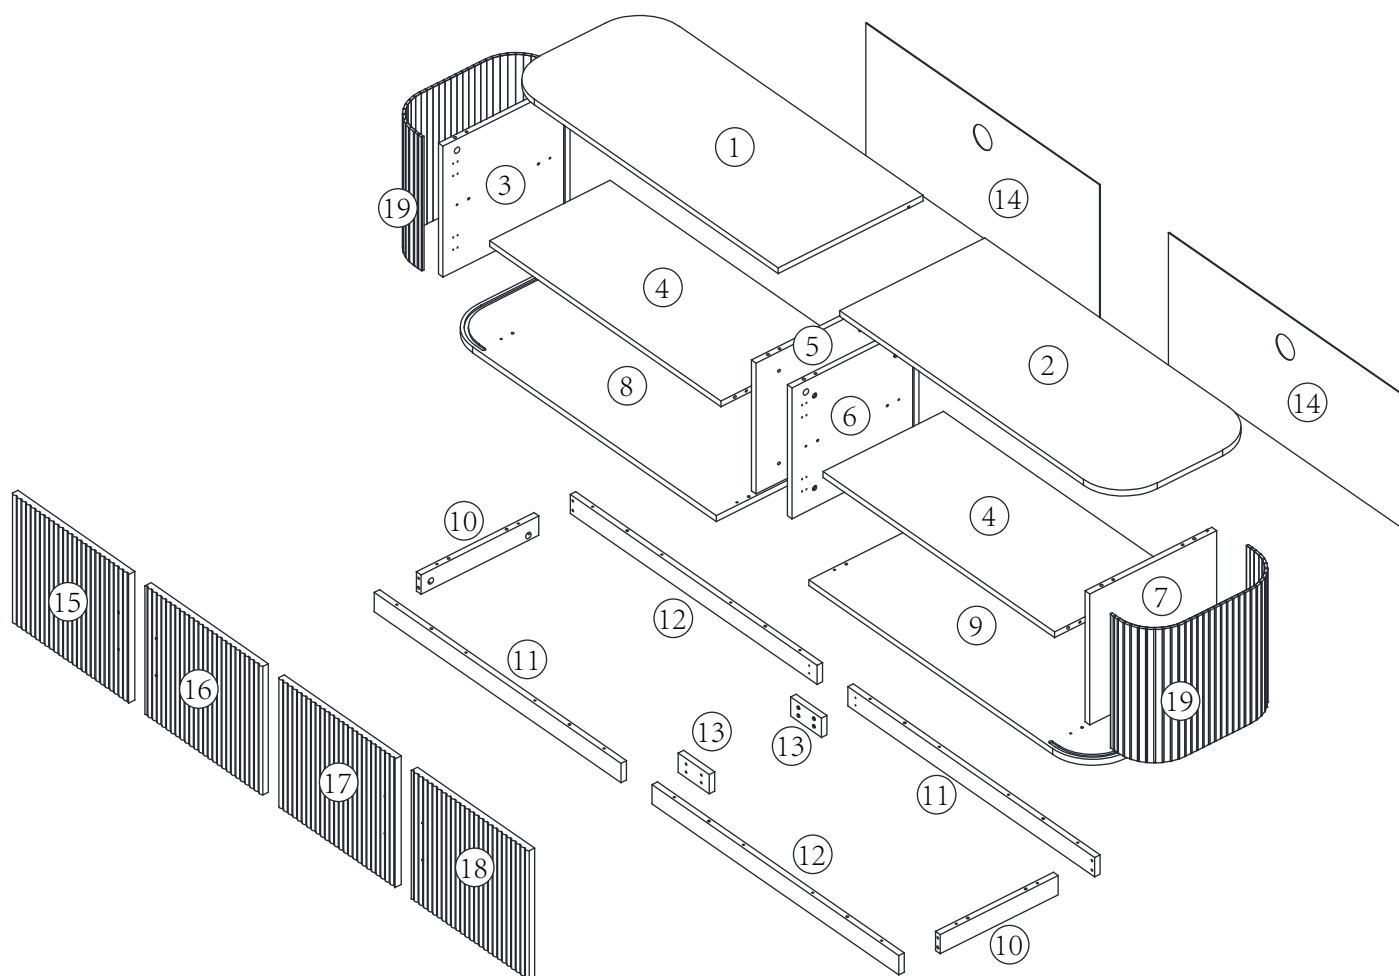 


Ax20	Bx20	Cx40 M6x30	Dx8 M4x40	Ex8 M4x25	Fx48 M4x14
Gx14 M4x12	Hx8 M3x14	Ix8 M4x20	Jx4	Kx2 M4x35	Lx2
Mx6	Nx4 M6x18	Ox8	Px20 M4x40	Qx2	Rx4
Sx2	Tx2	Ux4			


STEP 1

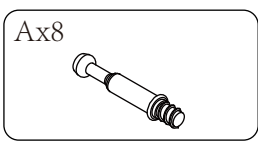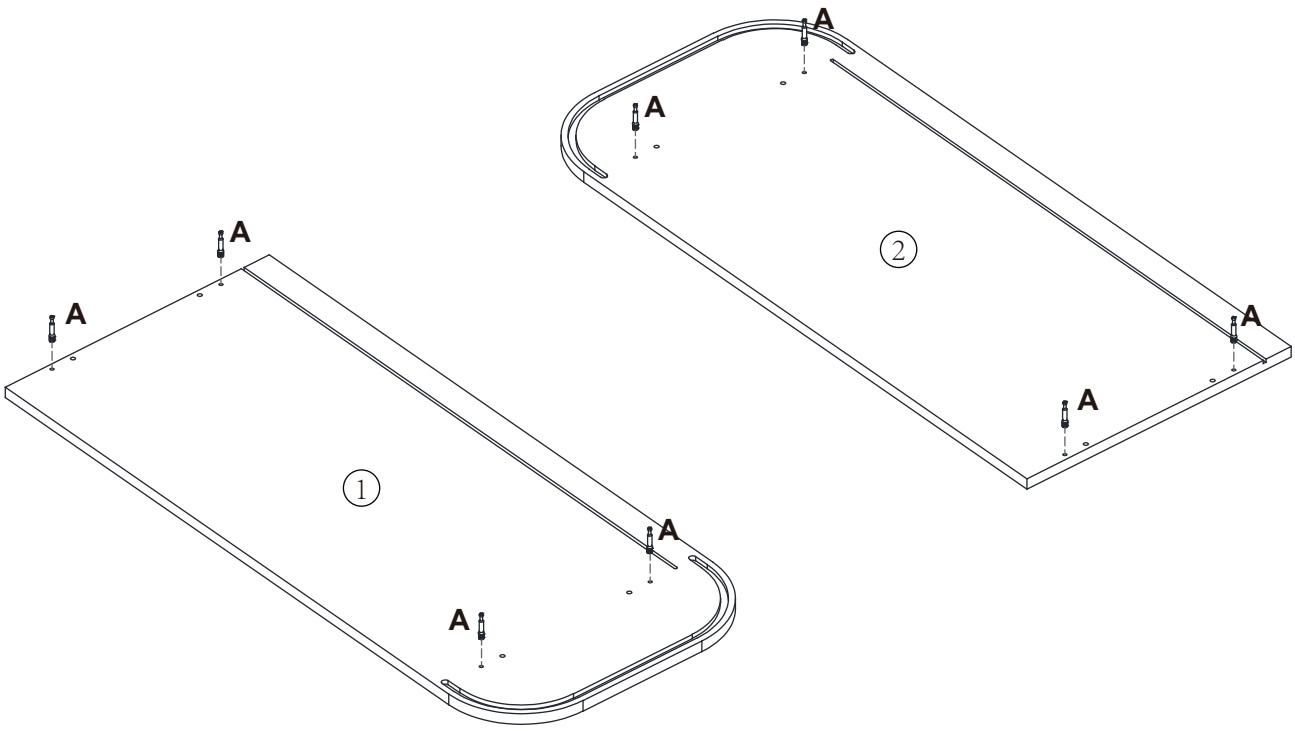

  STEP 2

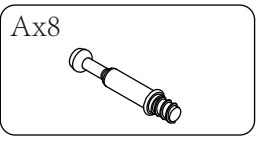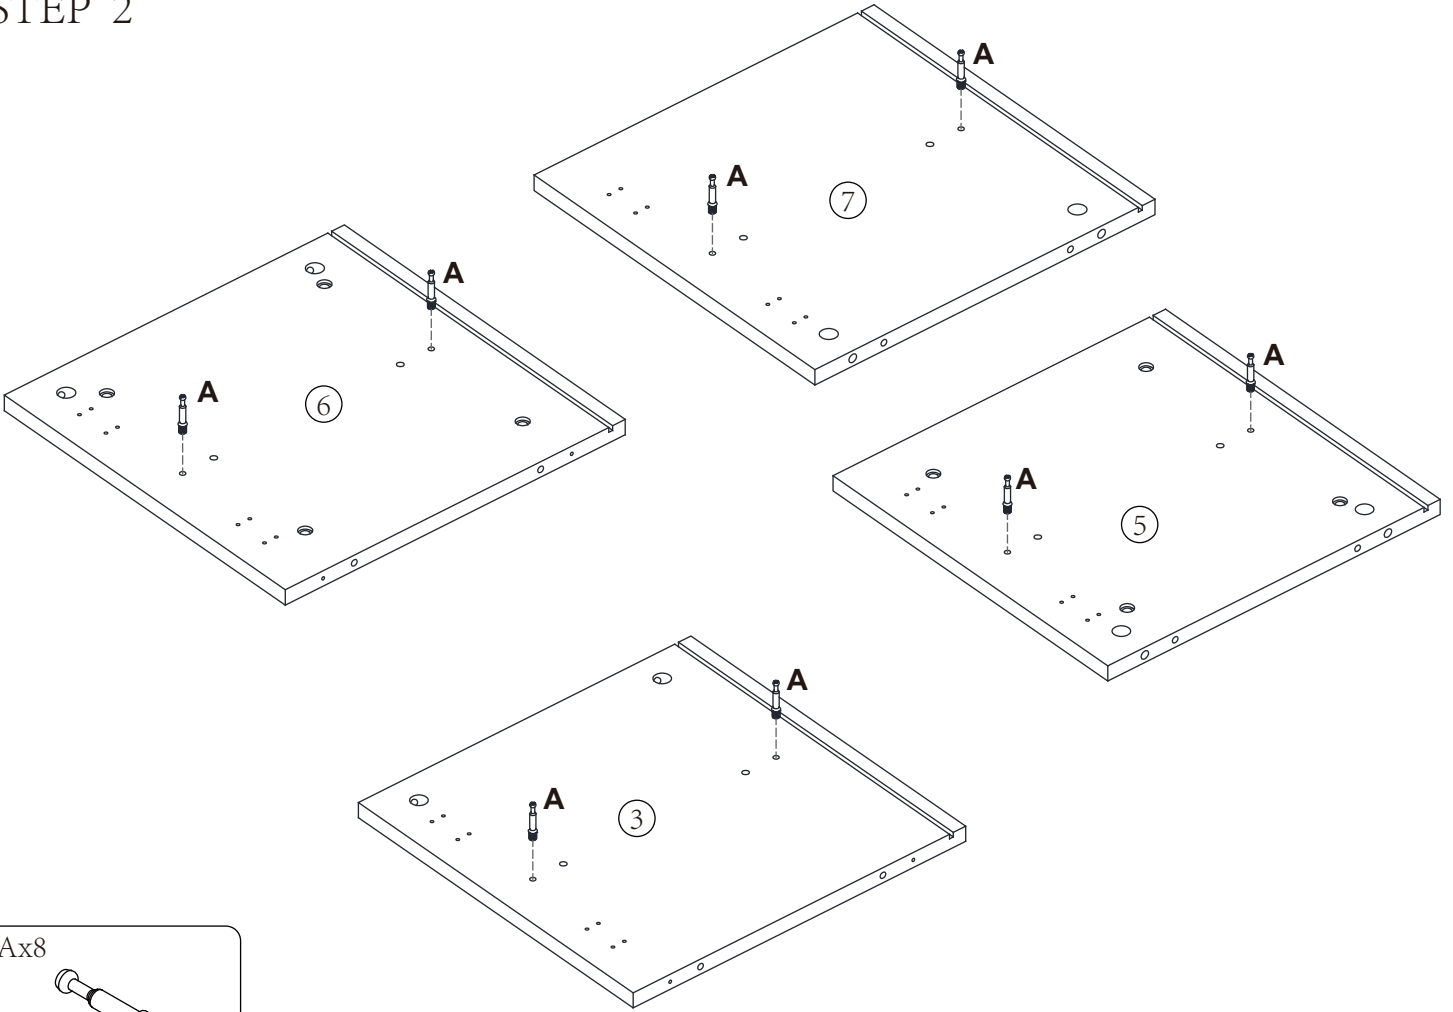

 
STEP 3

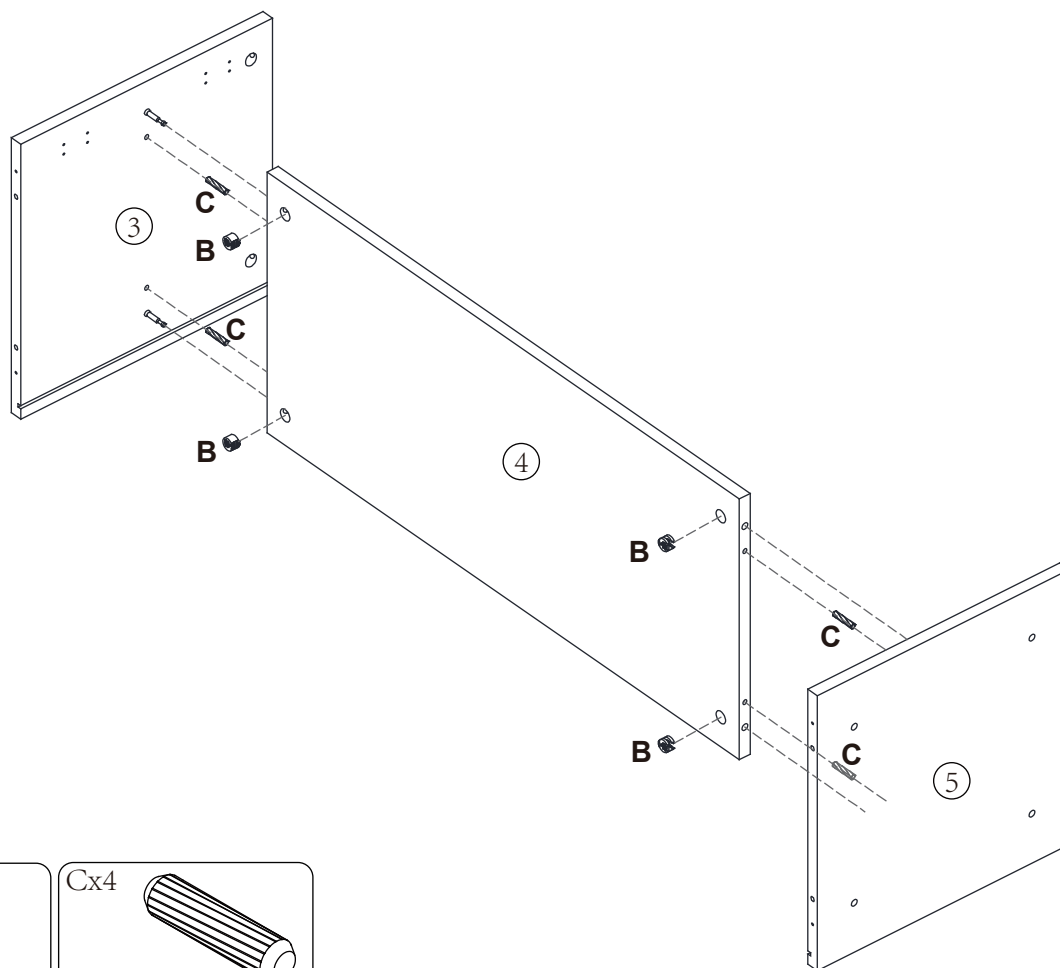


Bx4



 Cx4



 
STEP 4

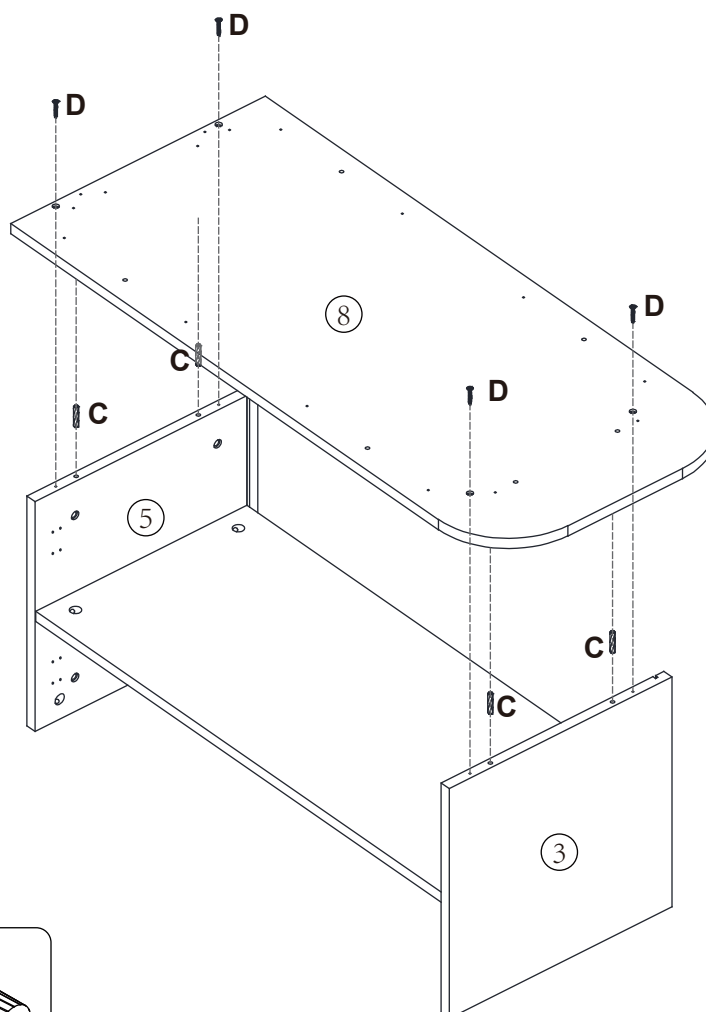


Dx4



 
Cx4



 STEP 5

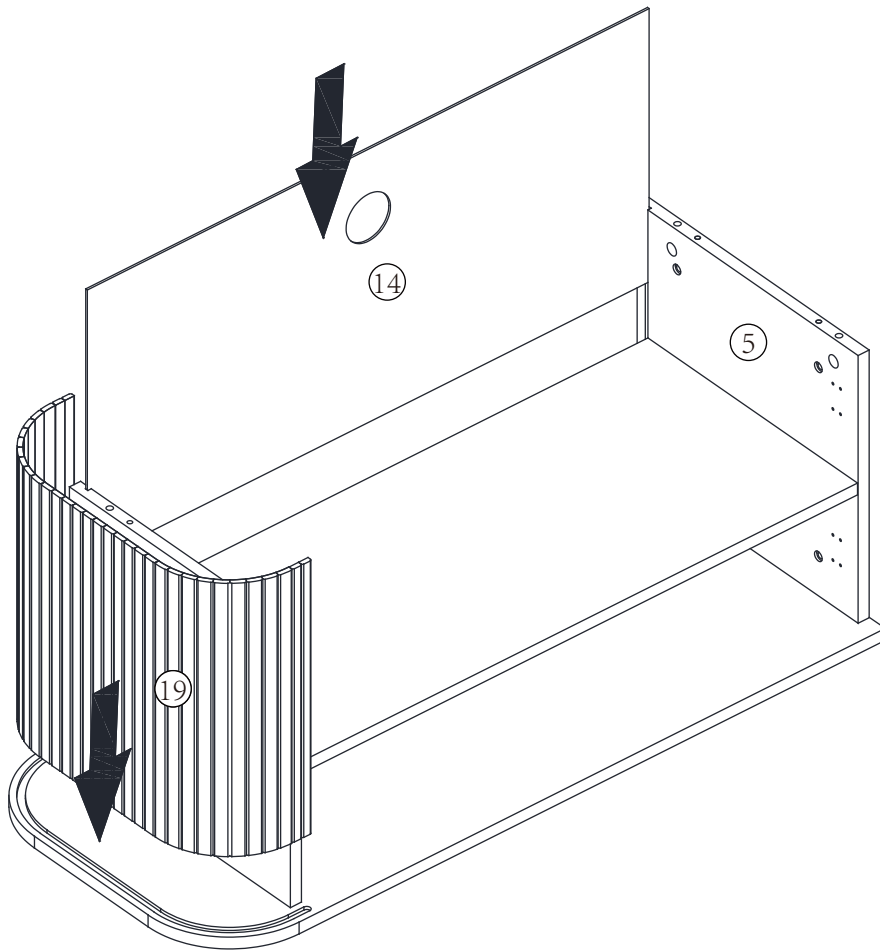

 
STEP 6

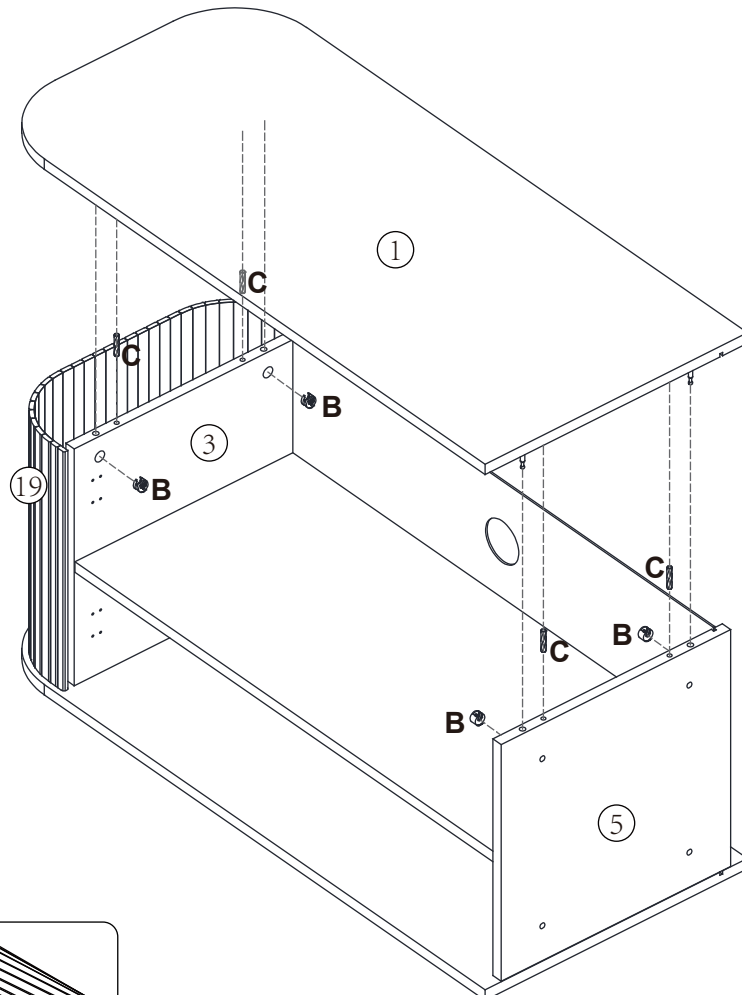




Bx4





 
Cx4



   
STEP 7

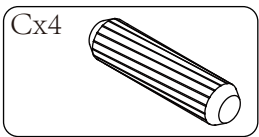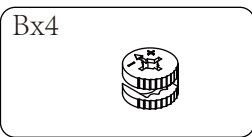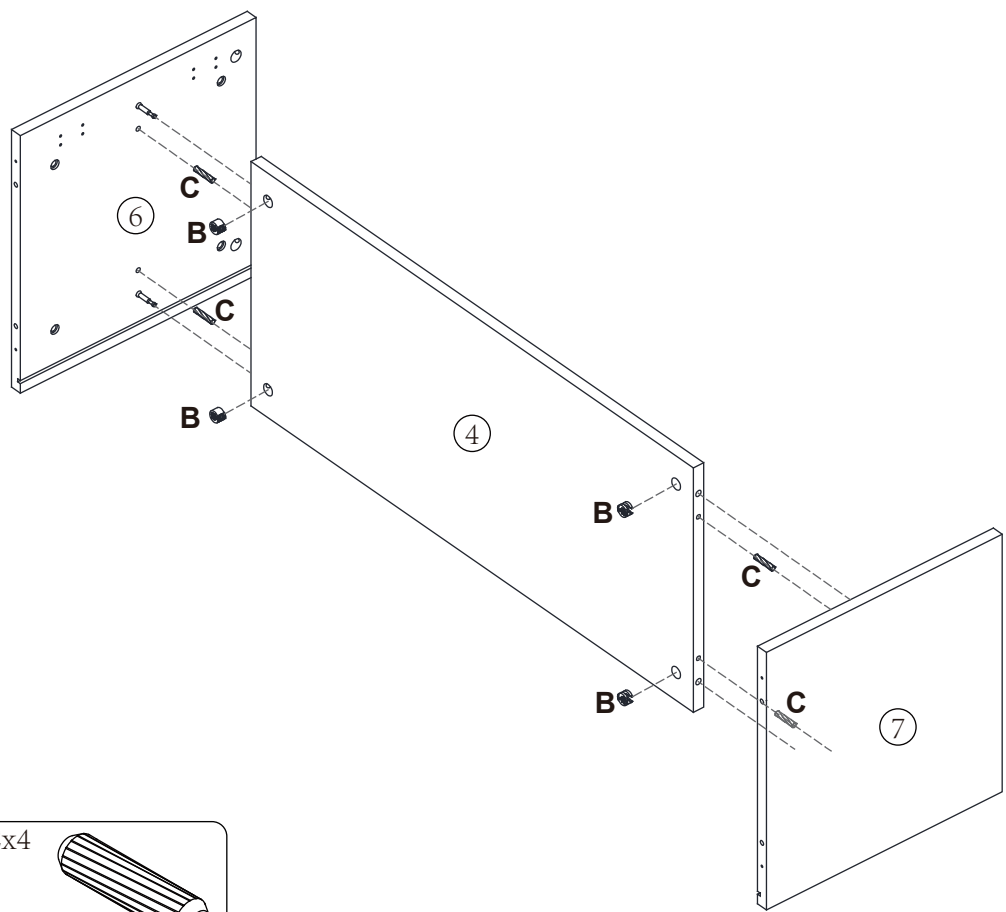

   
STEP 8

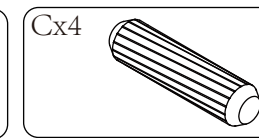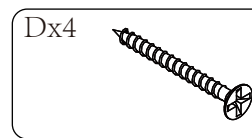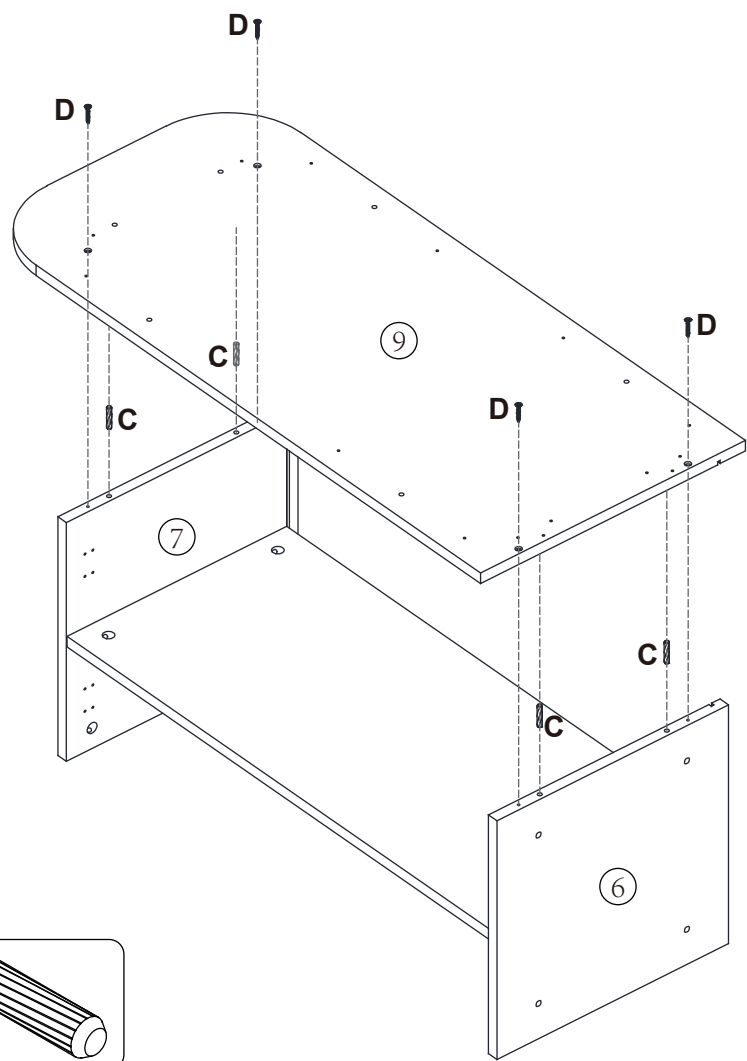

 STEP 9

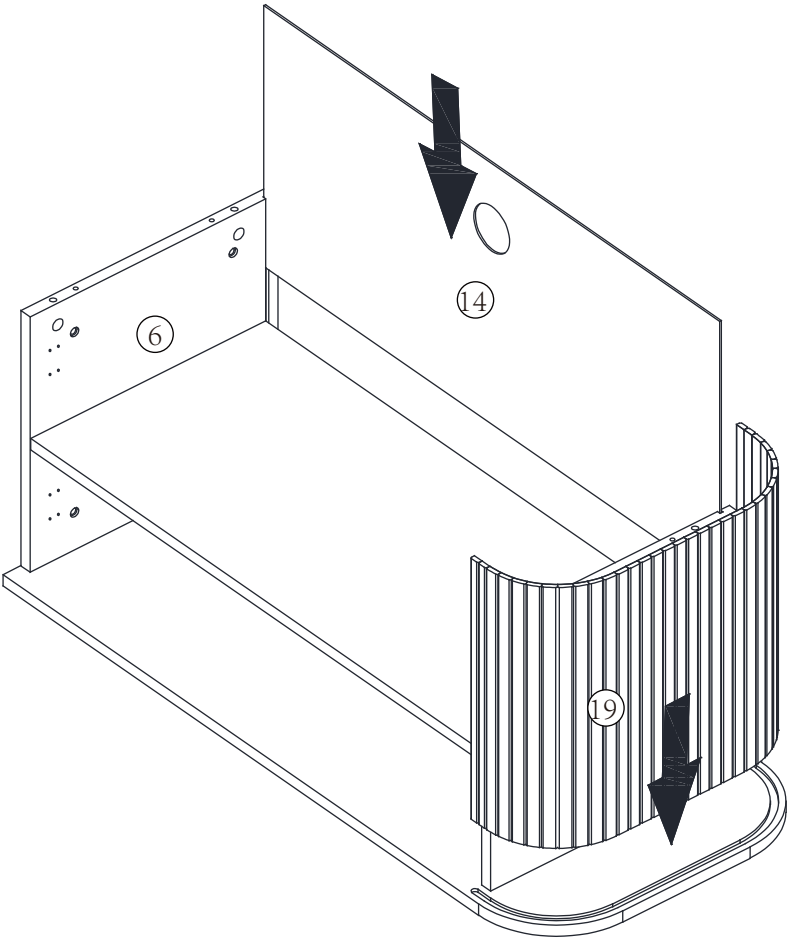

 
STEP 10

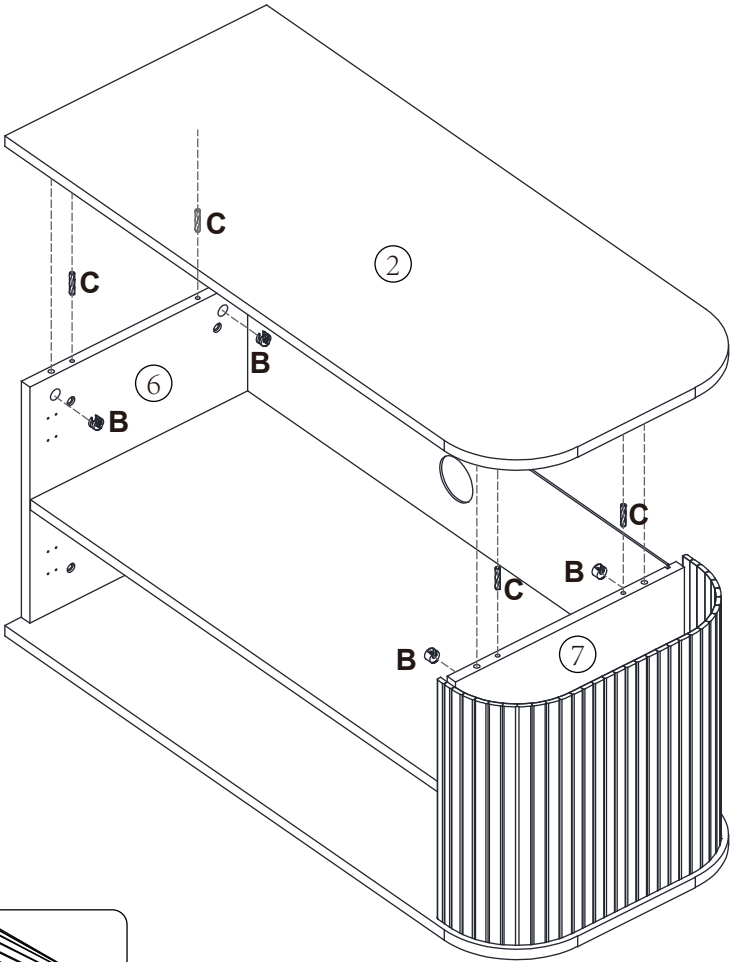


Bx4



 
Cx4




 
STEP 11

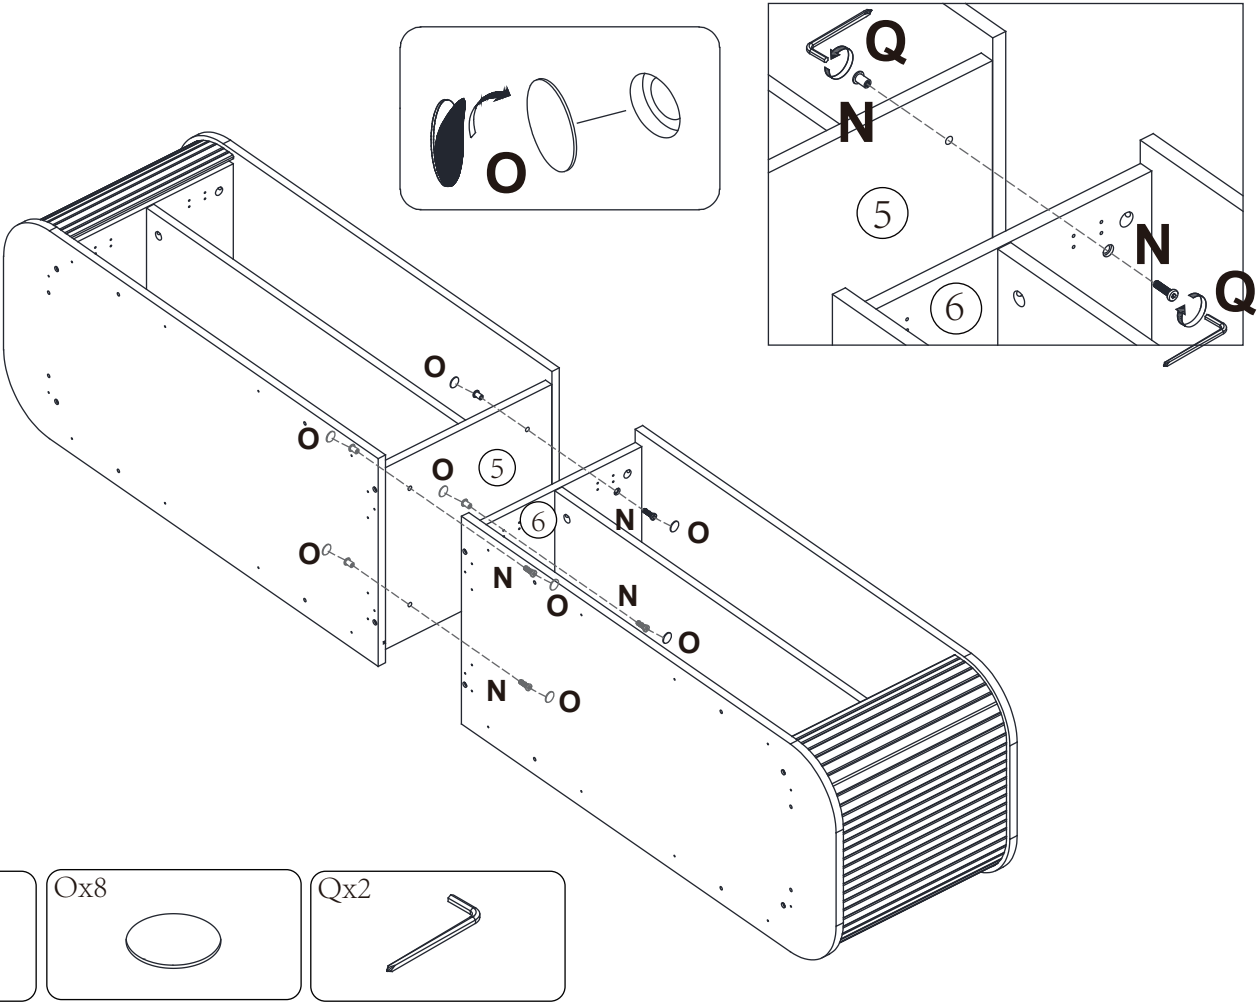



 
STEP 12

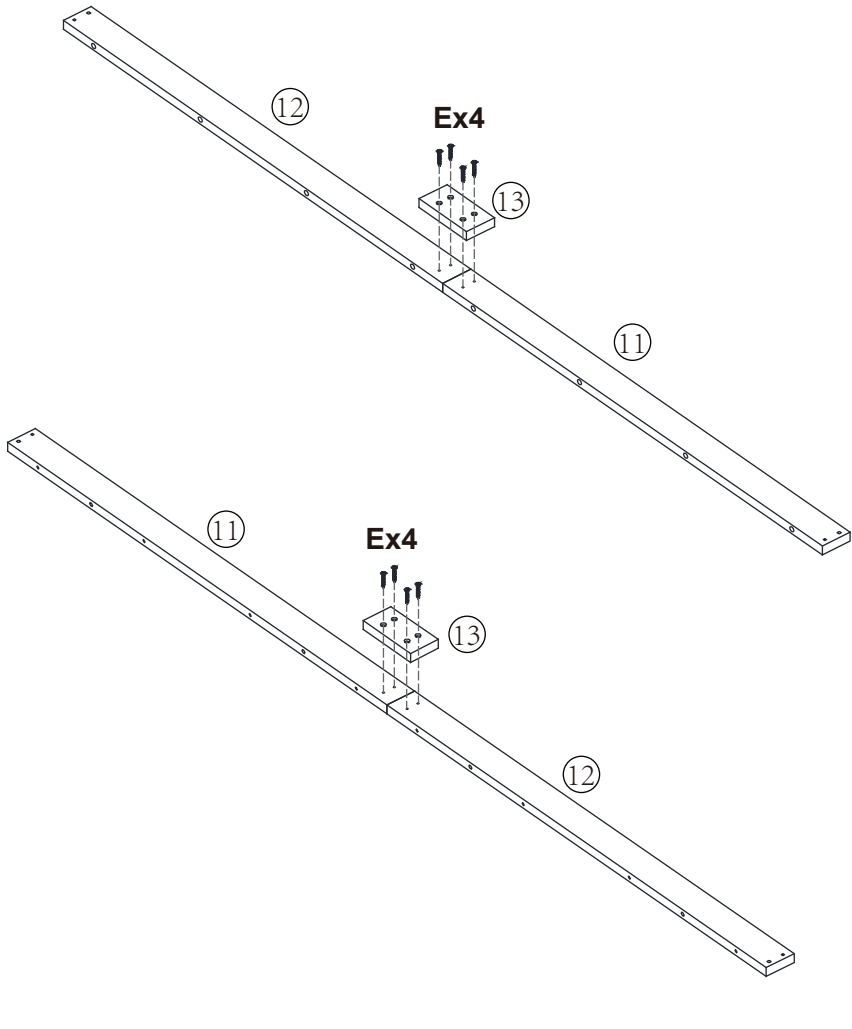


 
 
STEP 13

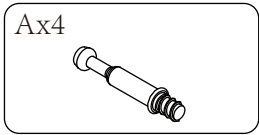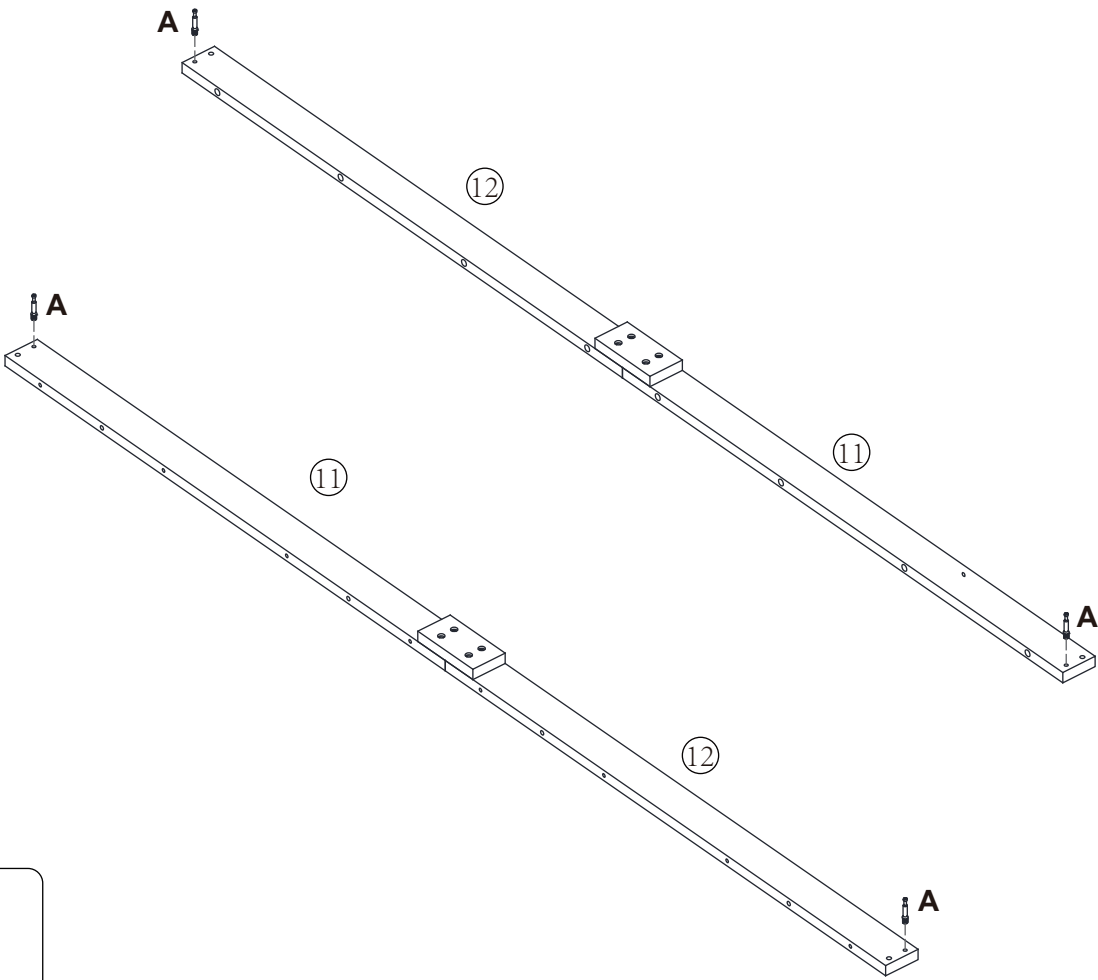

 
 
 
STEP 14

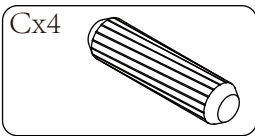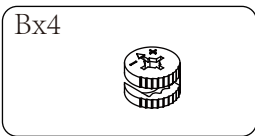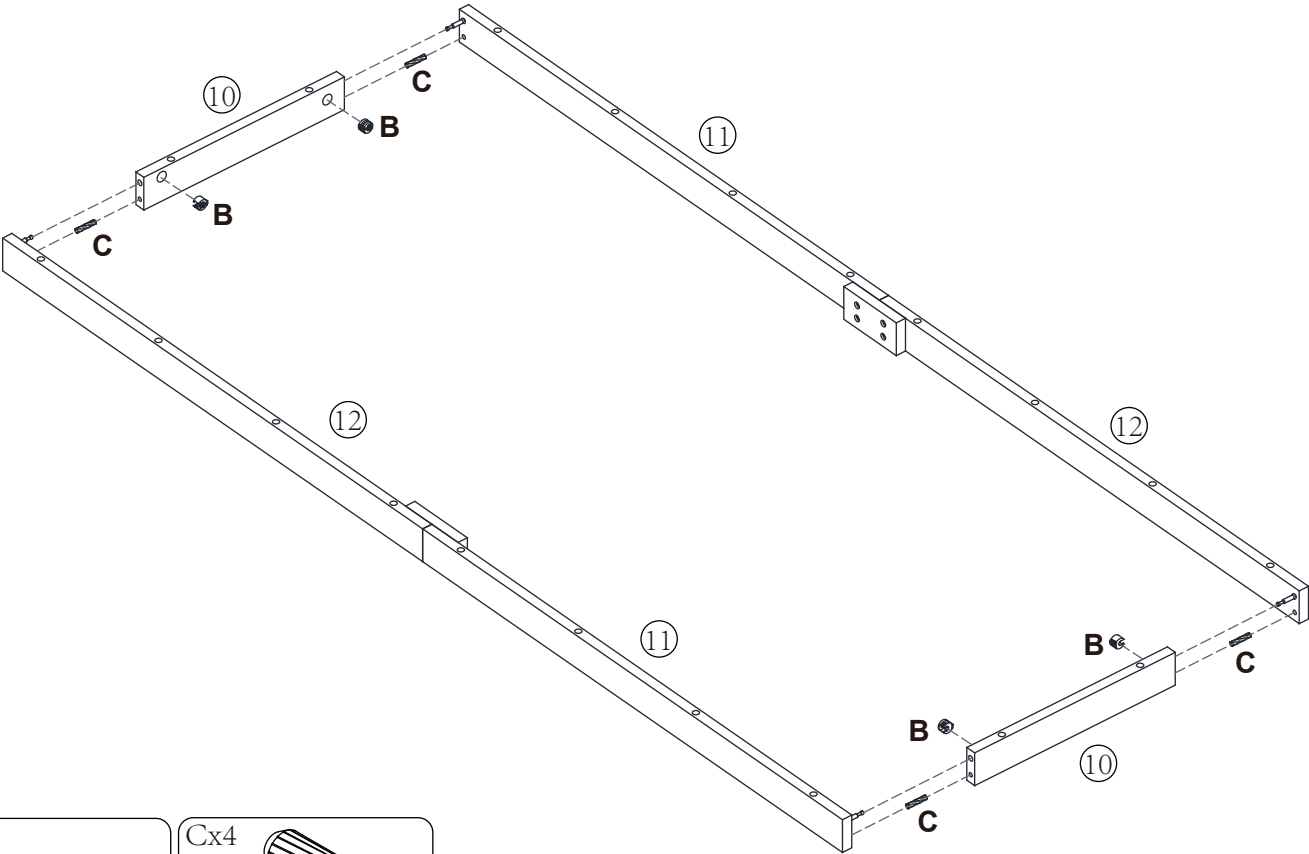

  
 
STEP 15

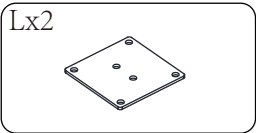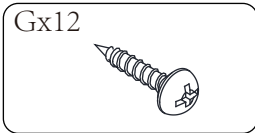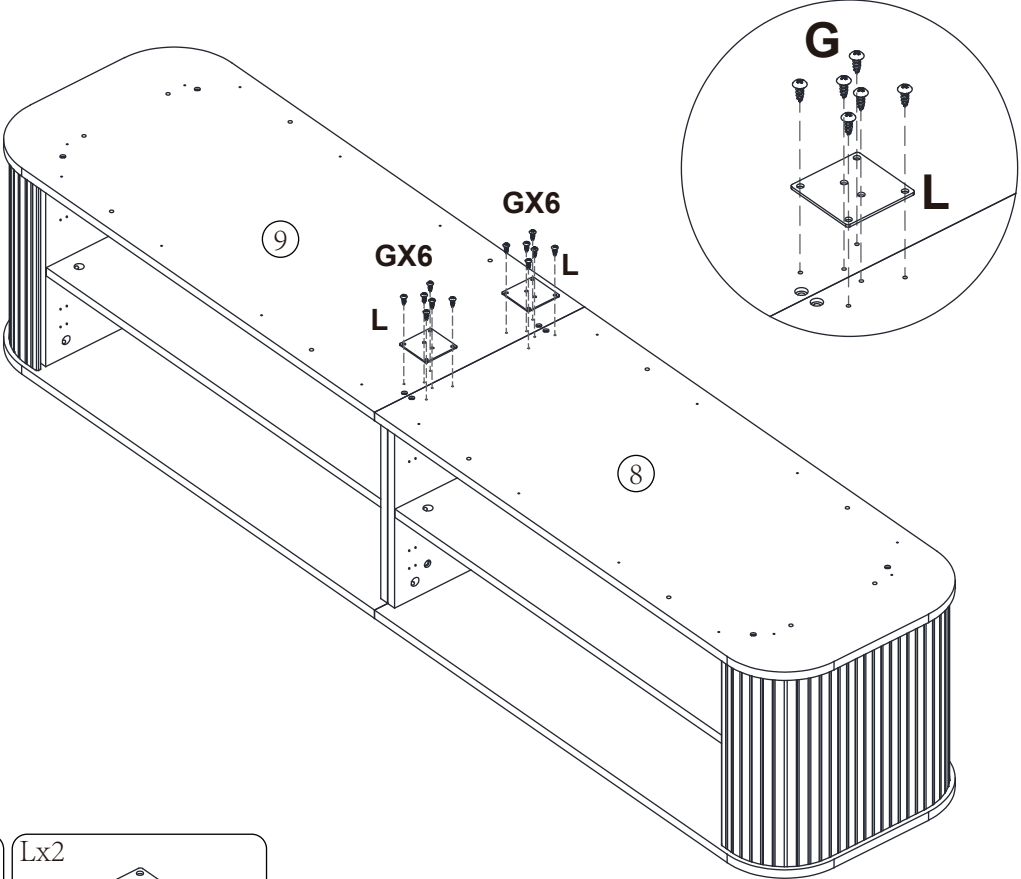



 
 
 
STEP 16

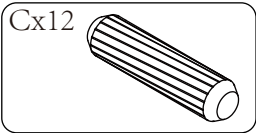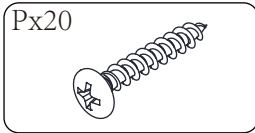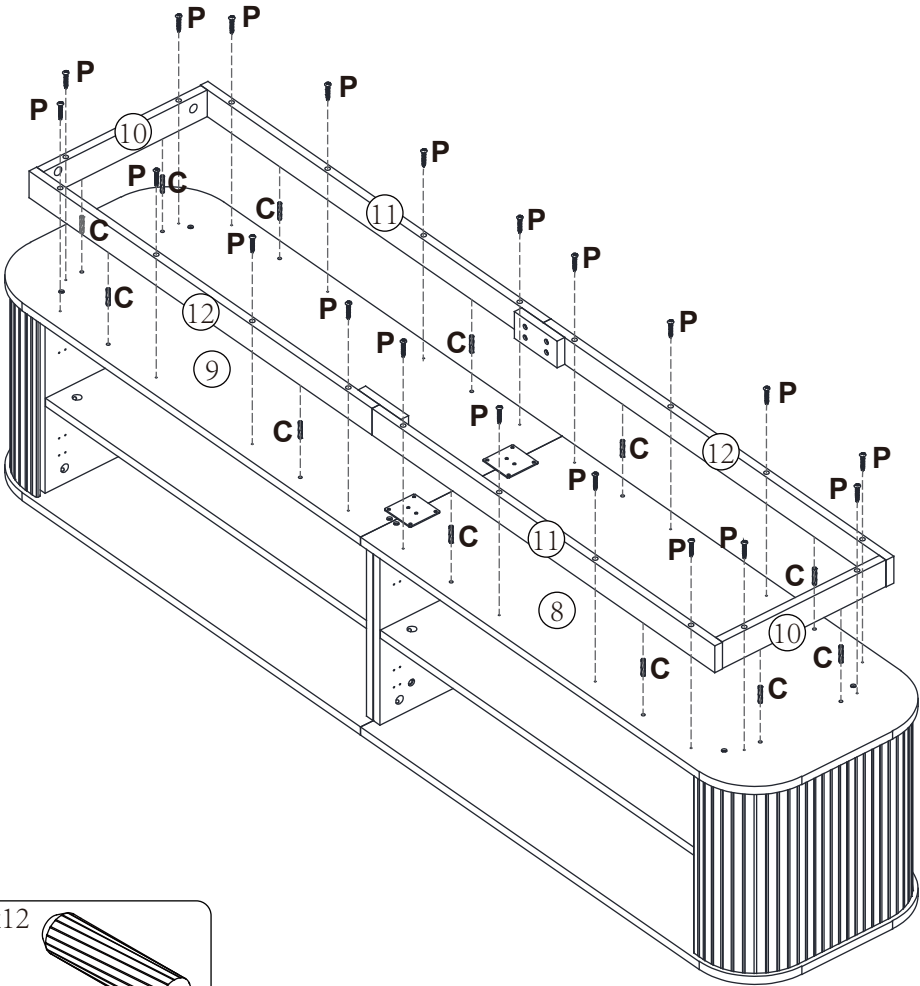

  
STEP 17

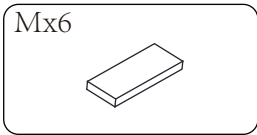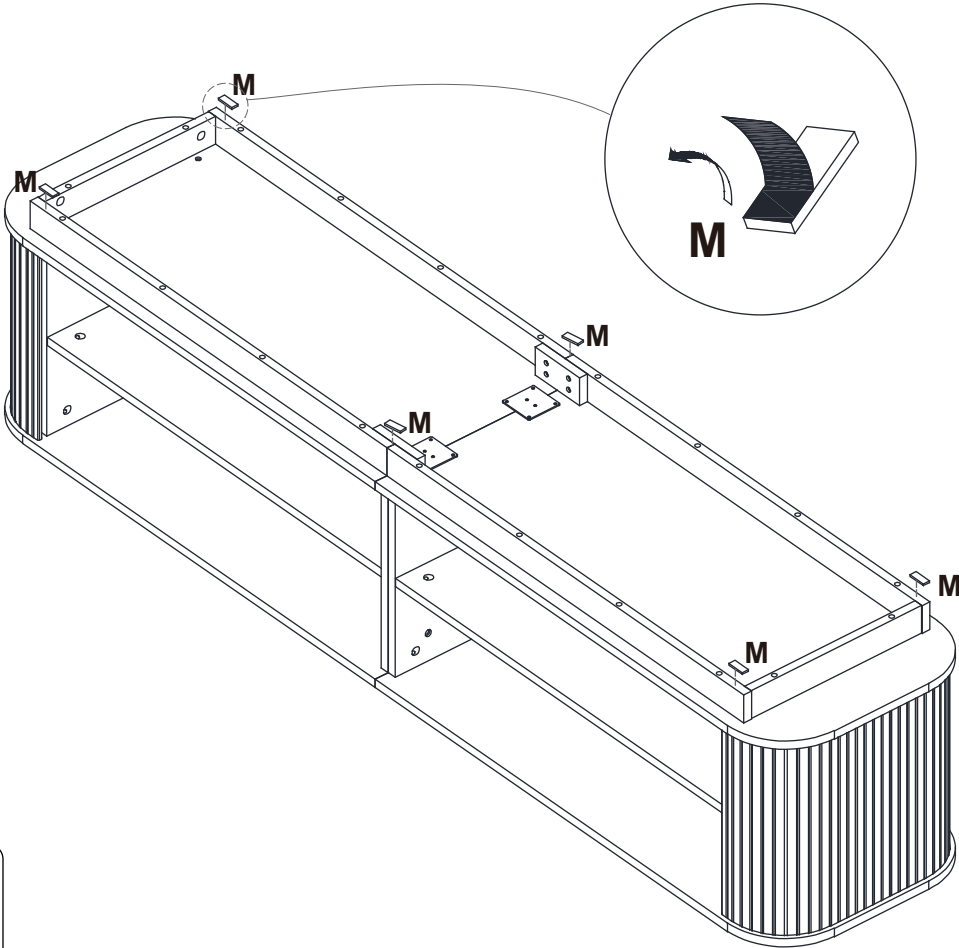

     STEP 18

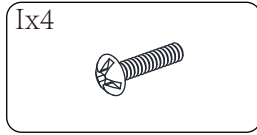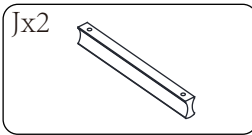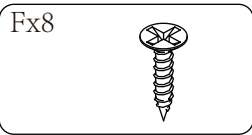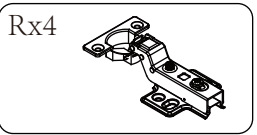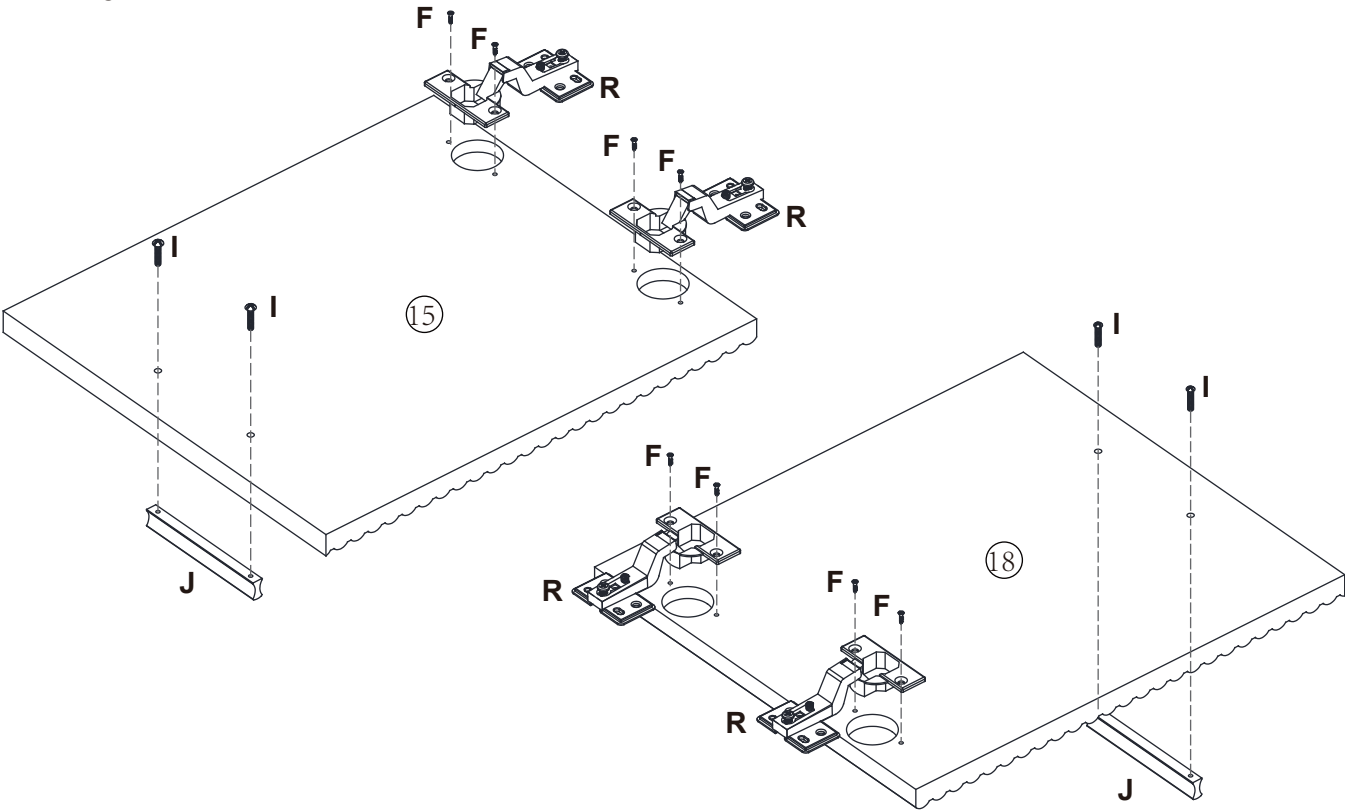

 STEP 19

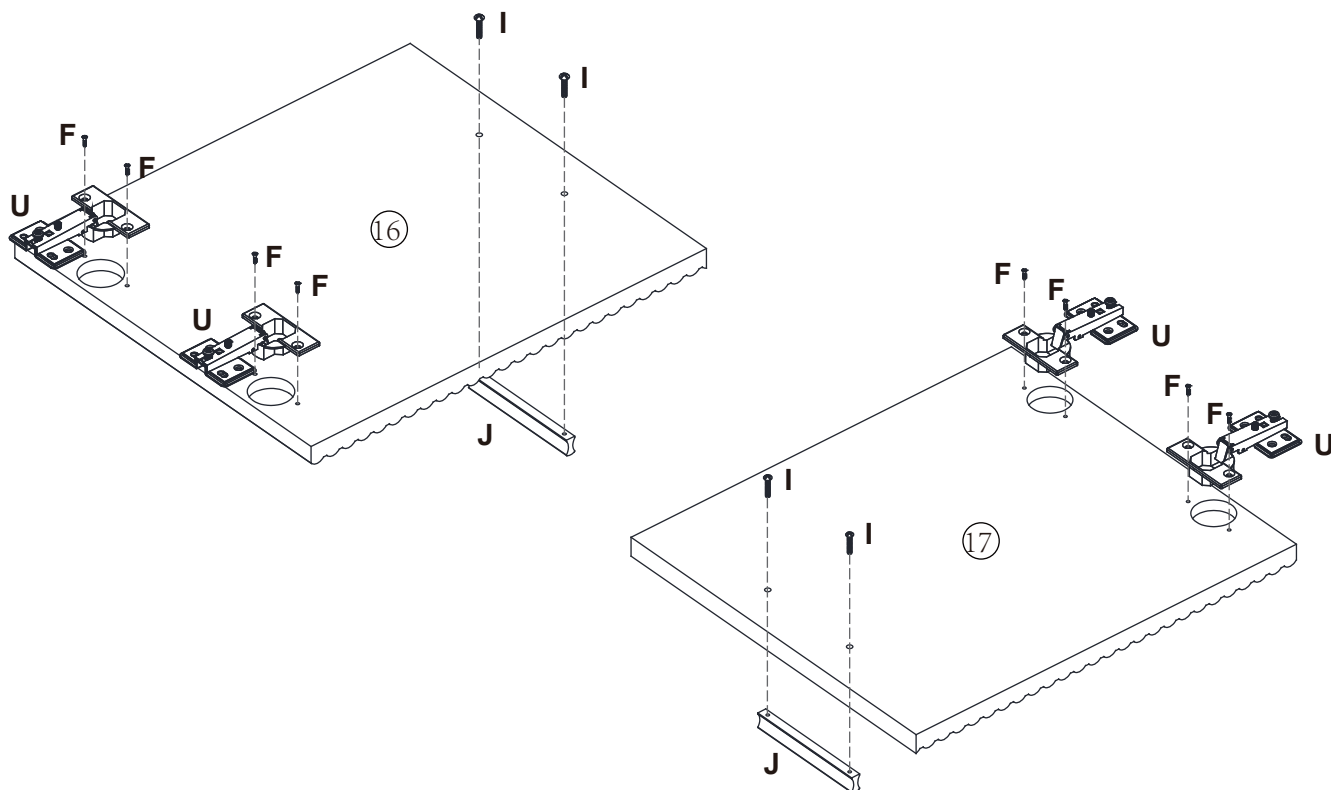


Ux4



Fx8



 
Jx2



Ix4



 STEP 20


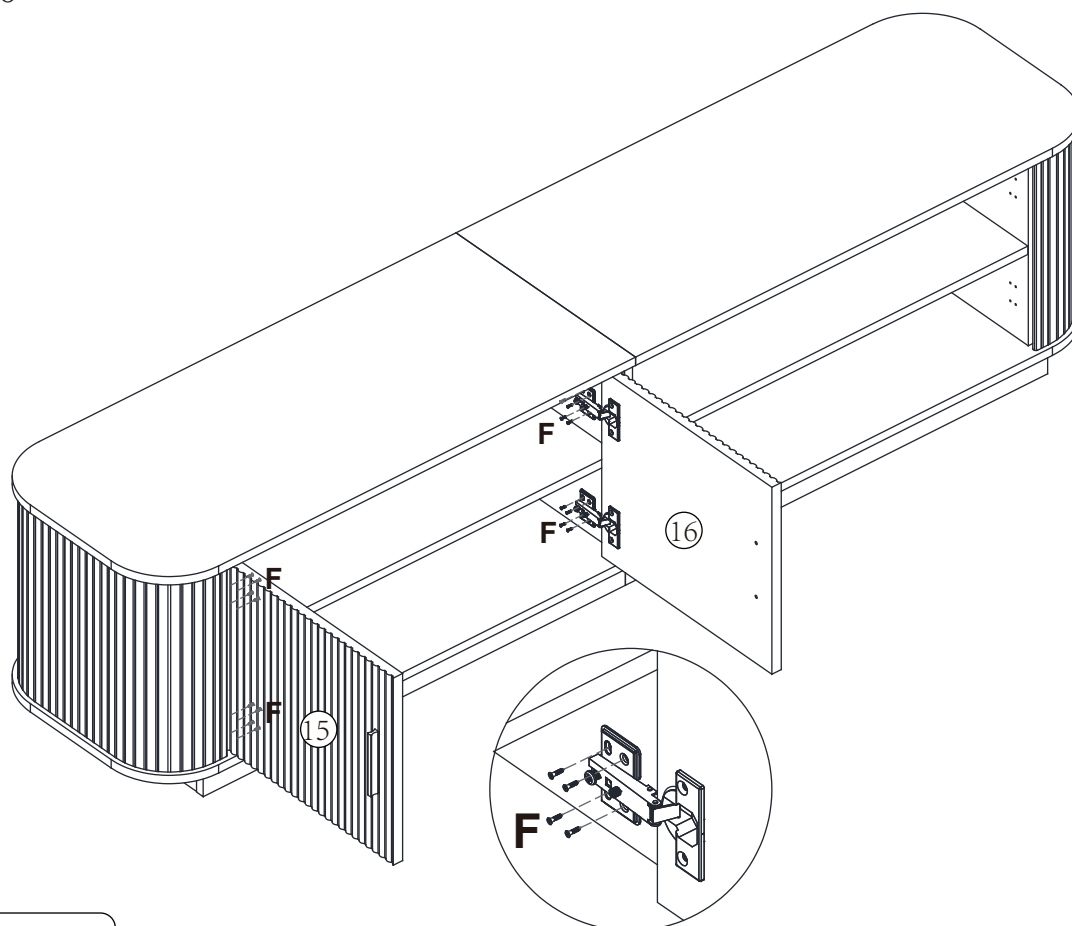


Fx16






(For detailed hinge adjustment instructions, please refer to the last page.)

  STEP 21

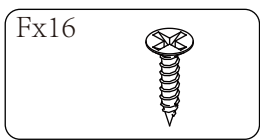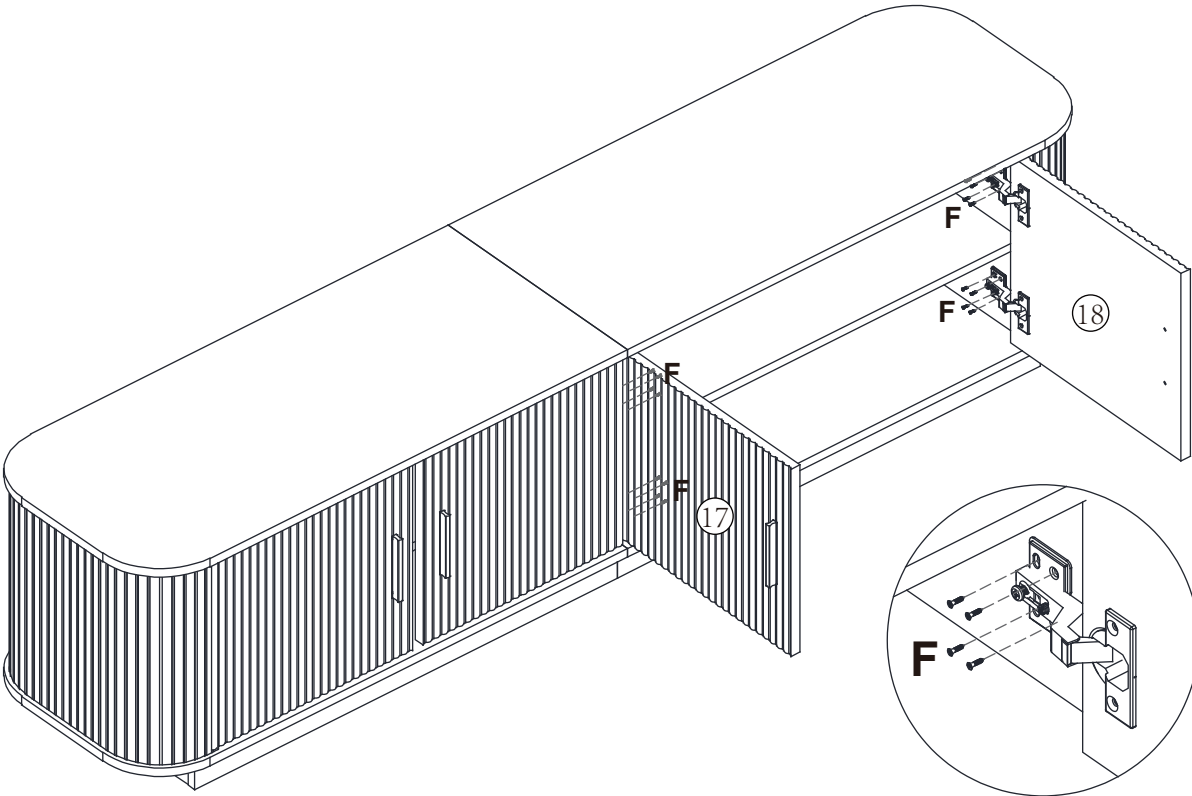


(For detailed hinge adjustment instructions, please refer to the last page.)

   
STEP 22

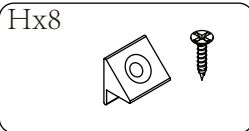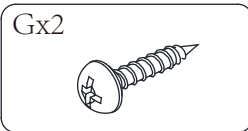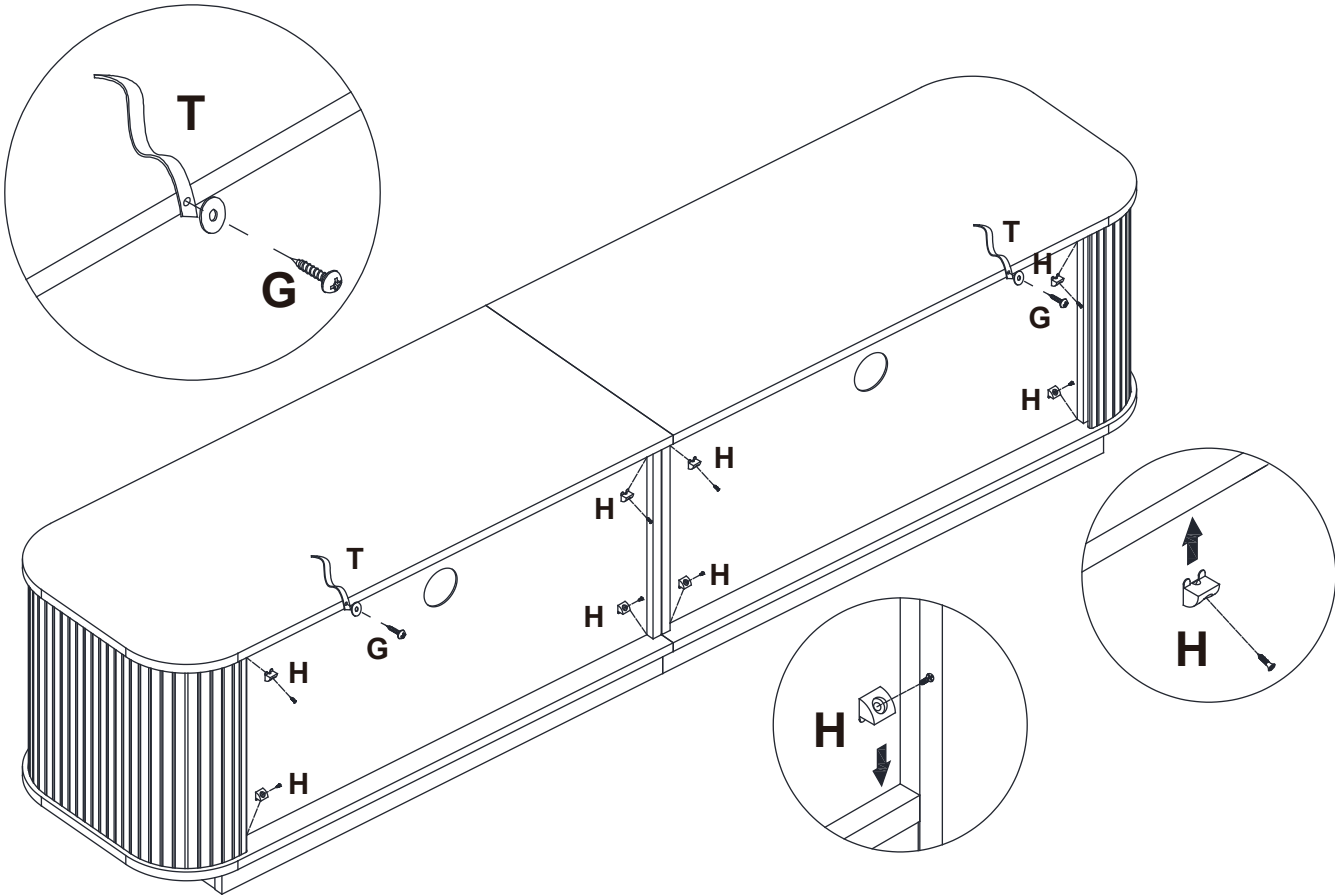

 
STEP 23

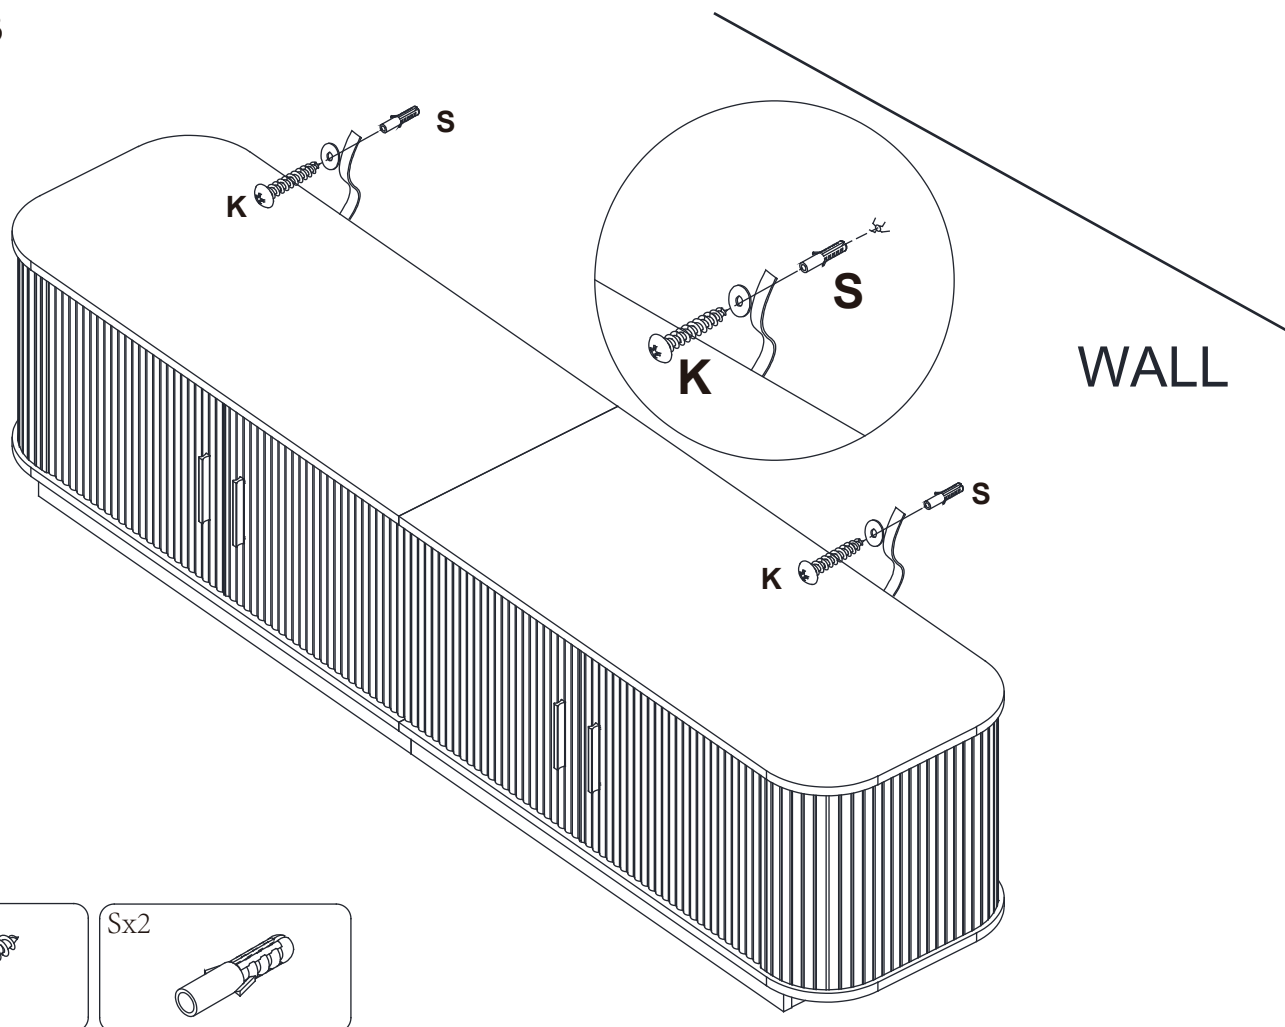

 STEP 24

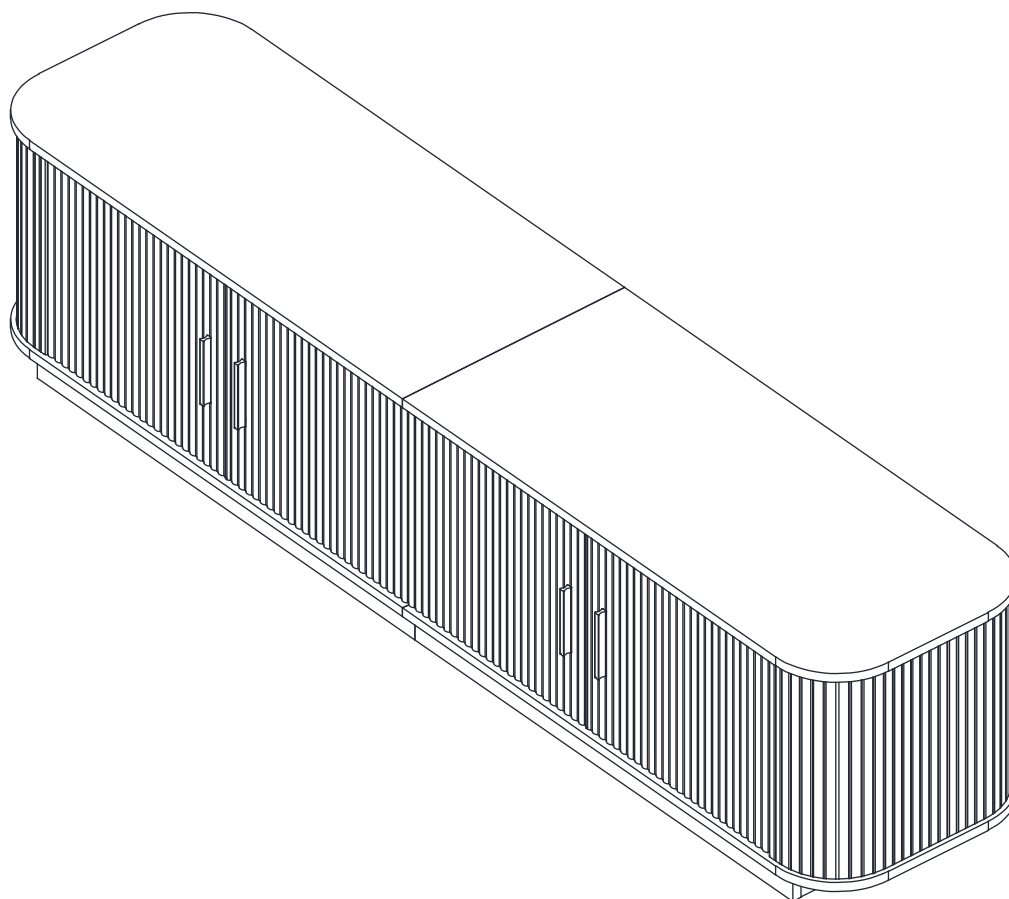


HINGE ADJUSTMENTS

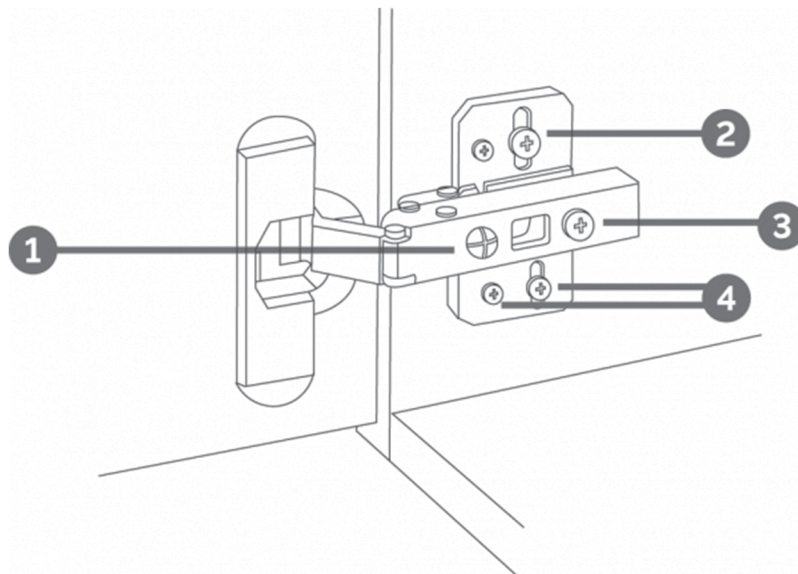 


① Sideways / Tilt adjustment

 Turn the screw
clockwise to move the door further away from the side of the cabinet
anticlockwise to move the door closer to the side of the cabinet

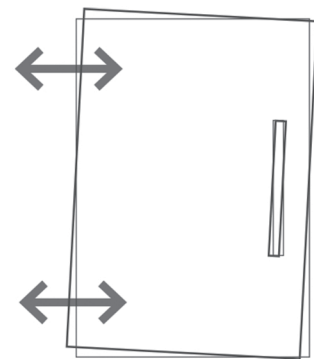

② ④ Height adjustment

 While supporting the weight of the door, turn the screws
clockwise to move the door up
anticlockwise to move the door down

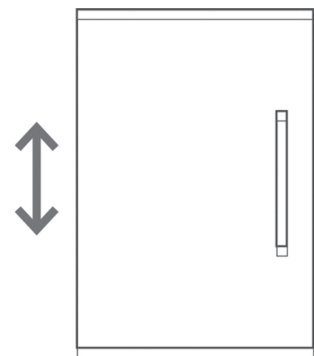

③ Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw
clockwise to decrease the gap between the door and the cabinet
anticlockwise to increase the gap between the door and the cabinet

