


If the light source is broken, you can replace it. (Gu10 50W)

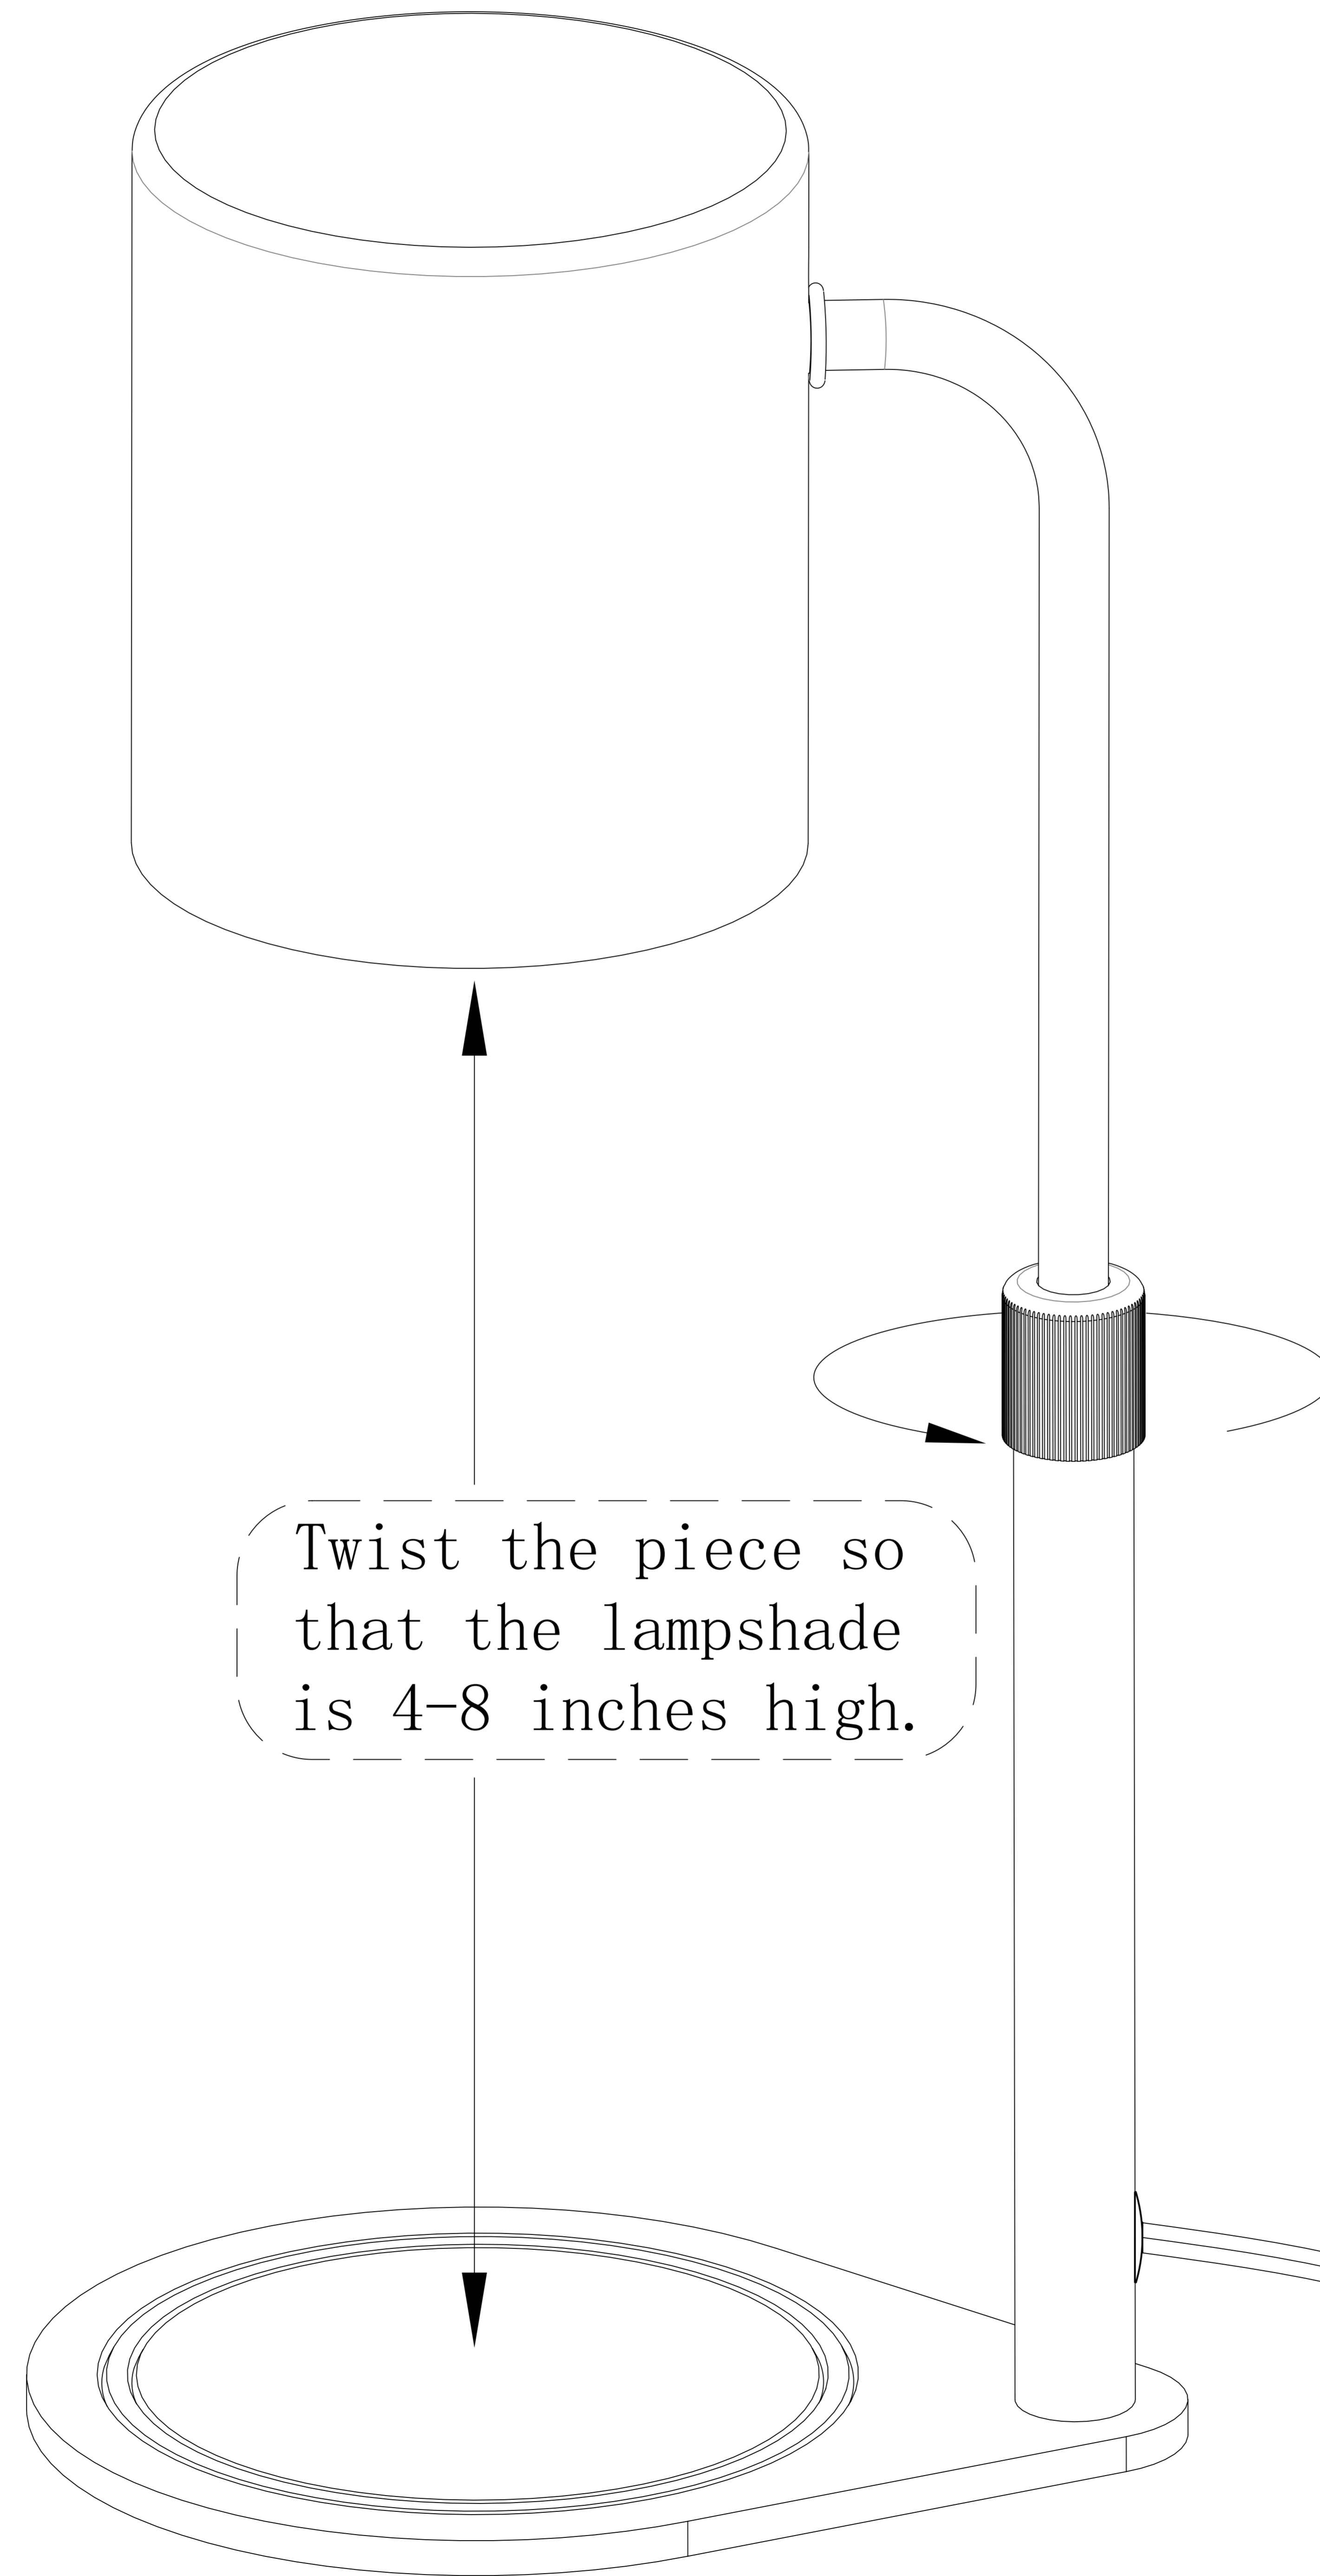

Twist the piece so that the lampshade is 4-8 inches high.

- ① Turn on/off
- ② Dimmer: This candle lamp has 4 levels of dimming, which can be lightened or dimmed by using the button "+" or "-".
- ③ Timer: This candle lamp has 3 timing gears (2H/4H/8H), which can be selected through button.

