

10'X10' Dog Kennel Cover



Dimensions: 9ft. 7in. Wide x 9ft. 7in. Deep x 2ft. Center Height

(Dimensions are of the Cover Assembly Only)

Tools: Requires 5/16" Wrench or Adjustable Wrench

WARNING:


Keep all flame and heat sources away from this tent fabric. It is not fire proof. The fabric will burn if left in continuous contact with any flame source.

PARTS




5X0PCS	5 pc	60" Powder Coated 1³/₈" Pipe
4X6PCS	1 pc	52" Powder Coated Swage Pipe
3WAPCS	2 pc	3-Way Connectors
BALL	25 pc	Black Elastic Ball Straps
SC1313	4 Sets	Single Clamps w/ Bolts, Nuts, Washers
TKC1010	1 pc	Silver Kennel Cover


FRAME ASSEMBLY

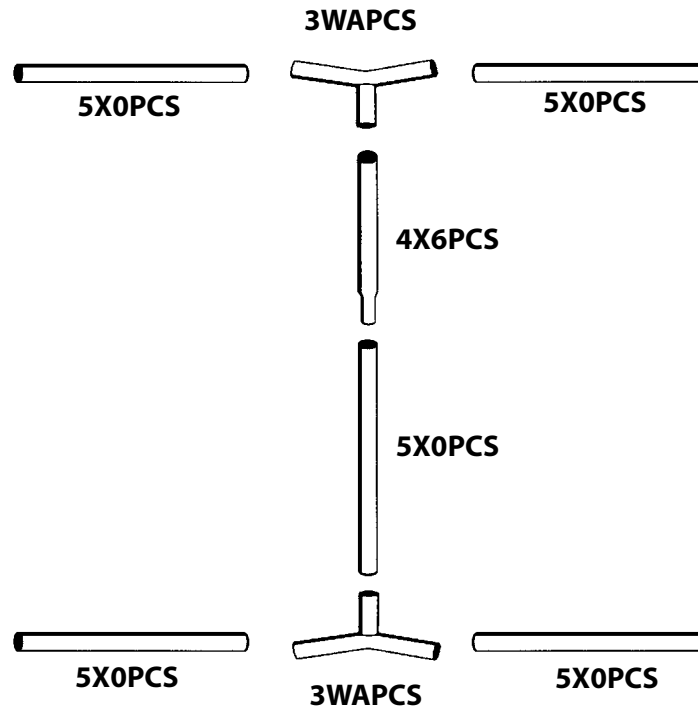

1) Start by laying out all of the parts and pieces to your Canopy. Please refer to the parts list to ensure that your kit is complete. When all the parts have been accounted for, begin to layout your frame according to the photo above (5X0PCS & 4X6PCS). Each 3-way fitting (3WAPCS) should be placed at the two end peaks.

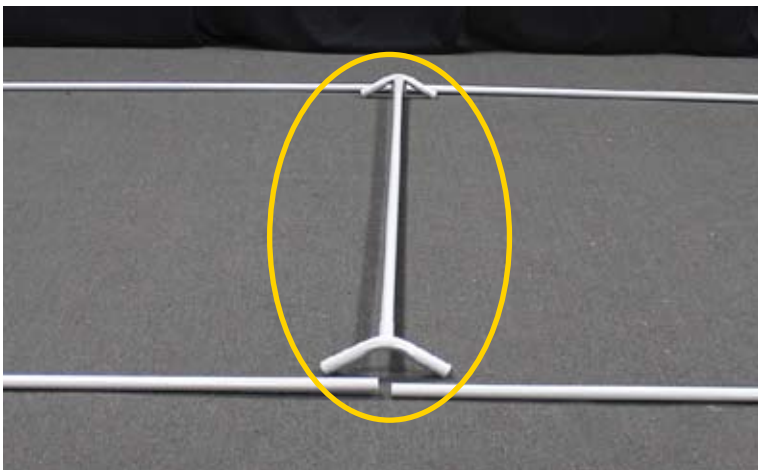

2) Now that all the pipe and fittings are laid out as displayed in the photo, begin to connect the center pipe and fittings. Start assembly by working from one end to the other, connecting the center ridge pipe into the 3-Way (3WAPCS) fittings.

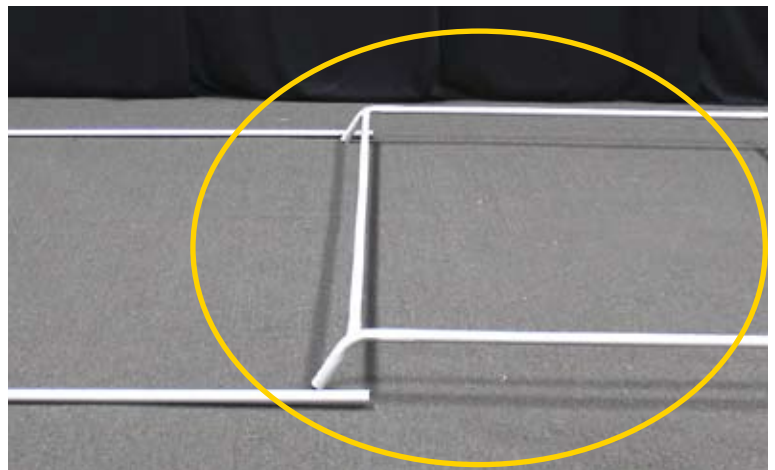

3) Once the center frame work is fully connected start assembling the left and right sections of the frame. Starting at one side, connect the 5x0PCS pipes to the assembled center ridge.


FRAME & ATTACHING COVER



4) Once one side is complete, move to the opposite side of the unassembled frame, lift the frame and connect the 2 remaining 5X0PCS pipes.



5) Now that the roof frame work is complete you can begin to attach the silver cover. Start by laying out the cover to determine which way it is folded (the length or width or the frame) and drape cover over the frame.

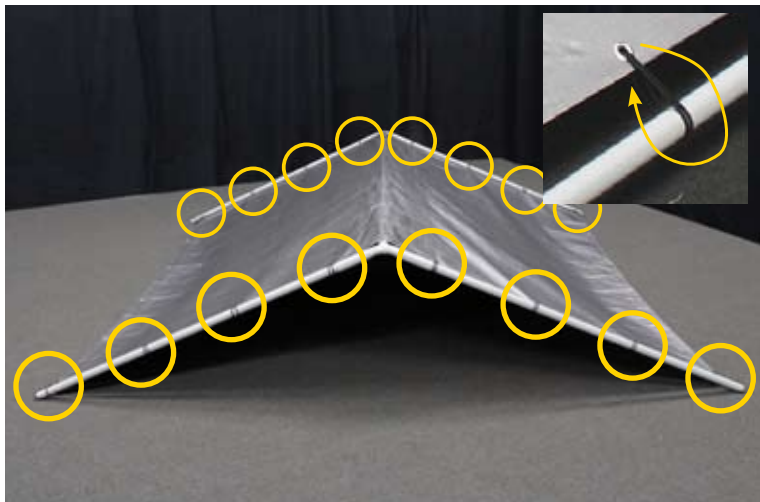

6) Attach the cover with the elastic ball straps by inserting the elastic cord of the ball strap underneath the cover and through the grommet. Then pull taught until the ball stops.



7) Place framework over the kennel and attach each of the 4 roof pipes using the single sided clamps. Please note that the frame measures less than 10 ft in width and length to attach to the point on the kennel before the curved corner sections.

ATTACHING COVER TO KENNEL



8) After all 4 of the roof pipes are clamped in place, finish attaching the ball bungee cords to the side rails of the kennel frame.

IMPORTANT NOTICE: PLEASE READ CAREFULLY

WARRANTY INFO

Missing/Defective Parts

We try our best to eliminate any defective parts that are shipped with our products. Carefully inspect all packages upon arrival and report any missing or defective items upon receipt. Any discrepancies must be reported within 30 days of purchase. Please be sure to take a few minutes to match all items in the box to the items on the product manual. If there should be any missing or defective items, we will ship them free of charge. You will need to fill out a warranty claim form and e-mail, fax, or mail it in along with a proof of purchase showing date of purchase. Your replacement will be shipped free of charge by ground shipping. Next day or express shipping will require freight collect and paid for by you. Damages from improper anchoring, strong winds, snow, ice or rain are not considered defects.

1 Year Limited Warranty

All of our canopy components feature a 1-year limited warranty (90 day-limited on items) and are warranted to be free from defects in material and workmanship during this time frame. You must fill out our warranty claim form and provide your proof of purchase receipt. This does not pertain to any missing or defective parts in the 30 day inspection period.

Defective Returns

If you receive a product that is defective and wish to return it, please contact our customer service department to receive a return authorization number. All items will be passed through quality control before issuing a credit. You will be contacted upon receipt of your returned merchandise and notified whether your return is accepted or not. If not, you will have the option to receive the product back at your expense.

Improper Anchoring, Strong Winds, Rain, Snow, or Ice

We do not guarantee these canopies under strong weather conditions (including snow and ice) under any circumstances. These canopies are designed to protect against damages caused by sun, light rain, tree sap, birds, etc. They are not designed to hold roof loads that accompany snow, ice, or heavy rains. If your canopy is not anchored securely, strong winds can lift it and cause damage if it is blown over and/or away. Canopies make excellent kites. If your canopy is anchored incorrectly and is blown away, we will not send any free replacement parts for damages. If you know strong weather is predicted, remove the cover or take down the unit completely. The cover is designed to be quickly and easily removed.

Non-Warranty Replacement Parts

If your warranty expires and you need replacement parts please contact us. We stock replacement parts for most of our products. Our customer service department will be pleased to assist you in any way possible.

Certain regions of the country are extremely harsh on canopy covers. Normal wear and tear is not covered under warranty, and should be expected.

In order to receive a discounted or free replacement part, you may be asked to return the part, freight prepaid, to our warehouse for inspection before we will send a replacement. You must, in all cases, provide a copy of your receipt showing the date of purchase, model number and price.

Return Policy

All returns will require a return authorization number (RA). To obtain an RA, please contact our customer service department. All returns must be submitted within 30 days of purchase date, located on receipt. Any returns submitted after 30 days without an RA number will not be accepted. Credit will be issued upon receipt of product and inspected for damages or excessive wear and tear. The full amount of the product will be credited in the form of original payment minus a 15% restocking fee and shipping and handling.

Please allow time to inspect and issue the appropriate refund.

We are confident that you will be completely satisfied with your unit. Please take a moment to read the very important information below, and call us with any questions you may have.

We have no control over wind, snow, ice, rain or any other weather condition and we are in no way responsible for any damage caused by the canopy or to the canopy. We suggest you contact your insurance carrier just as you would for any other outside structure.

OTHER PRECAUTIONS WHICH MUST BE FOLLOWED:

Keep all flame and heat sources away from this tent fabric. The tent fabric will burn if left in continuous contact with any flame source.

DO NOT cook underneath or near canopy.

DO NOT store or use flammable liquids underneath or near canopy.

DO NOT ignite or store fireworks underneath or near canopy.

DO NOT use bleach to clean cover.

DO NOT dry clean cover.

DO NOT wash cover in washing machine or dry in dryer. Hand wash with mild soap and water only.

DO NOT allow rain water, snow or ice to accumulate on top of cover.

DO NOT hang or suspend anything from the frame, grommets, truss system or ball straps of the unit.

REMOVE canopy cover before a storm, or disassemble entire canopy unit if possible.

REMOVE rain water, snow and ice from canopy cover.

THIS IS A TEMPORARY STRUCTURE AND IS NOT RECOMMENDED FOR USE AS A PERMANENT STRUCTURE.