 


Instruction Manual

Cabinet

SHX17030

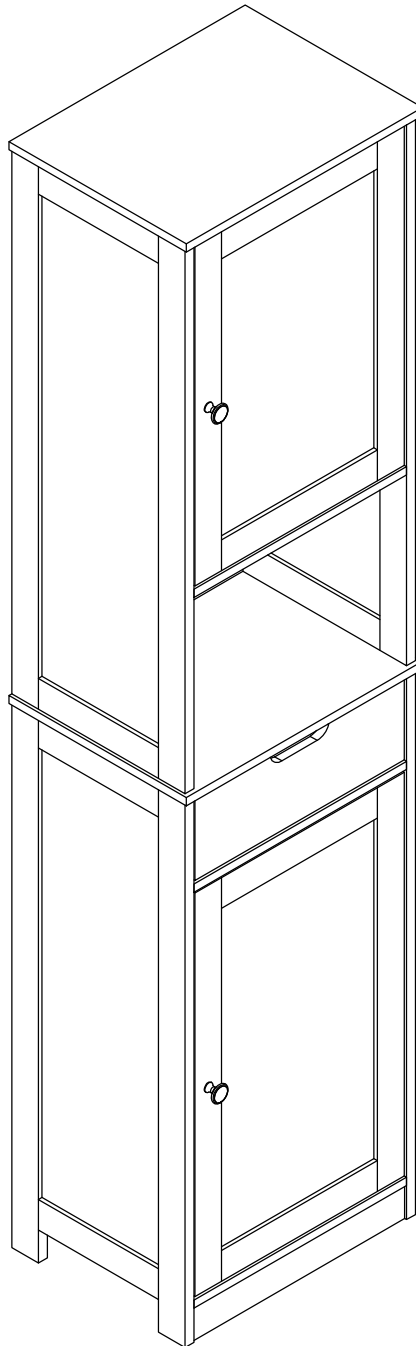

Thank you for shopping with us!

If any part is missing, broken upon receipt or you need any help from us.

For the FASTEST SOLUTION, please FIRSTLY CONTACT US

Notes:

1. ASSEMBLY PREPARATION AND TIPS FOR ASSEMBLY

- 1). Remove all packaging materials, staples and packing straps from the carton.
- 2). Refer to Parts List and Hardware List, and ensure parts and hardware are correct before assembly.
Contact customer service for missing parts.
- 3). Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent scratch and damage to parts.
- 4). Allow ample room for assembly and assemble the product near where the product will be placed.
- 5). During assembly, do not over-tighten any fittings as this may cause damage.
- 6). Always place the product on a flat, level surface.









 
 








 
 
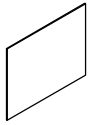
2. CARE AND MAINTENANCE

- 1). KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
- 2). Wipe clean with a soft, dry cloth; avoid the use of harsh chemicals or household cleaners as they may damage the exterior finish of the furniture.
- 3). Hardware may loosen over time. Periodically, check that all connections are tight; re-tighten as necessary.







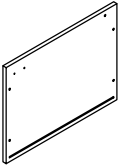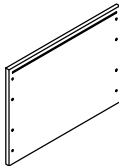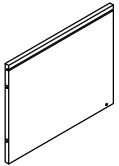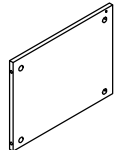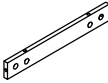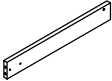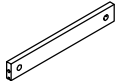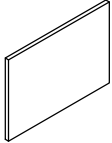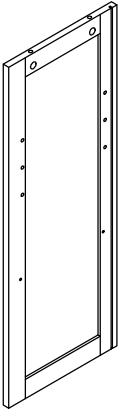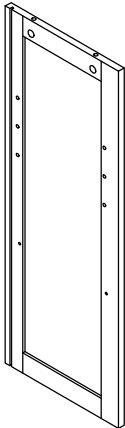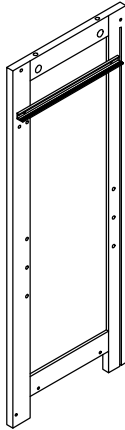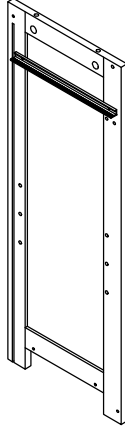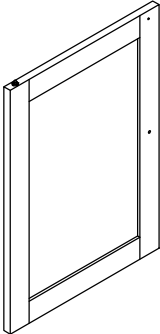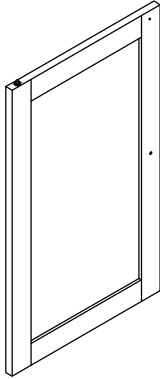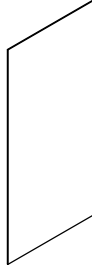 



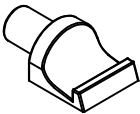
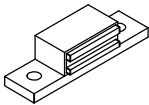
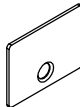

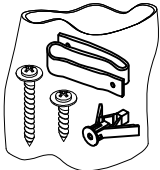
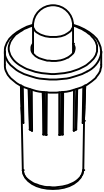
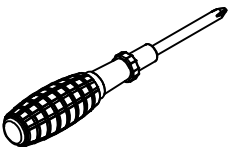
3. TIPS TO PROTECT & CARE FOR YOUR FURNITURE

- 1). Avoid placing your furniture in direct sunlight, as sunlight causes fading.
- 2). Use a protective pad when writing on the furniture surface.
- 3). Use cutting boards and trivets for food preparation in order to avoid damaging the top for the unit.


PART LIST

A 	B 	C 	D 	E 	
Upper Cabinet Top Panel 1 PC	Upper Cabinet Bottom Panel 1 PC	Below Cabinet Bottom Panel 1 PC	Upper Cabinet Fixed Shelf Panel 1 PC	Below Cabinet Front Foot Board 1 PC	
F 	G 	H 	I 	J 	
Below Cabinet Front Rail 1 PC	Below Cabinet Back Rail 1 PC	Adjustable Shelf 2 PCS	Drawer Front Panel 1 PC	Drawer Left Panel 1 PC	
K 	L 	M 	N 	O 	
Upper Cabinet Left Panel 1 PC	Upper Cabinet Right Panel 1 PC	Below Cabinet Left Panel 1 PC	Below Cabinet Right Panel 1 PC	Upper Cabinet Door 1 PC	
P 	Q 	R 	S 	T 	
Below Cabinet Door 1 PC	Upper Cabinet Back Panel 1 PC	Below Cabinet Back Panel 1 PC	Drawer Right Panel 1 PC	Drawer Back Panel 1 PC	
			U 		
			Drawer Bottom Panel 1 PC		


HARDWARE LIST

<p>#1</p>  <p>M5*18mm Round Screw</p>	<p>#2</p>  <p>Ø6*30mm Wood Dowel</p>	<p>#3</p>  <p>Ø3.5*30mm Screw</p>	<p>#4</p>  <p>Ø6*35mm Cam-bolt</p>	<p>#5</p>  <p>Ø15*9mm Cam-lock</p>
<p>2PCS (Extra 1)</p>	<p>8PCS (Extra 2)</p>	<p>4PCS (Extra 1)</p>	<p>26PCS (Extra 3)</p>	<p>26PCS (Extra 3)</p>
<p>#6</p>  <p>Handle</p>	<p>#7</p>  <p>M4*22mm Round Head Bolt</p>	<p>#8</p>  <p>Back Bracket</p>	<p>#9</p>  <p>Ø3.5*15mm Screw</p>	<p>#10</p>  <p>Ø3*12mm Screw</p>
<p>2PCS</p>	<p>2PCS</p>	<p>12 PCS (Extra 2)</p>	<p>16 PCS (Extra 2)</p>	<p>2 PCS</p>
<p>#11</p>  <p>Ø6.5*19.5*11.5mm Shelf Holder</p>	<p>#12</p>  <p>45*17*12mm Single Door Magnet</p>	<p>#13</p>  <p>30*22*1mm Door Small Plate</p>	<p>#14</p>  <p>Ø5*40mm Screw</p>	<p>#15</p>  <p>Safety Strap Kit</p>
<p>8PCS (Extra 1)</p>	<p>2 PCS</p>	<p>2 PCS</p>	<p>4 PCS (Extra 2)</p>	<p>2 SET</p>
 <p>Center Axis (Extra)</p>	 <p>Phillips Screwdriver</p>			
<p>2 PCS</p>	<p>1 PC</p>			

 ASSEMBLY OVERVIEW

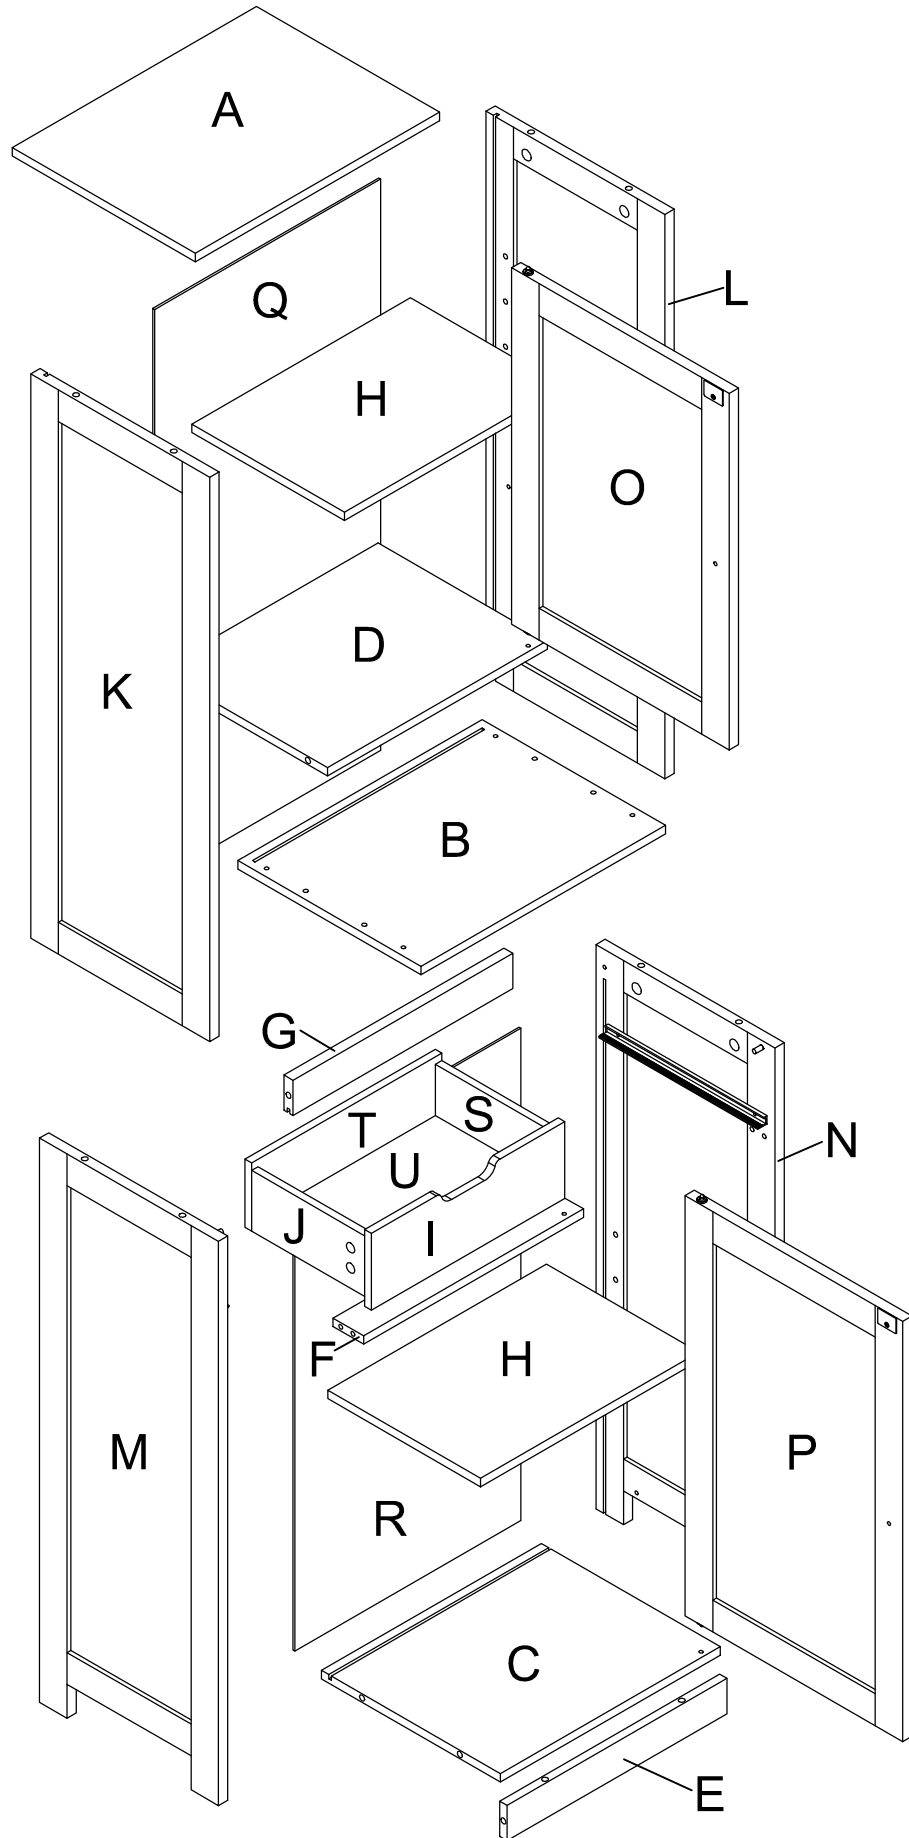

 Instructions For Fastening CAM-BOLT and CAM-LOCK




CAM-BOLT




CAM-LOCK

 
Tools Required




INSERTING AND TIGHTENING CAM-BOLT

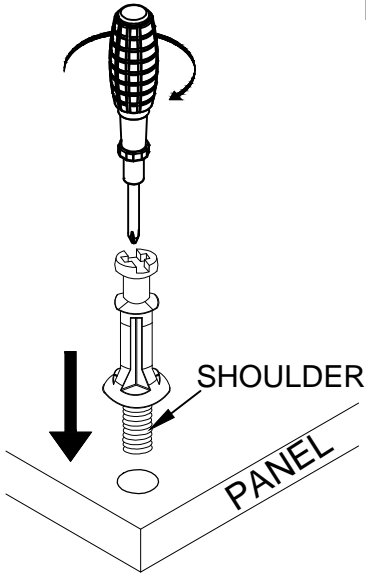 

 Place Cam-bolt on pre-drilled hole and screw in vertically

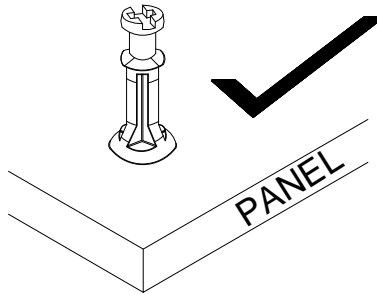

 
Shoulder is flushed (on the same level) with the panel.

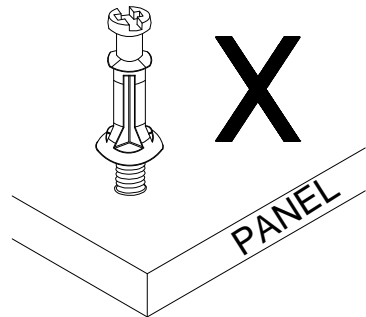

Shoulder is above the panel.

Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.

 INSERTING CAM-LOCK

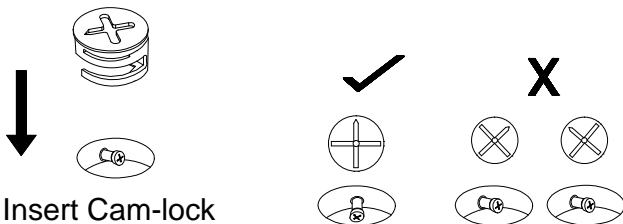


Insert Cam-lock with arrow align to Cam-bolt head

CORRECT

WRONG


Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

 TIGHTENING CAM-LOCK

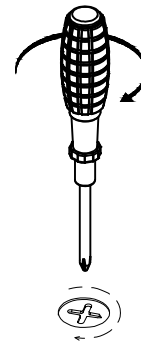


Use a Flat-head Screwdriver to turn Camlock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.

 
Step 1.




I x1

 


J x1

 


S x1

 

T x1

 

U x1

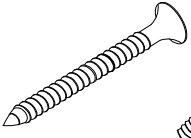 


#3 x4









#4 x4


 
#5 x4



x1

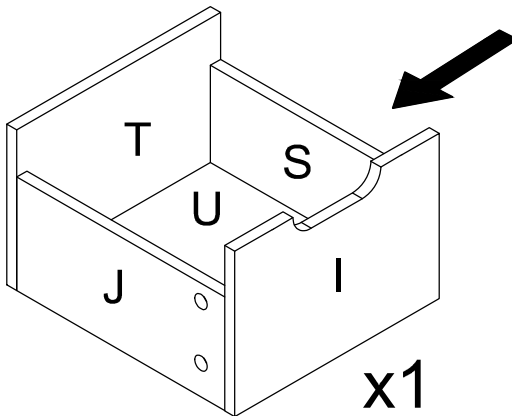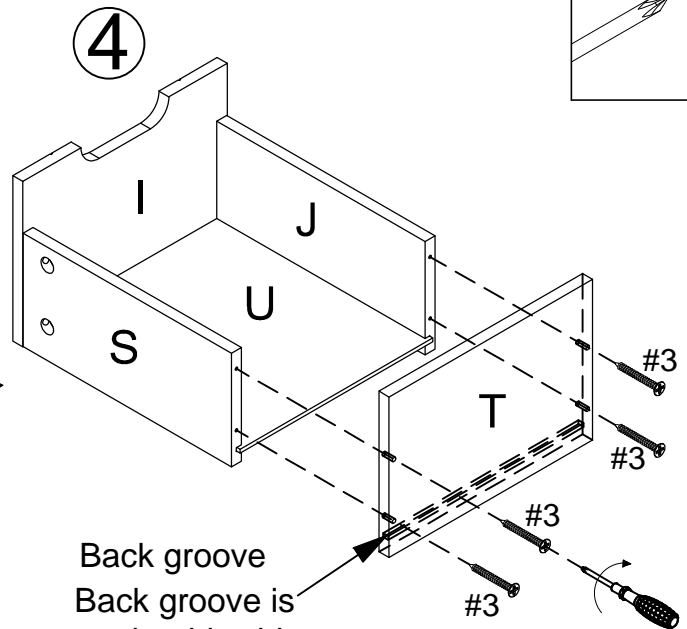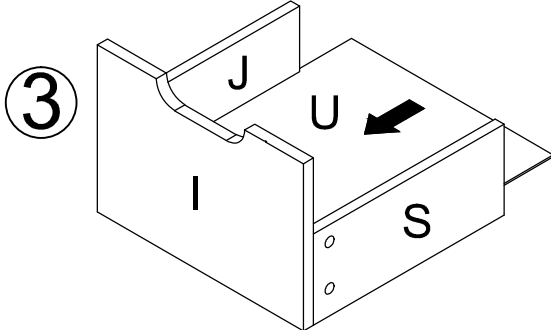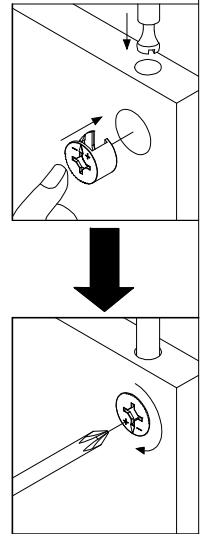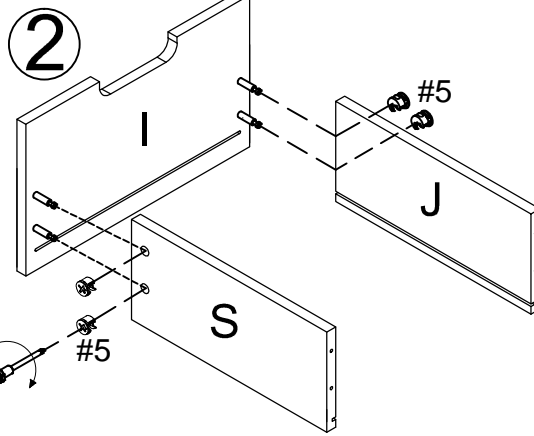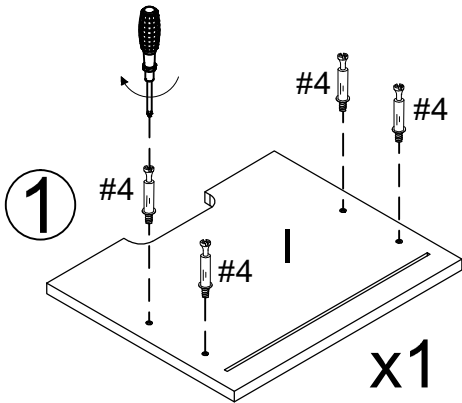      


Back groove
Back groove is
on the this side.

Note: Tighen it or it will
cause wobble.


Step 3.



#5 x4

 


x1

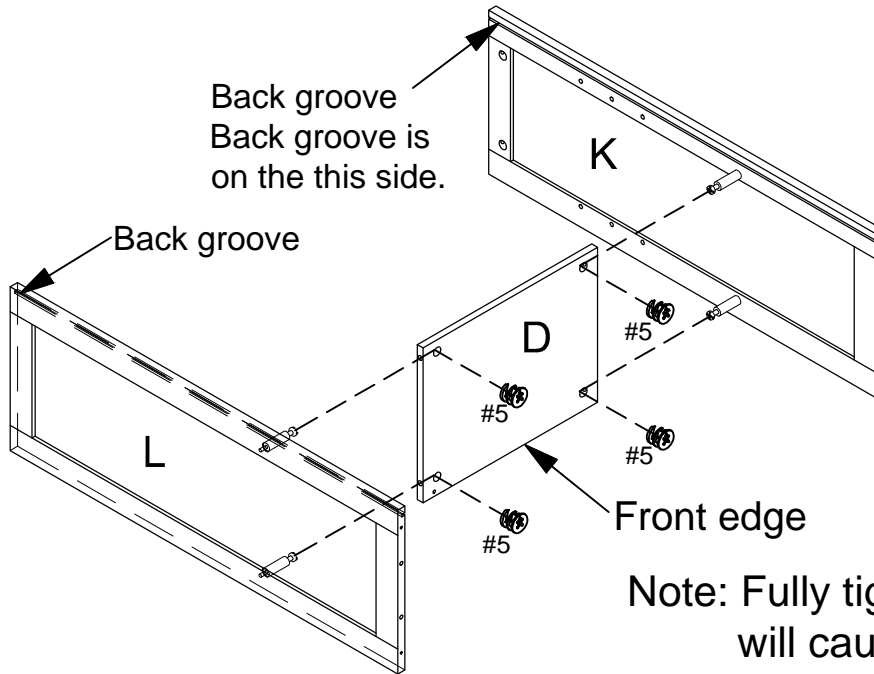 

Note: Fully tighten #5 or it will cause wobble.

 
Step 4.

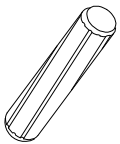


#2 x4



 
#14 x4




x1

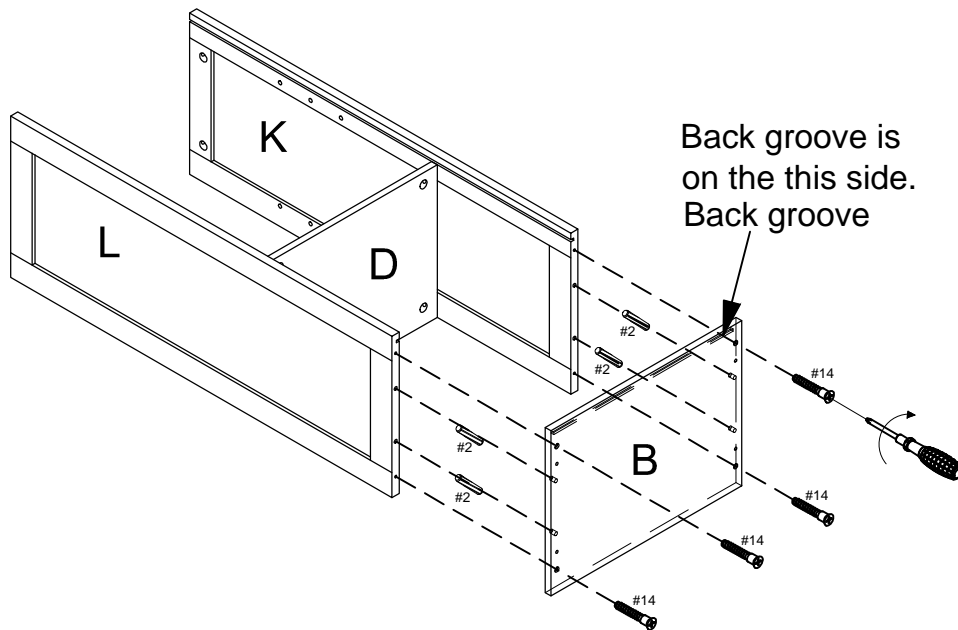 

 Step 5.

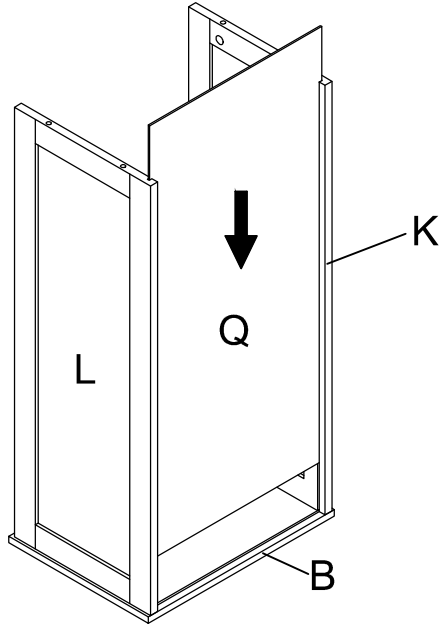


 Step 6.


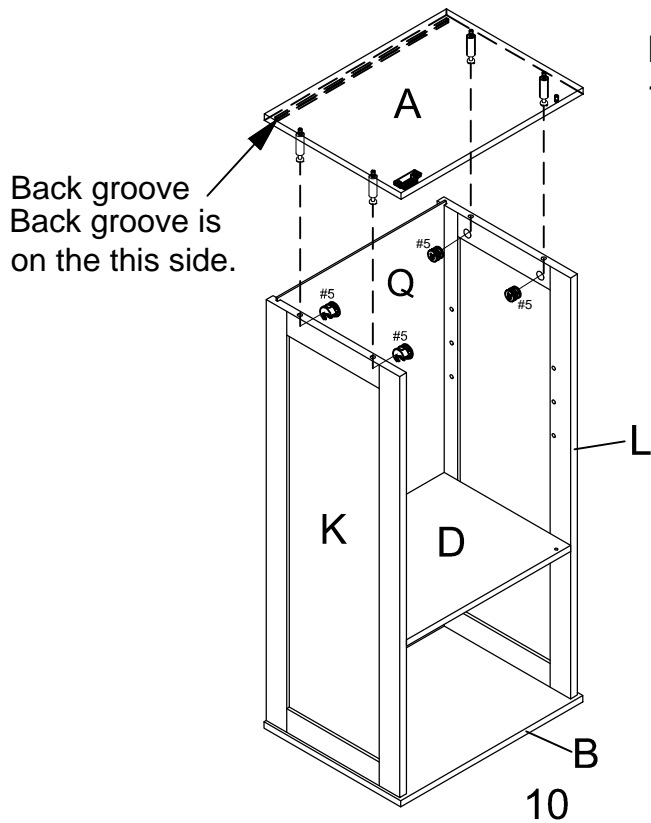


Note:

 
1. The groove on A needs to be aligned with Q.
2. Fully tighten #5 or it will cause wobble.

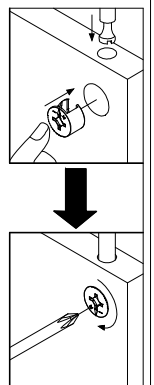

  
Step 7.

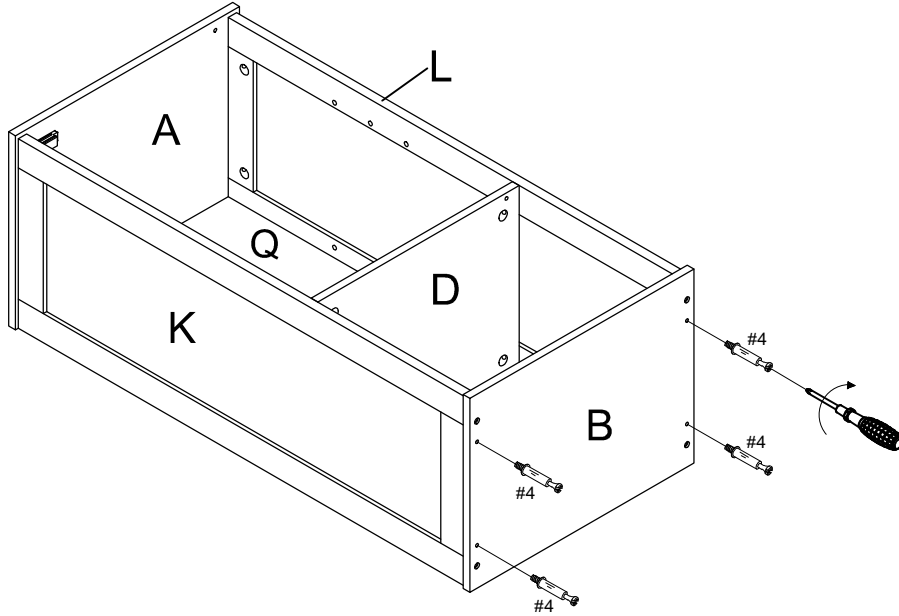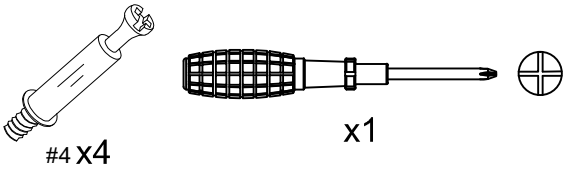

 
Step 8.

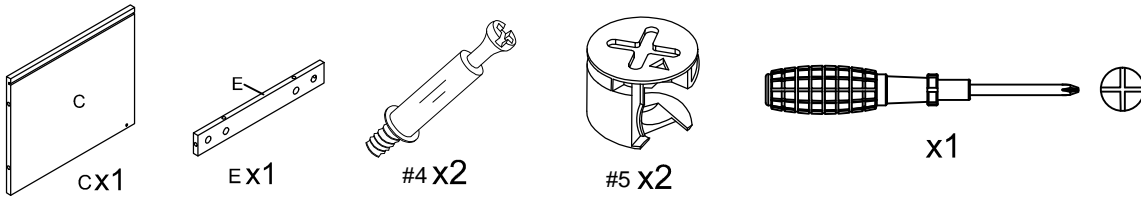

 Note: Fully tighten #5 or it will cause wobble.

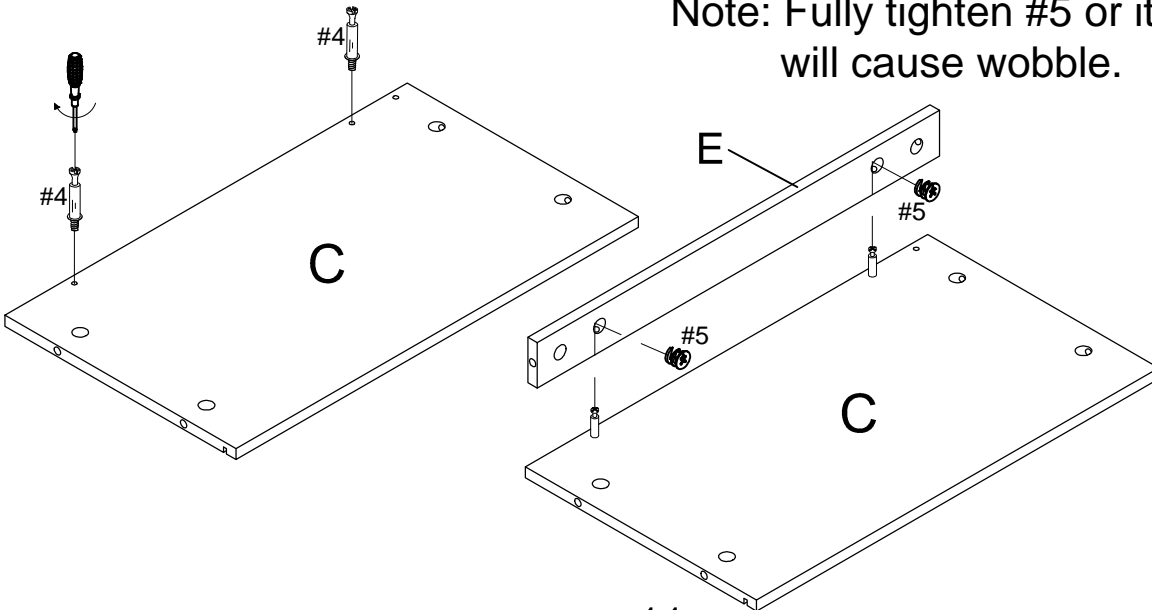

 
Step 9.

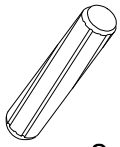



#2 x2


 
#5 x4



x1

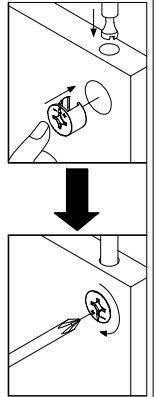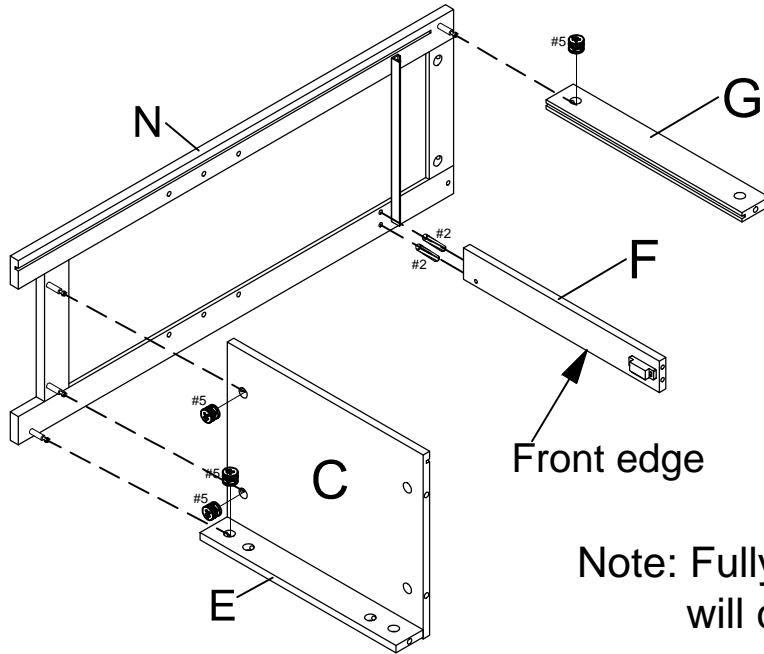  


Note: Fully tighten #5 or it will cause wobble.




Step 10.



 R X1


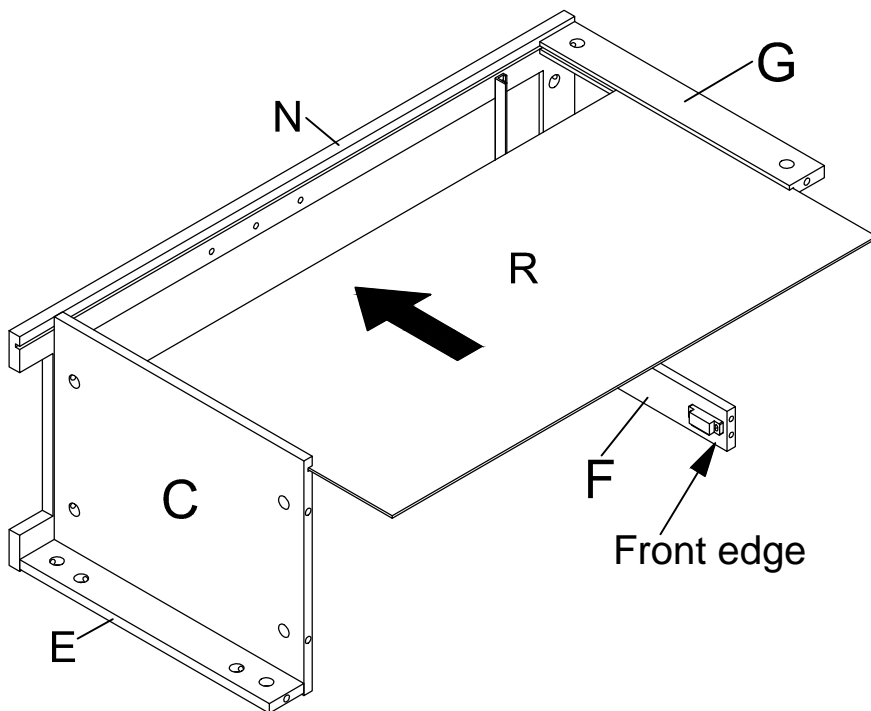


   Step 11.

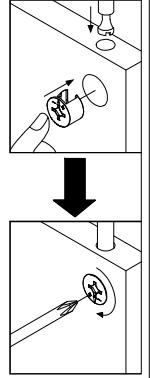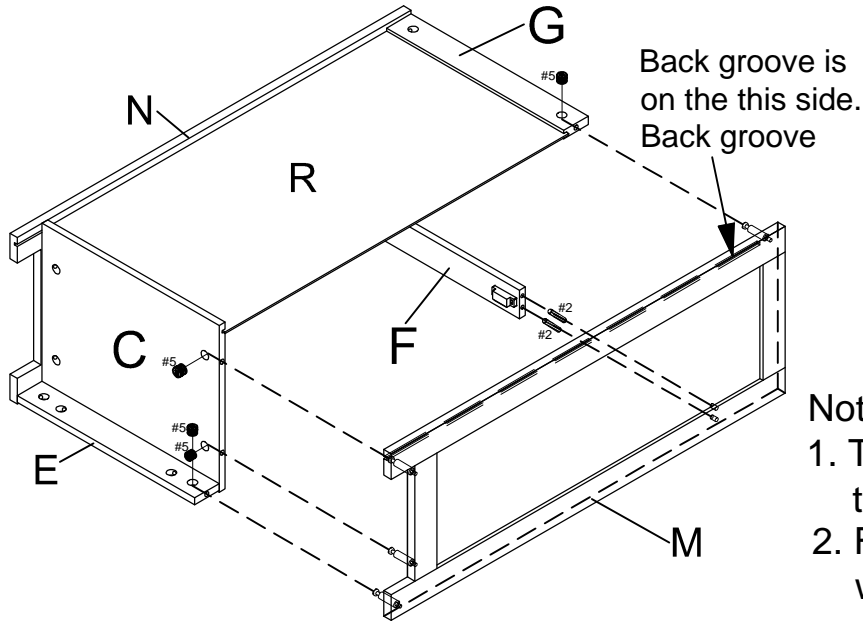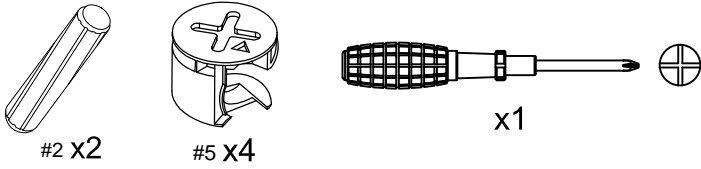

- Note:
1. The groove on B needs to be aligned with R.
 2. Fully tighten #5 or it will cause wobble.

  
Step 12.

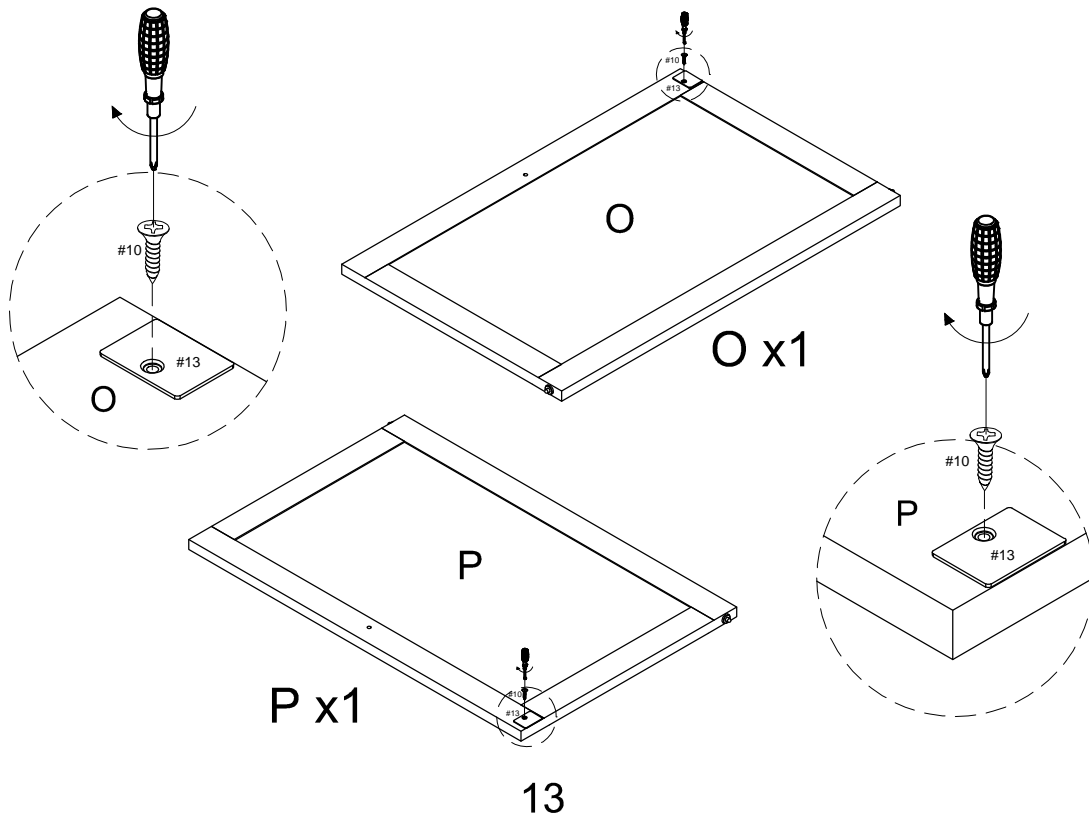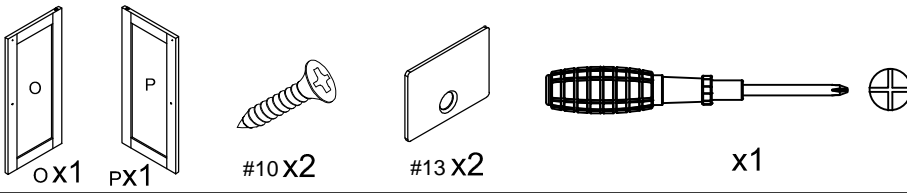

Step 13.





#5 x4





 


x1

  Note: Fully tighten #5 or it will cause wobble.



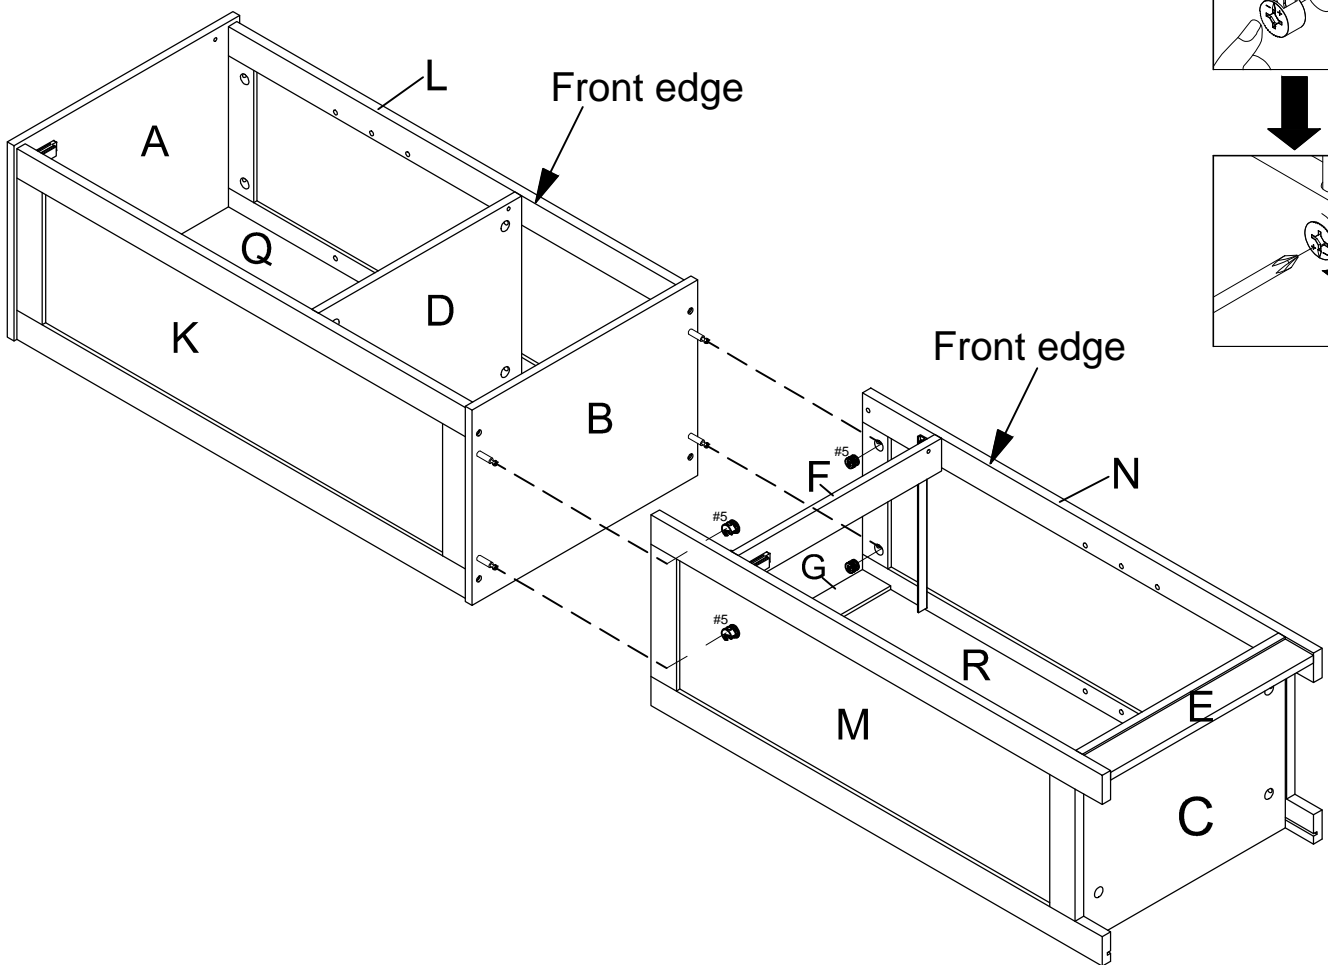
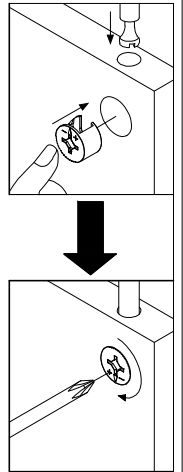


     Step 14.

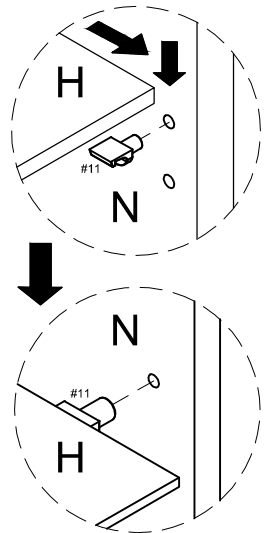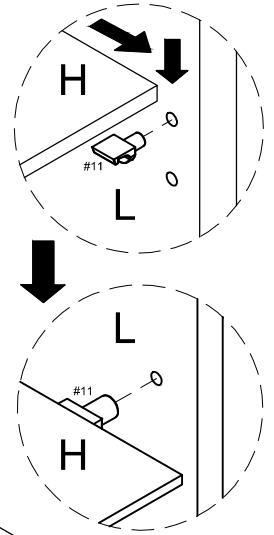
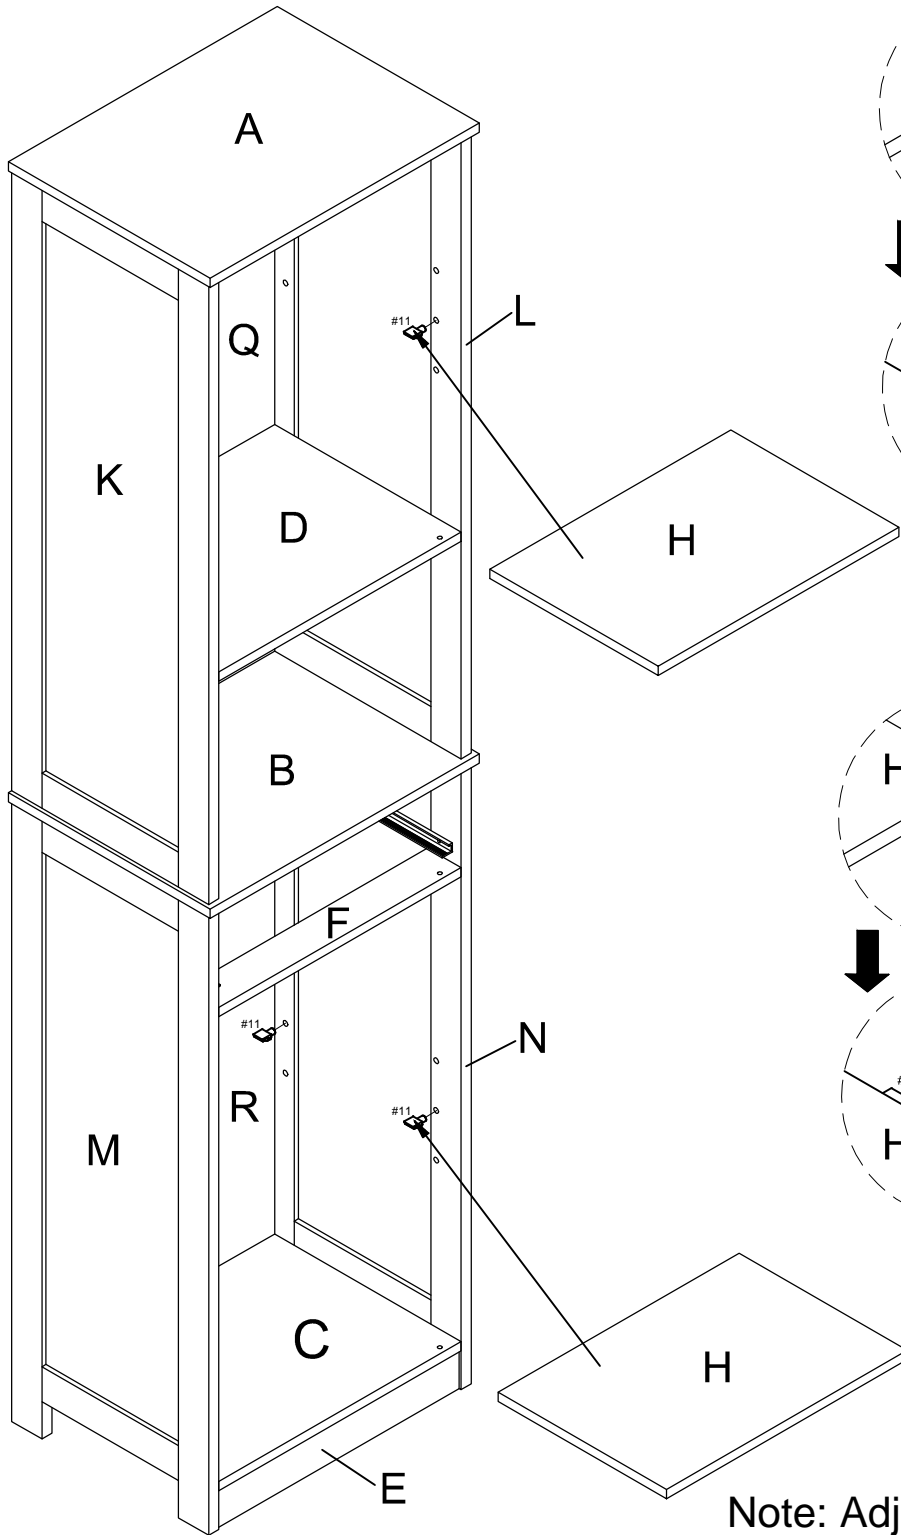
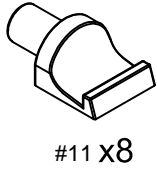
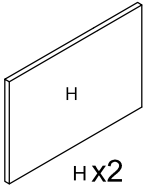


Note: Adjustable for three heights.


 
 
 
 
Step 15.

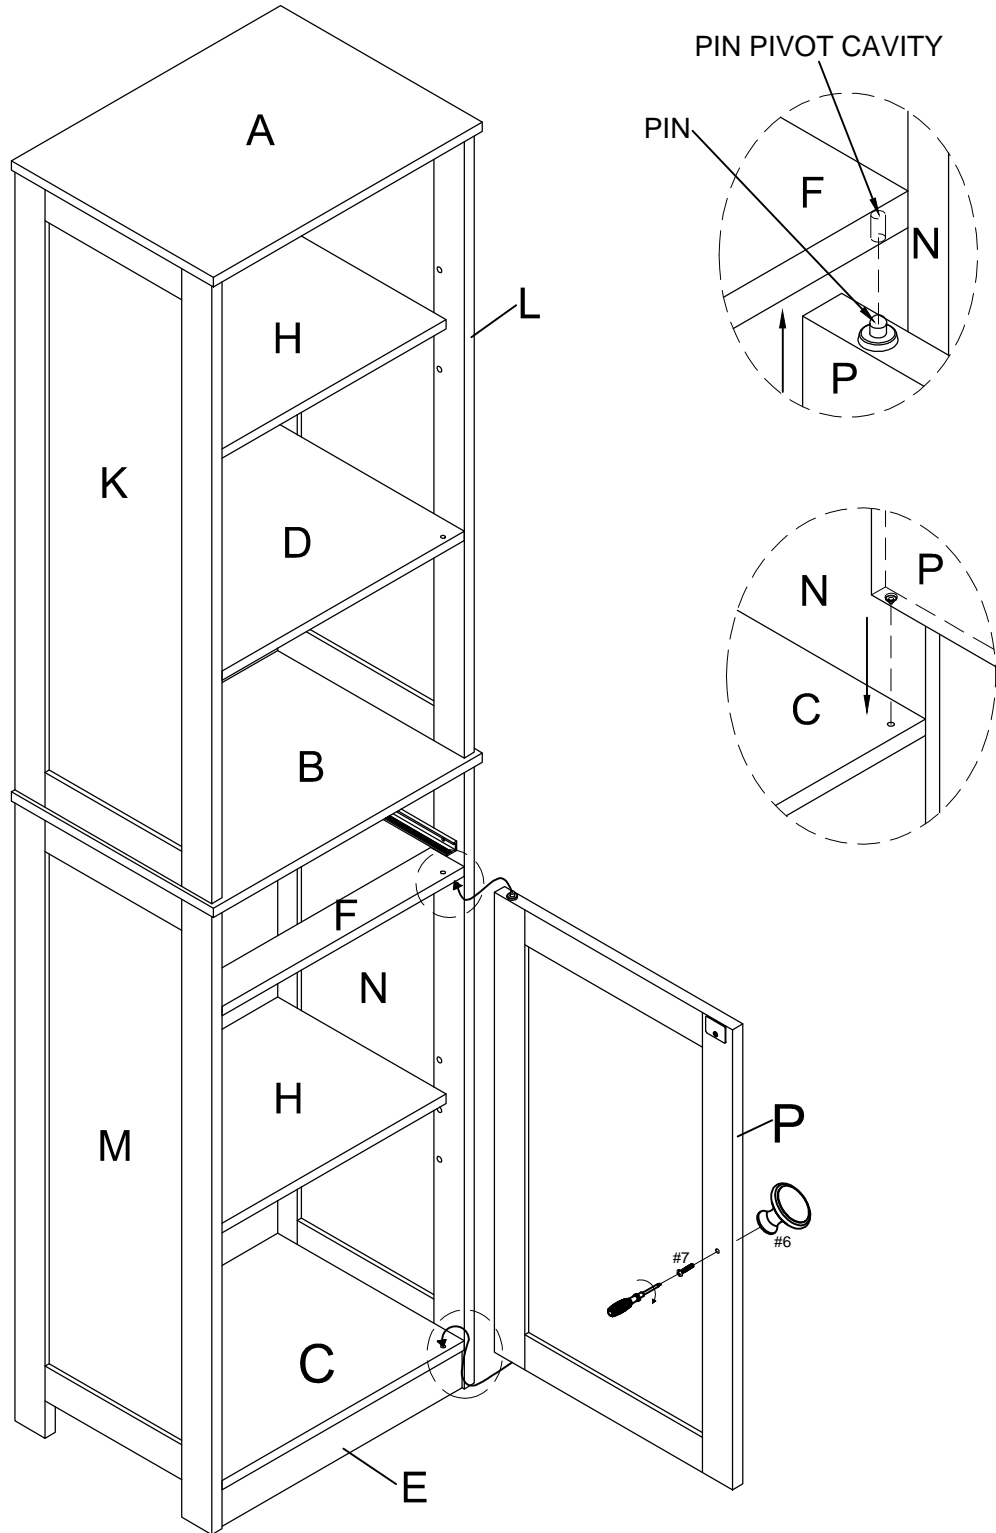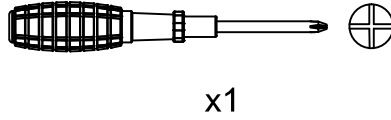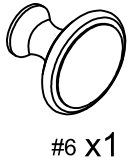

    
Step 16.

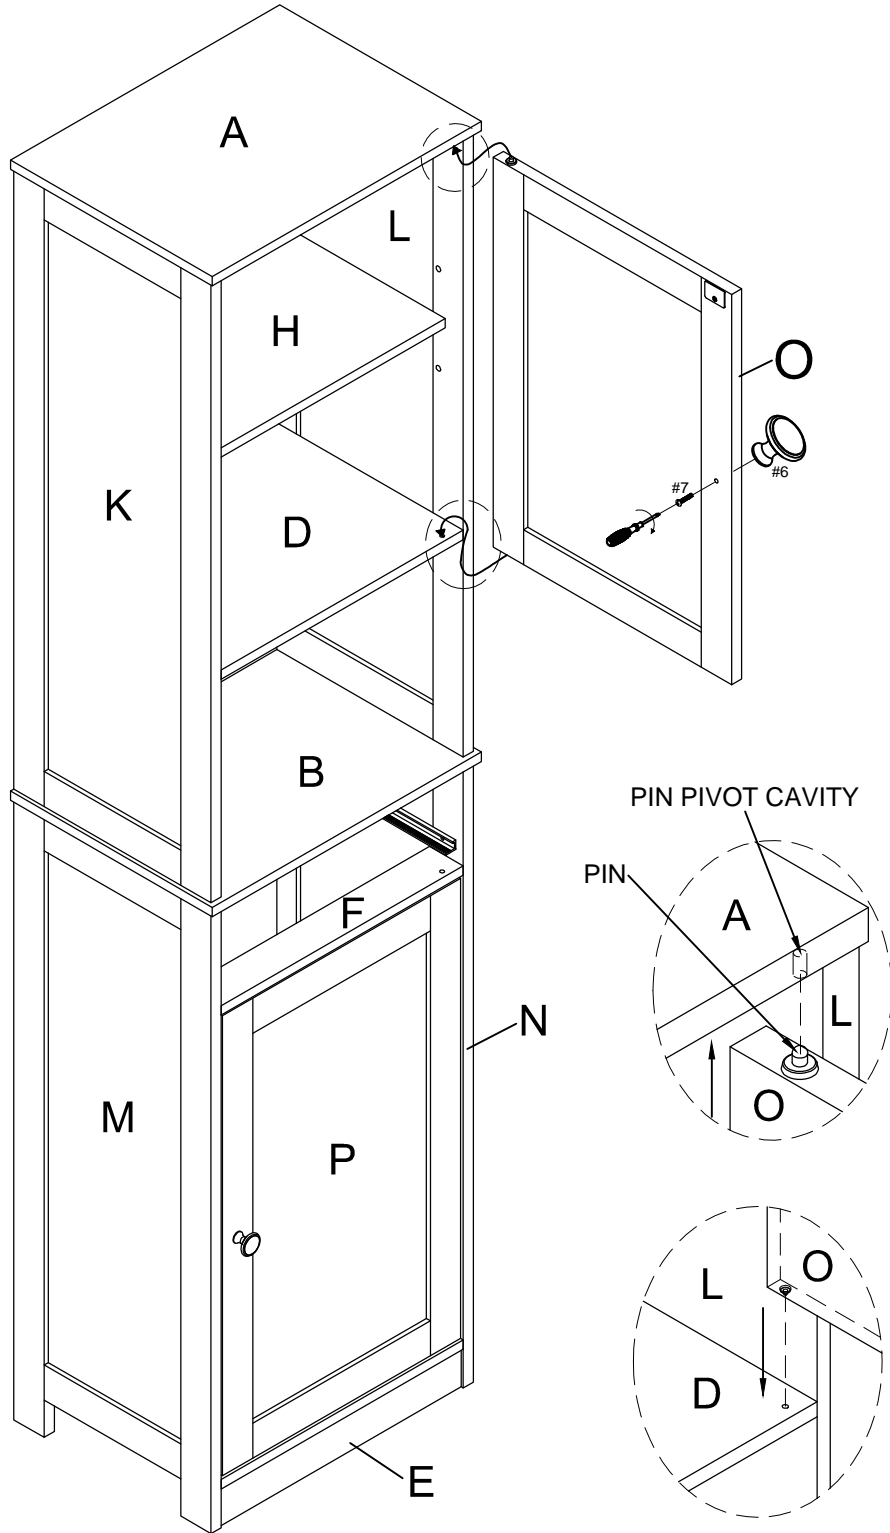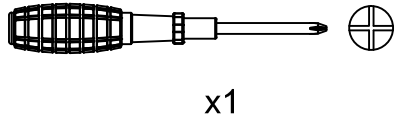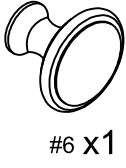

     Step 17.

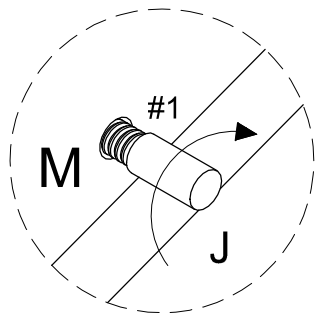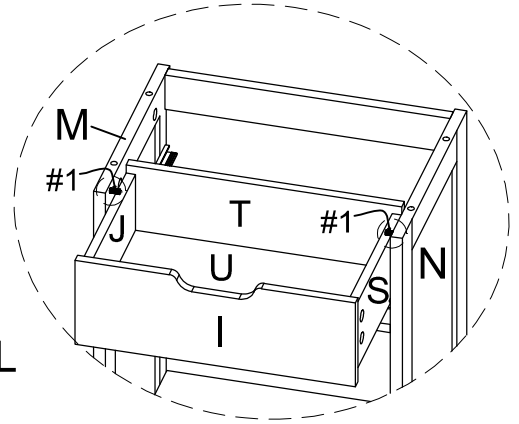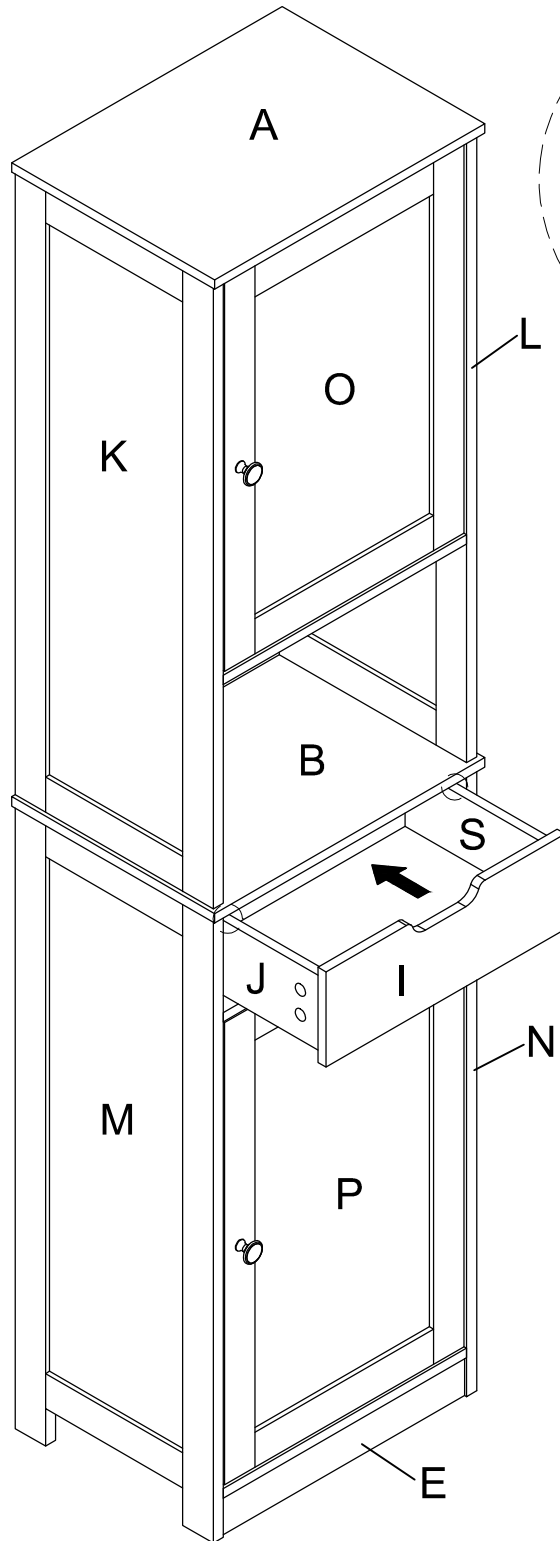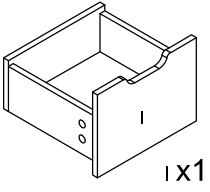


#1x1

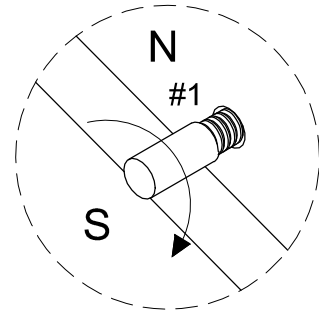 

#1x1

 
Step 18.




#8 x12





 




#9 x12

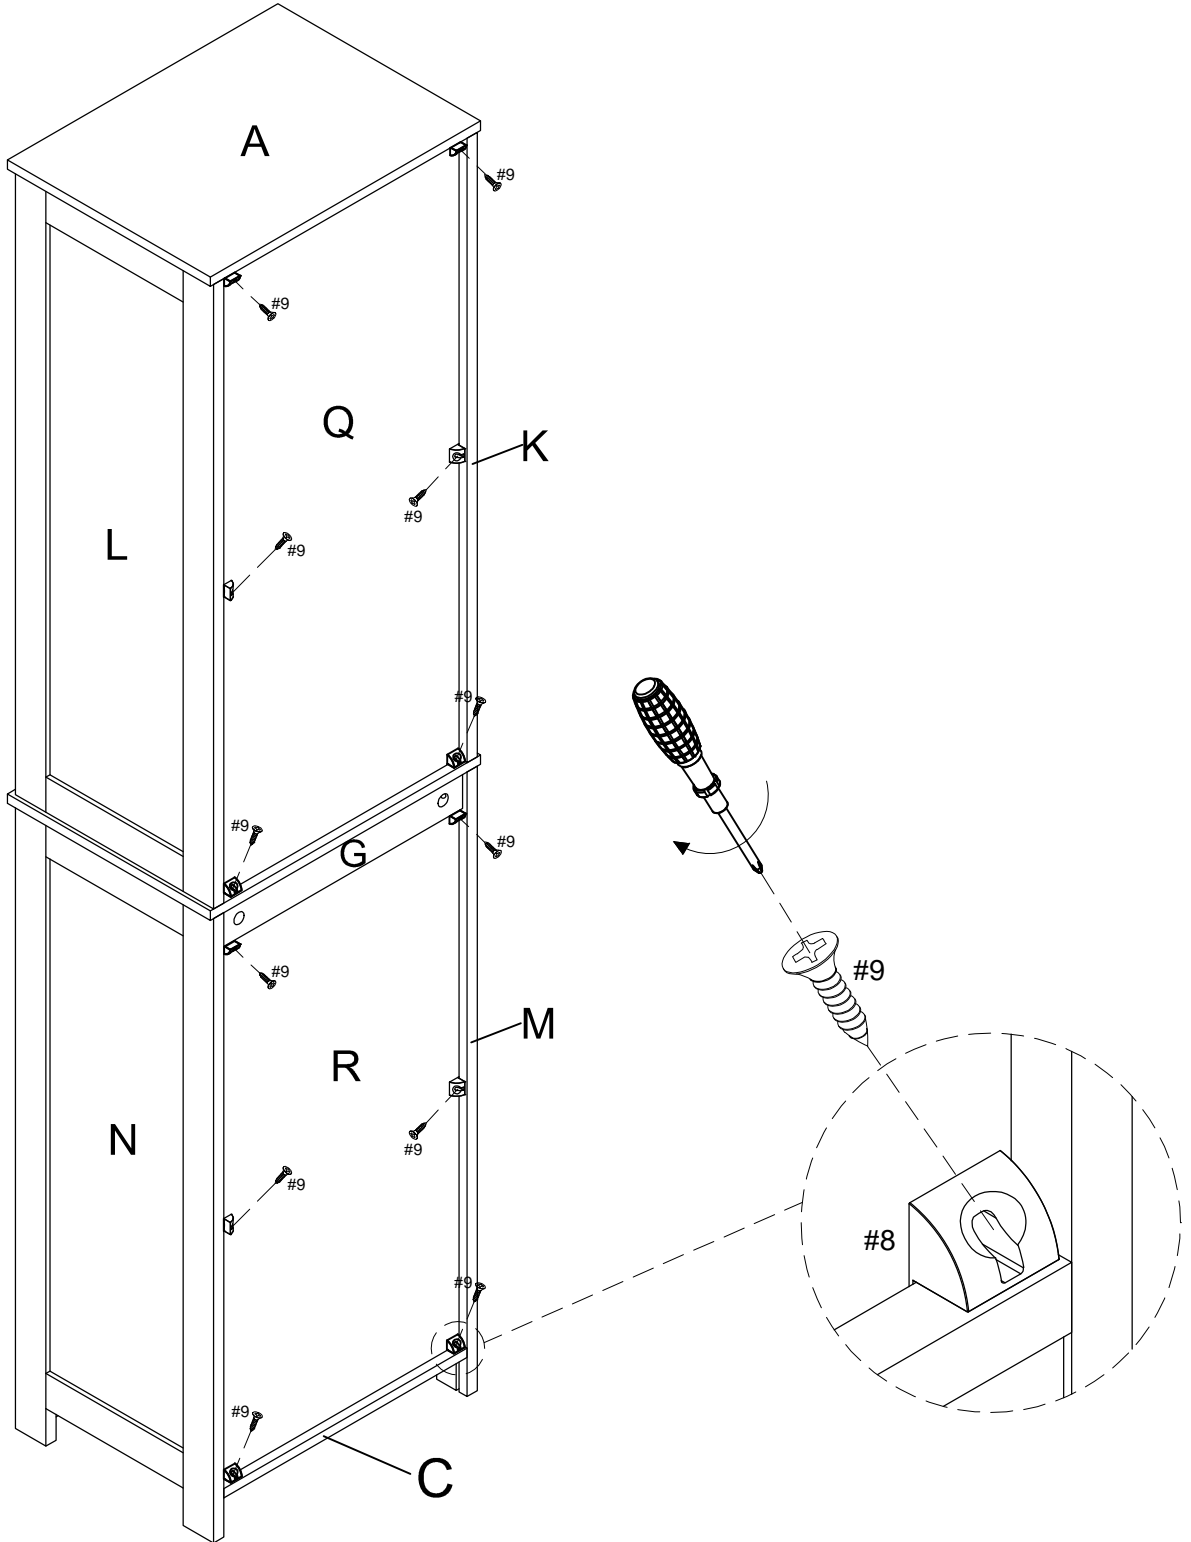 

x1

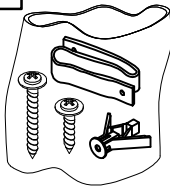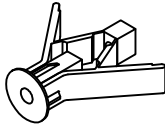
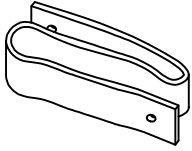
#15	A	B	C	D
				
Safety Strap Kit	Wall Anchor	Short Screw	Long Screw	Safety Wall Strap
2 SET	2 PCS	2 PCS	2 PCS	2 PCS

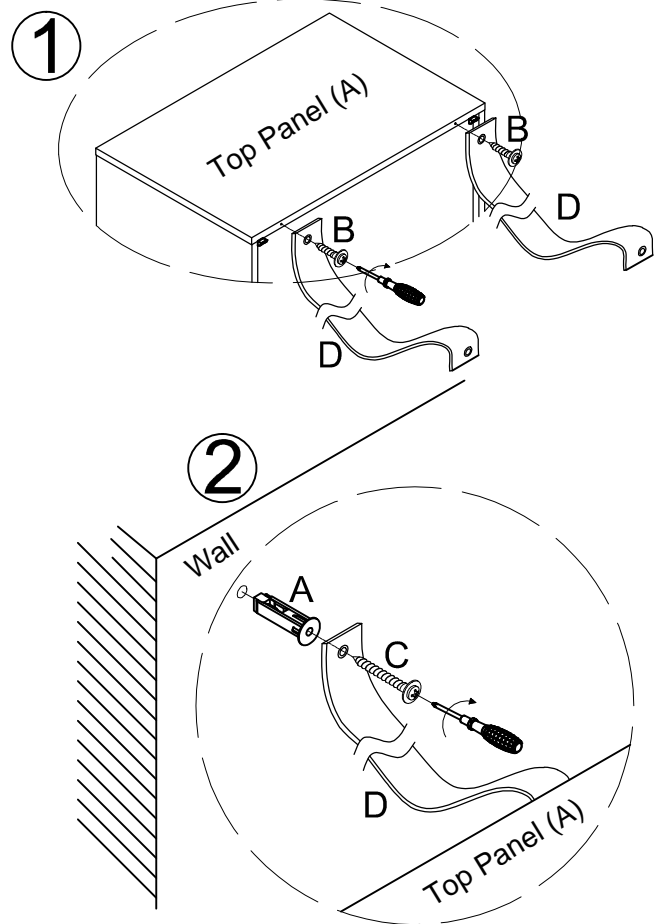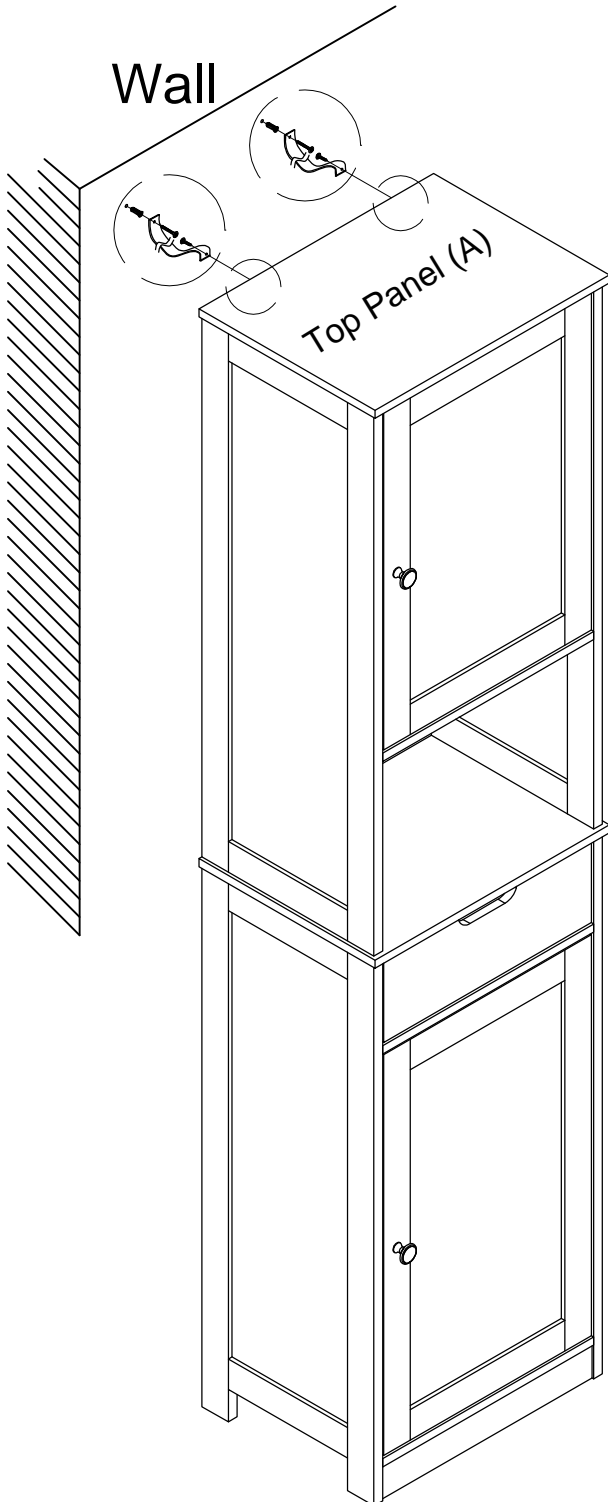  

SAFETY WALL STRAP INSTALLATION

Install the safety strap to prevent tip-over which can cause damage and/or injury.

1. Insert Short Screw (B) and Safety Strap (D) to screw onto the Back edge of Top Panel (A). Use a Phillips screwdriver to drive (B).
2. At the location where you want to secure the unit, drill a hole to fit Wall Anchor (A) snugly. The drilled hole has to level with safety strap on the back edge of (A).
3. Next, fit Wall Anchor (A) into the drilled hole.
4. Insert Long Screw (C) and Safety Strap (D) to screw into Wall Anchor (A). Use a Phillips screwdriver to drive (C).

The assembly of the buffet unit is complete.