 
 



Product Installation Instructions

Storage Cabinets

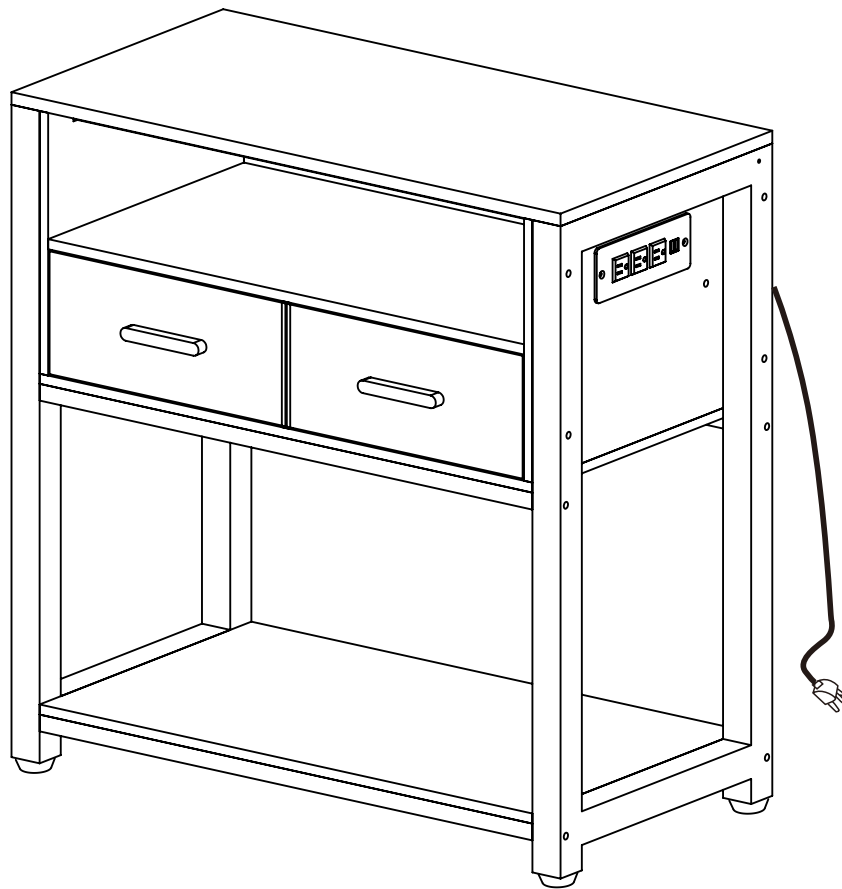


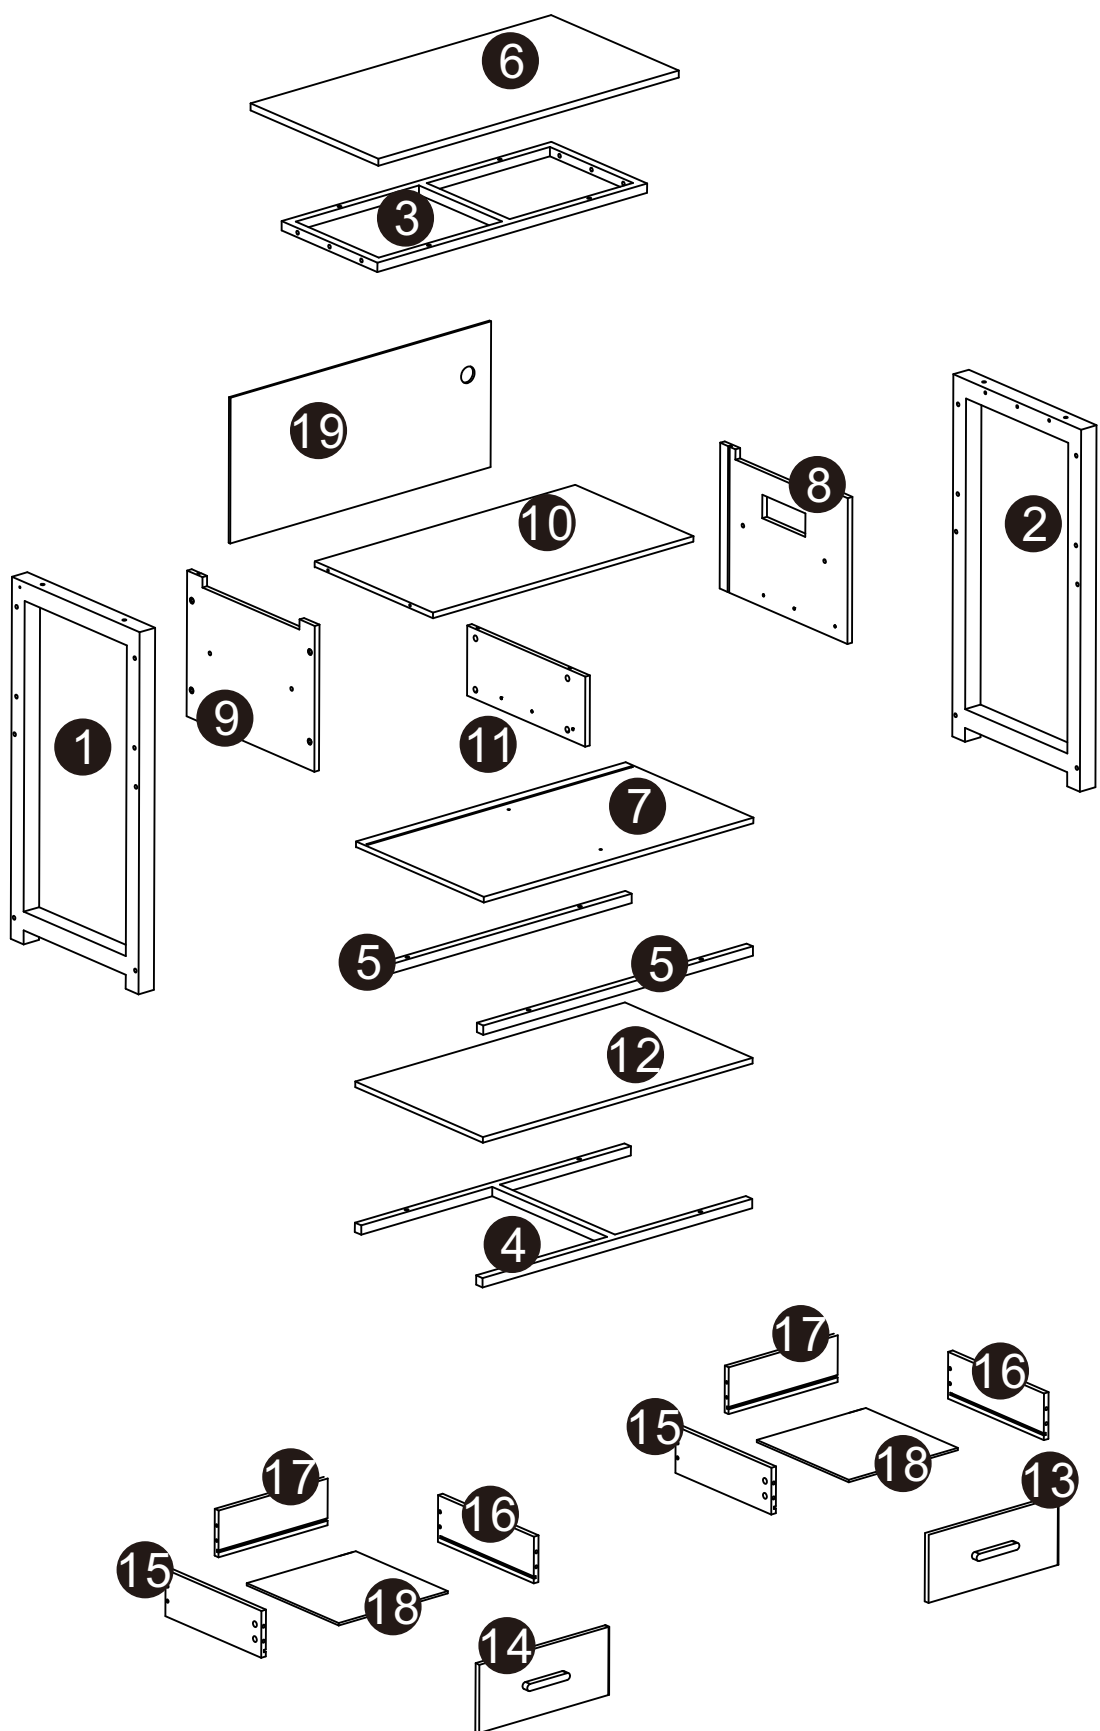

 
Hardwarelist




1 X 1

 


2 X 1

 


3 X 1

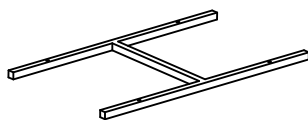 


4 X 1

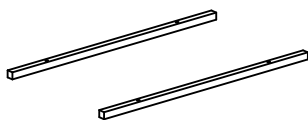 


5 X 2

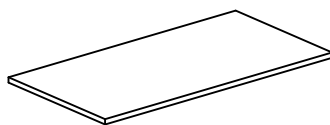 


6 X 1

 


7 X 1

 


8 X 1

 


9 X 1

 


10 X 1

 


11 X 1

 

12 X 1

 

13 X 1


 


14 X 1



15 X 2

  Hardwarelist

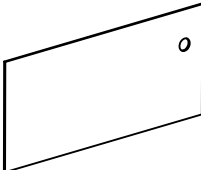		
16 X 2	17 X 2	18 X 2
		
19 X 1		

Note: The number after "+" sign indicates the extra piece(s).

Warnings

ATTENTION:

FUNCTION OF KLIX CAM

 
1/2 RIGHT TURN FOR LOCKING

MAKE SURE THE ARROW OVER AGAINST THE TOPSIDE OF CAM LOCK PIN BEFORE INSERTING INTO THE PANEL'S HOLE

IMPORTANT!









After 180° right turn, if there is a gap between the boards, please check whether the cam lock pin is tightened enough.

Lock pin

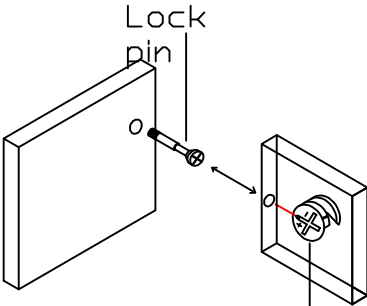

Klix cam

        Parts list

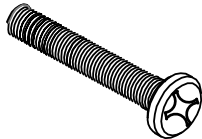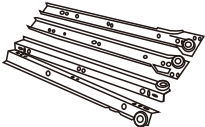				
A M6*60(*8+1)	B M6*50(*12+1)	C M6*28(*18+1)	D M4*16(*6+1)	E ST3*12(36+1)
				
F (*10+1)	G (*10+1)	H ST6*50(*6+1)	I ST3*16(*6+1)	J ST5*50(*8+1)
				
K M6*10(*8+1)	L ST4*35(*2+1)	M (X2)	N (X4)	O (X2)
				
P (X2)	Q (X6)	R (X3)	S (X2)	T X1
				
U X1			(X1)	(X1)

Step 1

M

 


X 2

E



X 6

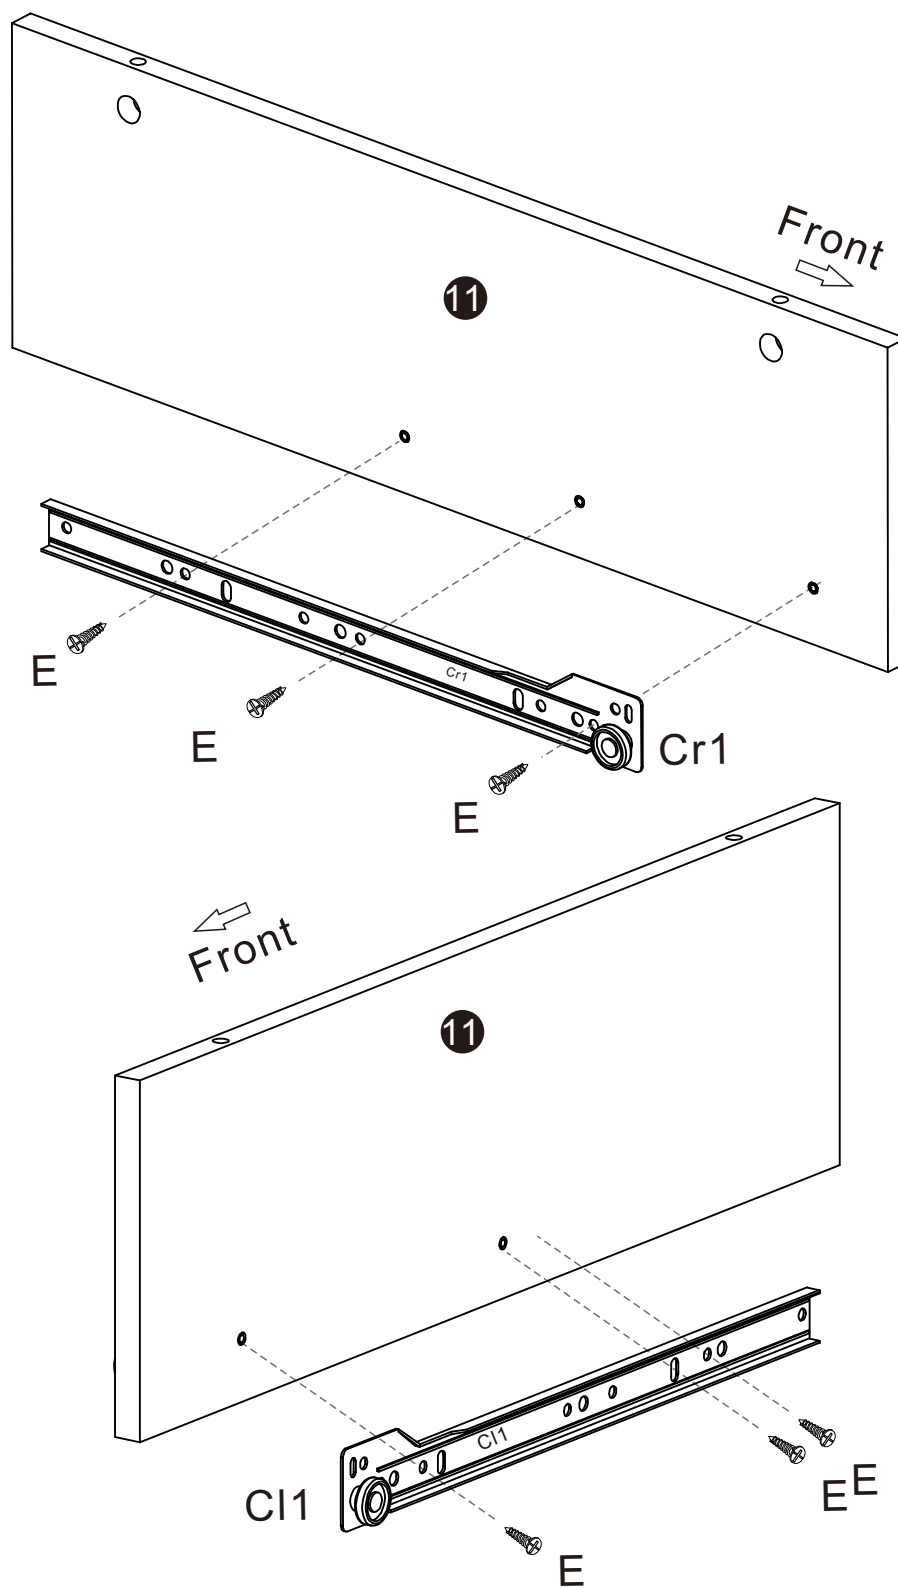


Step 2

C



 X 2

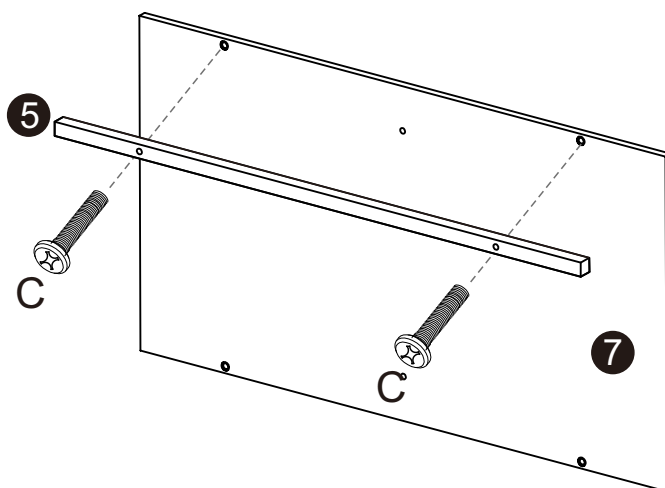


Step 3

C



 X 2

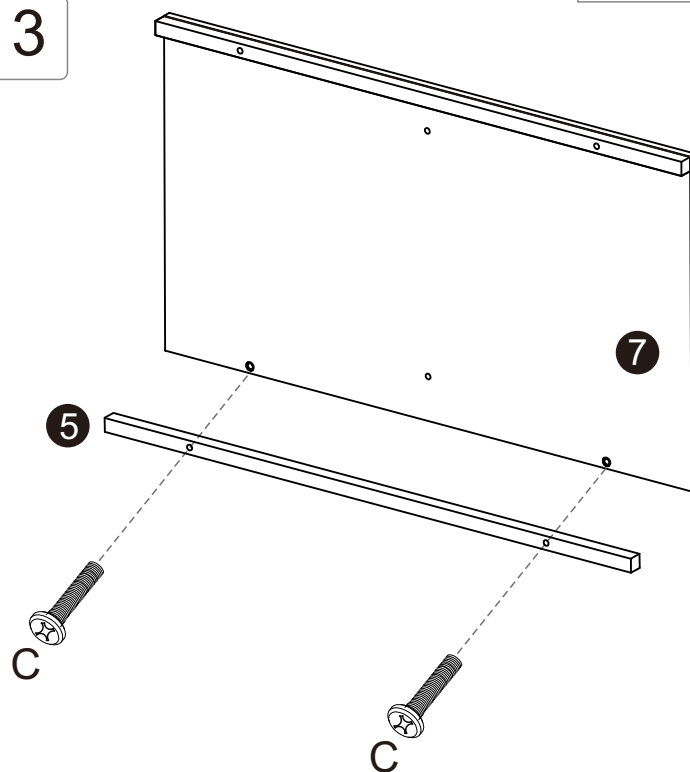


Step 4

H



 X 2

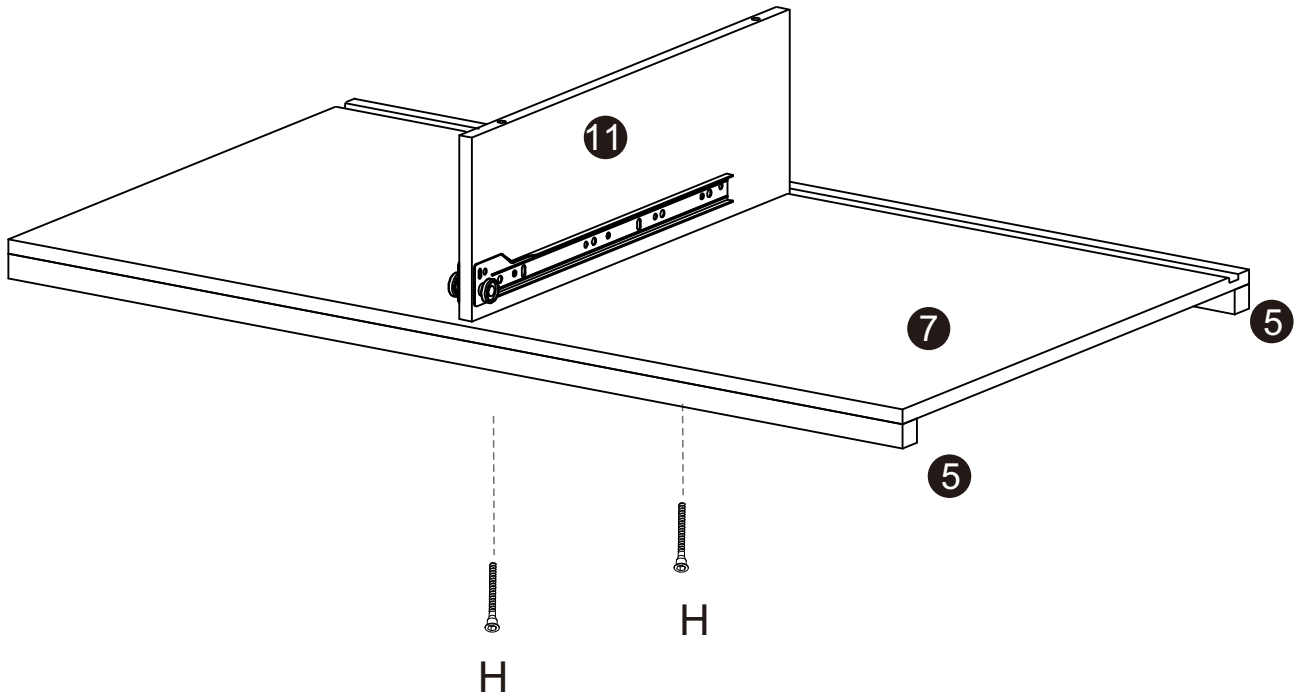

F



 
X 2

G



X 2

Step 5

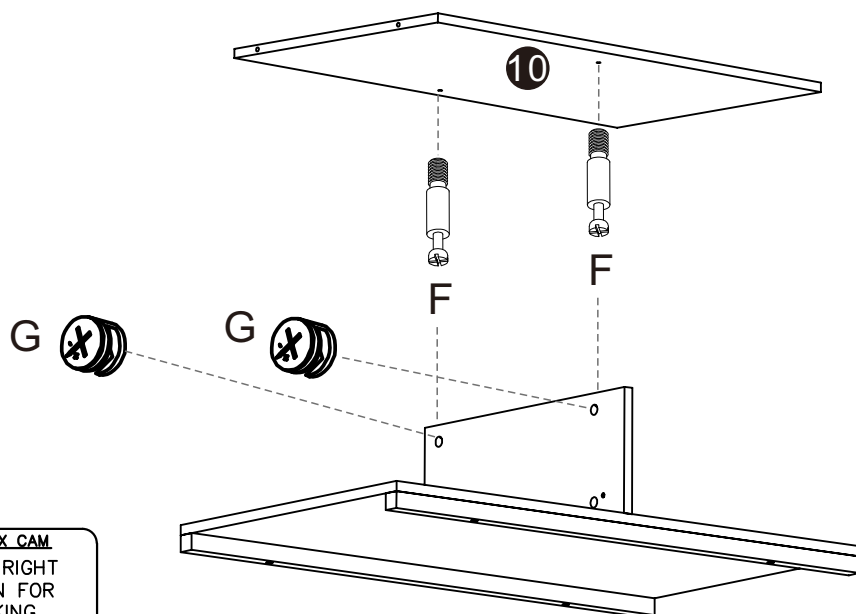

FUNCTION OF KLIX CAM

1/2 RIGHT
TURN FOR
LOCKING

MAKE SURE THE ARROW OVER AGAINST
THE
TOPSIDE OF CAM LOCK PIN BEFORE
INSERTING INTO THE PANEL'S HOLE

Step 6

E



X 3

M



X 1

Front
←

9

CI1

E



E

E

CI1

Step 7

E		X 3
M		X 1

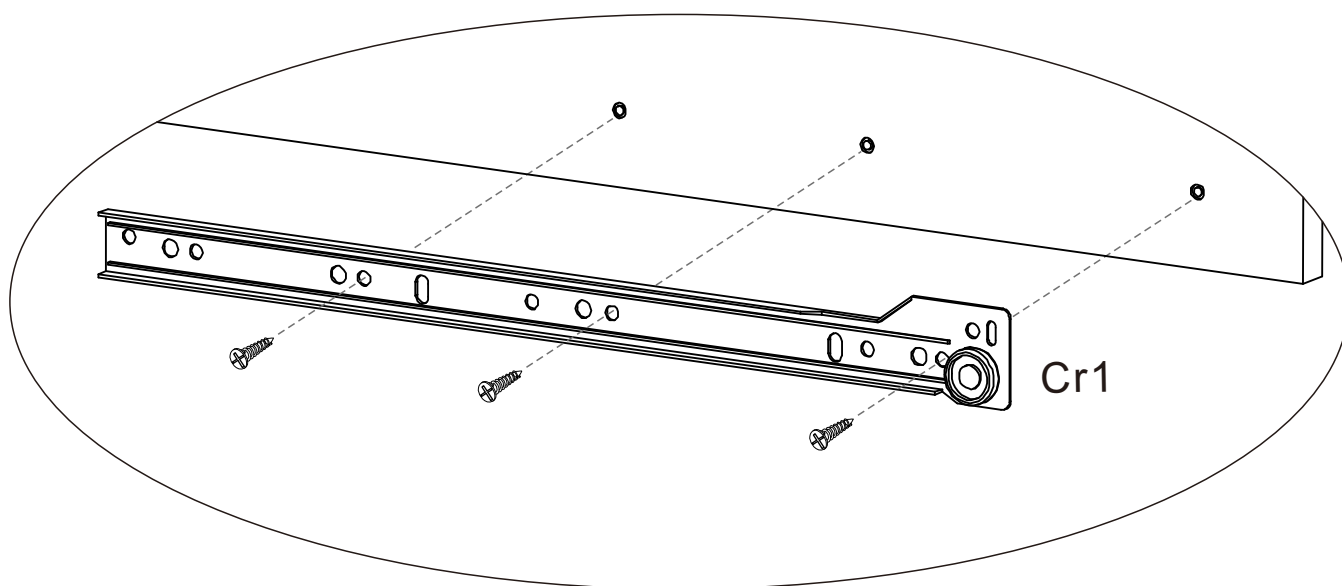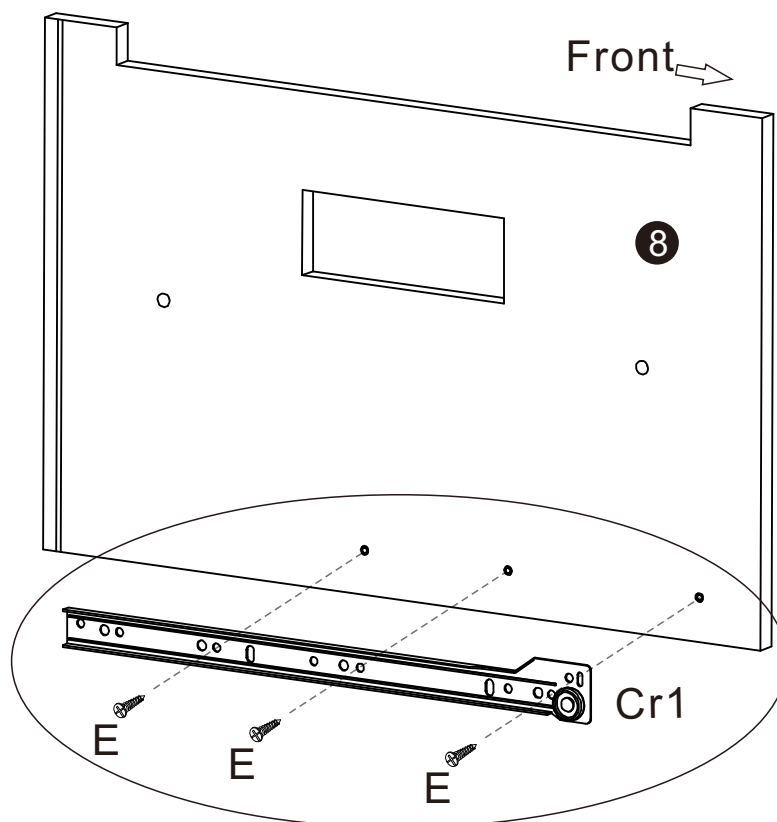  


Step 8


H



 X 4

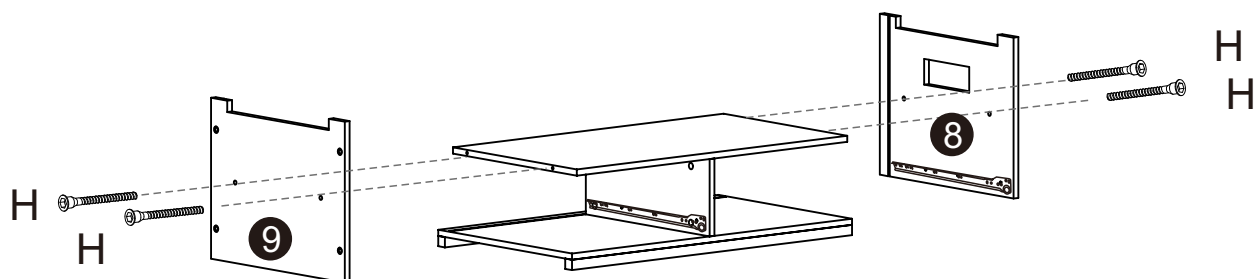

 Step 9

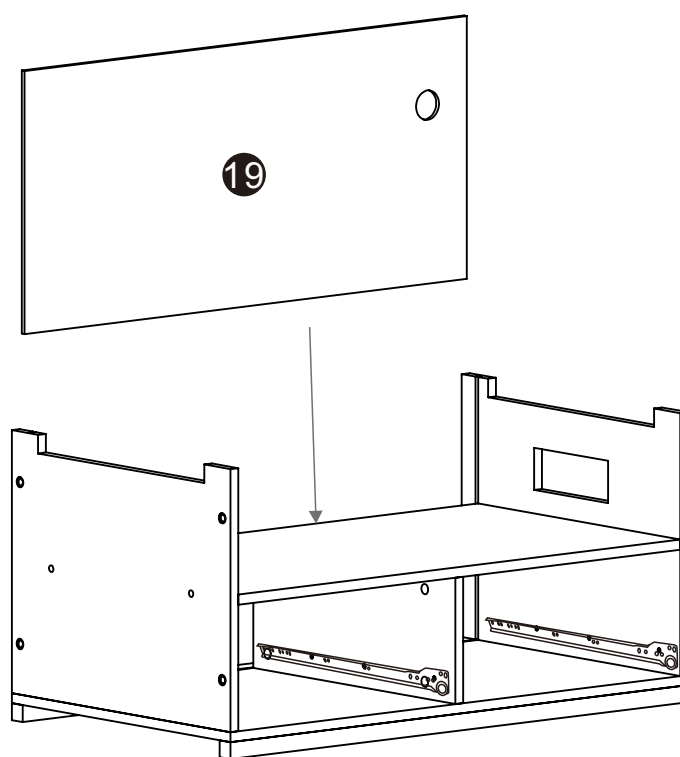


Step 10

C



 X 4

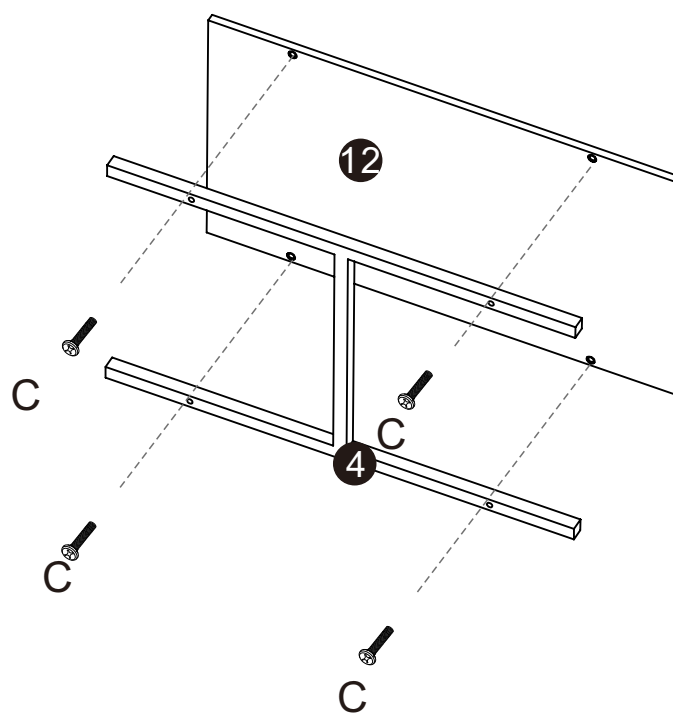

Step 11

A

 


X 4

B



X 4

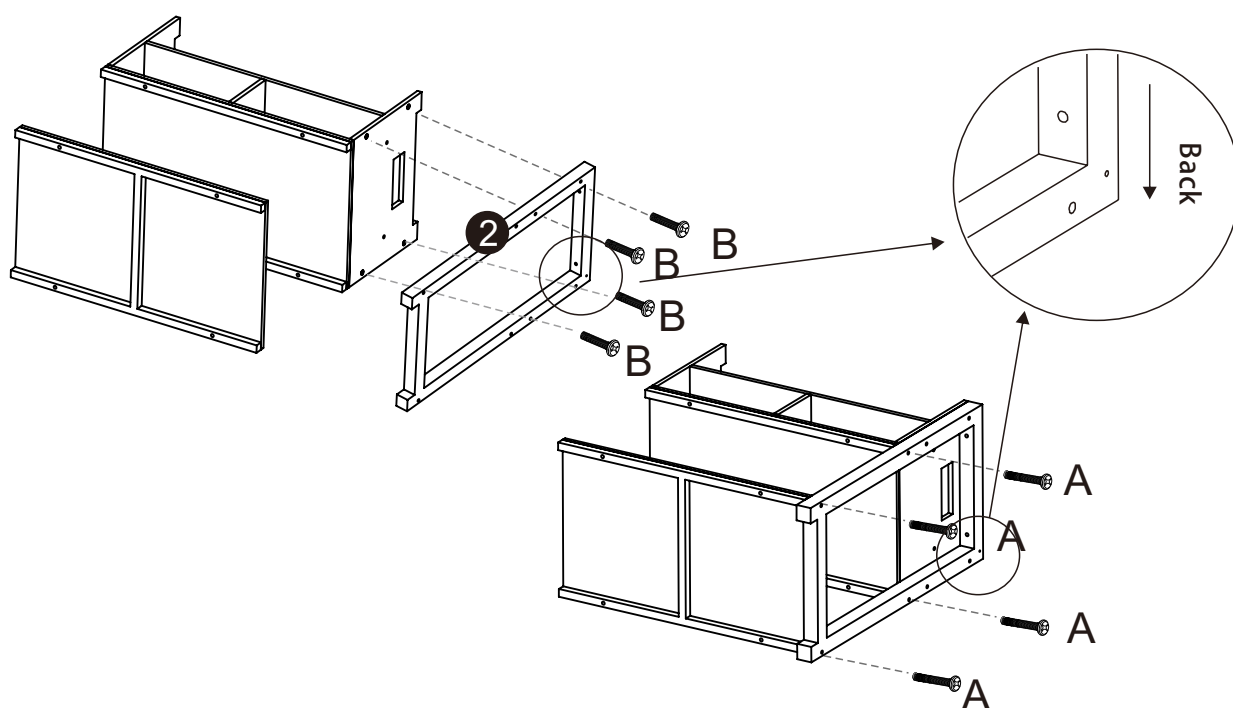

Step 12

A

 


X 4

B



X 4

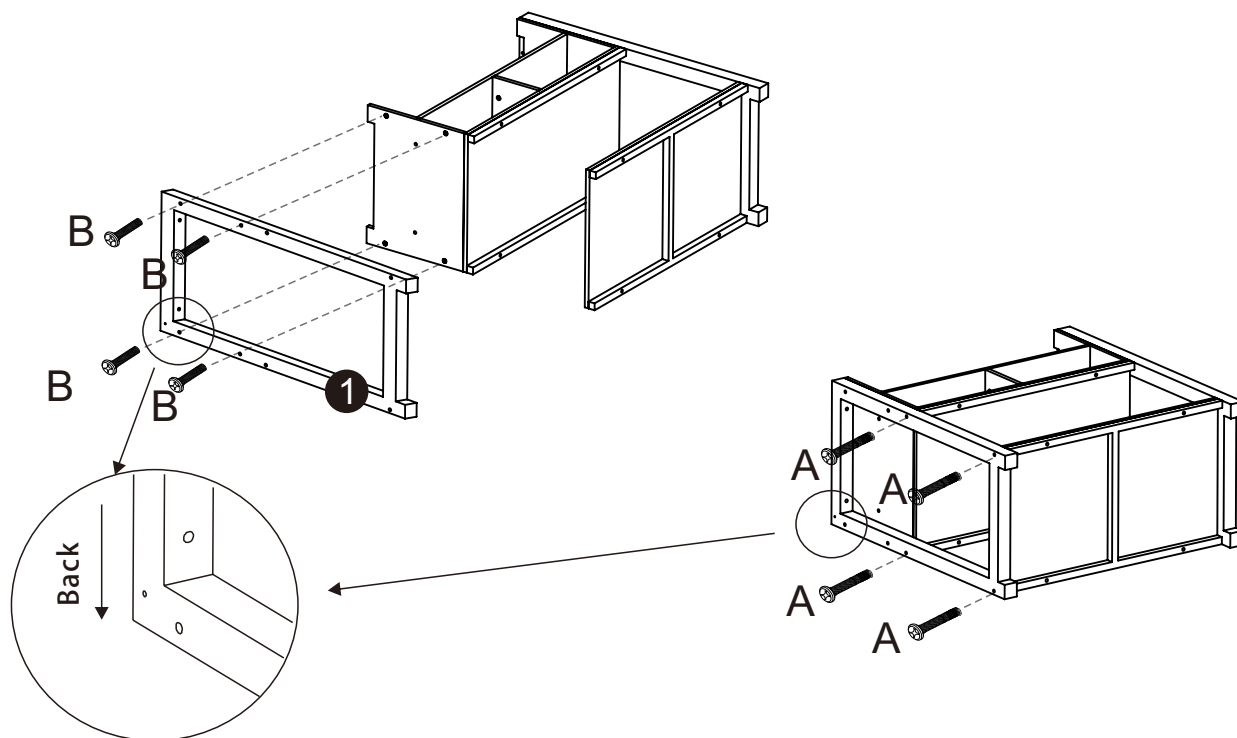


C







X 4

 Step 13

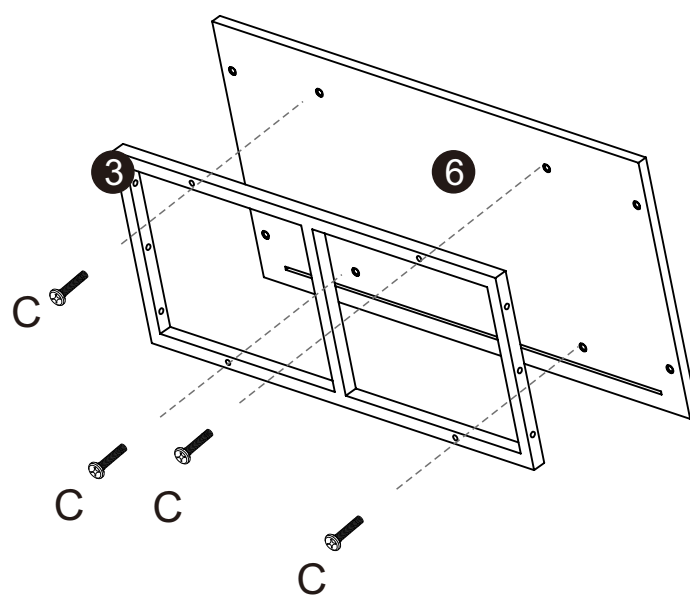


Step 14

B		X 4
C		X 6

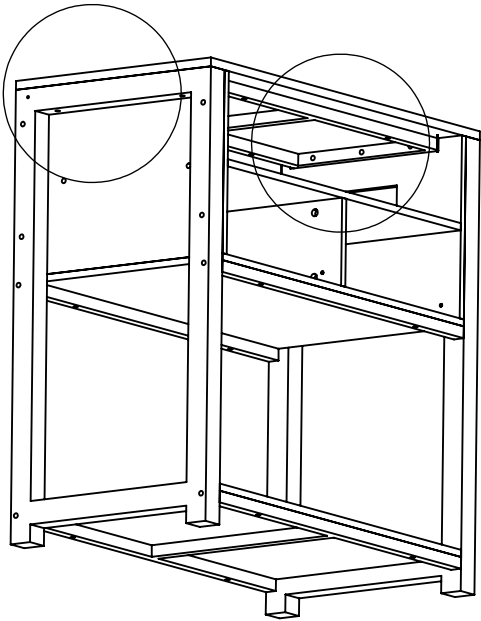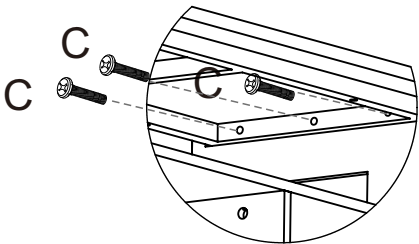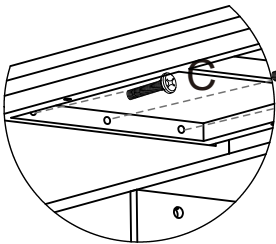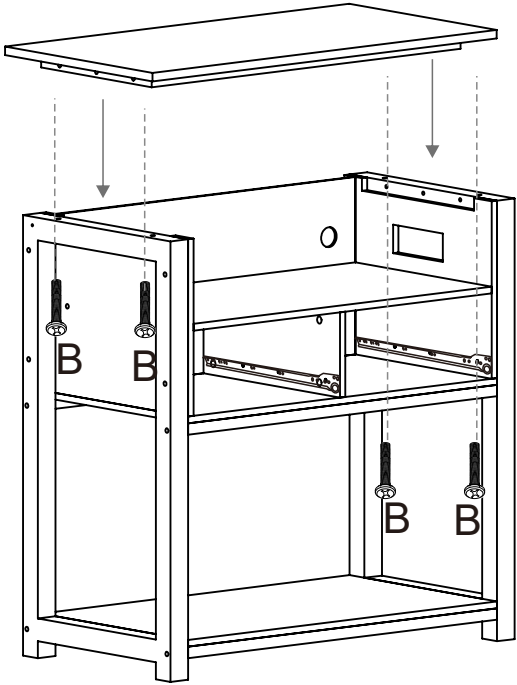    

Step 15

 F






X 8

G





   X 8

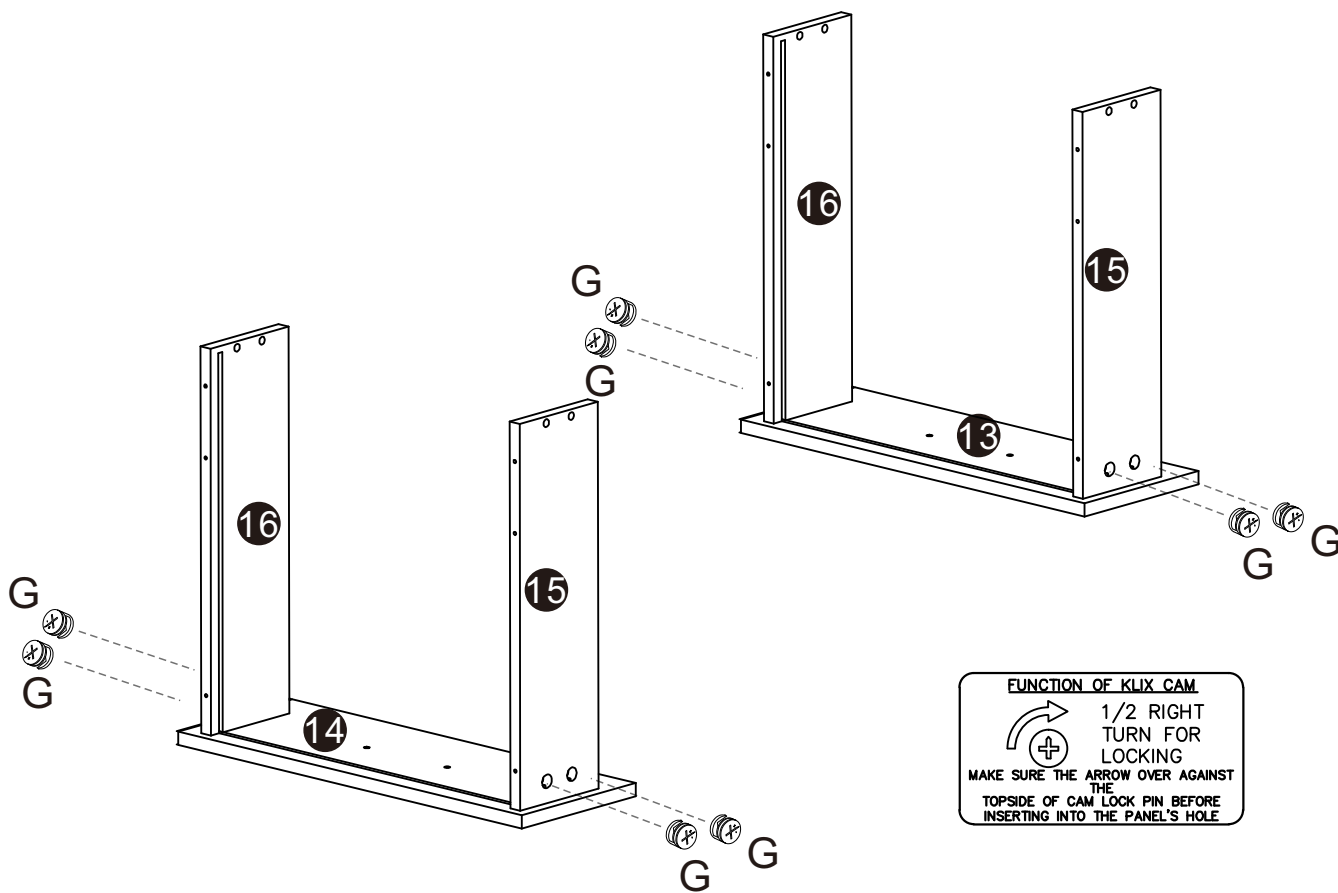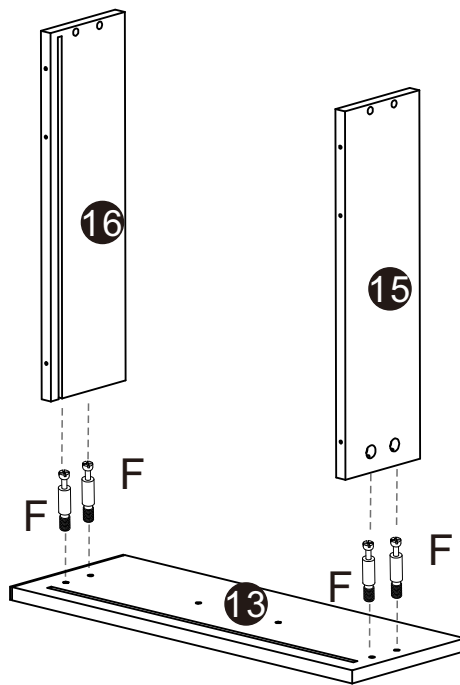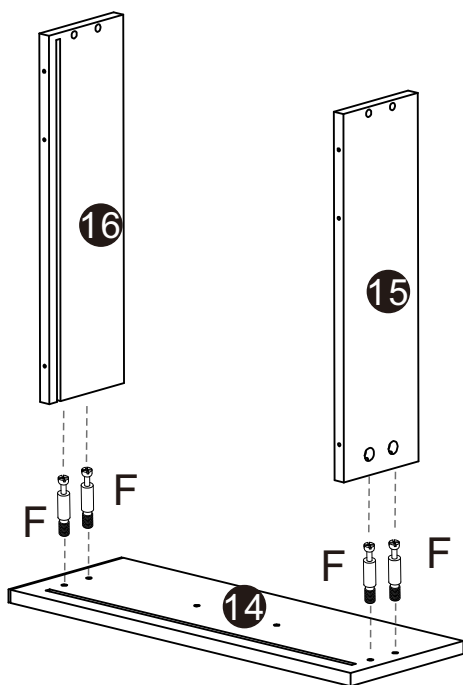

FUNCTION OF KLIX CAM
 1/2 RIGHT
 TURN FOR
 LOCKING
 MAKE SURE THE ARROW OVER AGAINST
 THE
 TOPSIDE OF CAM LOCK PIN BEFORE
 INSERTING INTO THE PANEL'S HOLE

  Step 16

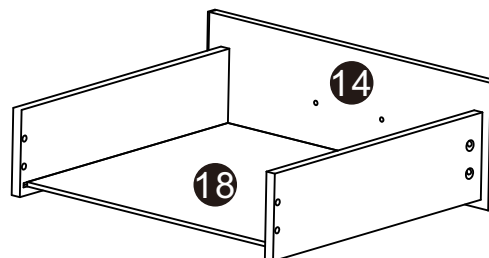
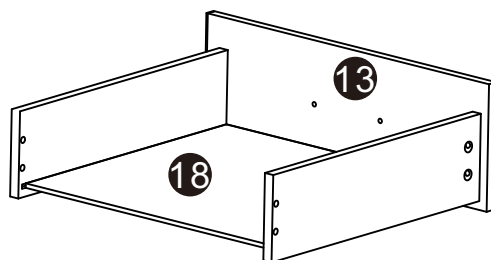


Step 17

K



  
X 8

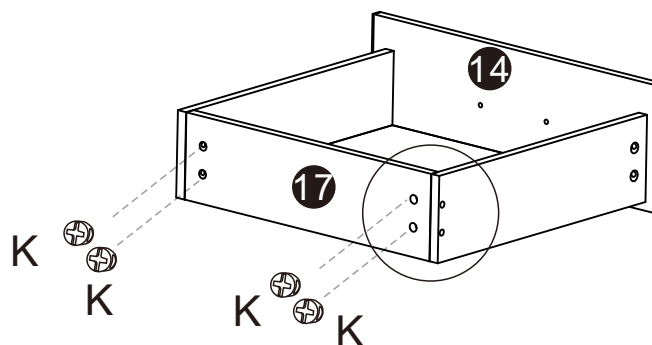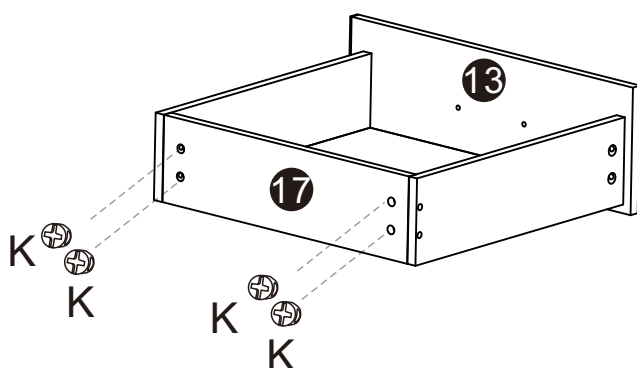

Step 18

J

 X 8

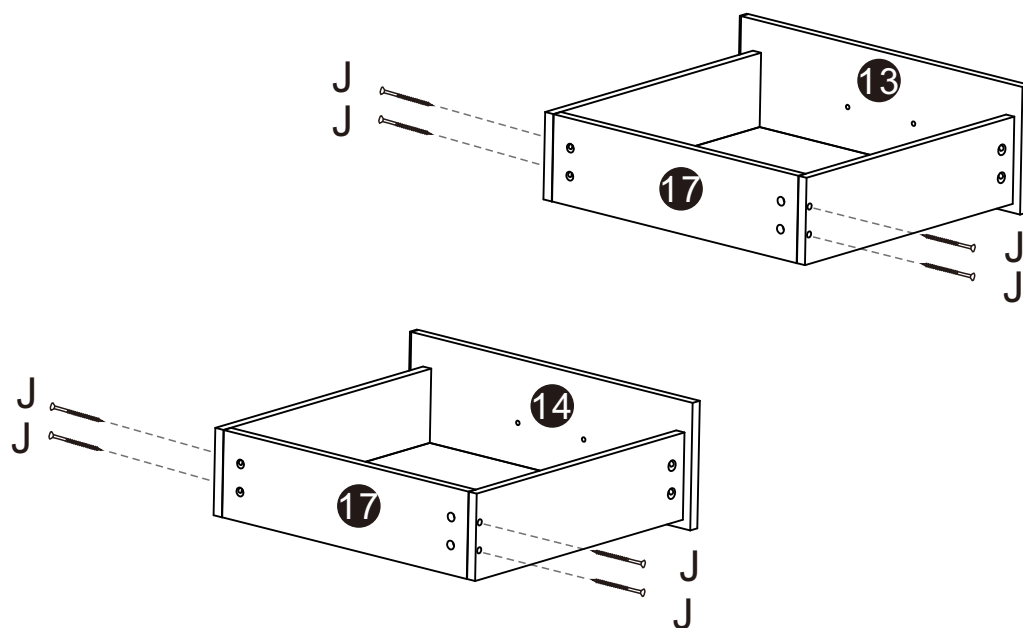

Step 19

O

 
 


X 2

D



X 4

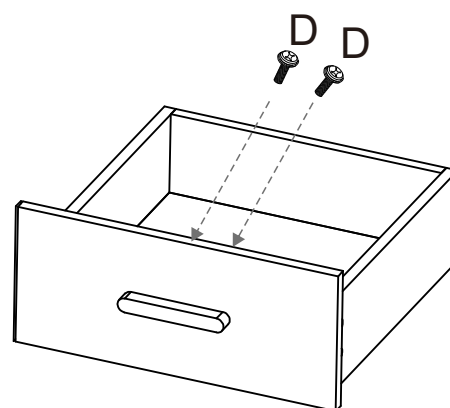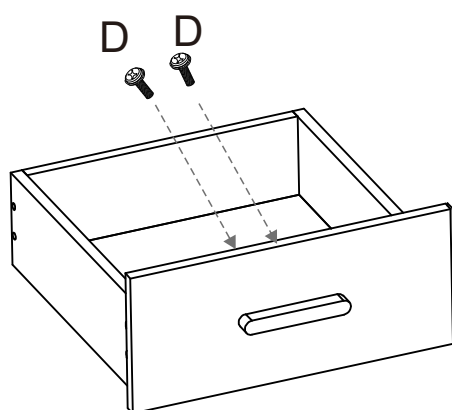

M

 
 
X 4

E




X 12

Step 20

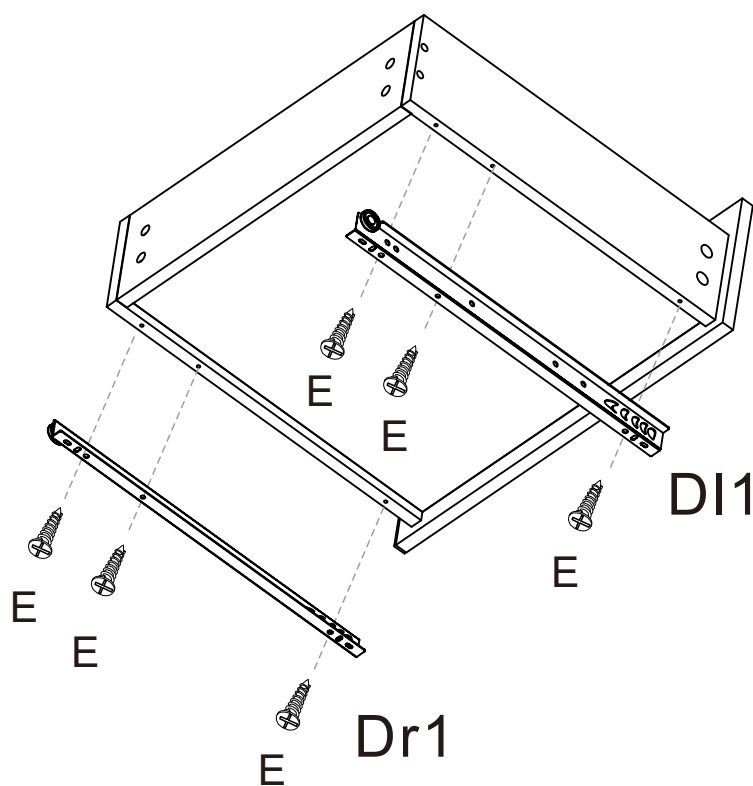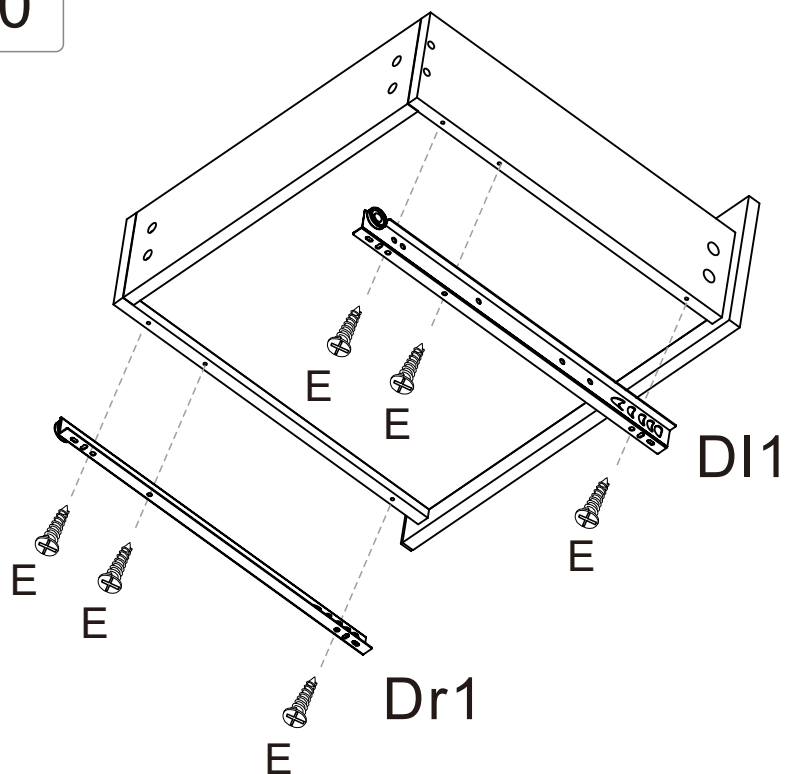

 Step 21

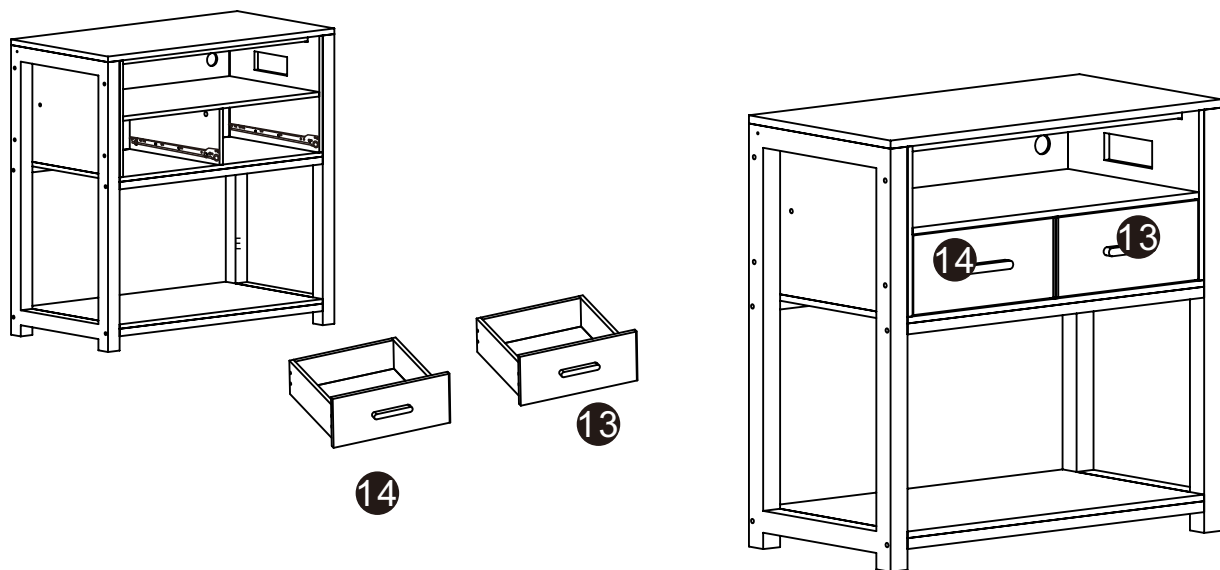


Step 22

E




 X 2

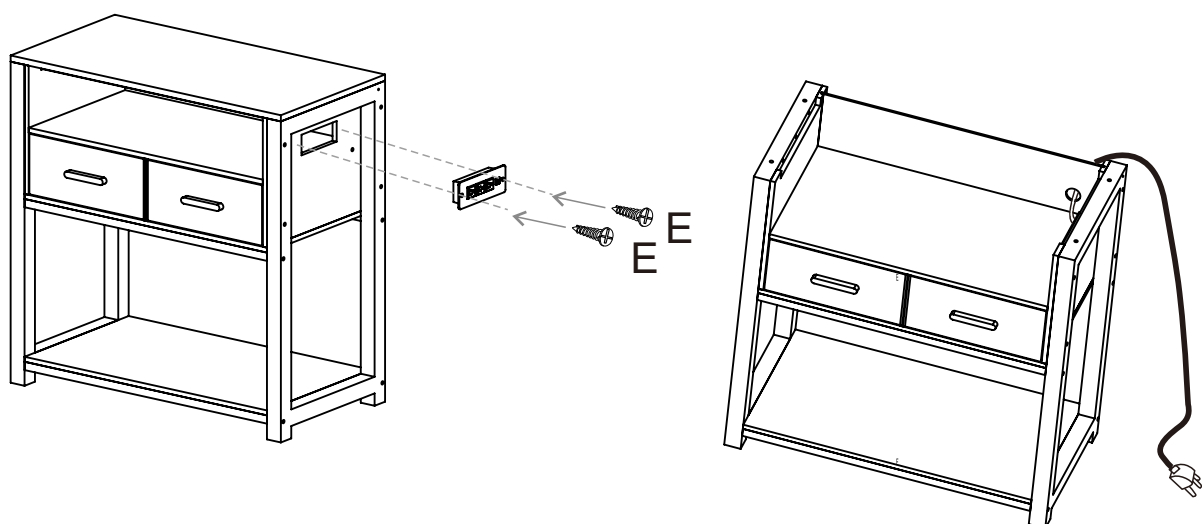


Step 23

I	 X 6	R	 X 3
Q	 X 6		

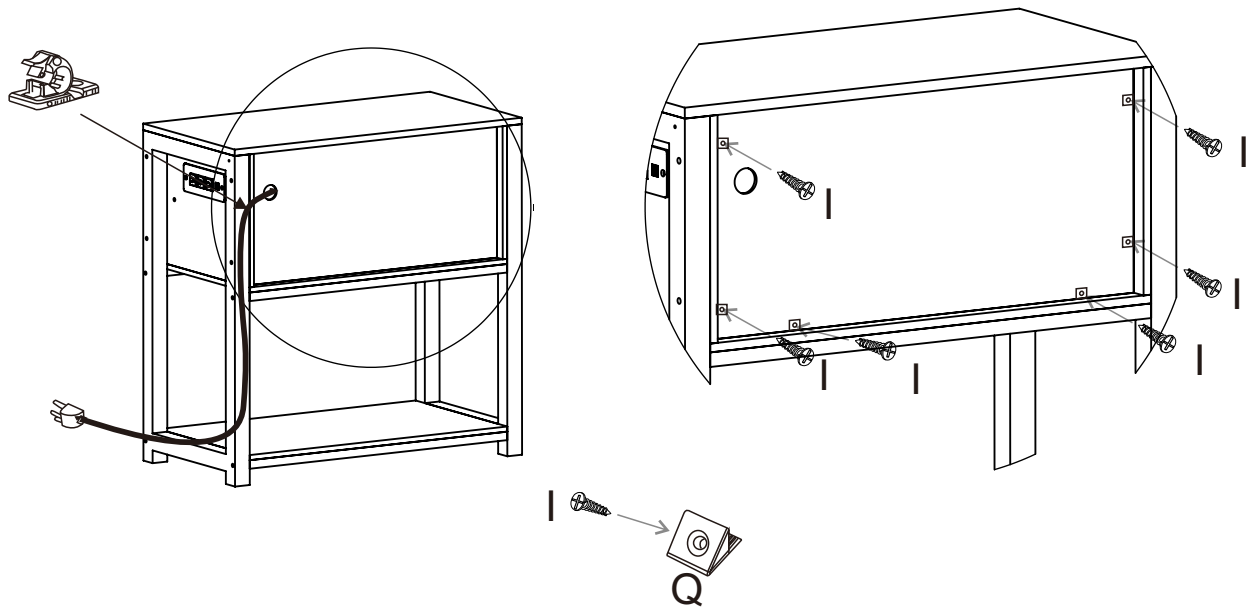 


Step 24

 N  X 4

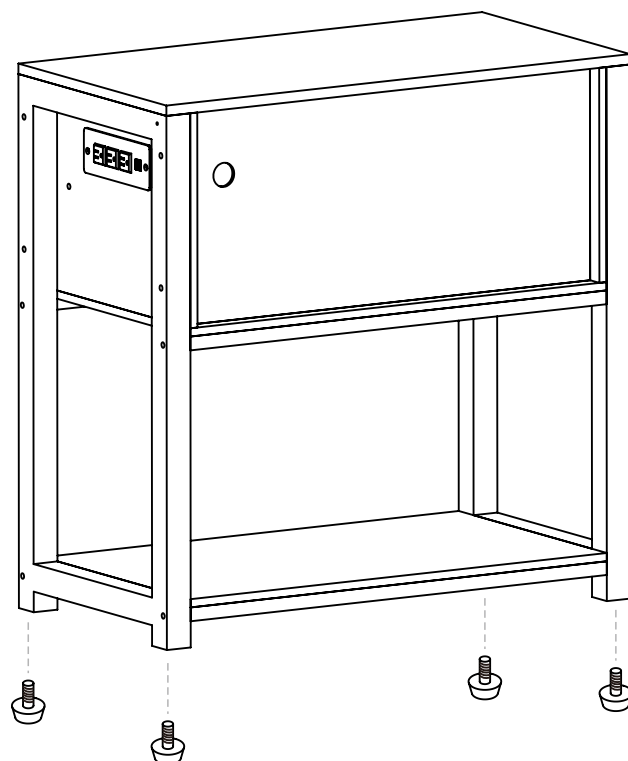



Step 25

D	 X 2	S	 X 2
L	 X 2	P	 X 2

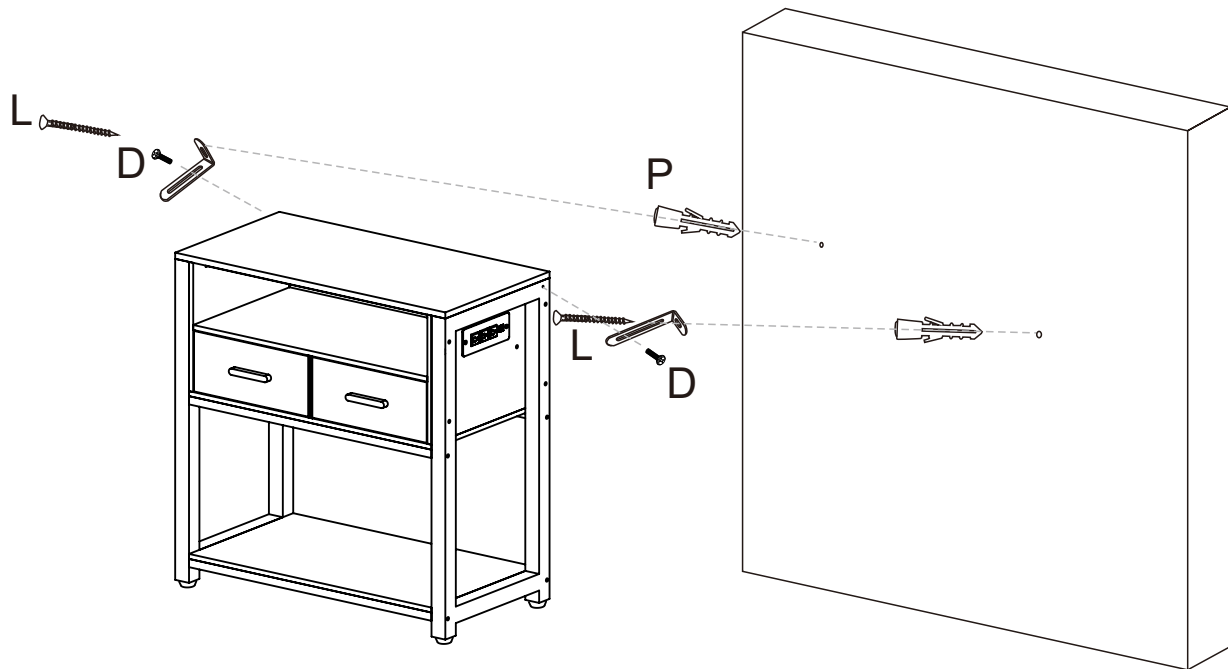 

 Step 26

U	 X 1
---	---

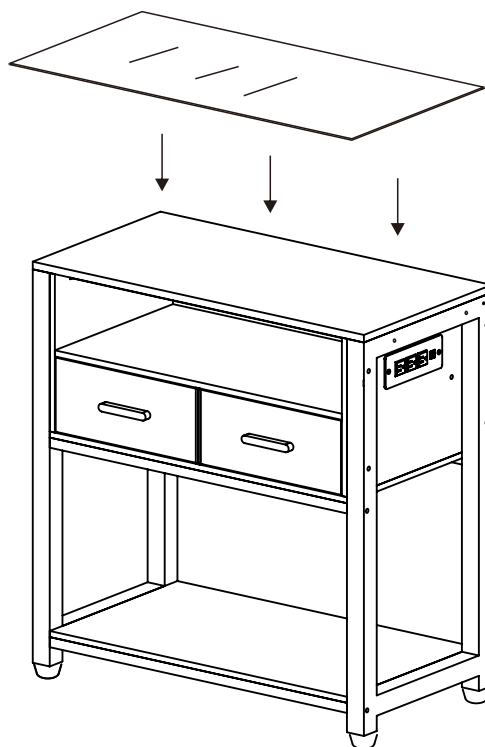 

WARRANTY CARD

Your warranty includes

- **30 Days Money Back Guaranty**

Within the first 30 days of your purchase, you are allowed to return your product for a full refund.

- **30 Days to 3 Months(6 Months)**

We will replace the defective unit due to manufacturer fault with a new one. (You will receive extra 3 Months warranty if you register on our website.)

- **3 Months to 24 Months**

Within 24 Months, we will provide timely and effective online after-sales service after your purchase.

