

ASSEMBLY INSTRUCTION

Caution : You must read this before you proceed

Care & Maintenance


- ⊗  • Not for commercial use. For residential use only.
- ✓  • Furniture may scratch floors. We recommend using furniture pads to protect your floors.
- ⊗  • Do not put hot items directly on furniture surface.
- ⊗  • Do not clean furniture with harsh cleansers or polish.
- ⊗  • Do not place furniture under direct sunlight.
- ⊗  • Do not place furniture near heating or cooling vents.
- ⊗  • Do not write on furniture without a padded barrier to protect the surface.
- ⊗  • Do not place furniture outside. For indoor use only.
- ⊗  • Stains may be removed with mild soap solution and damp cloth.
- ⊗  • Children should not climb or jump on the furniture.

- ✓  • Dust and pick-up spills using a clean, non-colored, lint-free cloth.


Please look in carton for hardware packs and legs.
Sets often ship in multiple boxes and may arrive a day or two apart.

DINING CHAIR

N768P437935

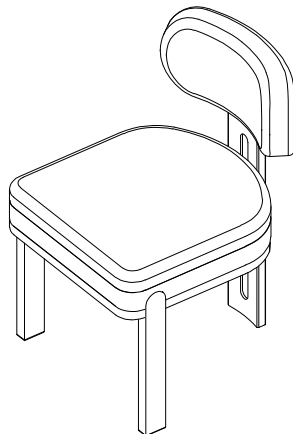

Parts List

 
Label	Picture	Description	QTY
Ⓐ		Backrest chair	1
Ⓑ		Seat cushion frame	1
Ⓒ		Chair leg	2

Hardware

Label	Picture	Picture	QTY
①		Bolt (5/16" x40mm)	12+1
②		Spring washer(12mm)	12+1
③		Flat washer (18 mm)	12+1
④		Allen wrench (M4)	2
⑤		Felt pad	2

Assembly preparation

Before beginning assembly:

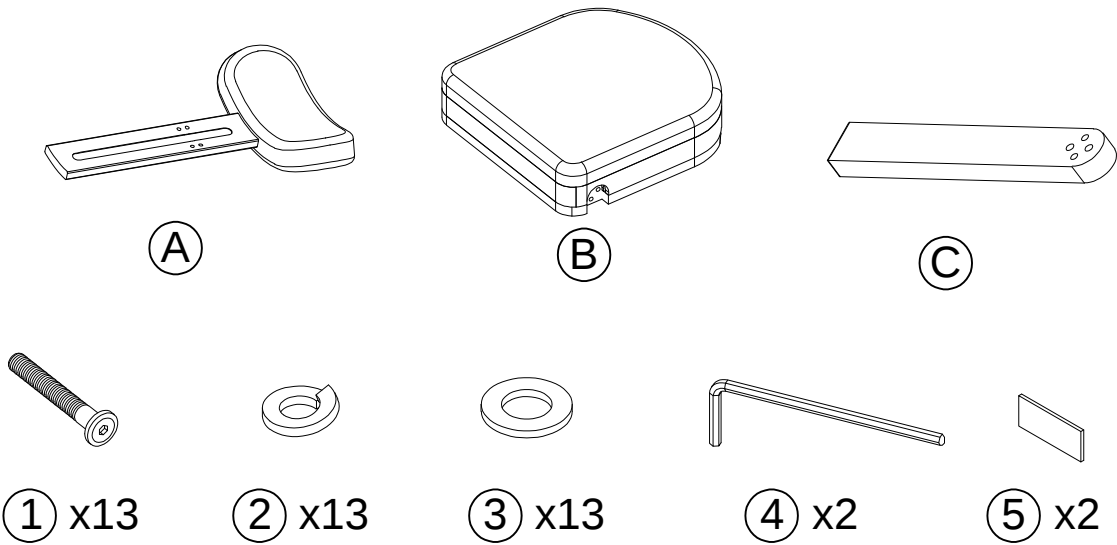

• Read instructions, cover to cover-



• Have 2 adults on hand fo assembly-



• Do not assemble on flooring of carpet-




• Assemble on a clean non-marring suface (packing foam)-



• Save all packaging until finshed-


Assembly Steps

Overivew

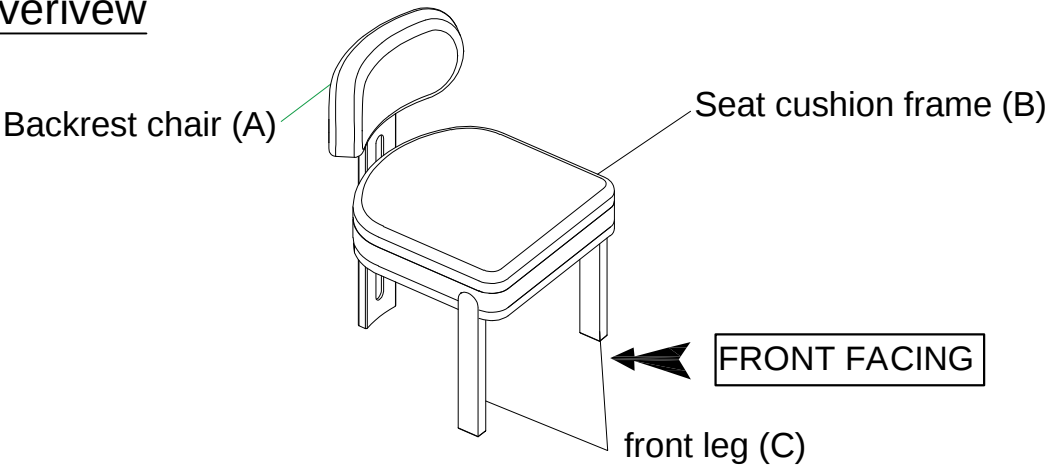


This chair has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the chair parts, the above picture is provided to help you put the various parts into perspective. Please read through the instructions below to familiarize yourself with the parts and steps before assembly.

Step 1

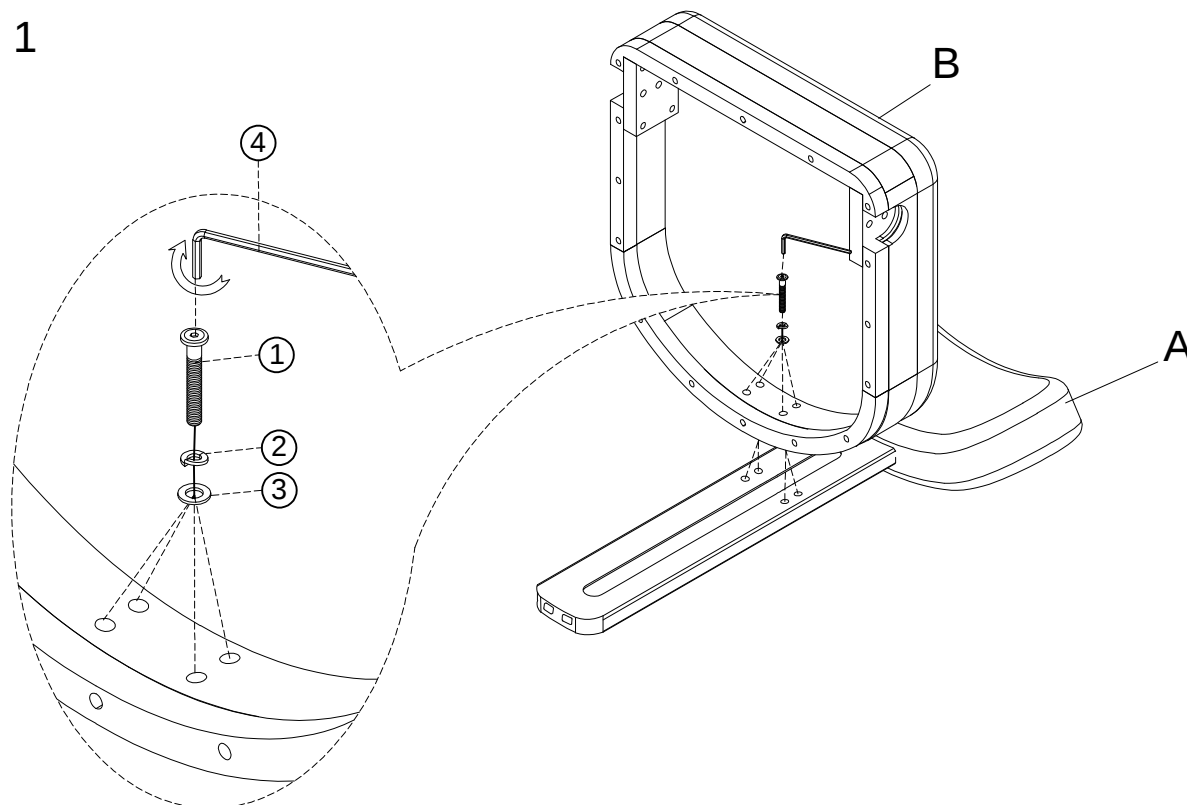

Attach seat cushion B to backrest chair A. Use bolt ①, spring washer ②, flat washer ③, and allen wrench ④. Do not fully tighten.

Step 2

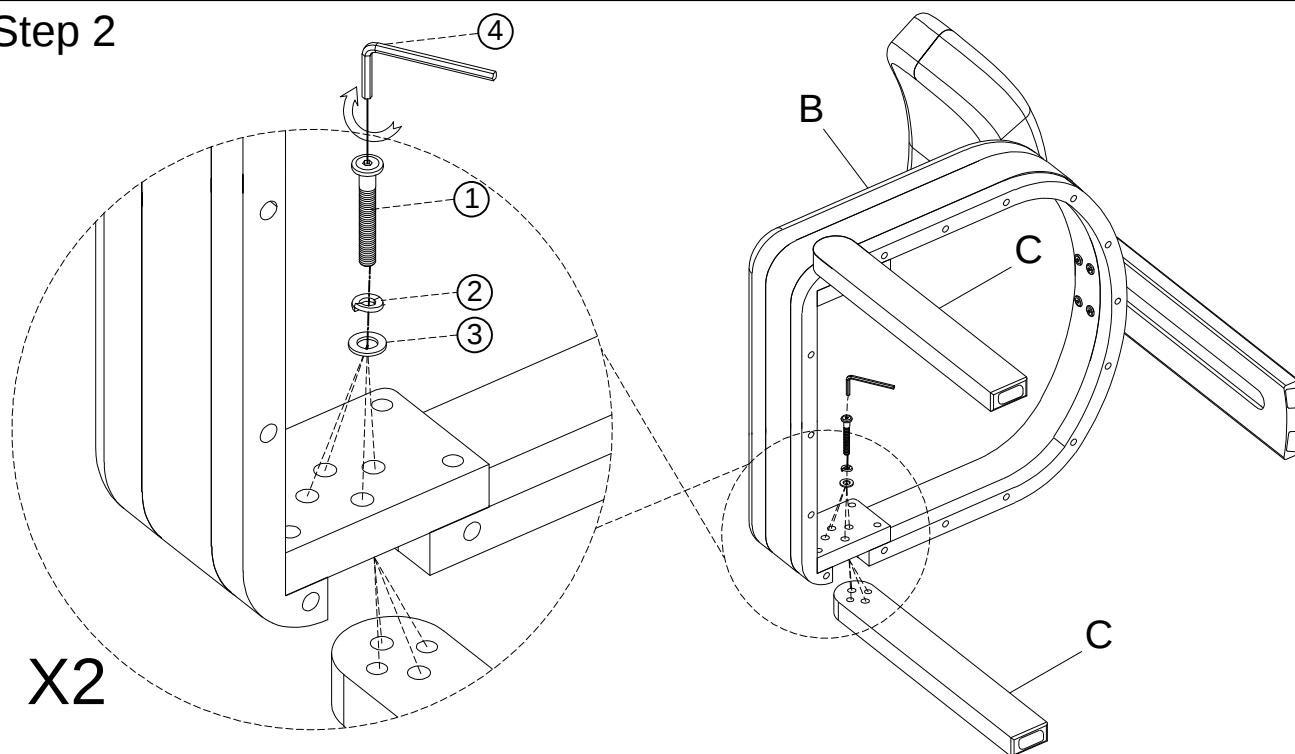

Attach the front legs C to seat cushion B, use bolt ①, spring washer ②, flat washer ③, Allen wrench ④, and do not fully tighten.

AUTION : When tightening these screws, tighten sequentially.


DO NOT tighten any screw fully and then towards the next one.

This would cause the frame to warp.

If there is still wobbles, loosen the screws and execute this same process.

WARNING!! IF IT IS NOT STABLE, IT COULD LEAD TO DAMAGING THE PRODUCT.

Step 3

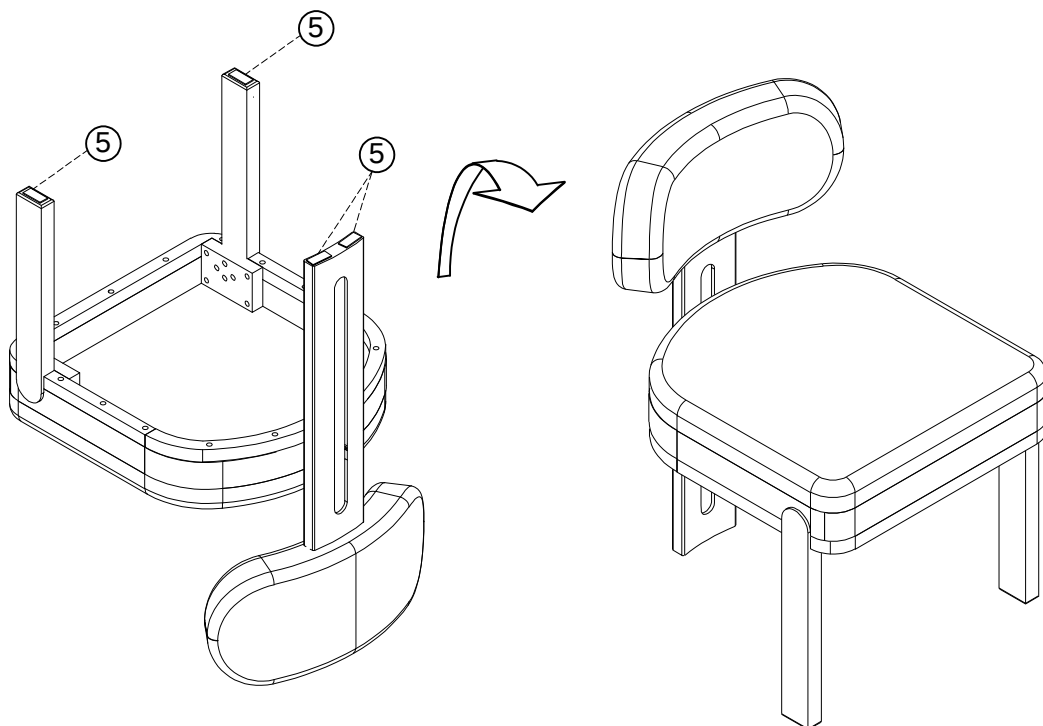

Note: If missing or fall out the felt pad, attach new one⑤.


Attach the felt pads⑤ to the legs

After checking the chair, If no problem, pls tighten all the bolts.

Stand the chair up .

Place the chair on a LEVEL SURFACE to check for wobbles .

Step 4

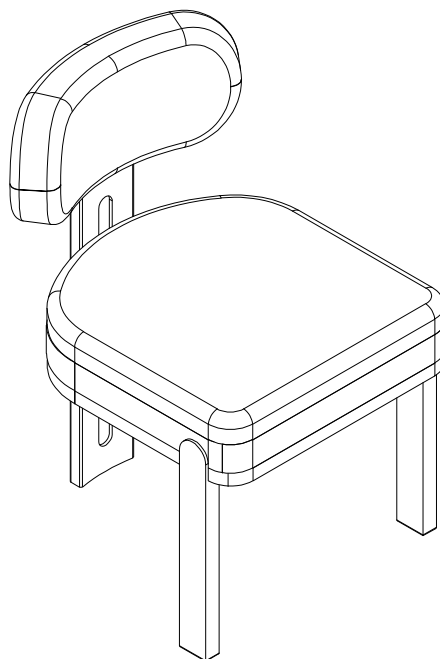

Your chair is ready for use .

This chair can only be used on a flat, level surface.