 
 
 

 
 
 
 
 
 




 
 








 
 
 
 

 
 

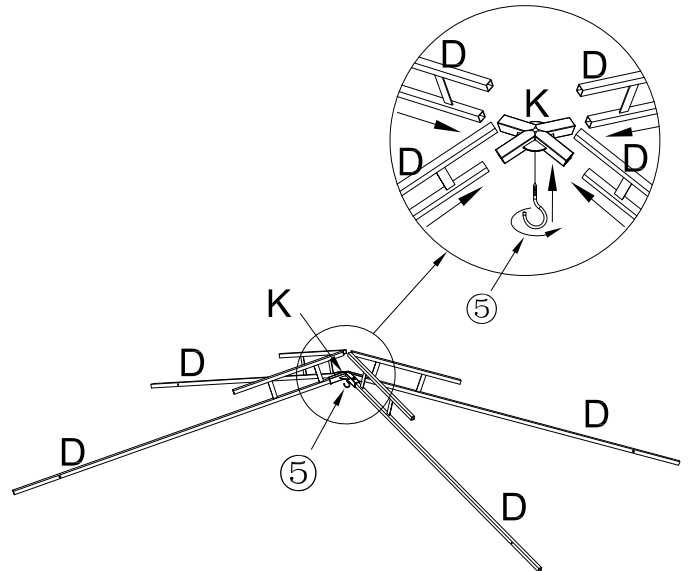 
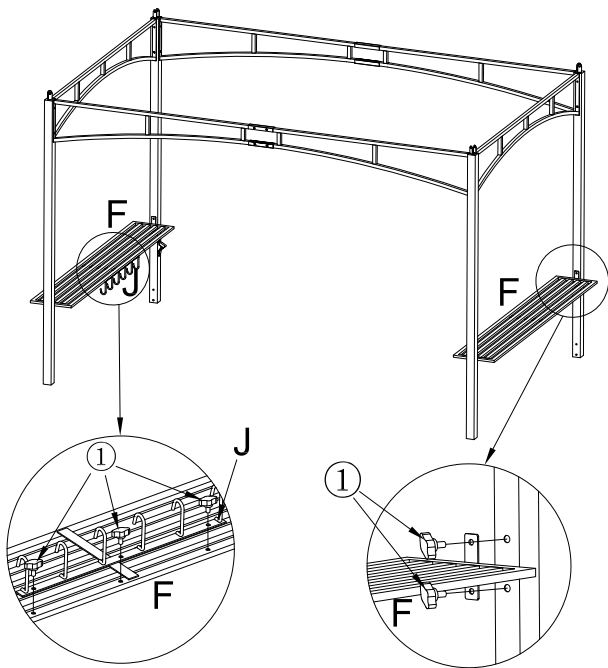 
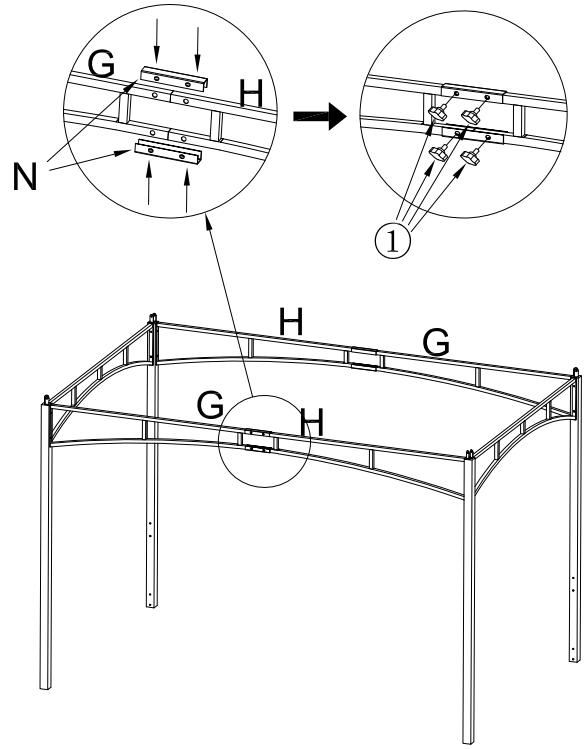 
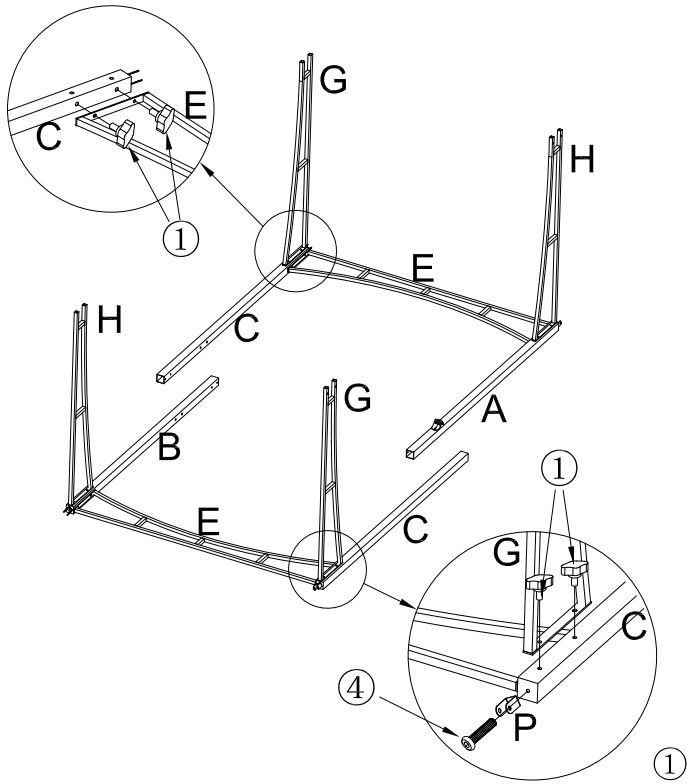 



# PARTS

A 1pc		
B 1pc		
C 2pcs		
D 4pcs		
E 2pcs		F 2pcs 
G 2pcs		H 2pcs 
J 1pc		K 1pc 
L 4pcs		M 4pcs 
N 4pcs		O 1pc 
P 4pcs		Q 8pcs 
R 1pc		S 1pc 
U 1pc		V1 1pc 
V2 1pc		W1 1pc 
W2 1pc		X 2pcs 
Y 2pcs		Z 6pcs 
①	 M6x13 mm	43pcs+1pc
②	 M6x30 mm	4pcs+1pc
③	 M6	4pcs+1pc
④	 M6x35 mm	4pcs+1pc
⑤		1pc
⑥		1pc





③

 ④

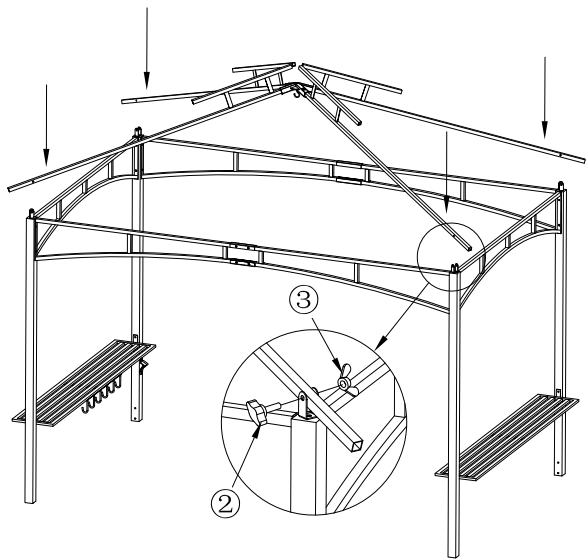


⑤

  
Press the button and push the extension tube (M) up to the end

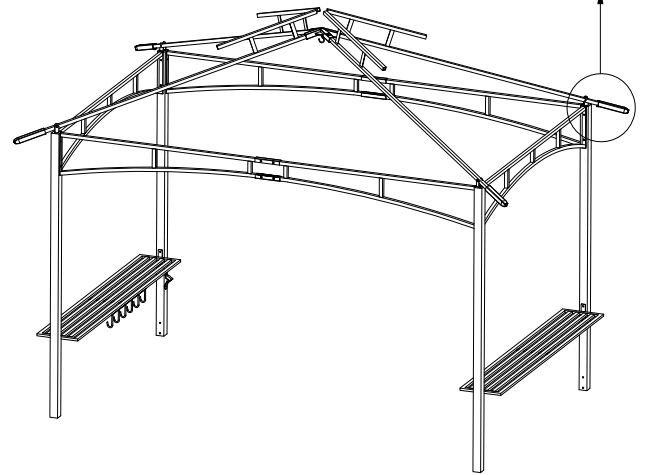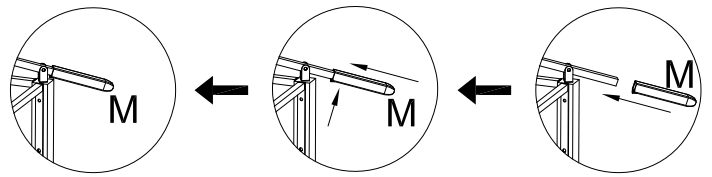


⑥

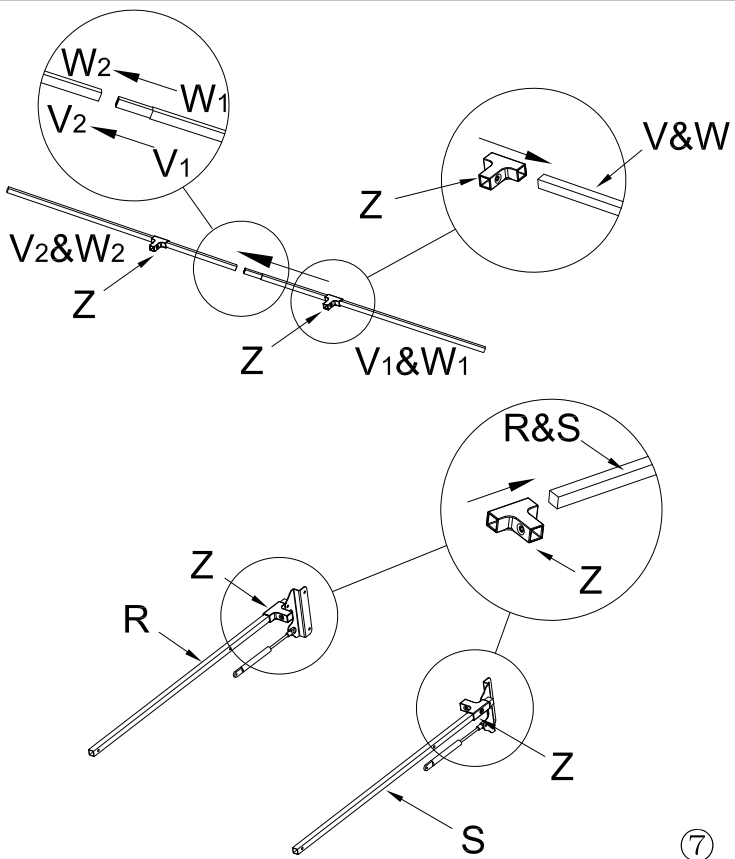 

⑦

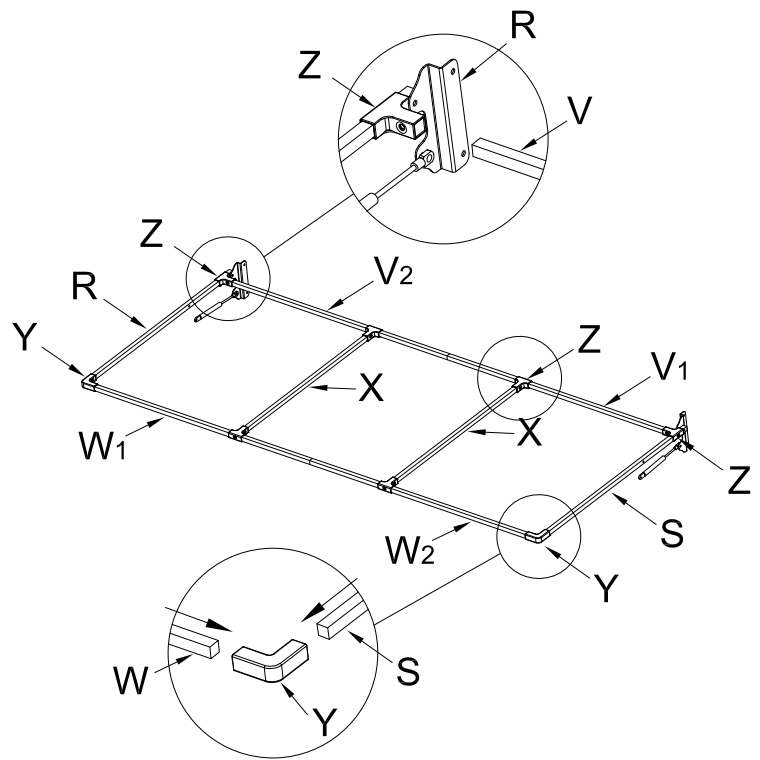 


⑧

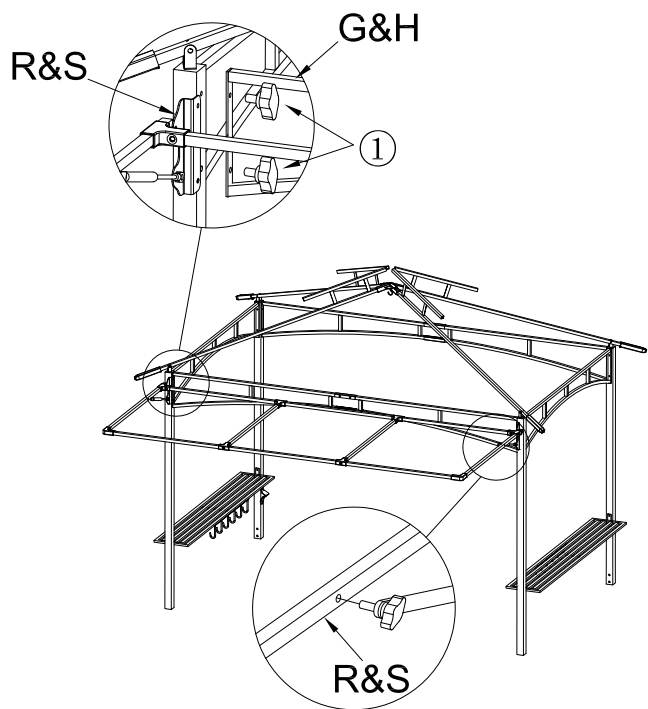 


9

 
Pull out the extension tube (M) outwards to adjust the ceiling (O)

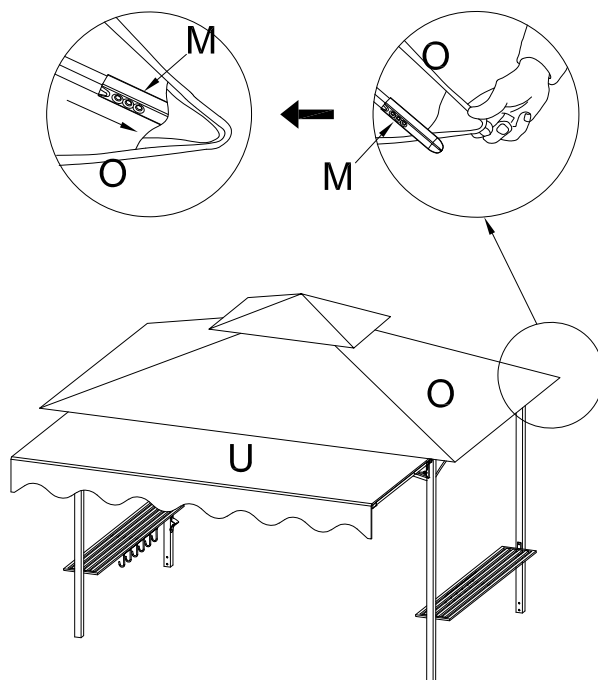

10

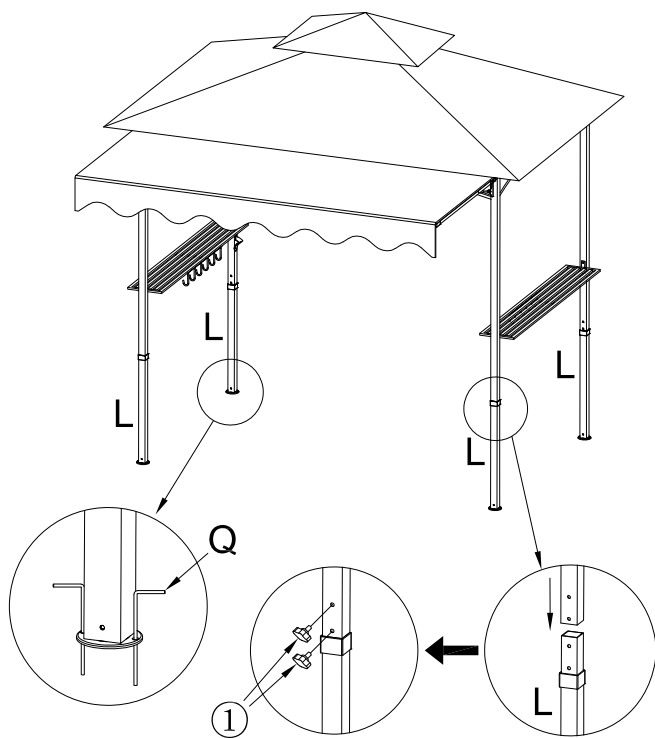 

11

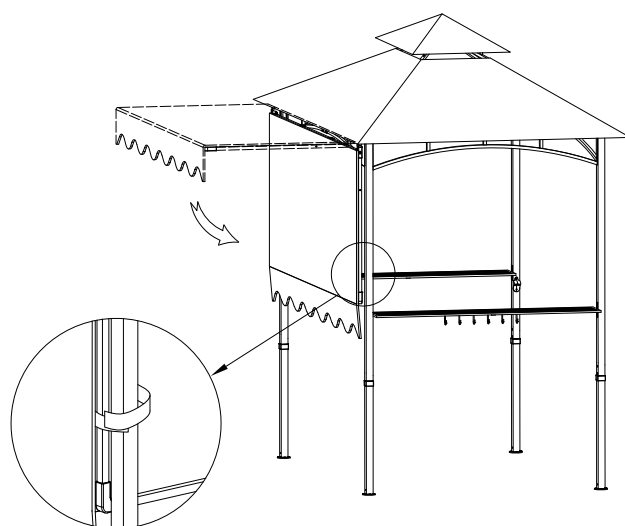 

12