


ASSEMBLY INSTRUCTIONS MESH BACK TASK CHAIR

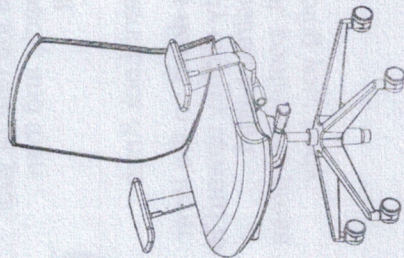



 

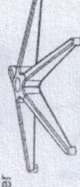








IMPORTANT!

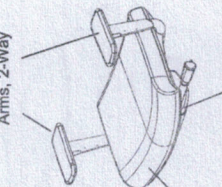Review ALL instructions before beginning assembly. These instructions are provided to avoid problems that may occur from improper assembly or installation. Manufacture is not responsible for failure resulting from improper assembly or installation of this product. Moreover, all warranties are void for failure to follow these assembly instructions.

(1)

PARTS LIST



Reference Letter A*	Back Assembly 	Quantity 1	Reference Letter E*	Caster (5 pack) 	Quantity 1
Reference Letter B*	Arms, 2-Way Mechanism Synchro w/Seat Slider Seat 	Quantity 1	Reference Letter F	Hardware Pack Screw 3/8" - 16 x 1-1/2" 	Quantity 3
Reference Letter C*	Seat Assembly Cylinder 	Quantity 1	Reference Letter G	Lock Washer 3/8" 	Quantity 3
Reference Letter D*	Base, Aluminum 	Quantity 1	Reference Letter H	Lock Washer 3/8" 	Quantity 3
			Reference Letter J	Allen Wrench 	Quantity 1
			Reference Letter K	Screw 5/16" - 16 - 1/2" 	Quantity 4
			Reference Letter L	Screw 1/4" - 16 - 1" 	Quantity 6
			Reference Letter M	Allen Wrench 5mm 	Quantity 1
			Reference Letter N	Washer Flat 1/4" 	Quantity 4

(2)

4. Attach Mechanism to Seat (B) using Washer (N) & Screws (K).

5. Attach arms to Seat (B) using Screws (L).

6. Carefully place Seat/Back assembly onto Base assembly.

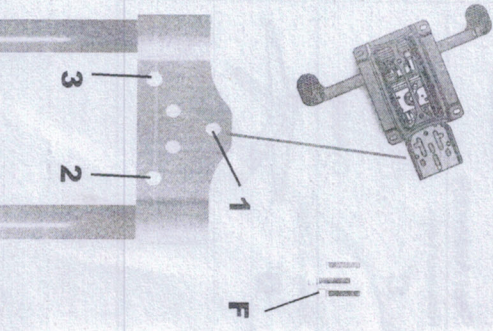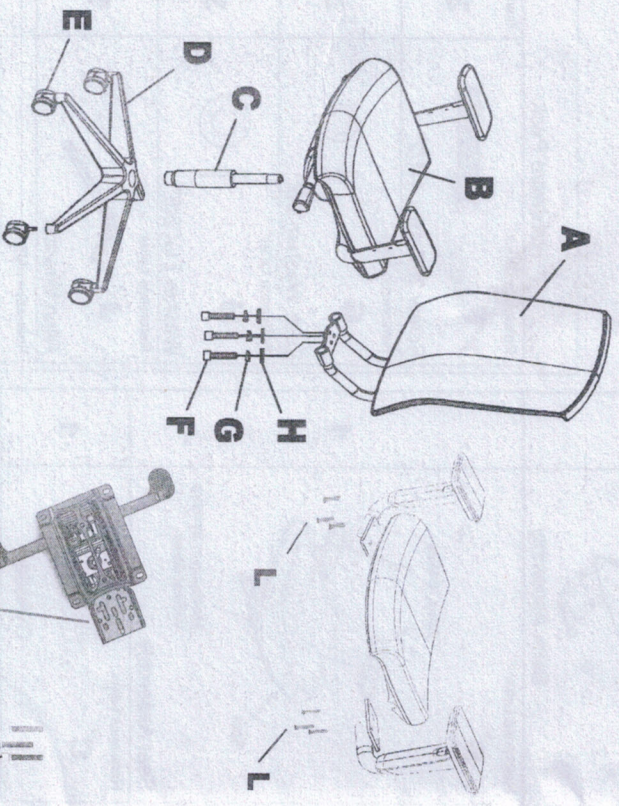

NOTE:
Periodically (Every 90 days) make sure screws are fully tightened.

(3)


OPERATING INSTRUCTIONS FOR TASK & TASK+ MECHANISM

1. Seat/Back Tilt Adjustment Lock Knob

To lock the tilt adjustment to the desired position, turn the handle clockwise. To unlock the tilt adjustment, turn the knob counterclockwise, press the rear of your body against the seatback, and then lean forward to unlock it.

2. Seat/Back Tilt Adjustment Lock Knob


To raise the seat, press down on the lever and then raise your body slightly upward to raise the chair to the desired height. To lower the seat height, continue to press down on the lever, keeping your body weight on the seat.

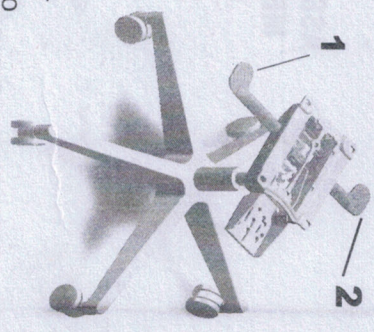

OPERATING INSTRUCTIONS FOR LUMBAR SUPPORT.

1. Lumbar Adjustment.

Press button down and ratchet the lumbar upward or downward to the desired height.

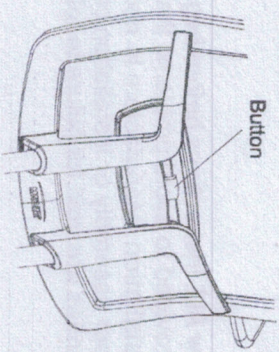

(4)