 


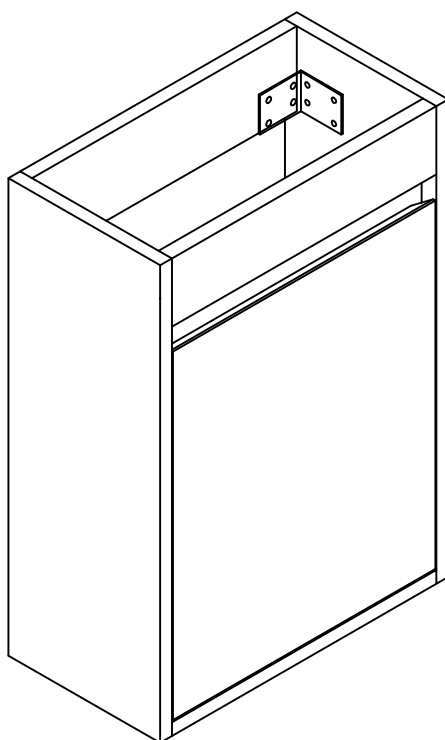


Installation & Assembly


DIMENSIONS




 YOU MAY NEED (NOT SUPPLY)

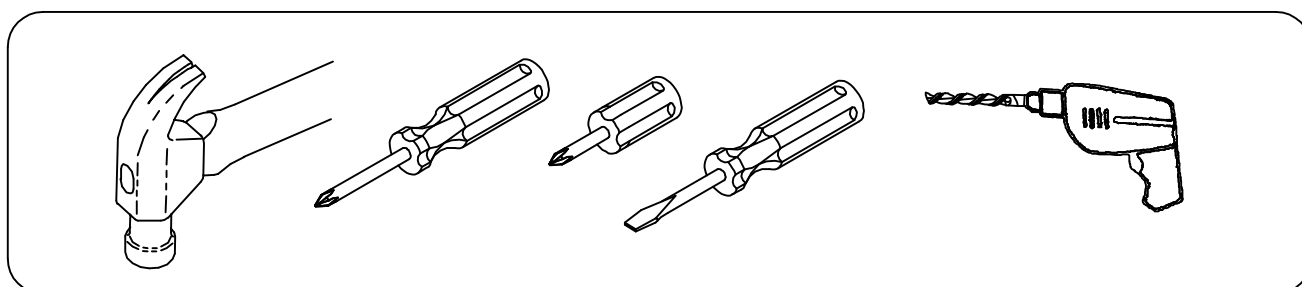

ASSEMBLY DIAGRAM

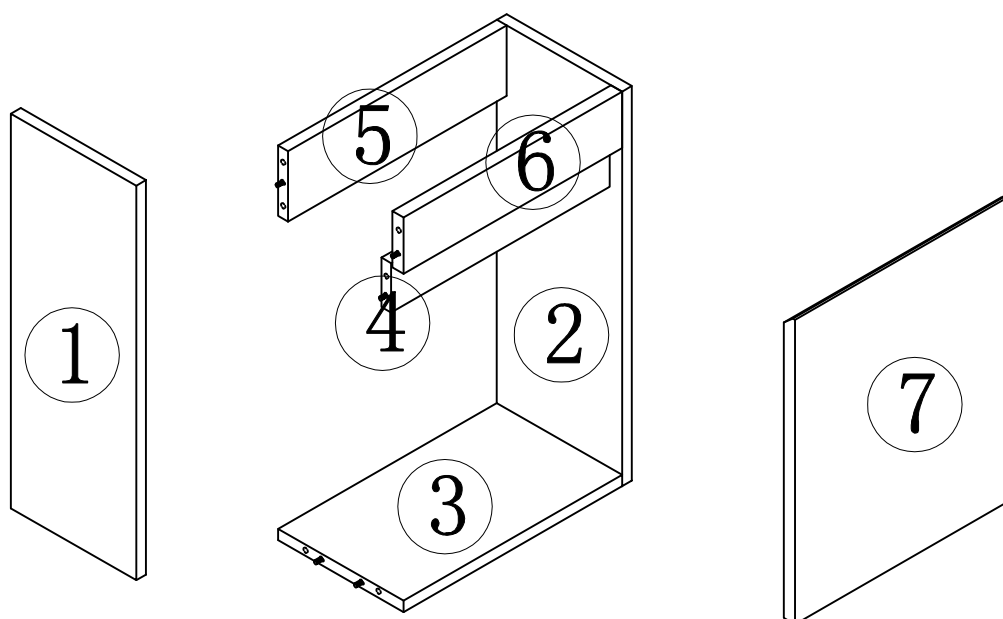 


 
PARTS LIST					
PARTS LIST					
NO	DESCRIPTION	QTY	NO	DESCRIPTION	QTY
①	Left side panel 	1	⑤	Rear baffle 	1
②	Right side panel 	1	⑥	Front baffle panel 	1
③	Bottom panel 	1	⑦	Right door panel 	1
④	Front drawbar 	1			

PARTS LIST					
HARDWARE LIST					
NO	DESCRIPTION	QTY	NO	DESCRIPTION	QTY
A	Three-in-one eccentric wheel 	12	E	Door hinge 	2
B	Three-in-one connecting rod 	12	F	4*16mm screw 	28
C	Three-in-one sticker 	12	G	White angle bracket 	2
D	8*40mm wood dowel pins 	10			
CAUTION: Please confirm the parts list before installation					


STEP 1

HARDWARE LIST	
Three-in-one connecting rod B 12PCS	

  
1.Put the three-in-one connecting rod in the 10mm hole of the following panels and tighten them with a cross screwdriver or an electric tool.

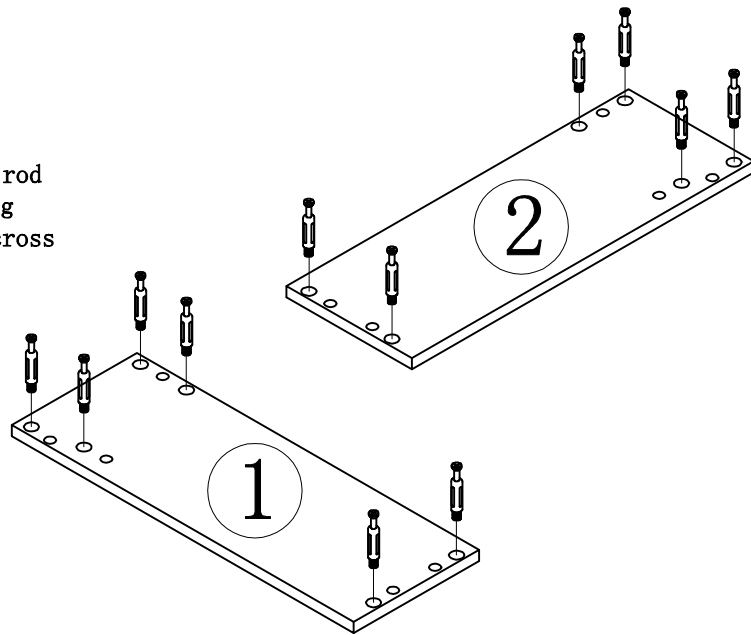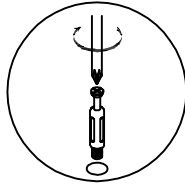

 STEP 2


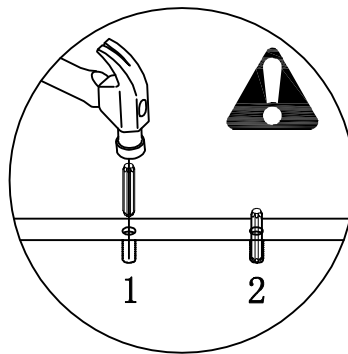


 1.Strike the 08*40mm wood dowel pin into the 8m hole of the above panels with an iron hammer. Please note that the hole of the three-in-one connecting rod should also be 8mm. The hole of the three-in-one connecting rod connects to the hole of 15mm three-in-one eccentric wheel.

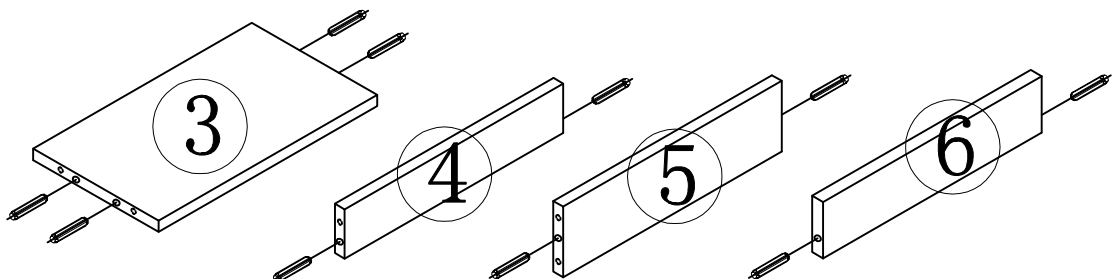


HARDWARE LIST	
8*40mm wood dowel pins D 10PCS	

  STEP 3

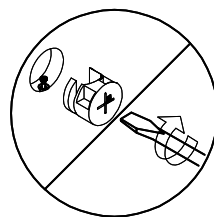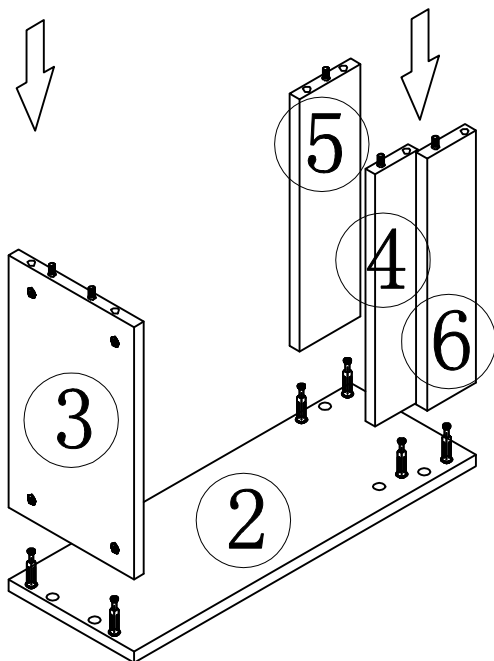

 1.Connect No. 3-4-5-6 panel to No.2 panel tightly with the three-in-one eccentric wheel.

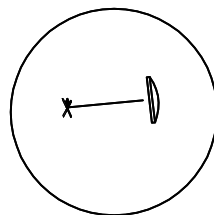

2.Cover the mounting hole of the eccentric wheel with a three-in-one sticker.

 
 
HARDWARE LIST

Three-in-one
eccentric wheel
A  6PCS


Three-in-one
sticker
C  6PCS



STEP 4

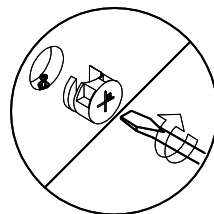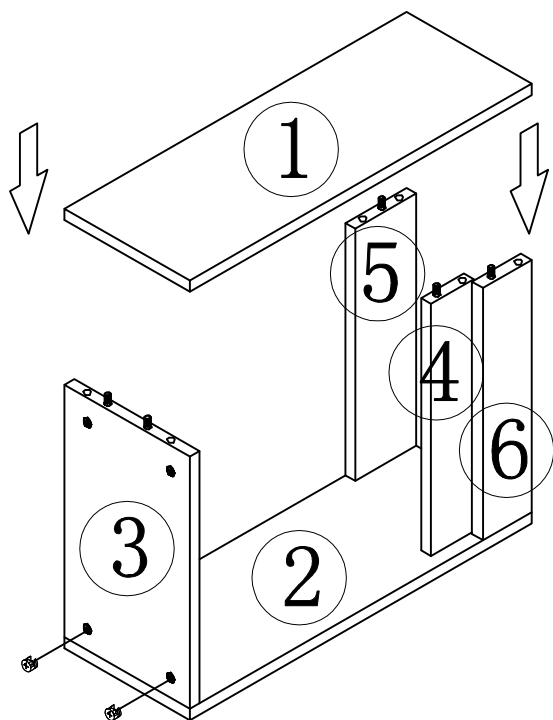

 1.Connect No. 1 panel to No. 3-4-5-6 panel tightly with the three-in-one eccentric wheel.

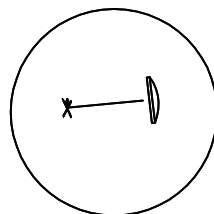

2.Cover the mounting hole of the eccentric wheel with a three-in-one sticker.

 
 
 
HARDWARE LIST

Three-in-one
eccentric wheel
A  6PCS


Three-in-one
sticker
C  6PCS




STEP 5

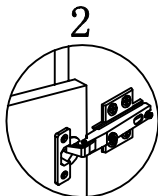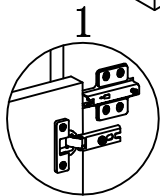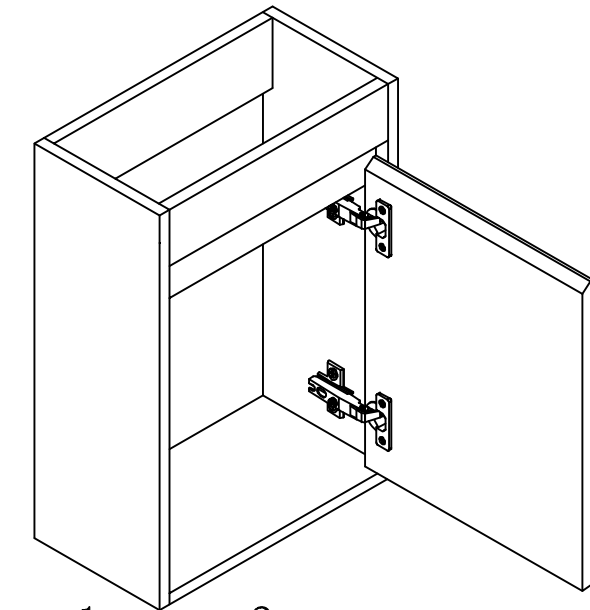

 
3. Install the hinge cup on the door panel to the hinge of the side panel.

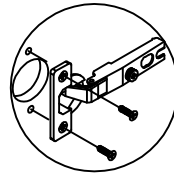

 1. Install the hinge cup to the door panel with 4*16mm screws.

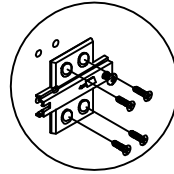

 2. Install the hinge to the side panel with 4*16mm screws.

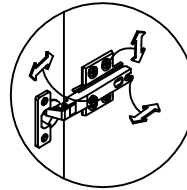

4. Adjust the door panel clearance.

HARDWARE LIST

4*16mm screw

Door hinge

F  12PCS

 
E  2PCS




Hinge/Door Adjustment and Realignment

If adjustment or realignment is needed, follow the instructions provided in the following chart.


Vertical adjustment



 
1. Loosen screws

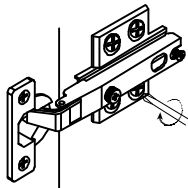




 
2. Adjust hinge

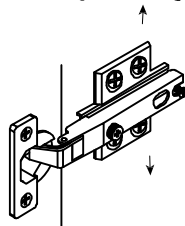




 
3. Tighten screws

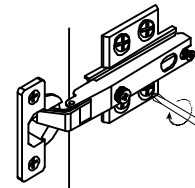


Horizontal adjustment

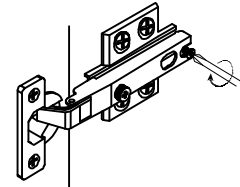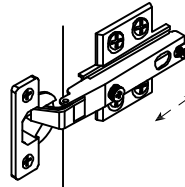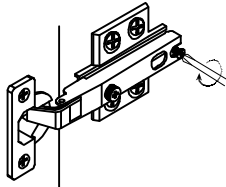    

Door gap adjustment

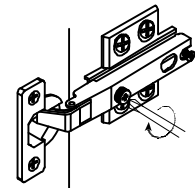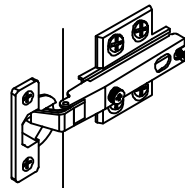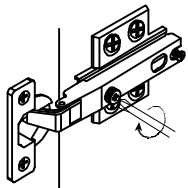    


 STEP 6

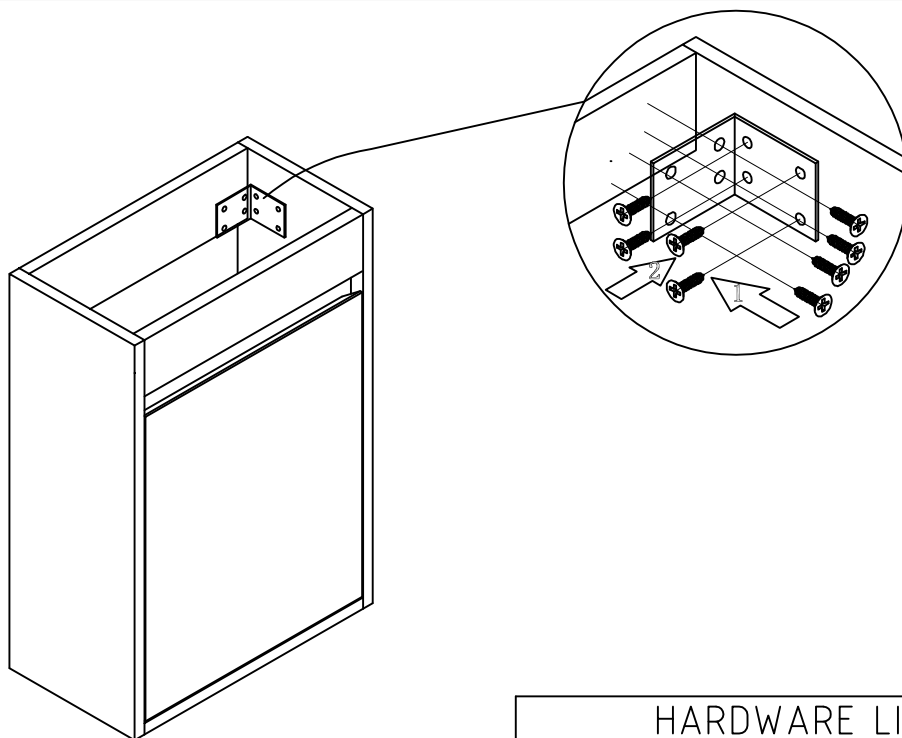

HARDWARE LIST		
4*16mm screw	Door hinge	
F  16PCS	G  2PCS	

 STEP 7

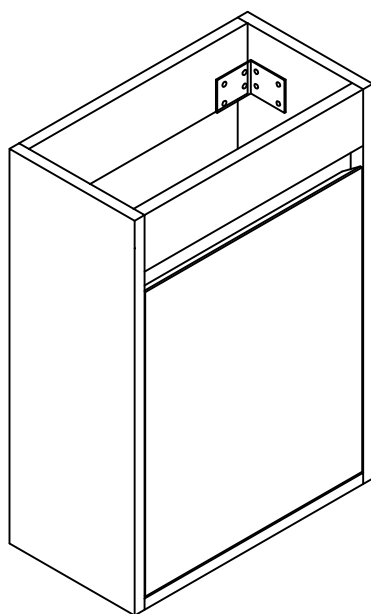



Choking hazard-Small Parts : This unit contains small parts, not for children under 3 years.

Tip-over hazard : Secure finished unit to wall stud using L-Bracket and wall screw (#10*1.5"W/out provided). If a wall stud is not neccessible , Consault your local hardware store for appropriate mounting hardware . Failure to properly install will result in product collapse or tip-over. Serious injury can occur .