

ASSEMBLY GUIDE

PACKAGE CONTENTS



A x1



B x1



C x2



D1 front x1



D2 back x1



E x4



F x8



G x4



K1 x4



K2 x8



I x1



II x1

1

Cx2
K1x4



2



3

D1x1 D2X1
Fx8



4



5

Cx1
D1x1 D2x1




6

II
Ex2 Gx2



7

D2 D1

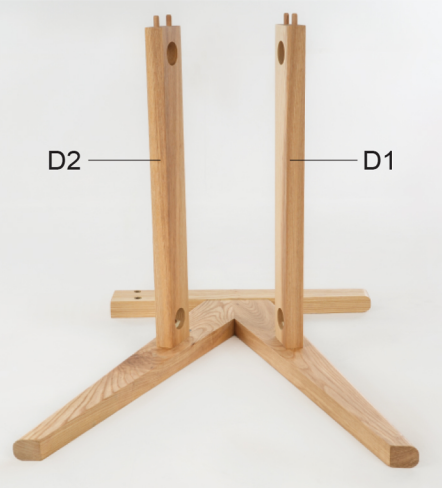

8

Bx1



9

I
K2x2



10

Ax1



11

I
K2x2



12

I
K2x2



13

II
Cx1 Ex2 Gx2



14

I
K2x2



15

Finish

