




INSTALLATION

Product Manual

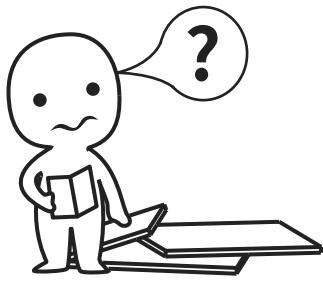


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

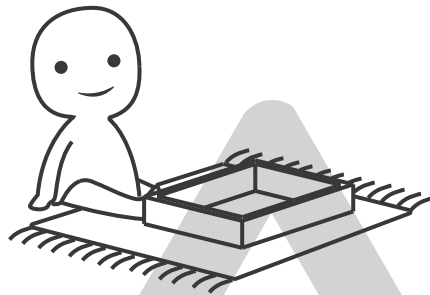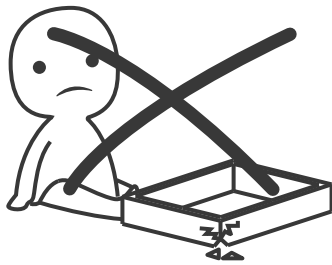



AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

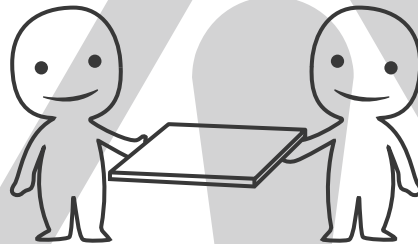

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

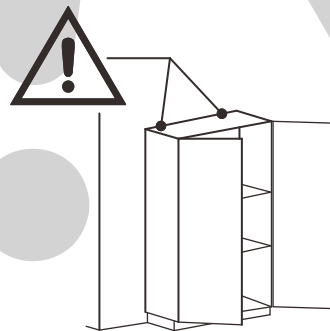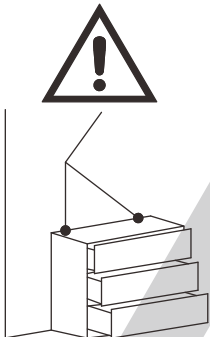

ANTI-TOPPLE WARNING !


Overturnd furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.
















Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

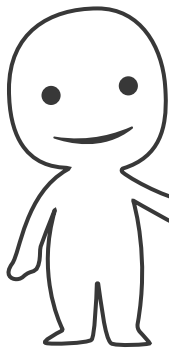


Please prepare the following tools

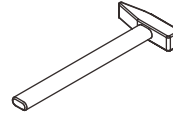  

          When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

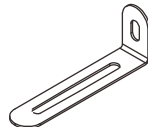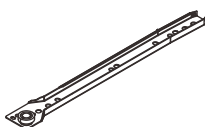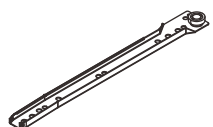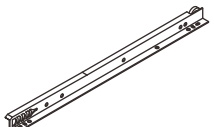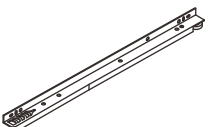A x 156  Ø 6 x 35 mm	B x 156  Ø 15 x 10 mm	C x 120  Ø 3 x 12 mm	D x 110  Ø 6 x 30 mm	E x 20  Ø 4 x 10 mm
F x 8 	G x 4 	H x 4  Ø 4 x 12 mm	J x 4  Ø 4 x 35 mm	K x 20 
L x 32  Ø 5 x 40 mm	N x 64  Ø 4 x 18 mm	P x 4 	Q x 4 	R x 62  Ø 3 x 16 mm
S x 240  Ø 3.5 x 12 mm	T x 60  Ø 4 x 35 mm	U x 32 	V x 32 	W x 28 
CL x 12  350 mm	CR x 12  350 mm	DL x 12  350 mm	DR x 12  350 mm	

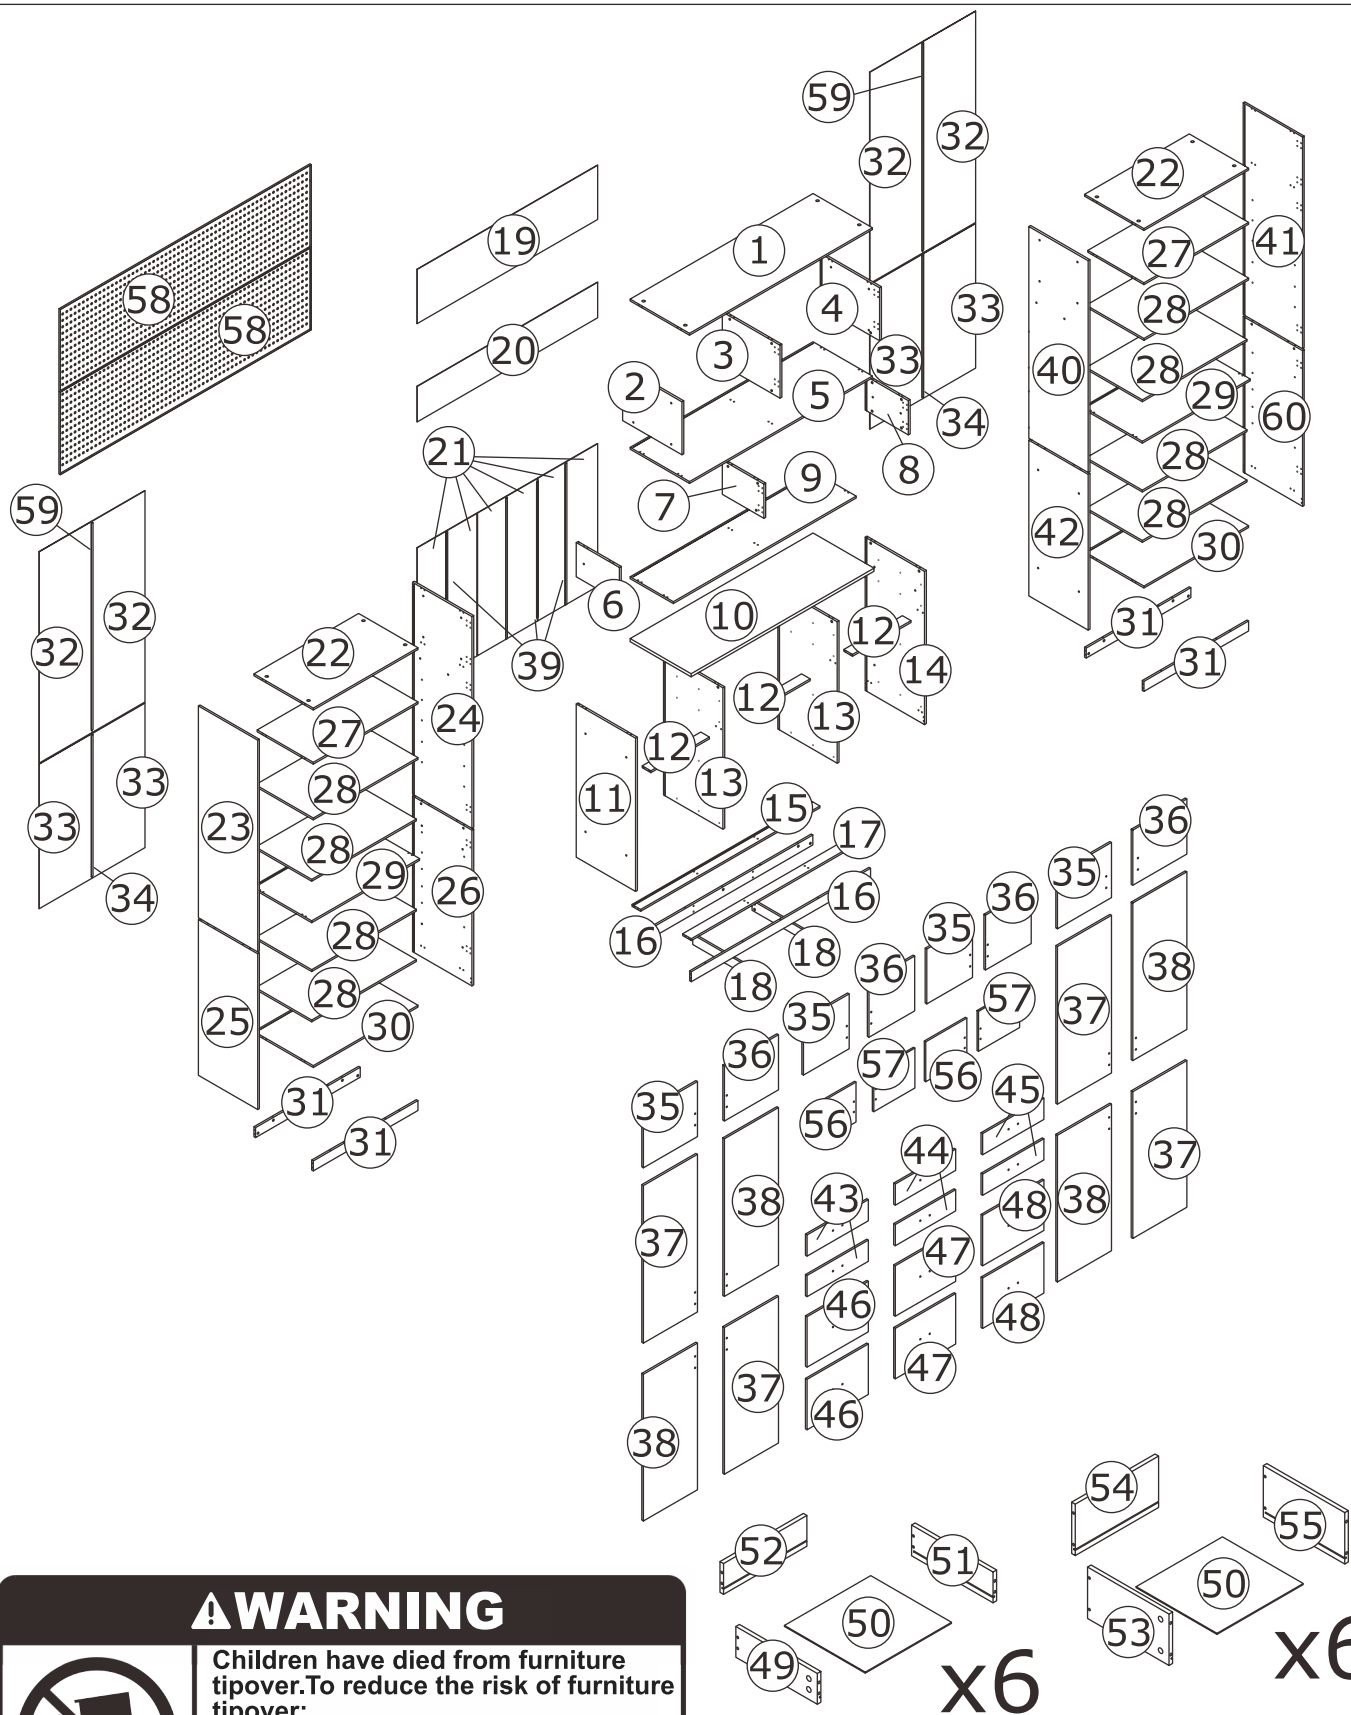

⚠ WARNING




Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

*This is a permanent label.
Do not remove!*

x6


x6

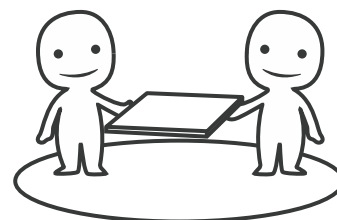

ASSEMBLED BY 2 ADULTS

1

 A x 14



Ø 6 x 35 mm

B x 6



Ø 15 x 10 mm



D x 4



Ø 6 x 30 mm



Screw eccentric rod (A) onto panels 15, 16 and 17. Connect panel 16 to panel 17 and 15 respectively using wooden dowel (D), then tighten by turning cam lock (B) clockwise.

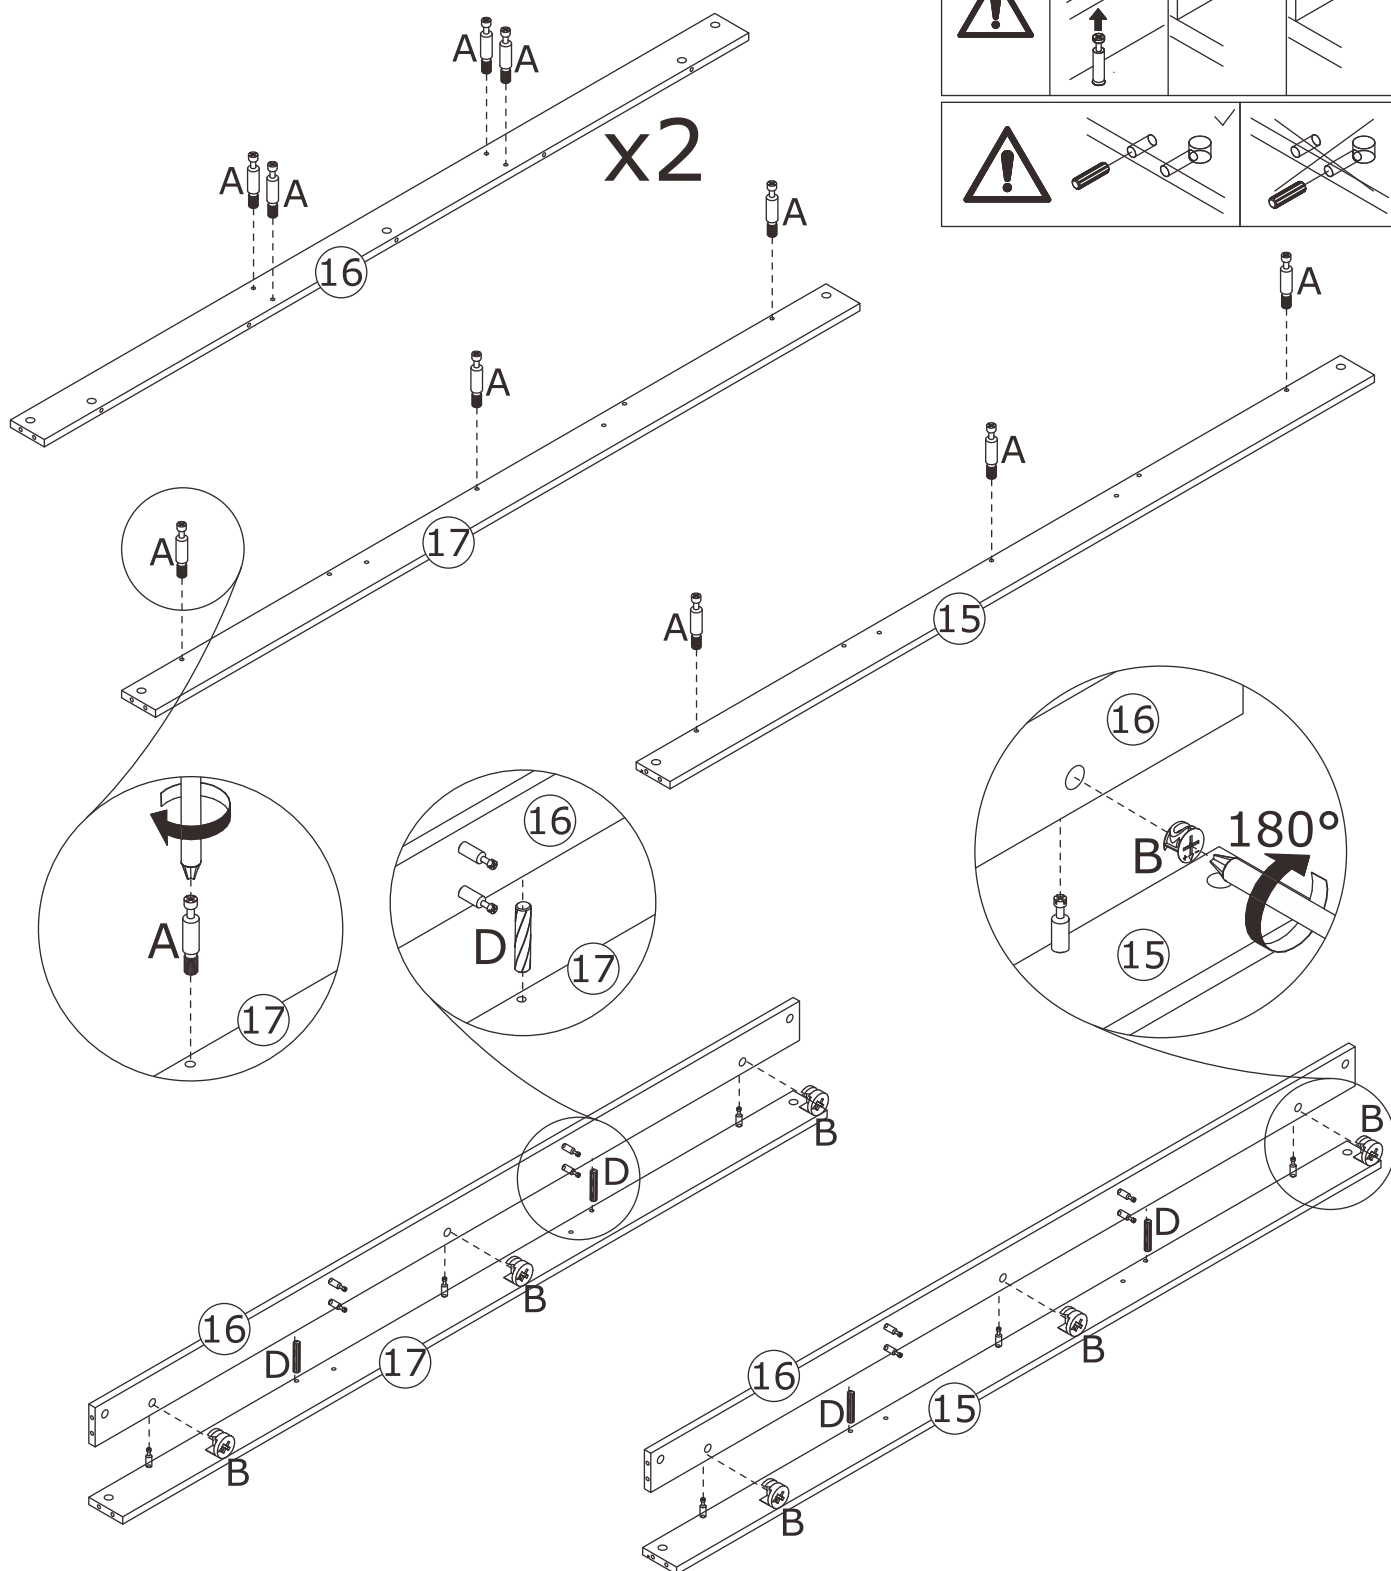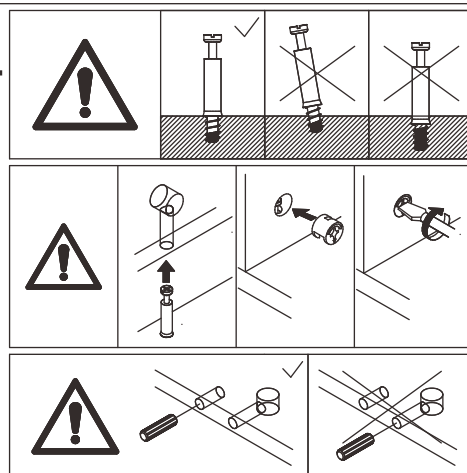

2



B x 8



Ø 15 x 10 mm




Connect two panels 18 to two panels 16, then tighten by turning cam lock (B) clockwise.

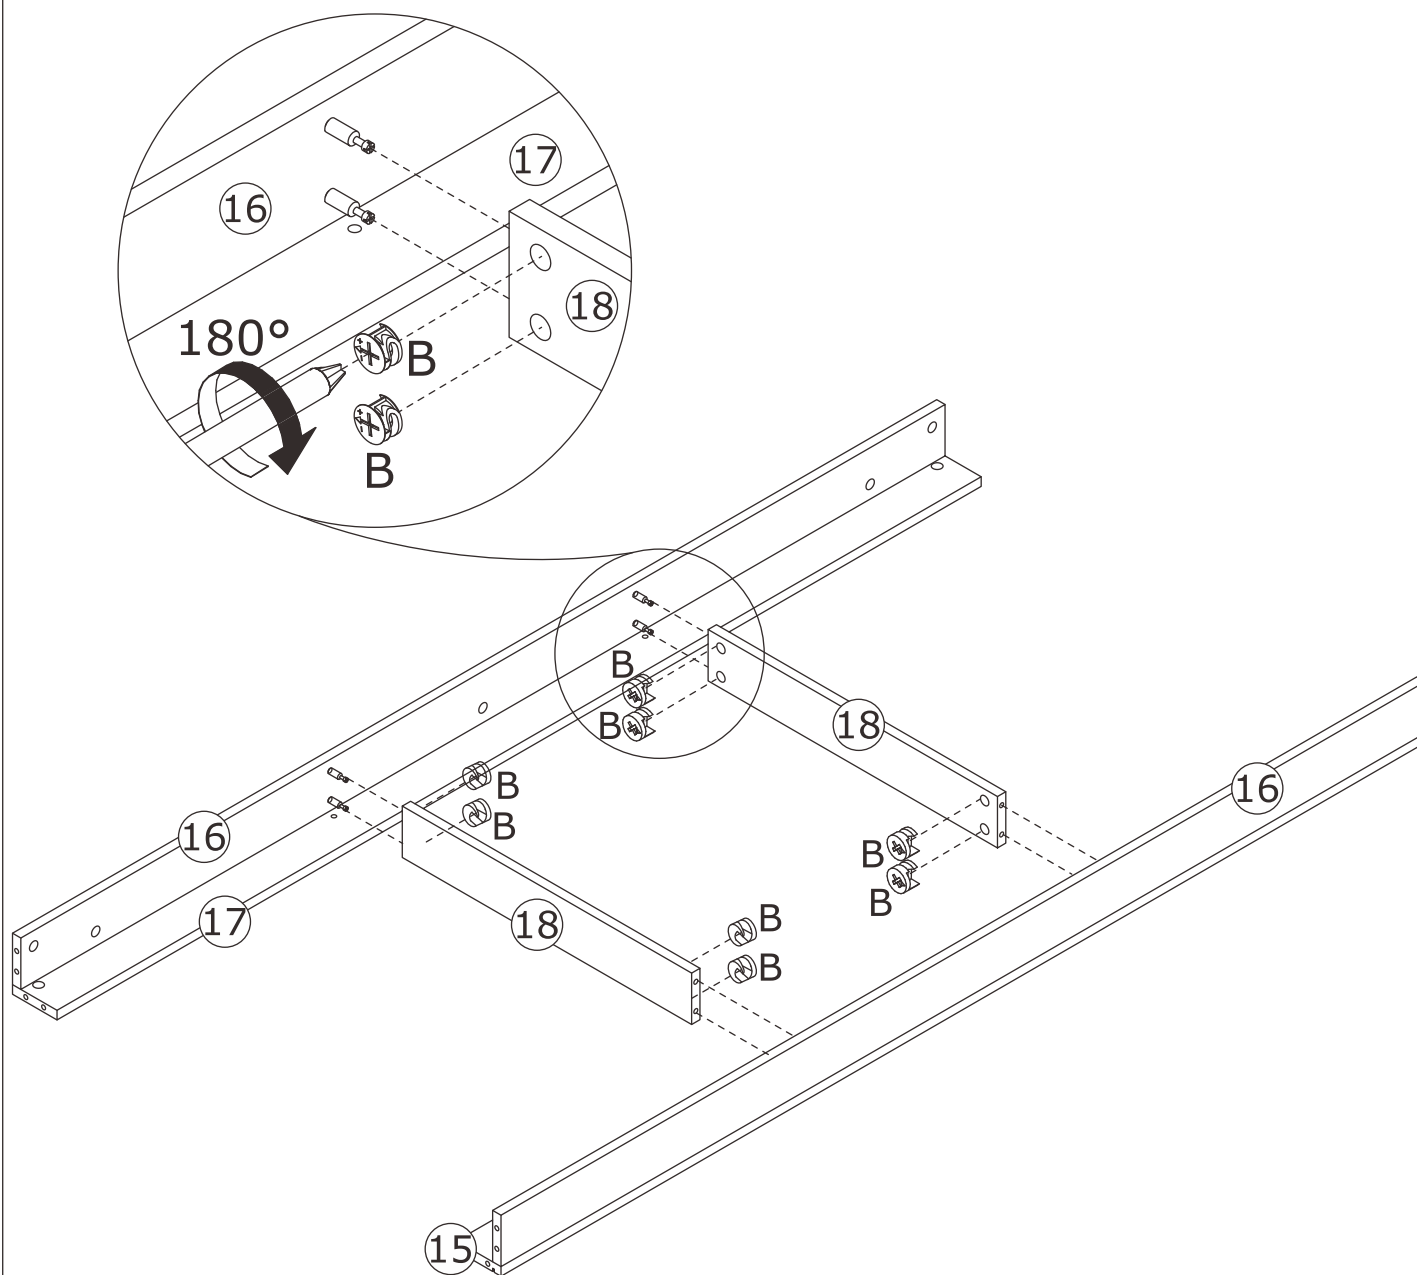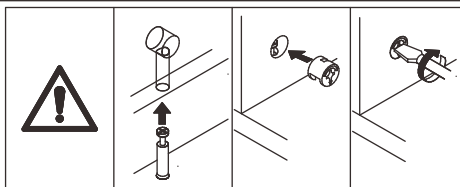

3

 A x 4




Ø6 x 35 mm

C x 48




Ø3 x 12 mm

 CL x 8




350 mm

 CR x 8







350 mm



 


Screw eccentric rod (A) onto panel 13 and secure guide rail (CR) using screw (C).

Flip the panel to other side, screw eccentric rod (A) and secure guide rail (CL).

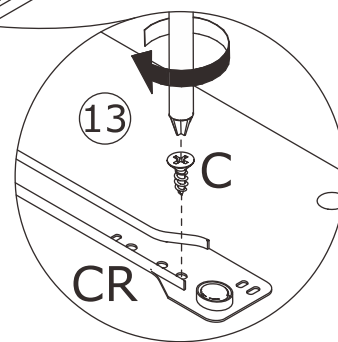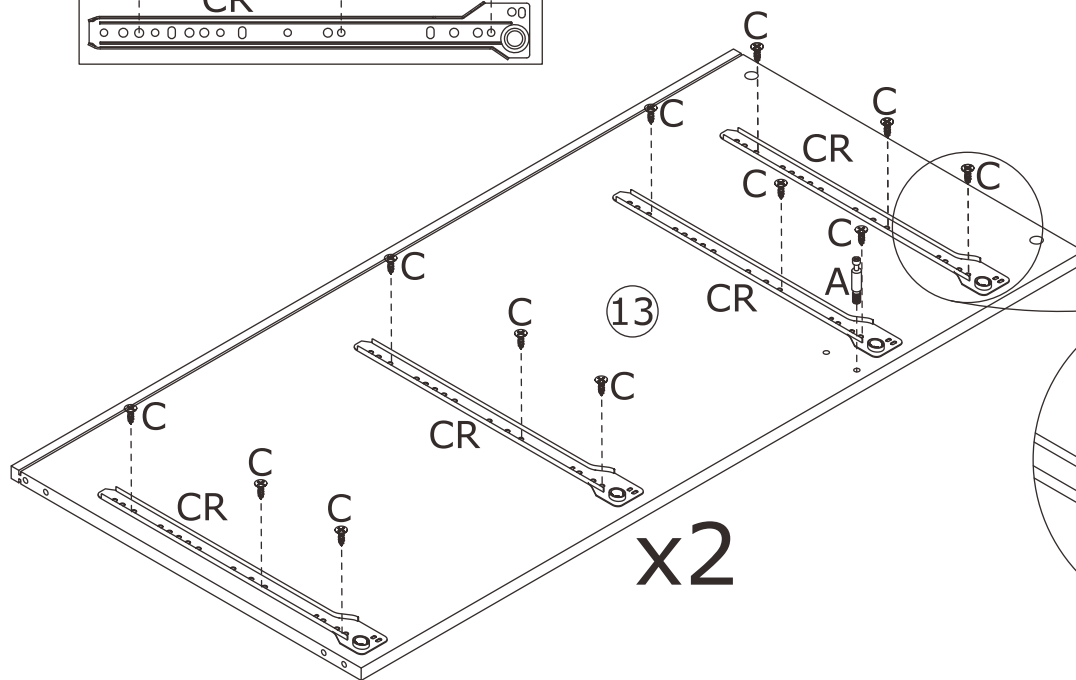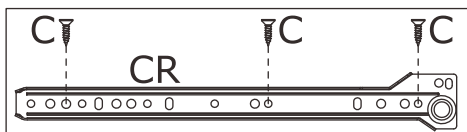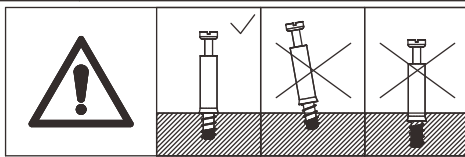


Flip 180°

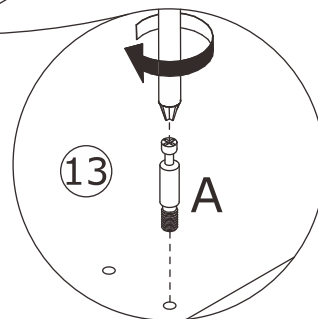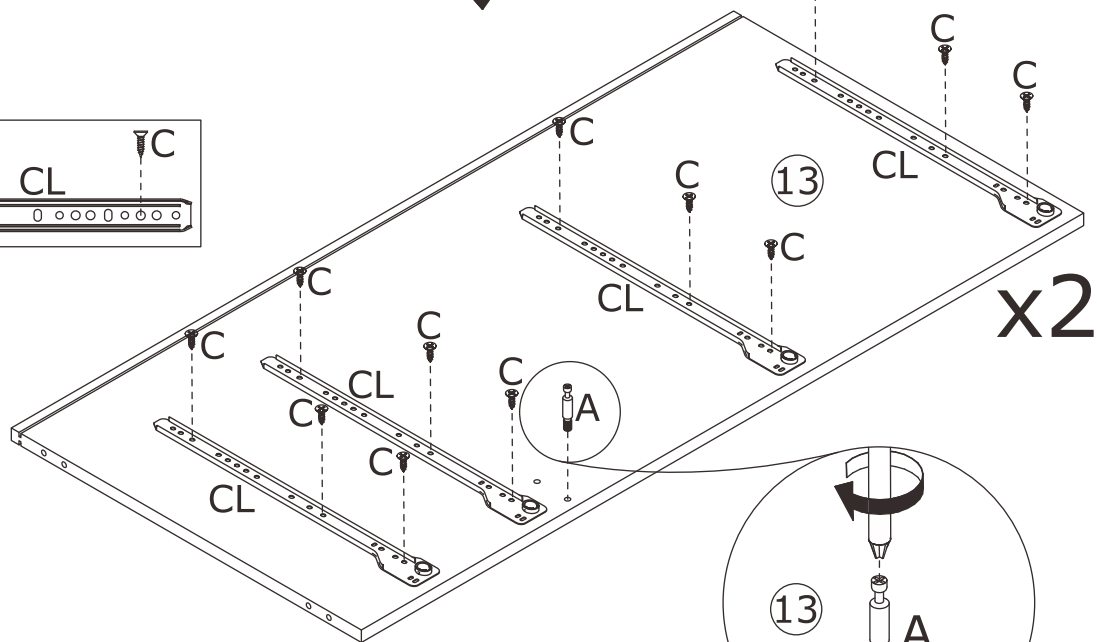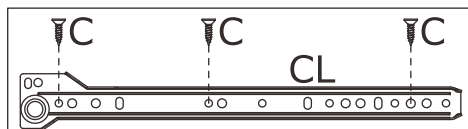

4

 A x 10




Ø6 x 35 mm

C x 24




Ø3 x 12 mm

 CL x 4




350 mm







 
CR x 4



350 mm

 

Screw eccentric rod (A) onto panel 14 and 11.
Secure guide rail (CR) and (CL) using screw (C).

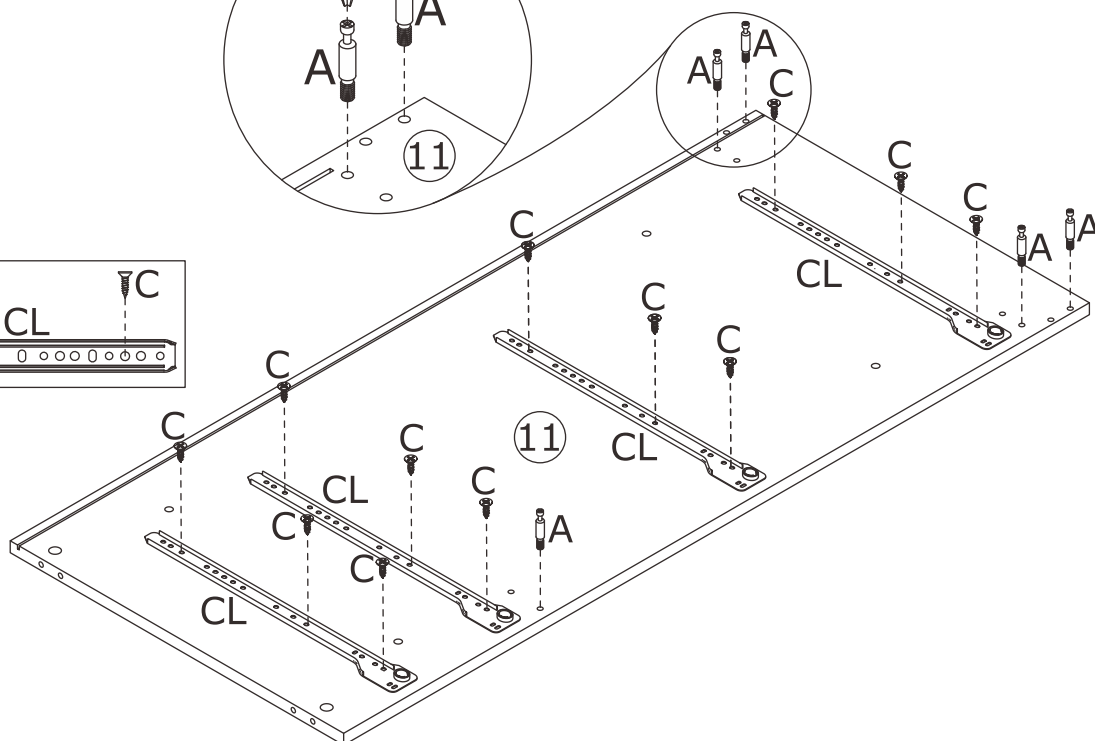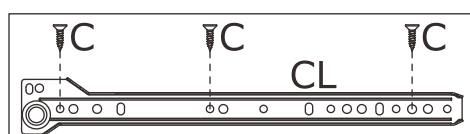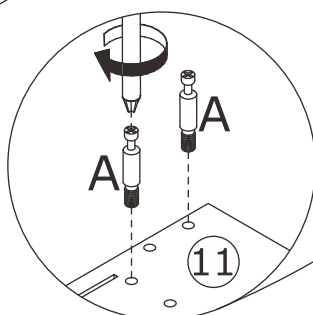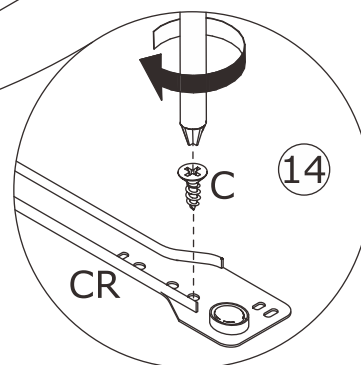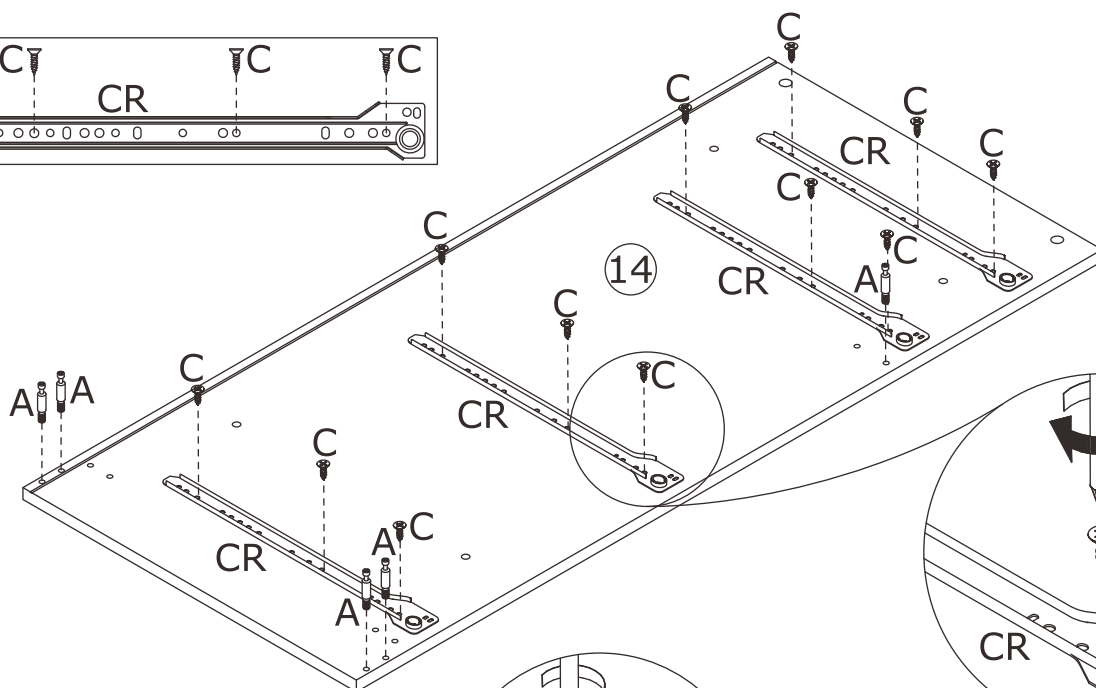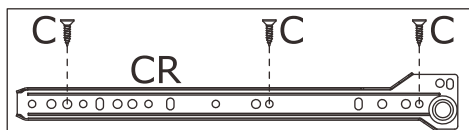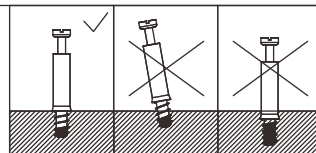


5

B x 4




Ø 15 x 10 mm


 
D x 4



Ø 6 x 30 mm

 


Connect panel 13 to panel 12 using wooden dowel (D), then tighten by turning cam lock (B) clockwise.

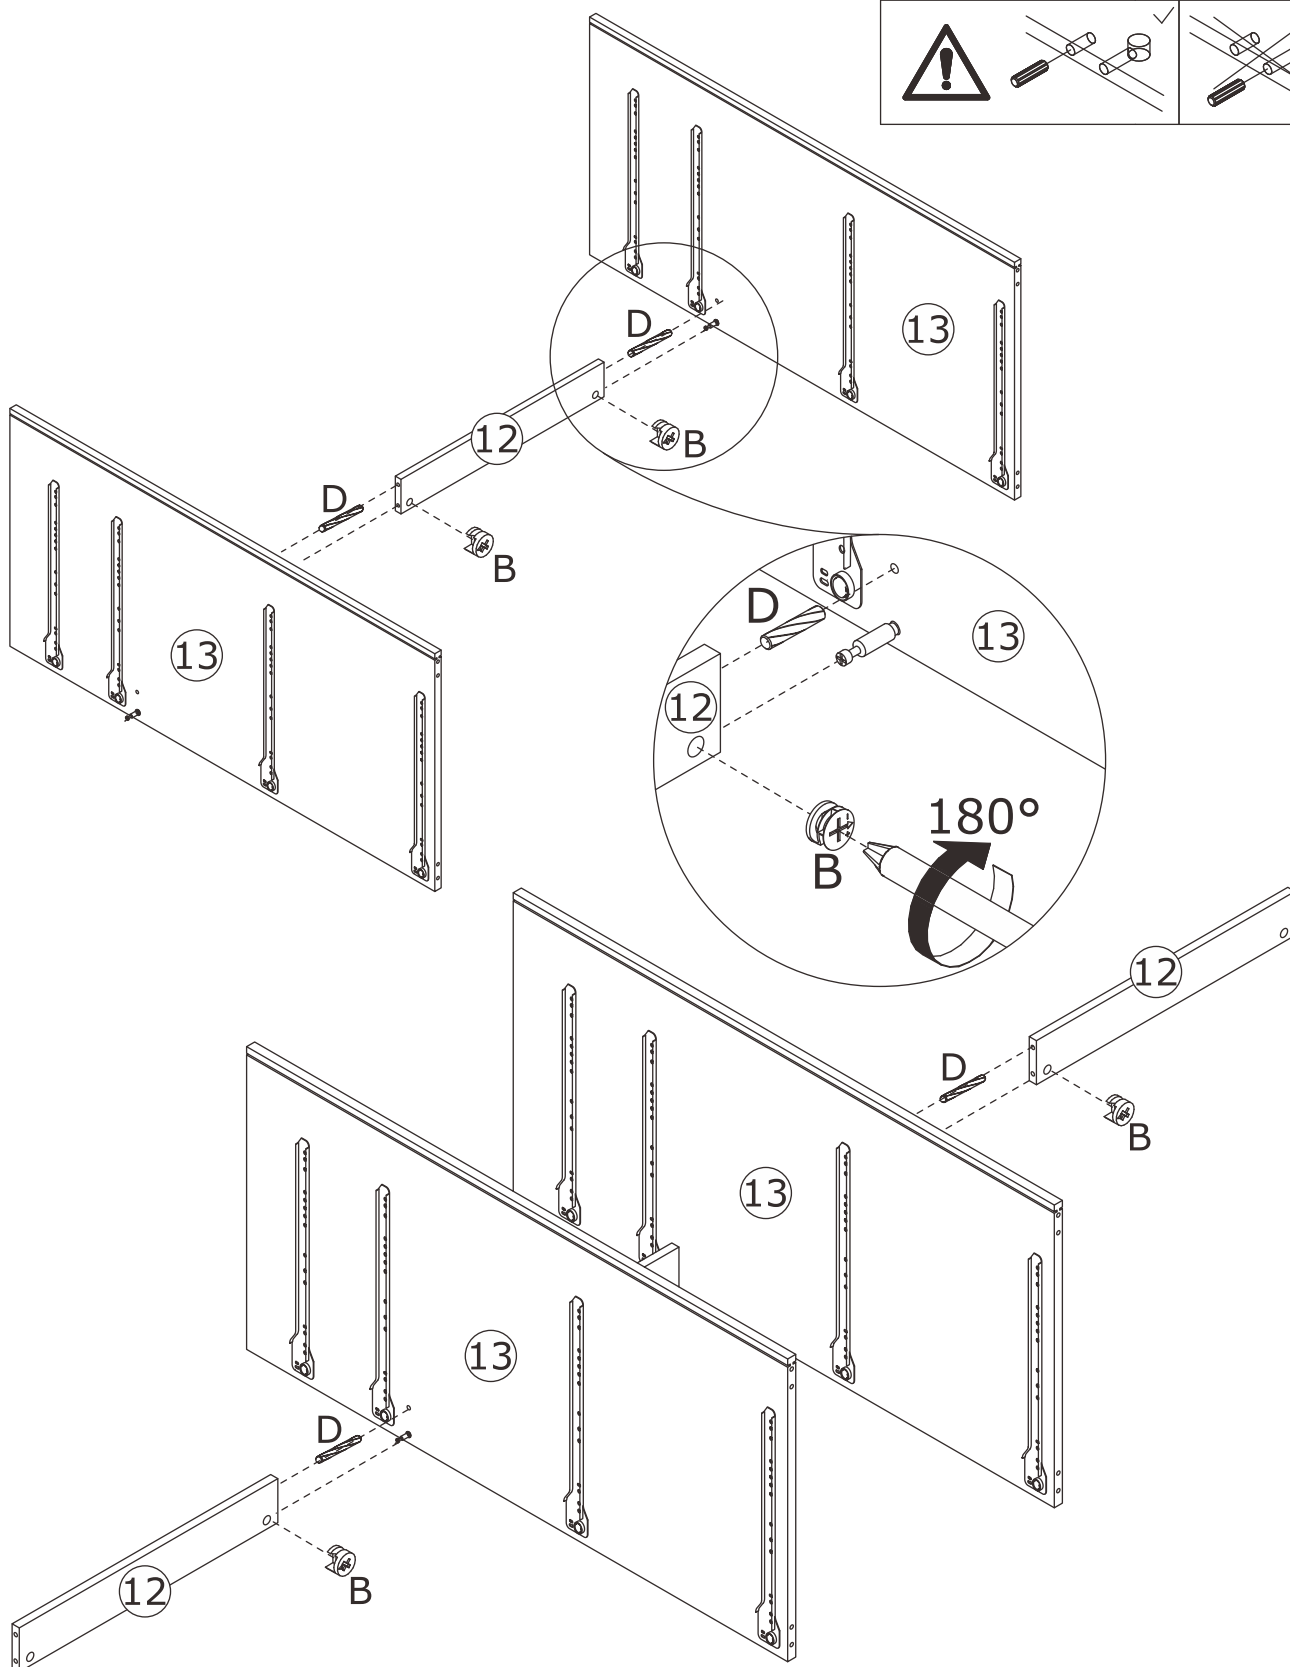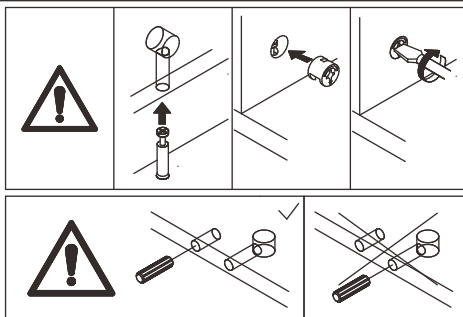


6

 D x 4





Ø6 x 30 mm

 
T x 4



Ø4 x 35 mm

  

Connect panels 15 and 17 to panel 13 using wooden dowel (D), then secure them with screw (T).

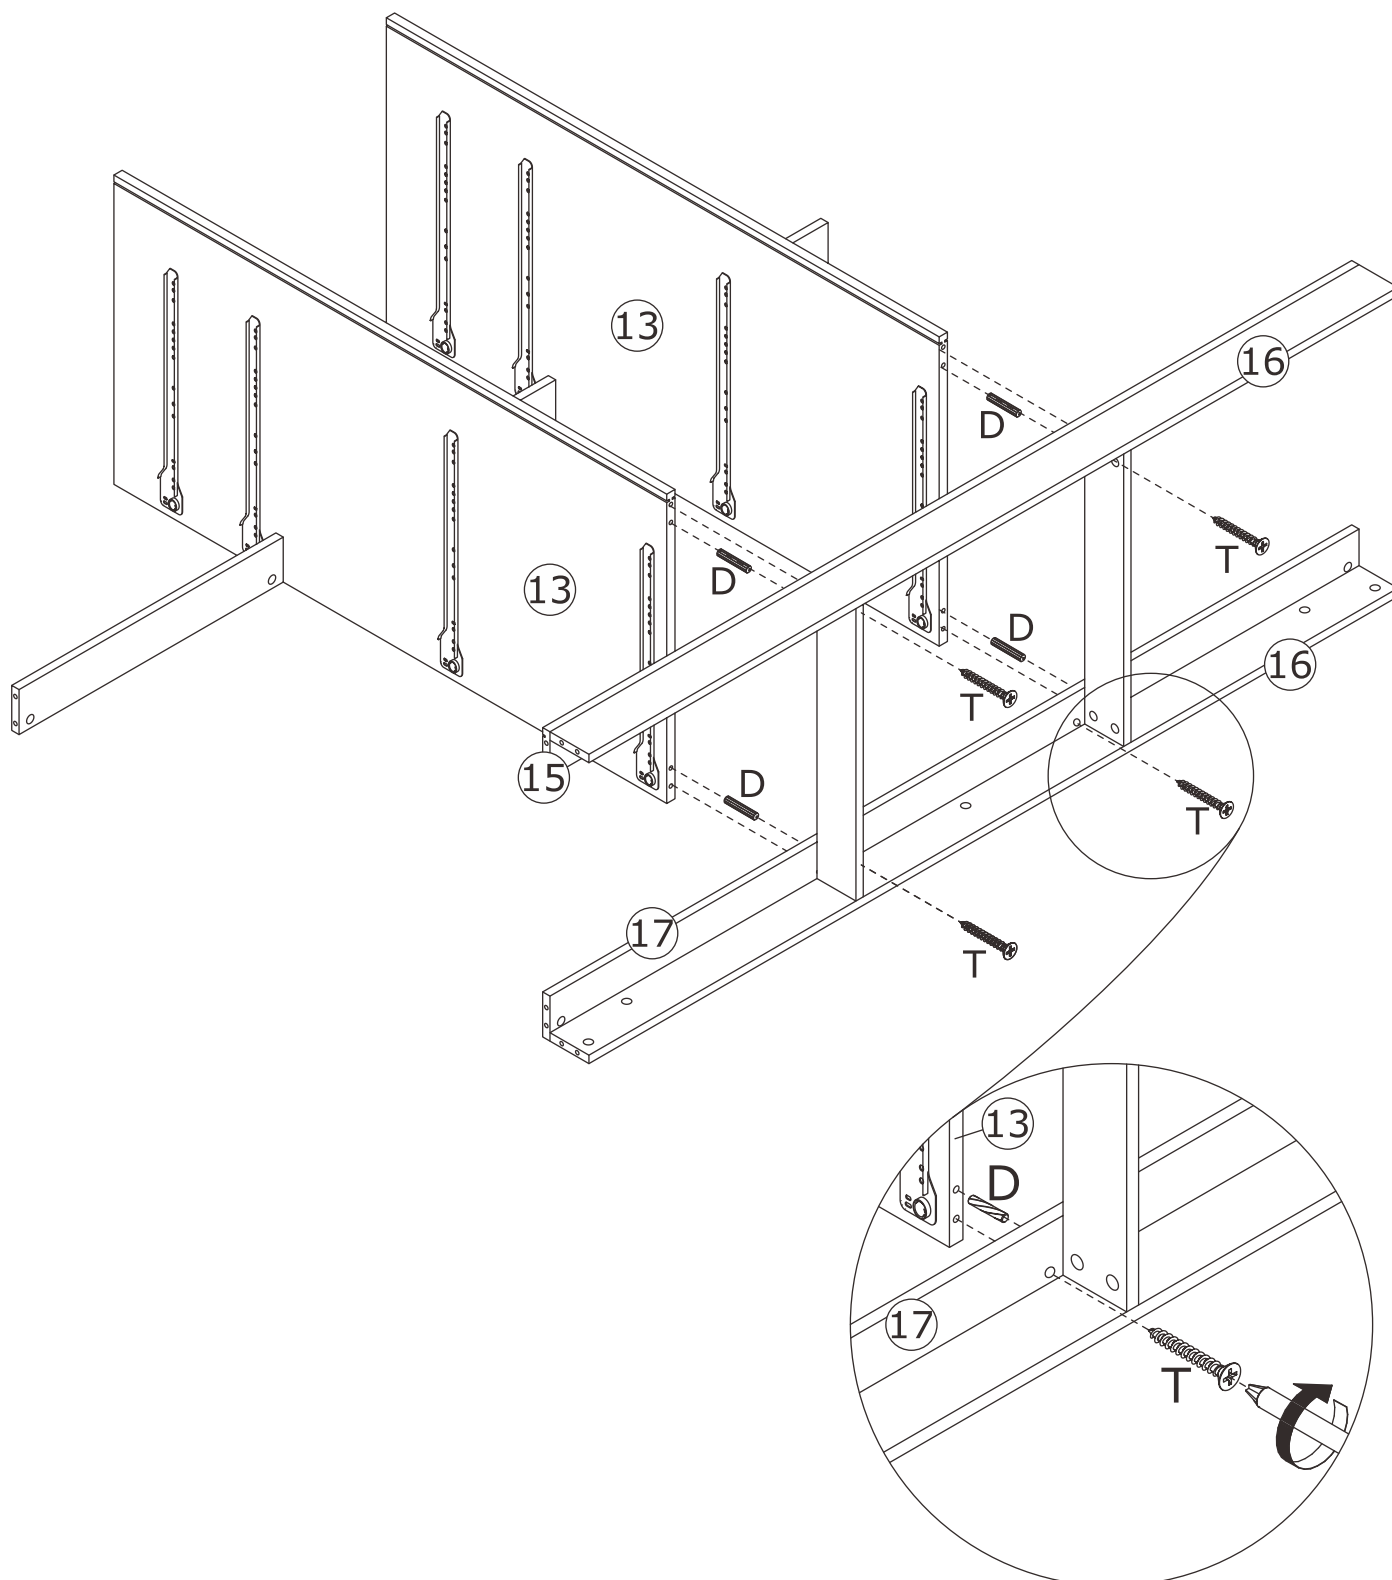


7

B x 5



Ø 15 x 10 mm


 
D x 5



Ø 6 x 30 mm



Connect panel 14 to panels 12, 15, 17, and 16 using wooden dowel (D), then tighten by turning cam lock (B) clockwise.

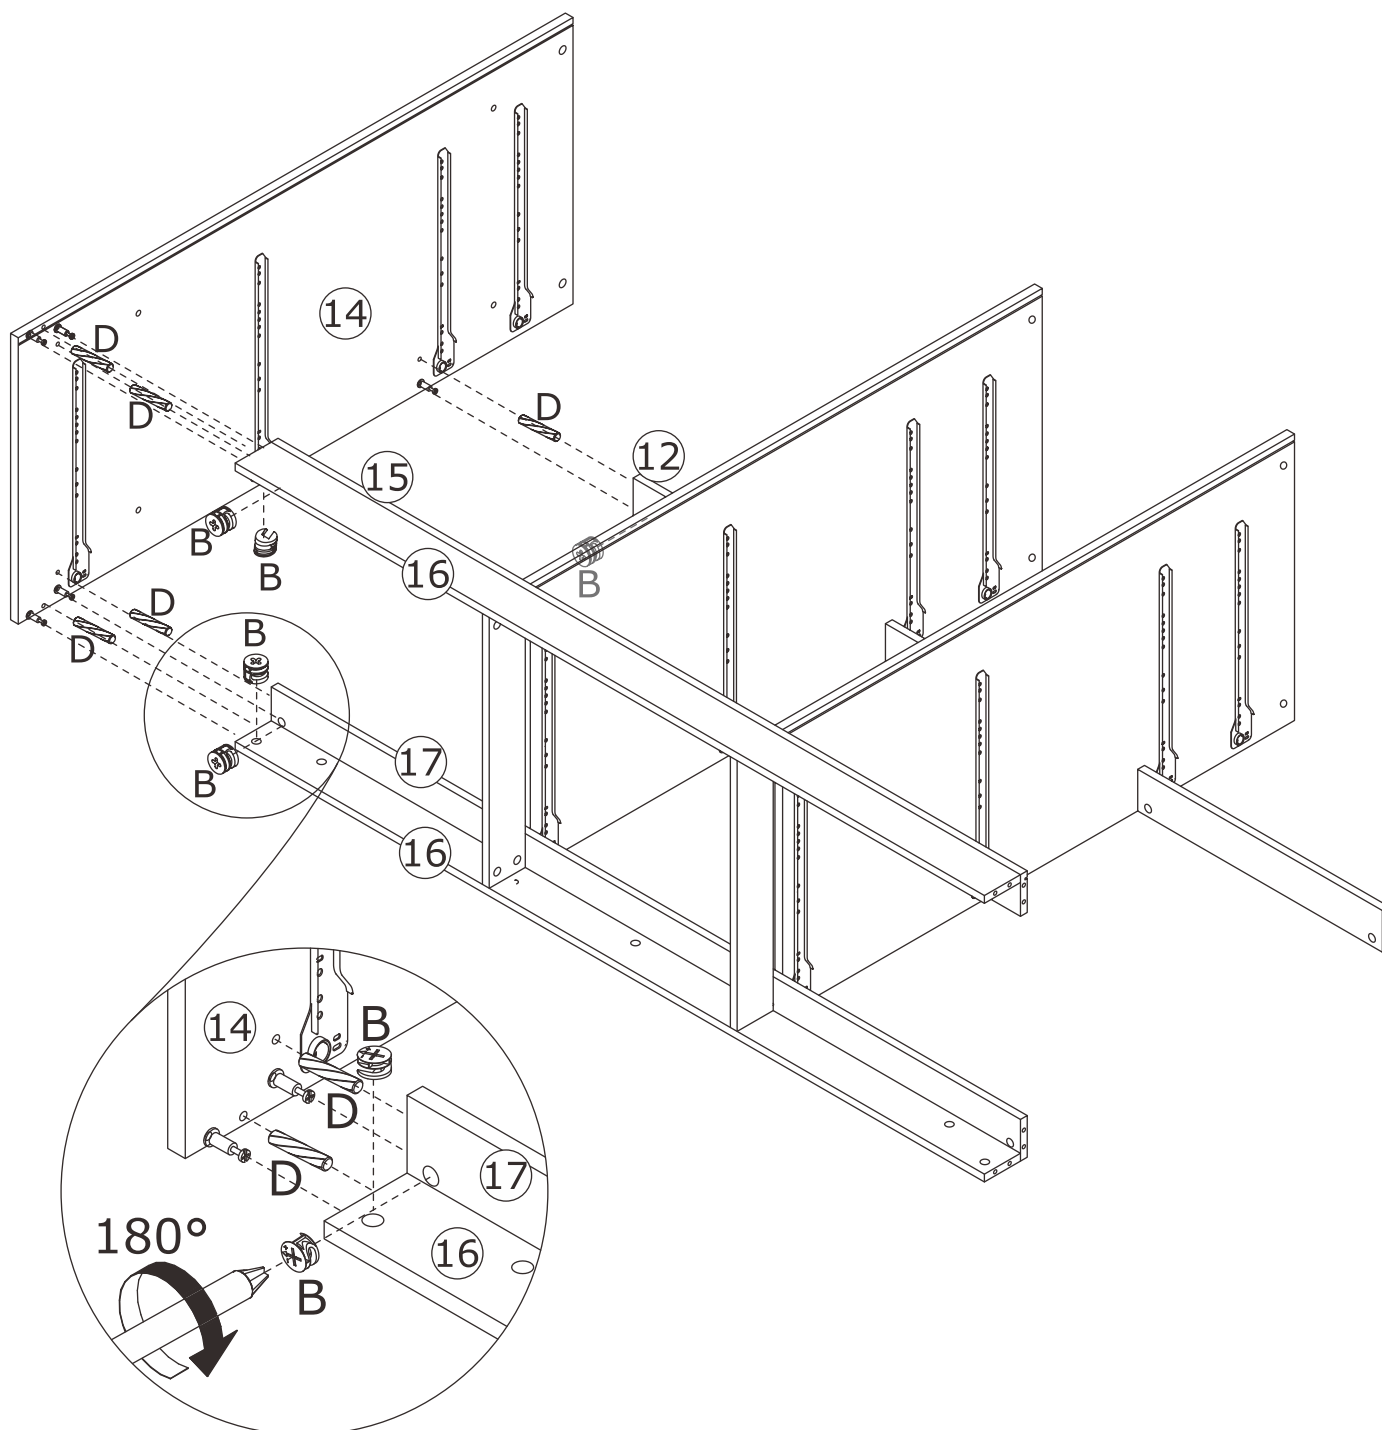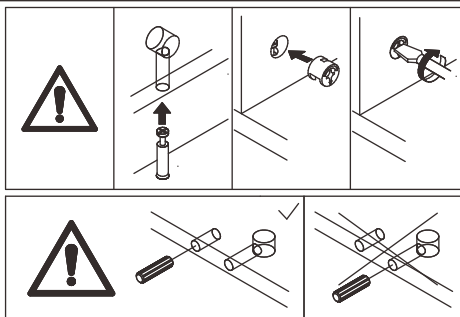


8

B x 5



Ø 15 x 10 mm


 
D x 5




Ø 6 x 30 mm



Connect panel 11 to panels 12, 15, 17, and 16 using wooden dowel (D), then tighten by turning cam lock (B) clockwise.

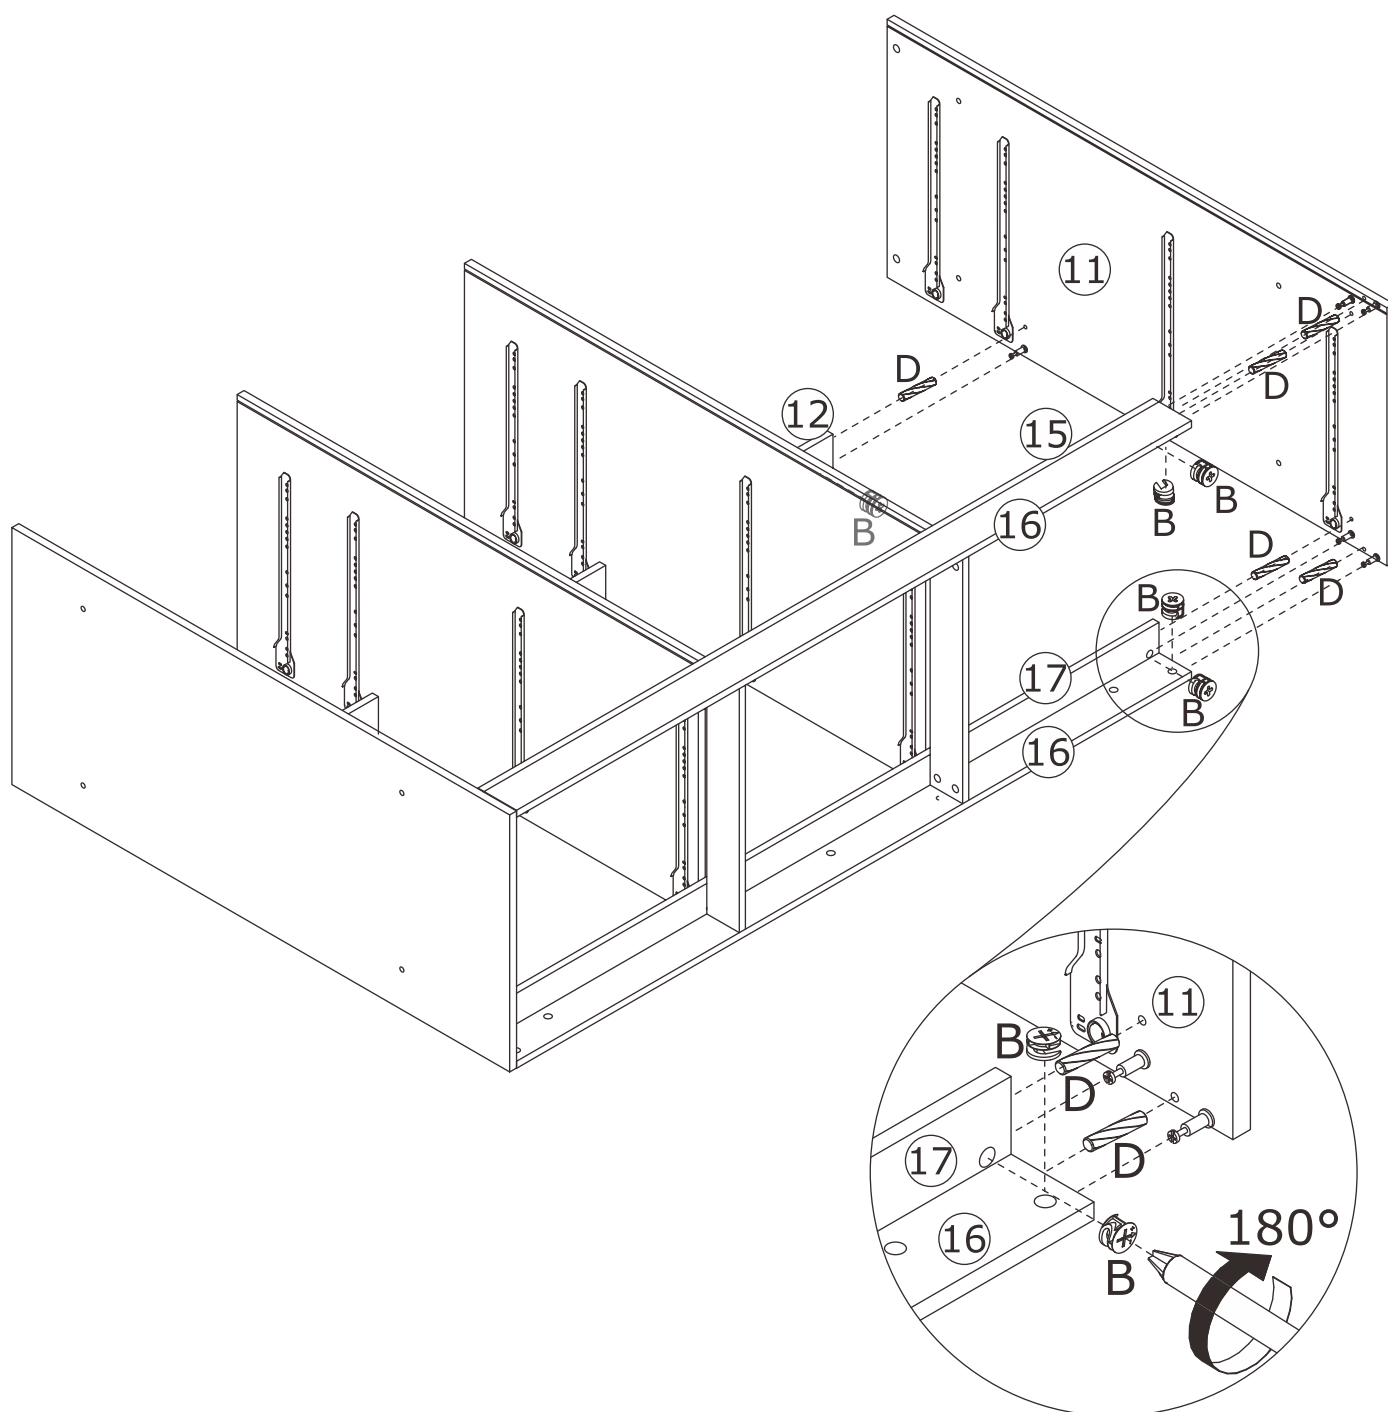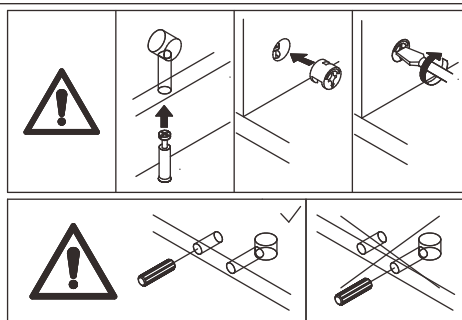


9

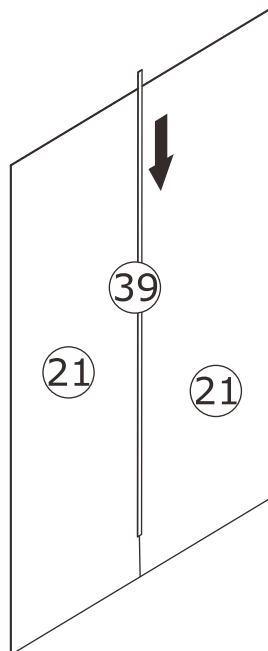


x3

Connect two back panels 21 to strip 39.
Insert panel 21 along the available grooves.





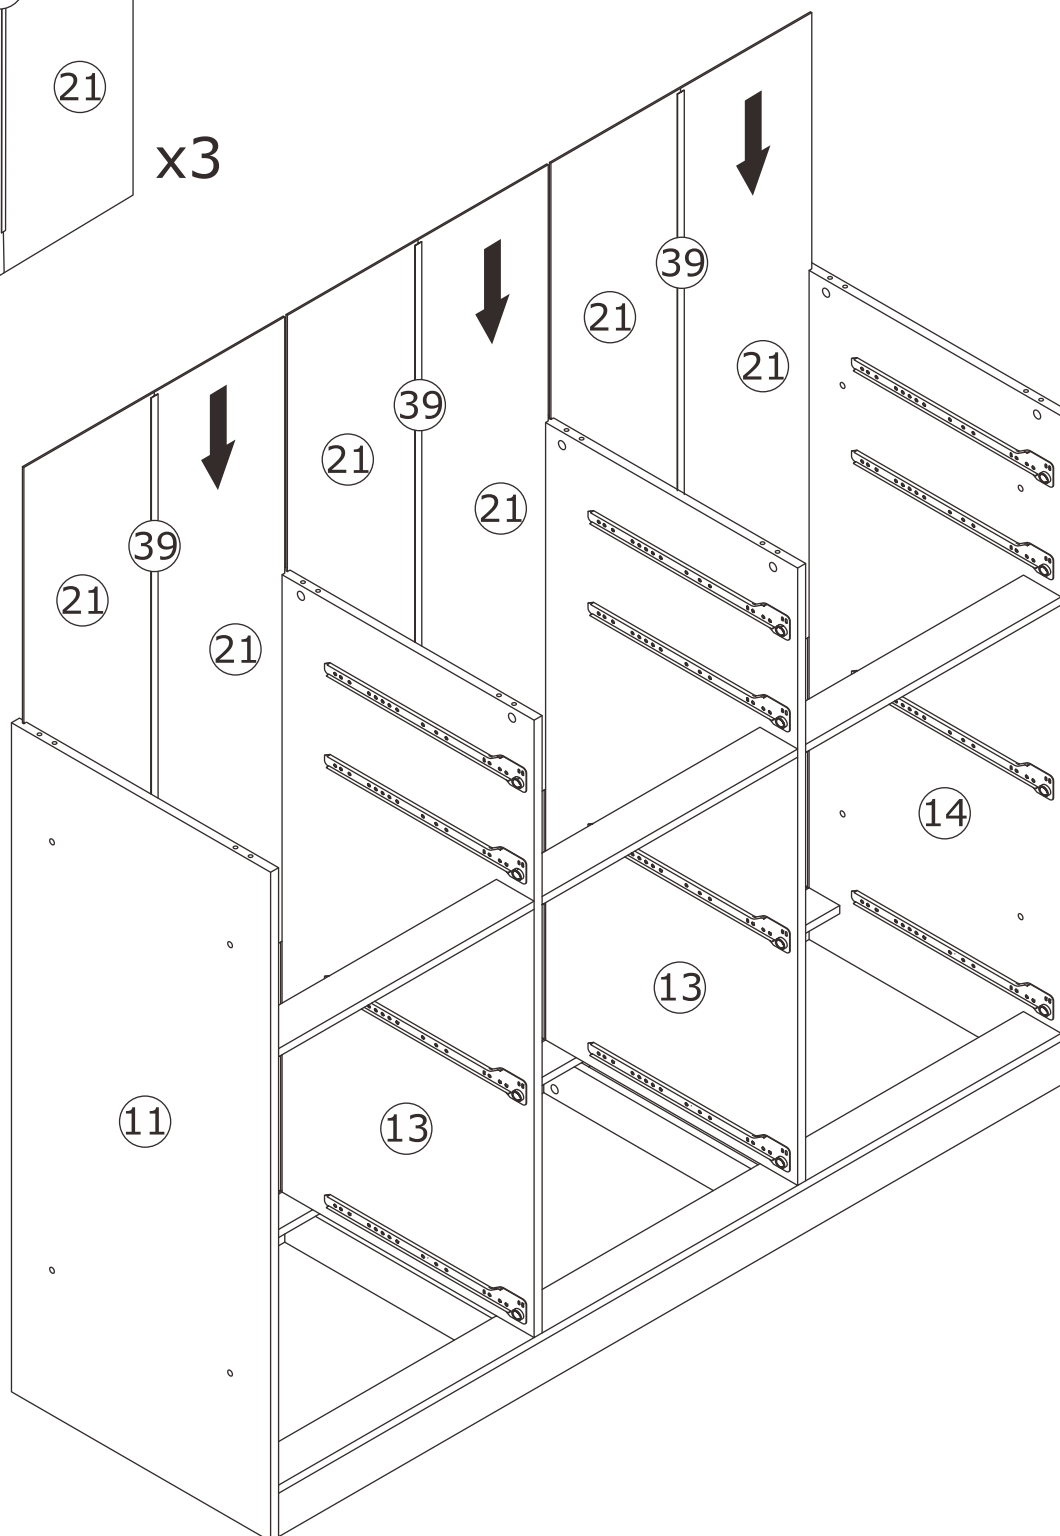


10

 
A x 8



Ø6 x 35 mm

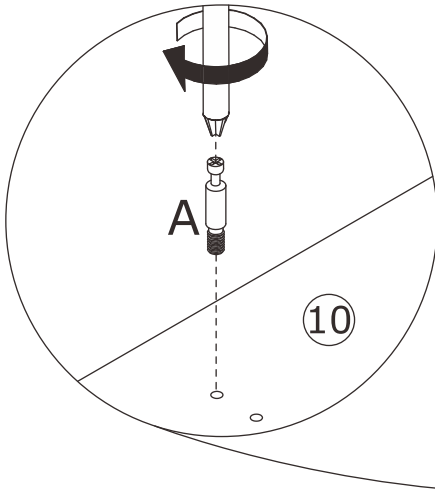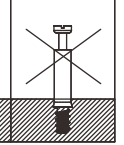   

Screw eccentric rod (A) onto panel 10.

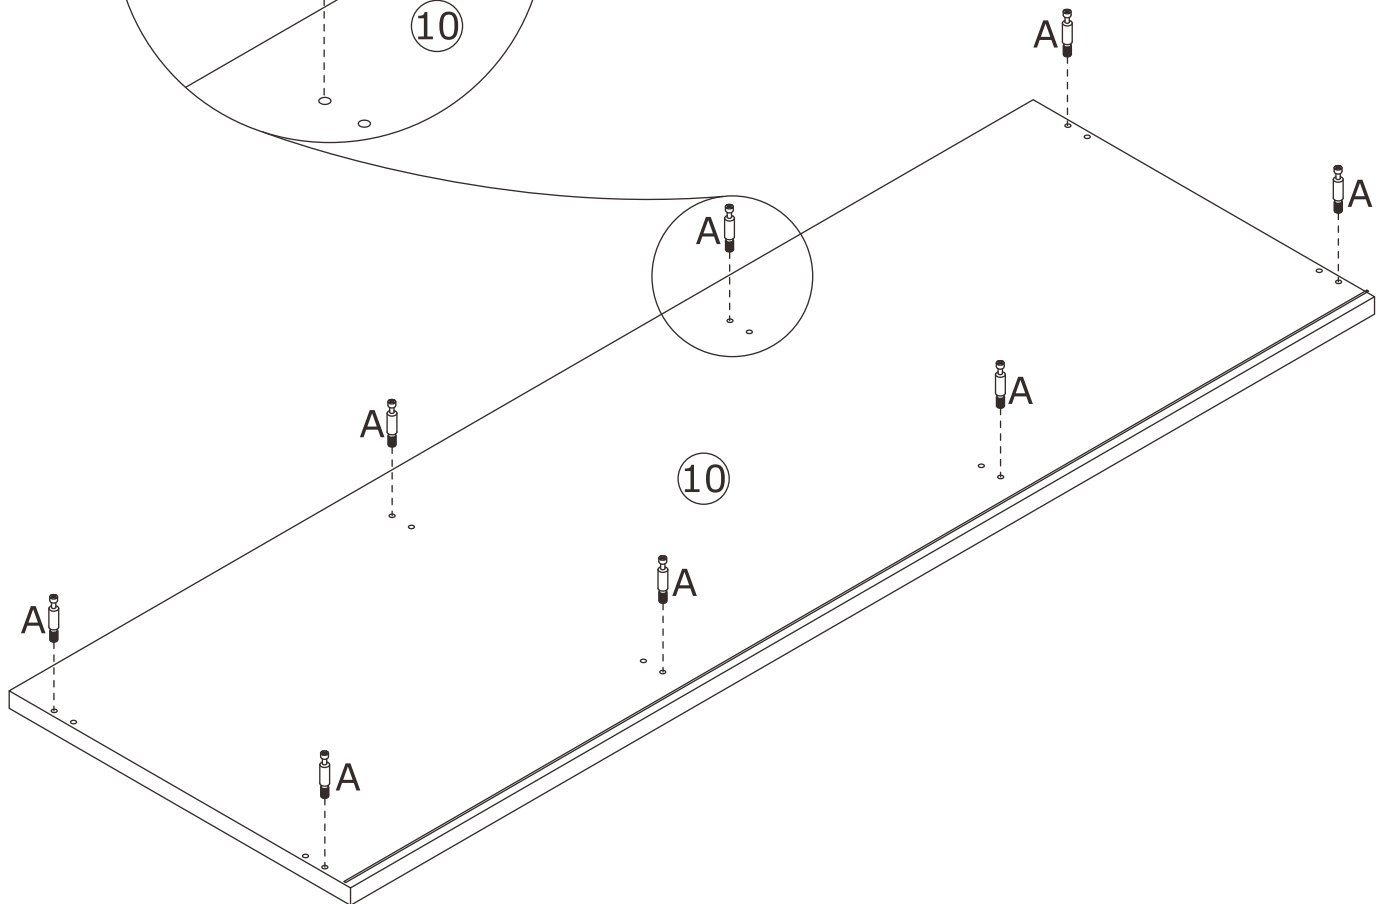


11

B x 8



Ø 15 x 10 mm



 
D x 8



Ø 6 x 30 mm




Connect panel 10 to panels 11, 14, and 13 using wooden dowel (D), then tighten by turning cam lock (B) clockwise.

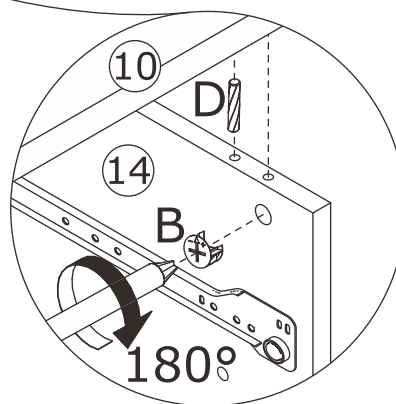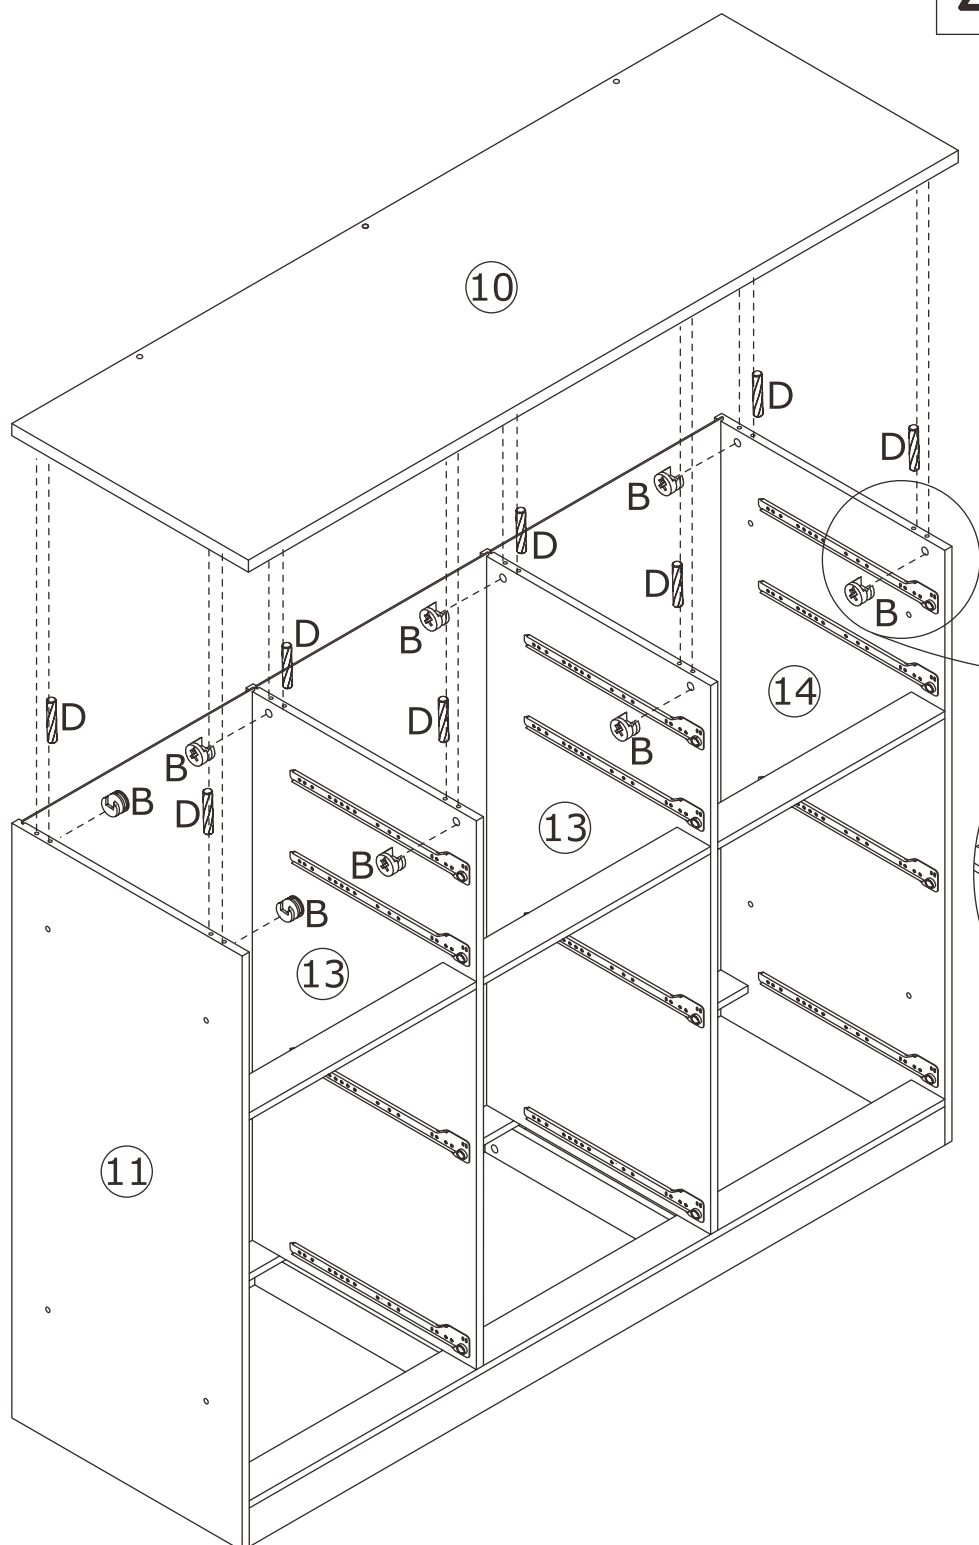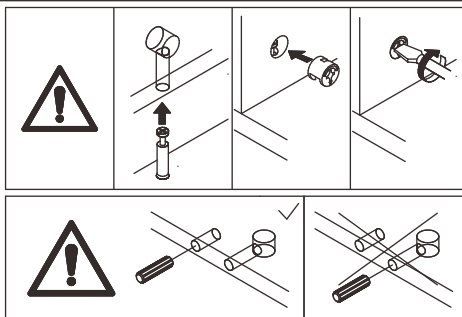

12

 A x 6




Ø6 x 35 mm

B x 6









Ø15 x 10 mm

 
D x 6



Ø6 x 30 mm

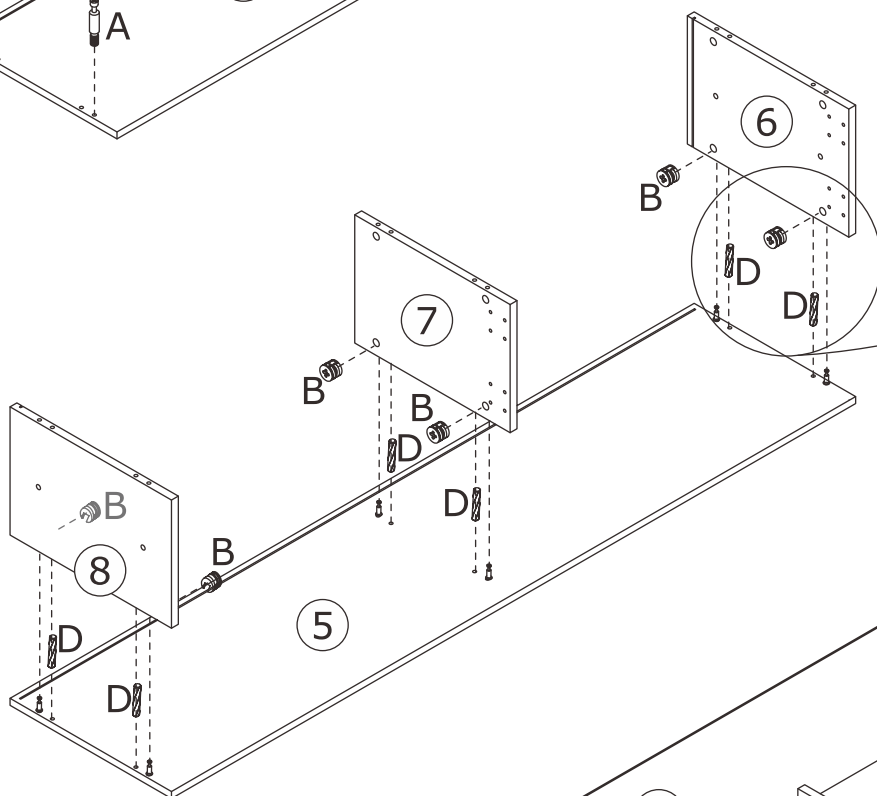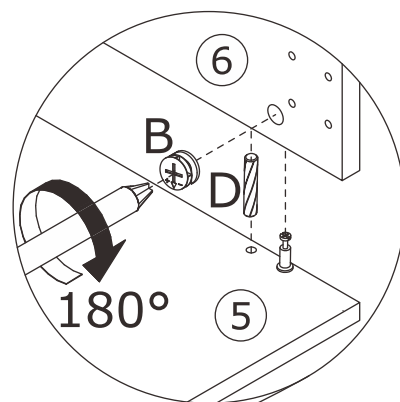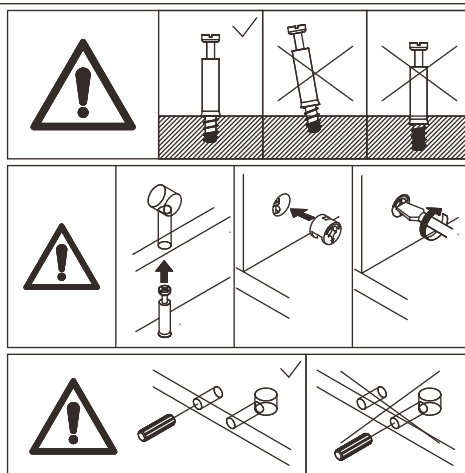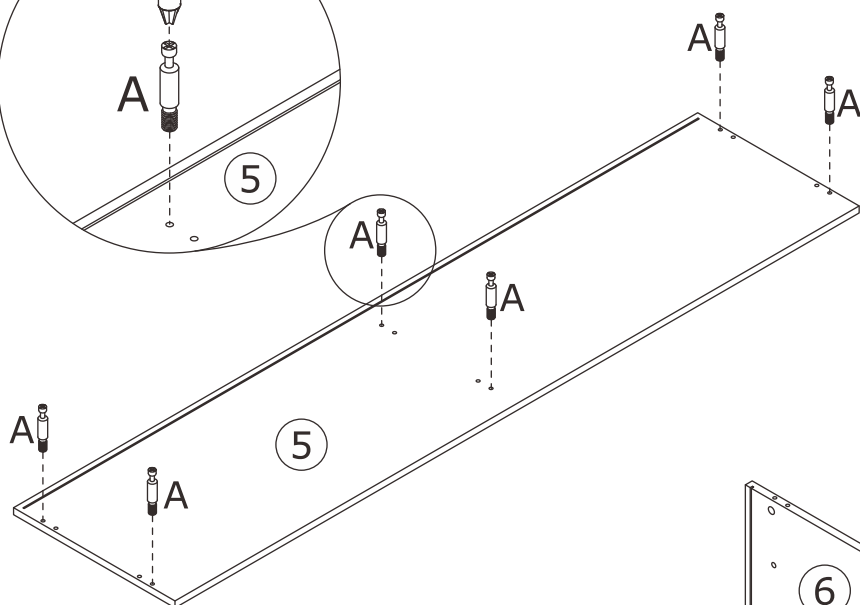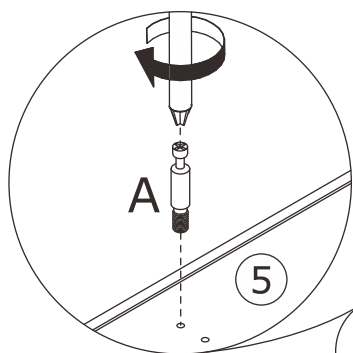 


Screw eccentric rod (A) onto panel 5.
Connect panel 5 to panels 6, 7, and 8 using wooden dowel (D), then tighten by turning cam lock (B) clockwise.

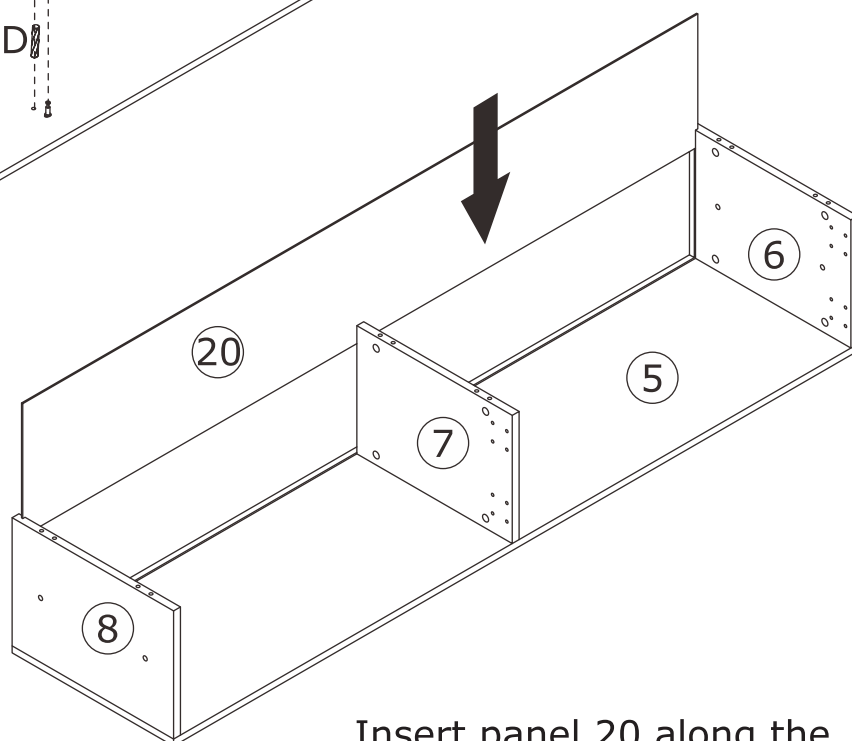



Insert panel 20 along the grooves.

13



 
A x 6



Ø6 x 35 mm

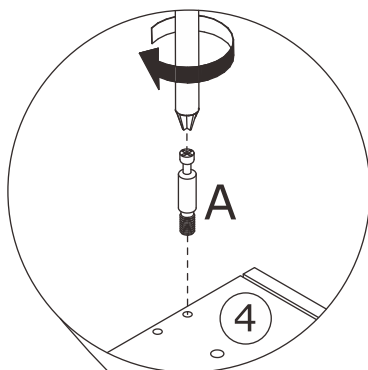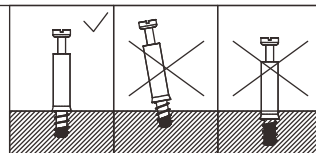

Screw eccentric rod (A) onto panels 2, 4, and 1.

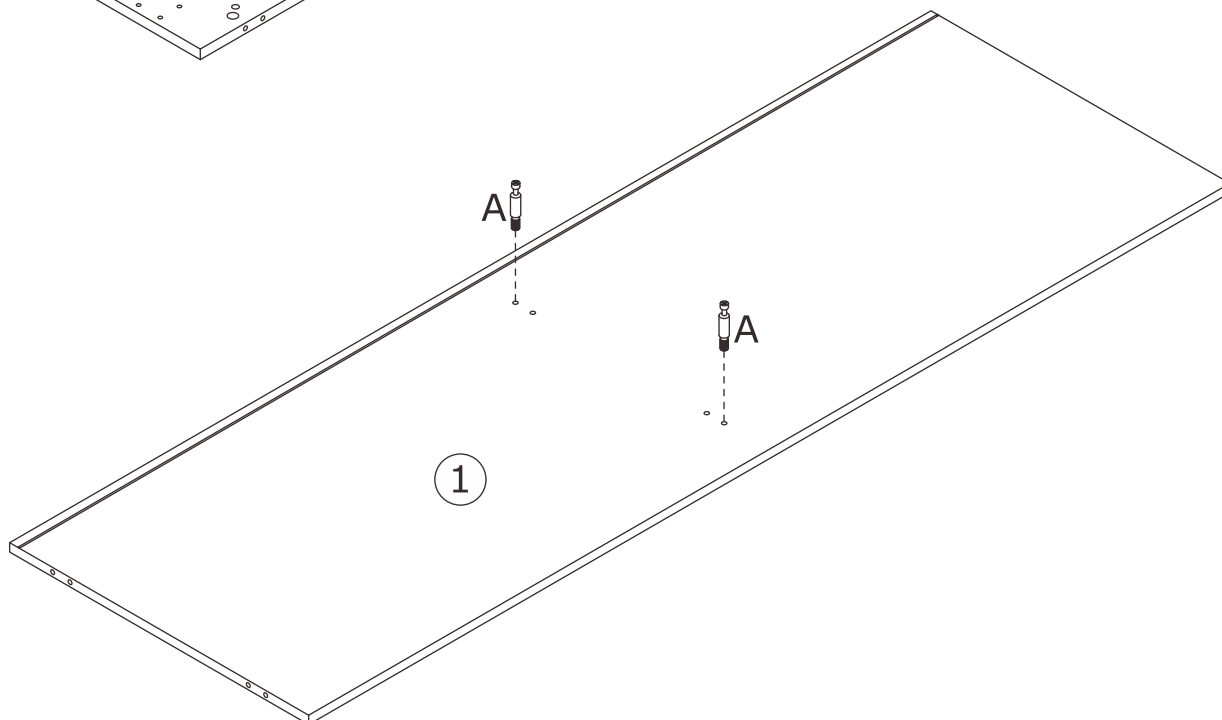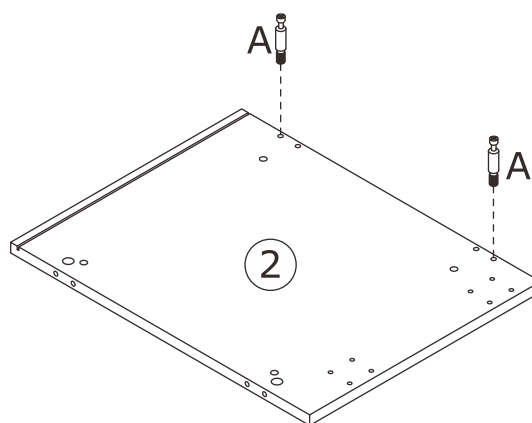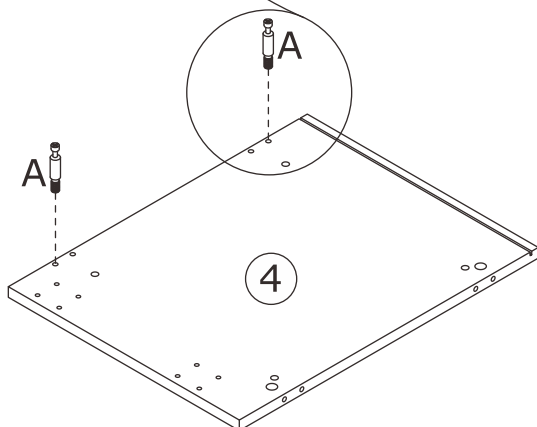


14

B x 6



Ø 15 x 10 mm


 
D x 6



Ø 6 x 30 mm




Connect panel 1 to panels 2, 3, and 4 using wooden dowel (D), then tighten by turning cam lock (B) clockwise.

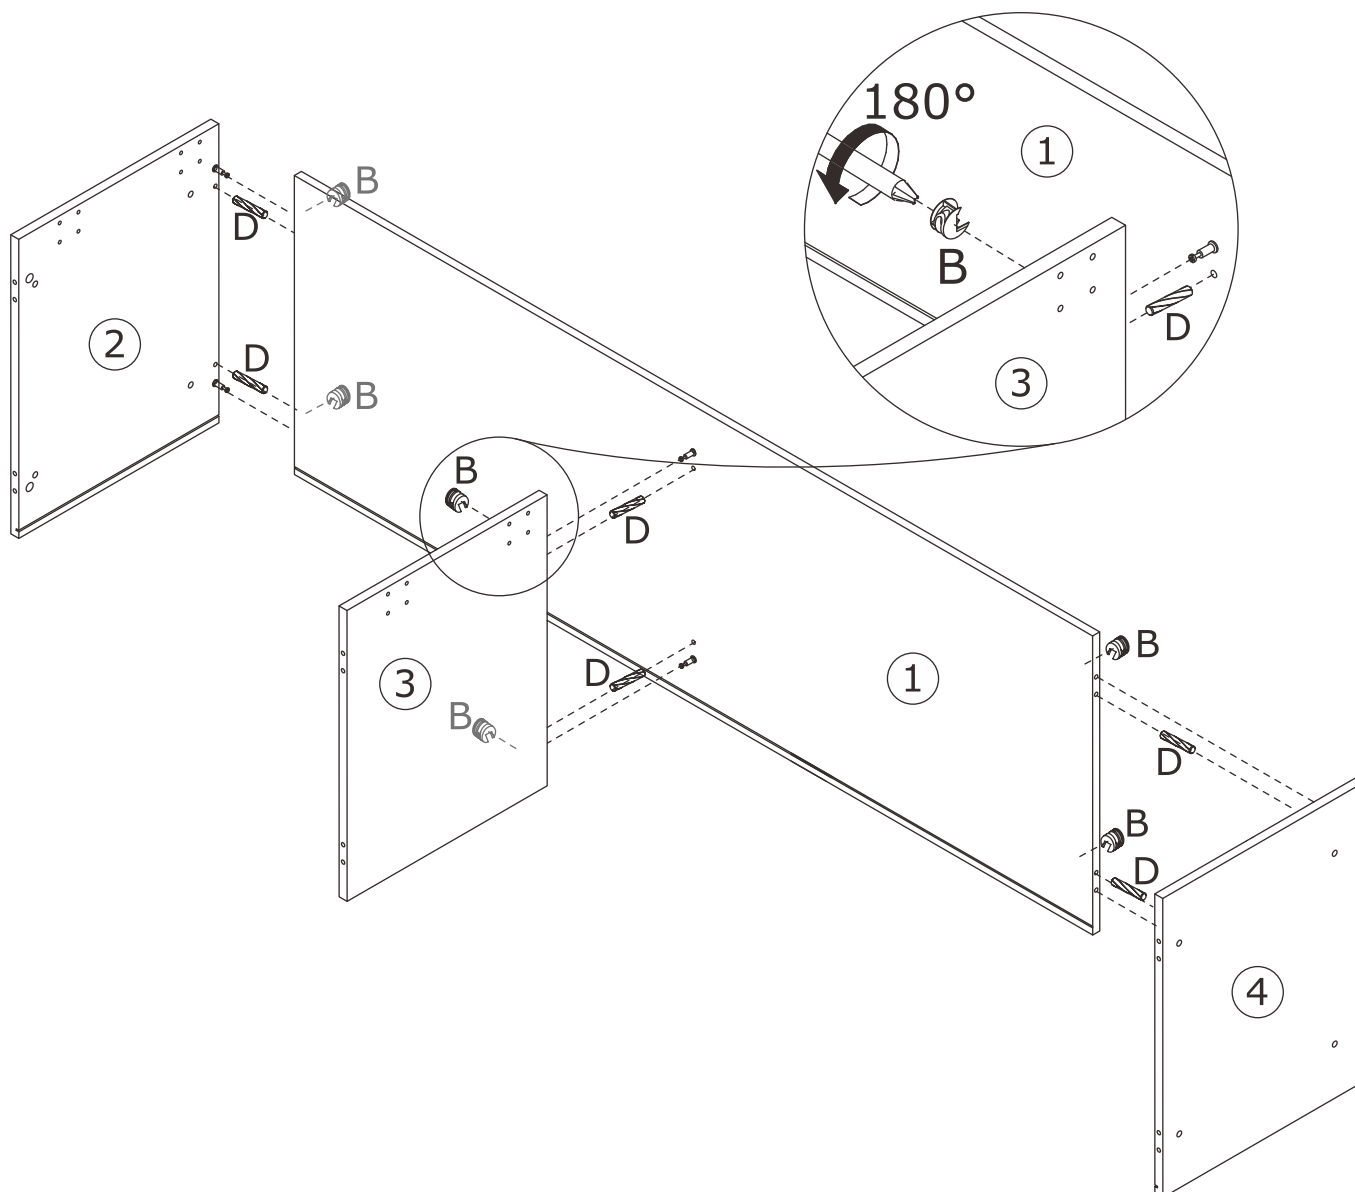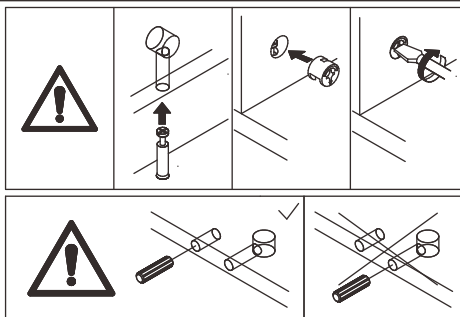


15

Insert back panel 19 along the grooves.

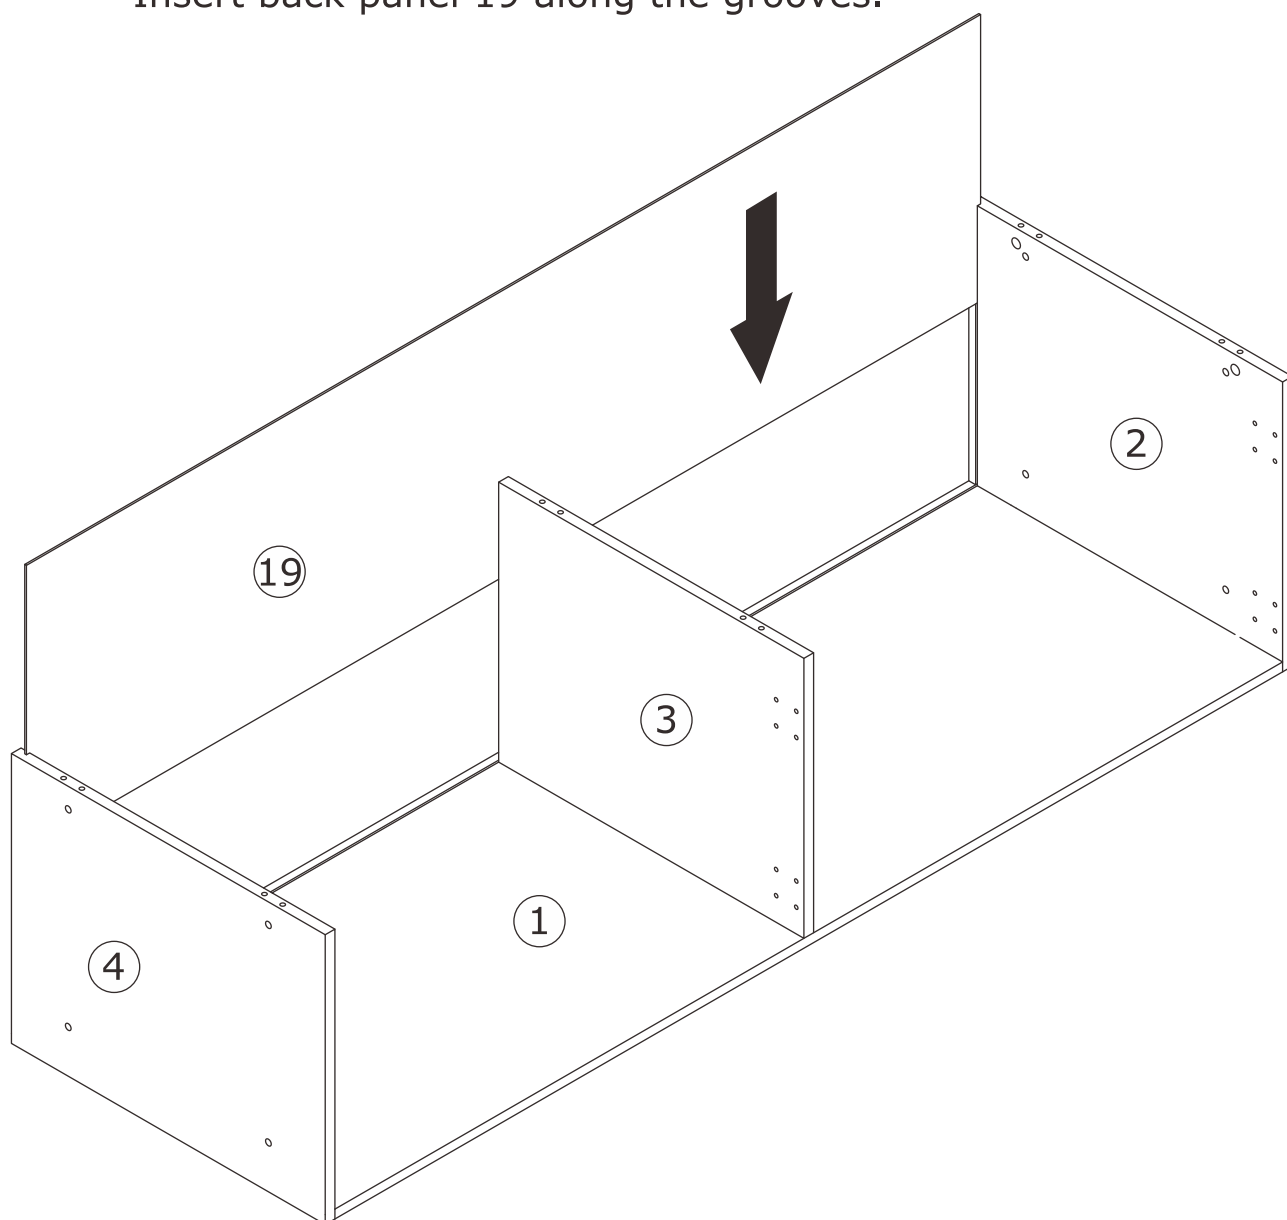

16

 A x 6




Ø 6 x 35 mm

B x 6







Ø 15 x 10 mm

 
D x 6




Ø 6 x 30 mm

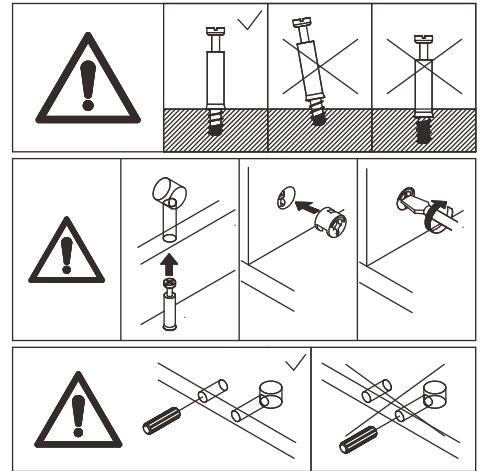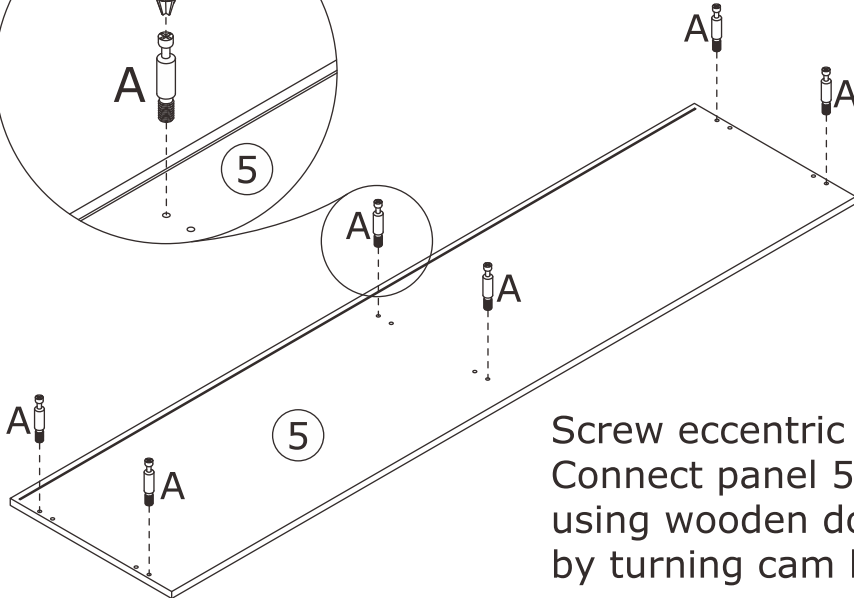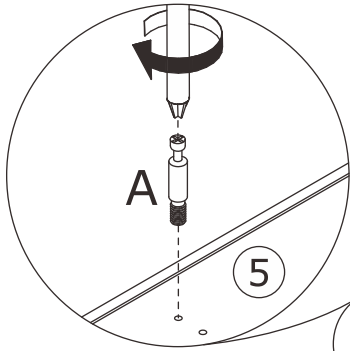 


Screw eccentric rod (A) onto panel 5. Connect panel 5 to panels 2, 3, and 4 using wooden dowel (D), then tighten by turning cam lock (B) clockwise.

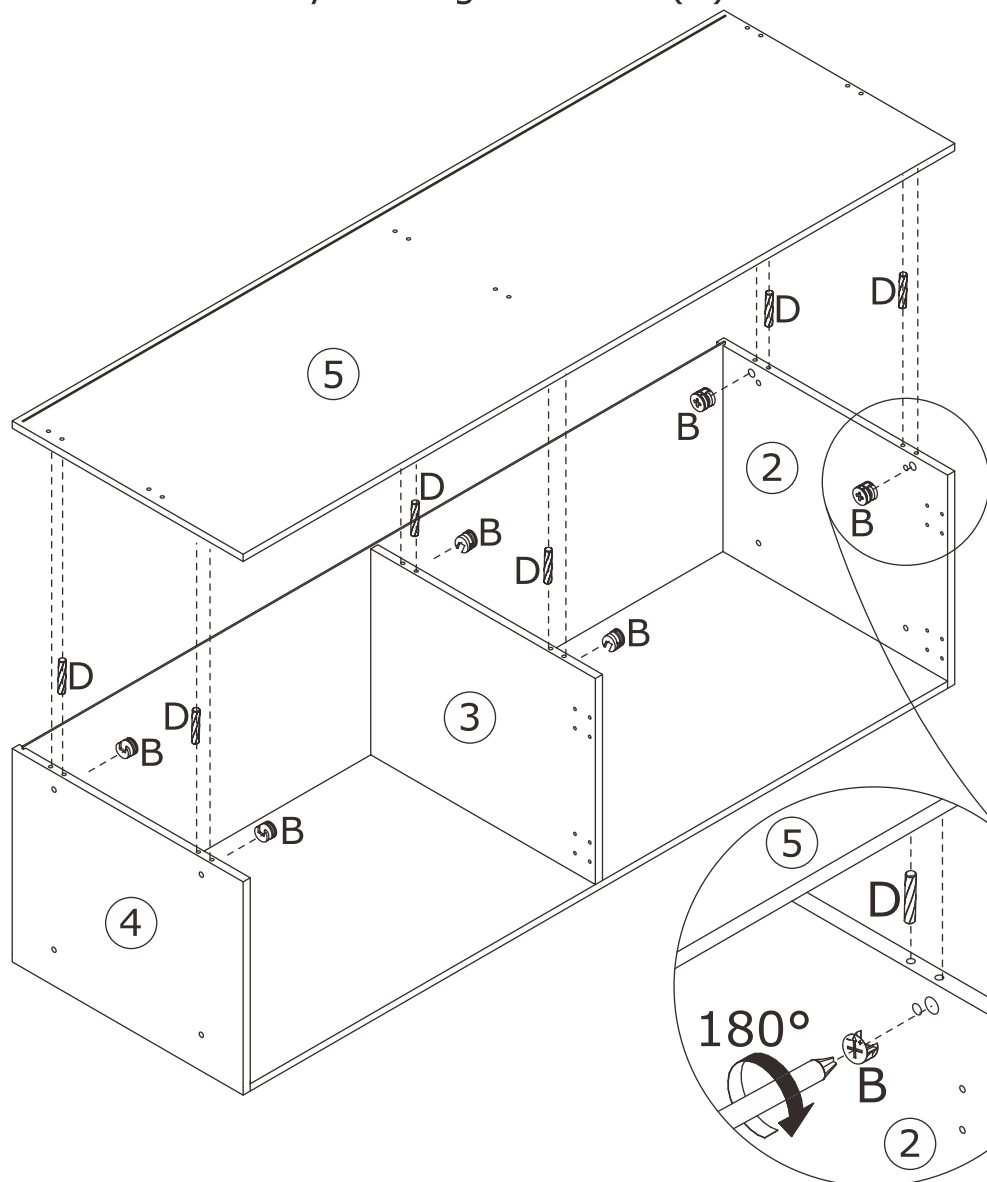


17

 A x 6

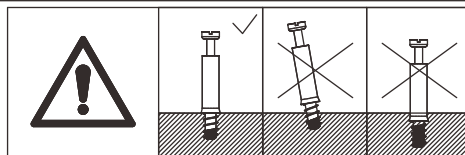 Ø6 x 35 mm

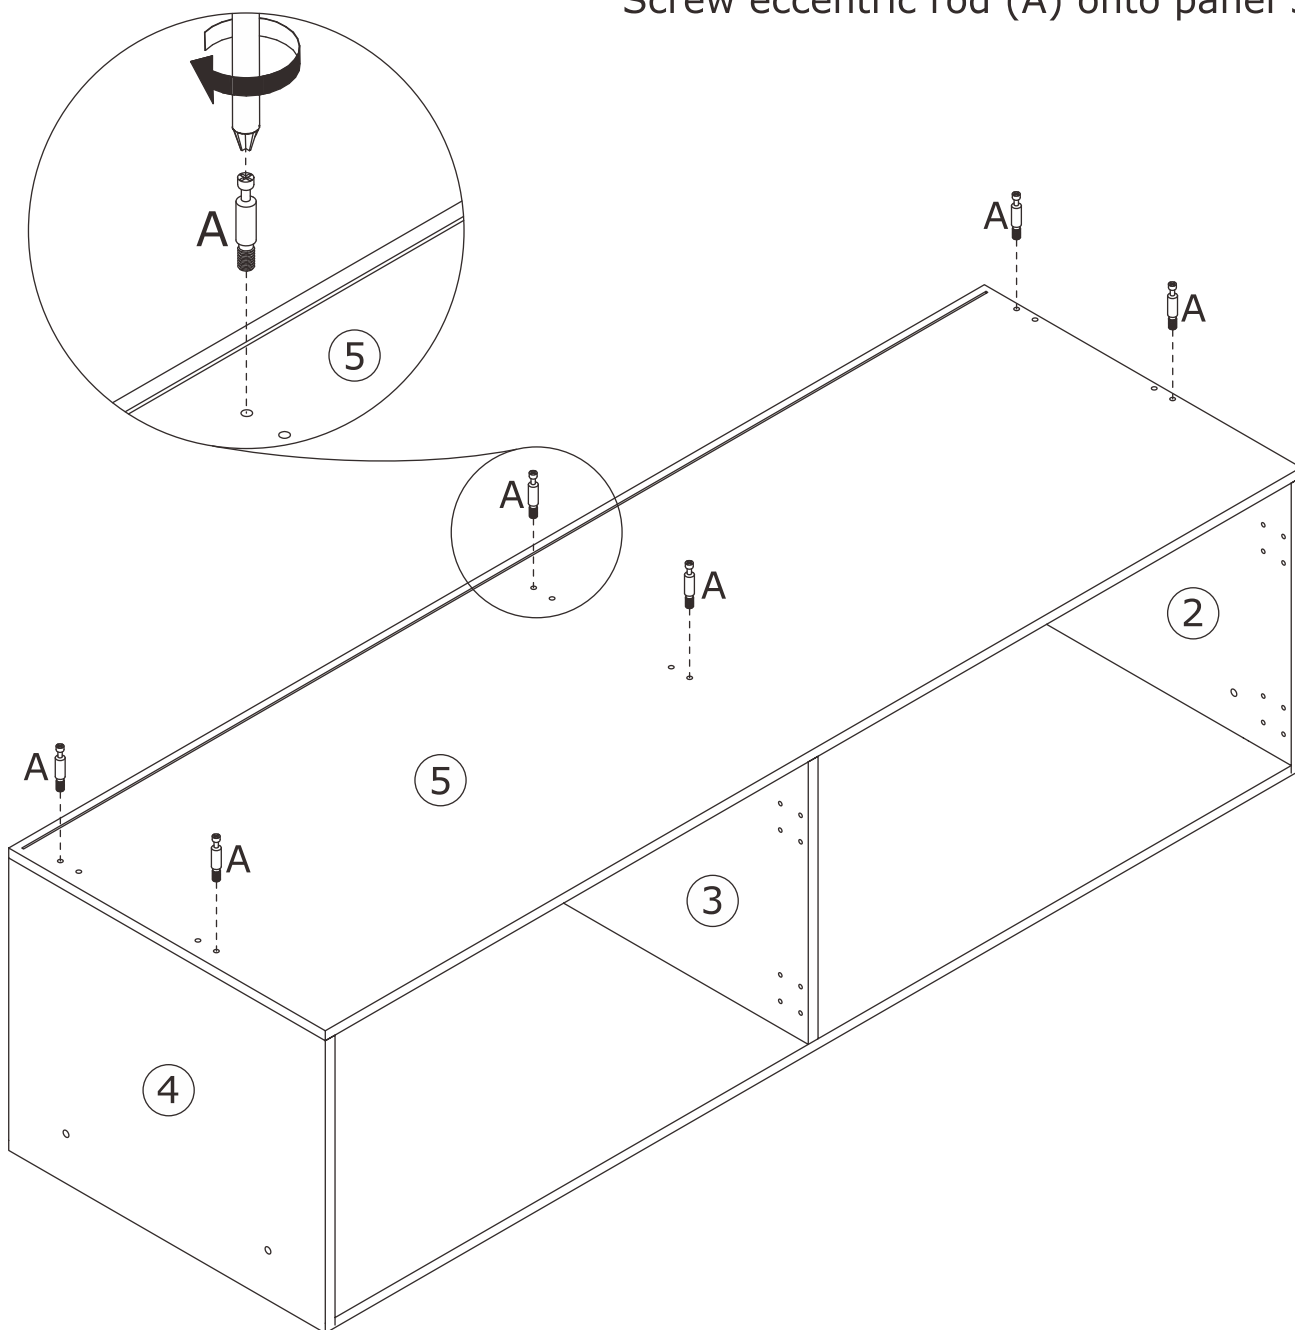

Screw eccentric rod (A) onto panel 5.



 
18

B x 6



Ø 15 x 10 mm



D x 6



Ø 6 x 30 mm




Connect panel 5 to panels 6, 7, and 8 using wooden dowel (D), then tighten by turning cam lock (B) clockwise.

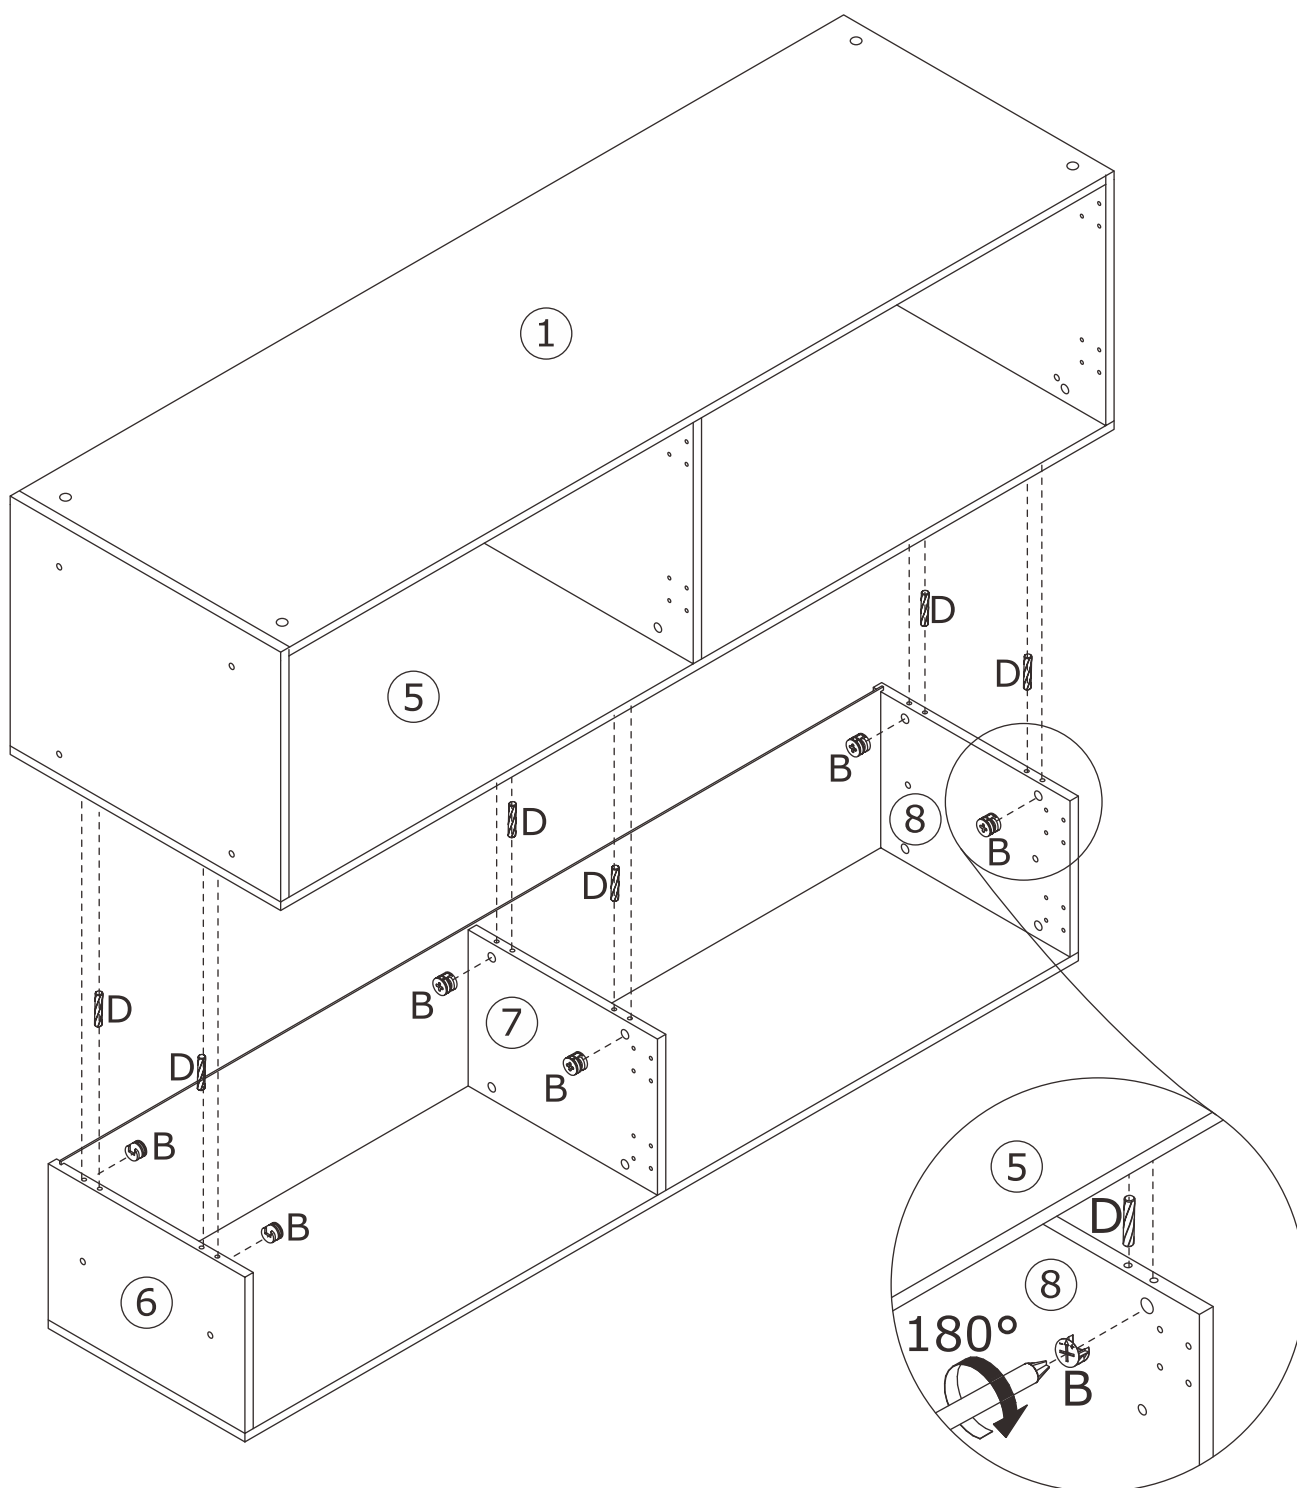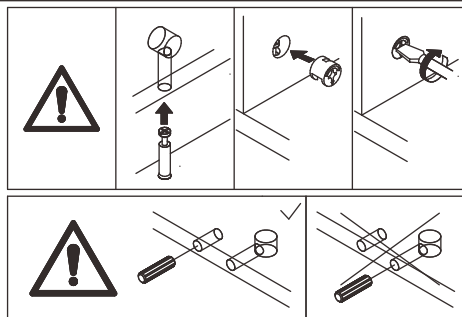

19

 A x 8




Ø 6 x 35 mm

B x 8








Ø 15 x 10 mm

 
D x 8



Ø 6 x 30 mm

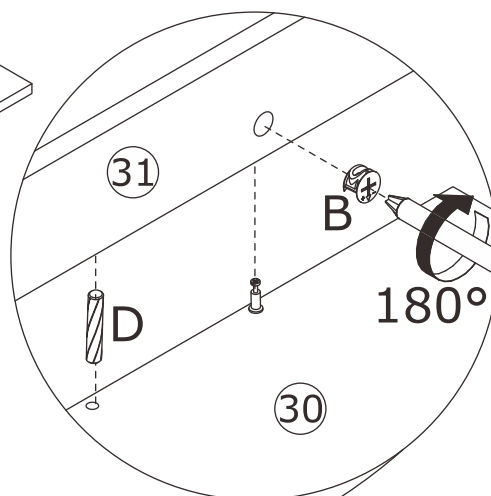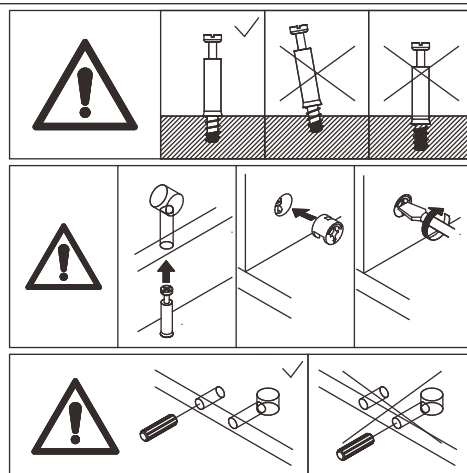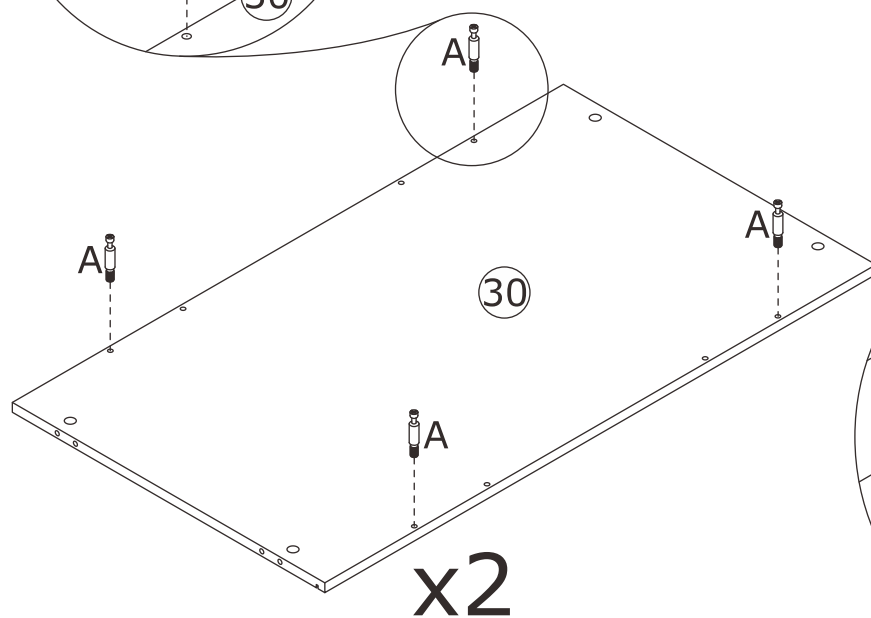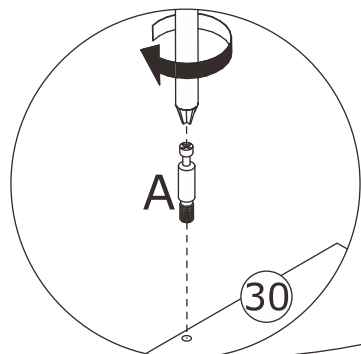 


Screw eccentric rod (A) onto panel 30.
Connect two panels 31 to panel 30
using wooden dowel (D), then tighten
by turning cam lock (B) clockwise.

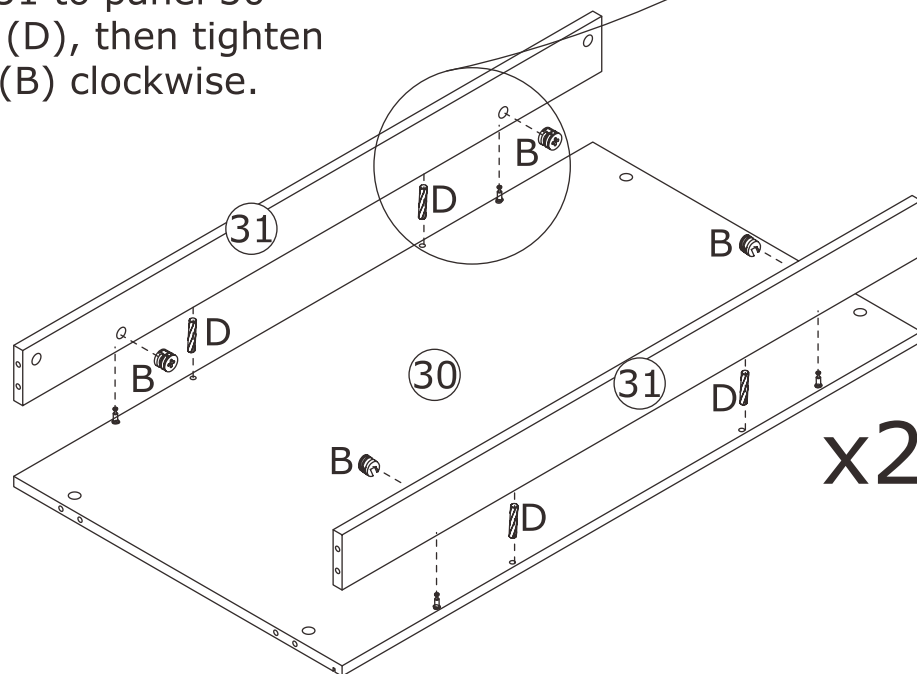

20

 A x 4




Ø 6 x 35 mm

B x 4




Ø 15 x 10 mm





 
D x 4



Ø 6 x 30 mm

 


Screw eccentric rod (A) onto panel 26.
Connect panel 26 to panels 30 and 31
using wooden dowel (D), then tighten
by turning cam lock (B) clockwise.

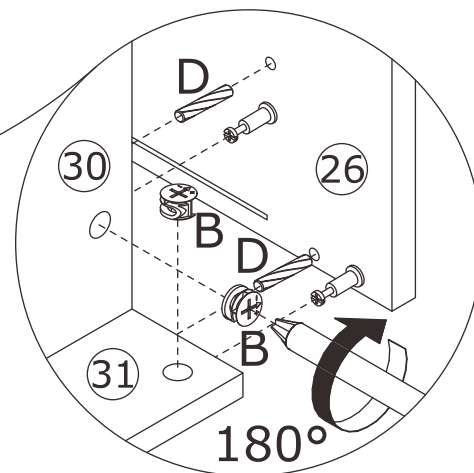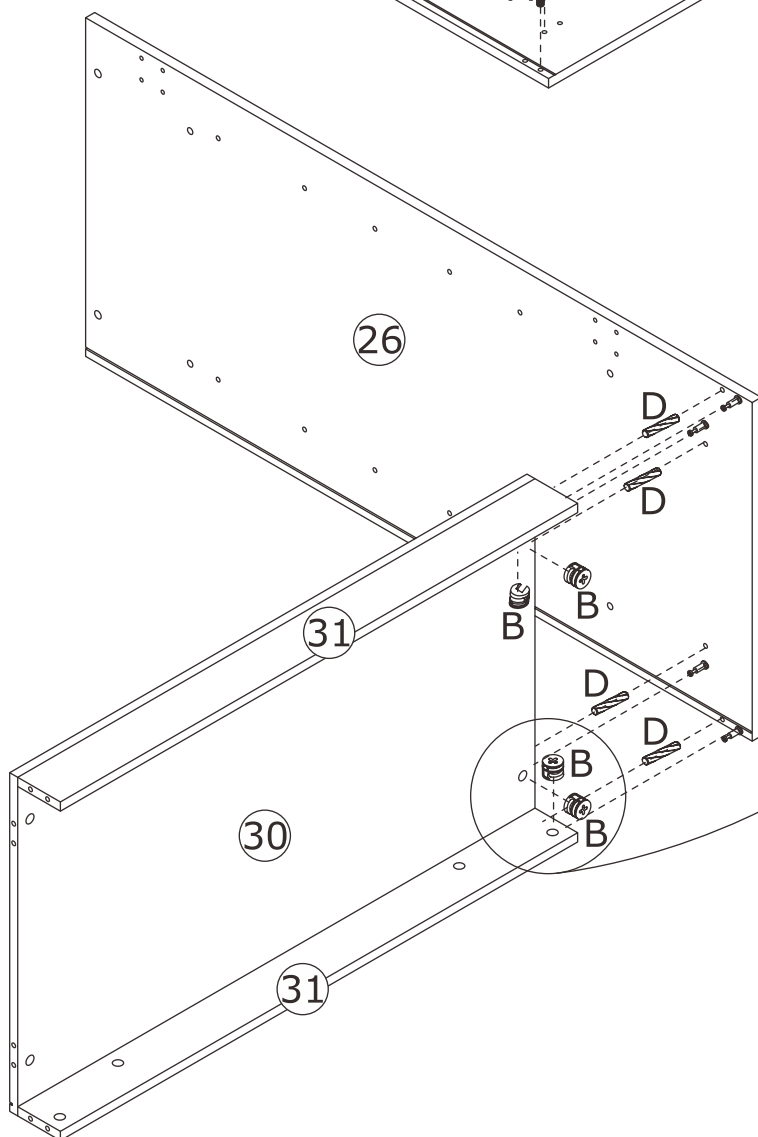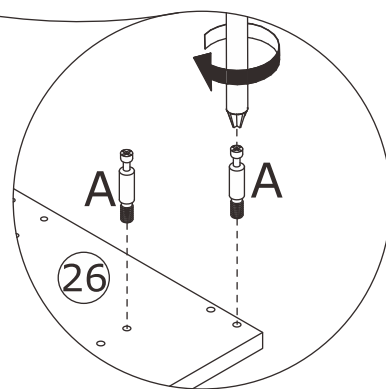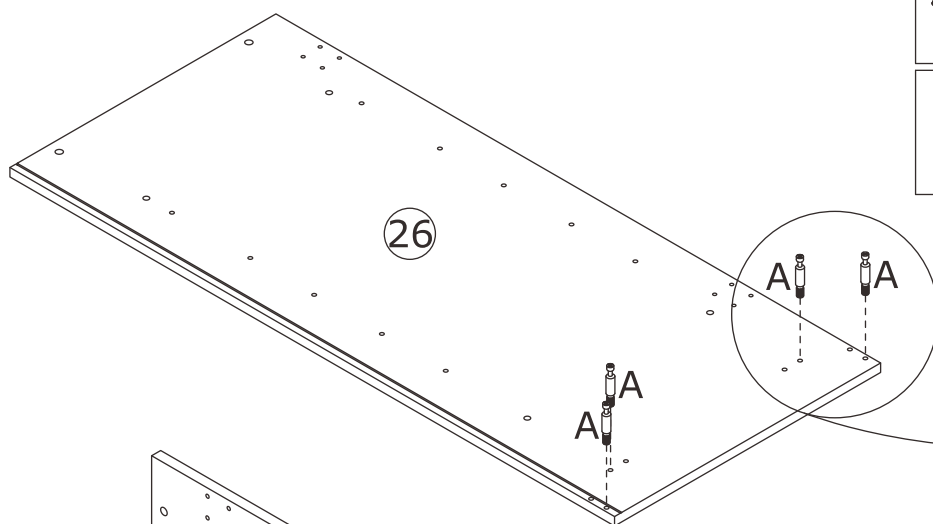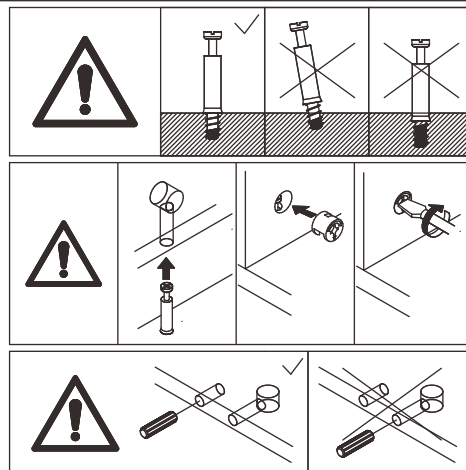

21

 A x 4




Ø6 x 35 mm

B x 4










Ø15 x 10 mm


 
D x 4




Ø6 x 30 mm

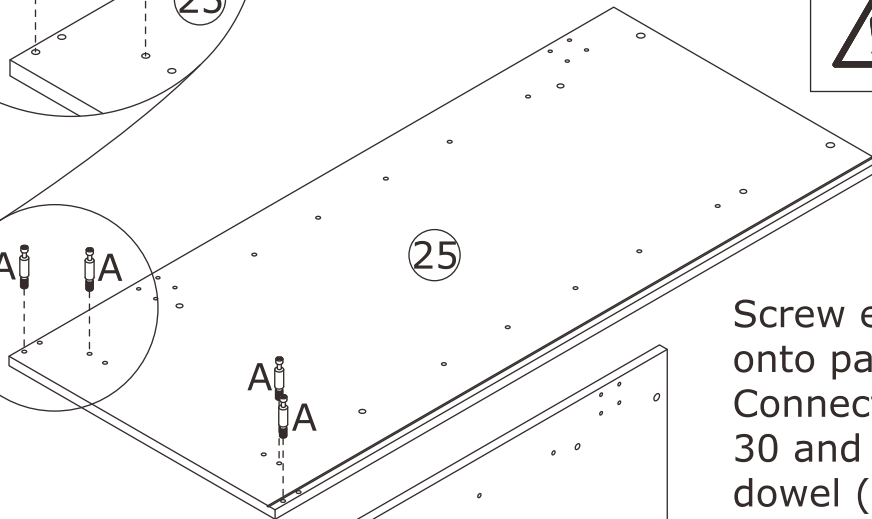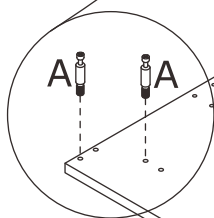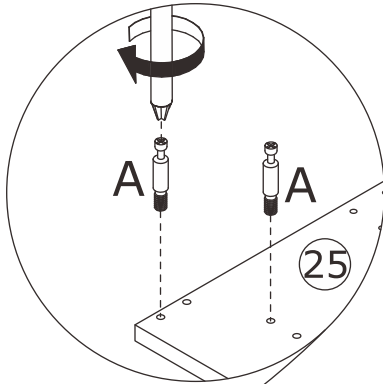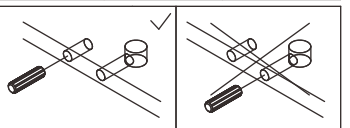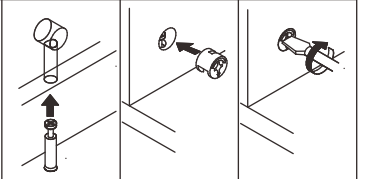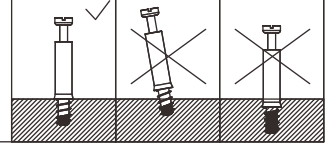 


Screw eccentric rod (A) onto panel 25. Connect panel 25 to panels 30 and 31 using wooden dowel (D), then tighten by turning cam lock (B) clockwise.

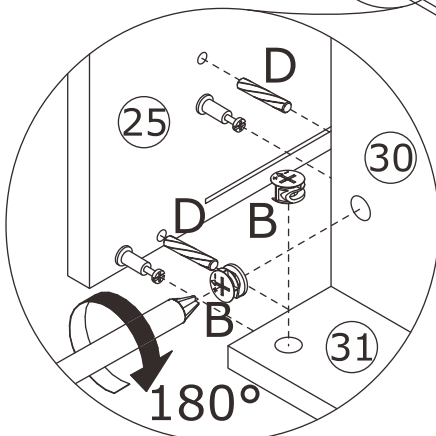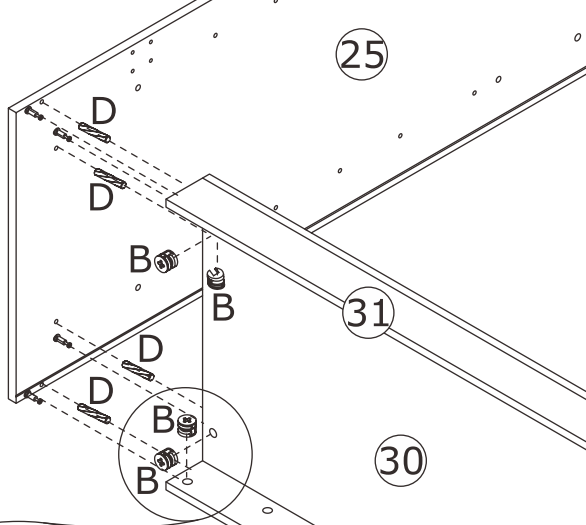

22

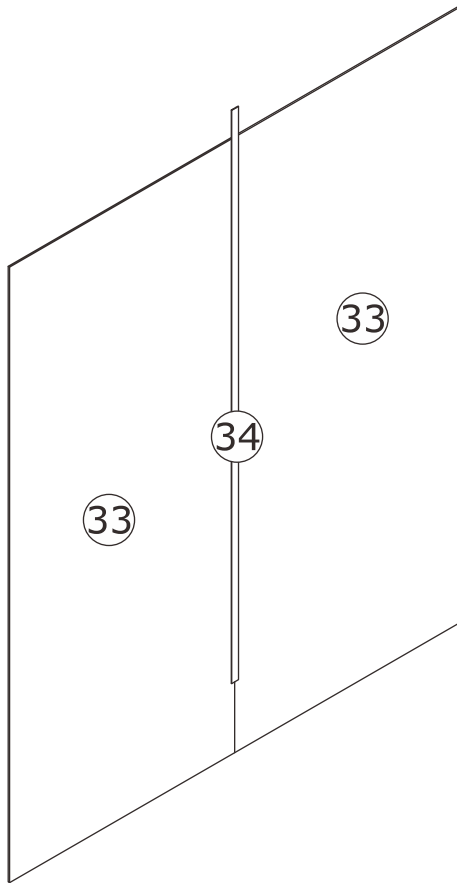


Connect two back panels 33 to strip 34.
Insert panel 33 along the grooves.

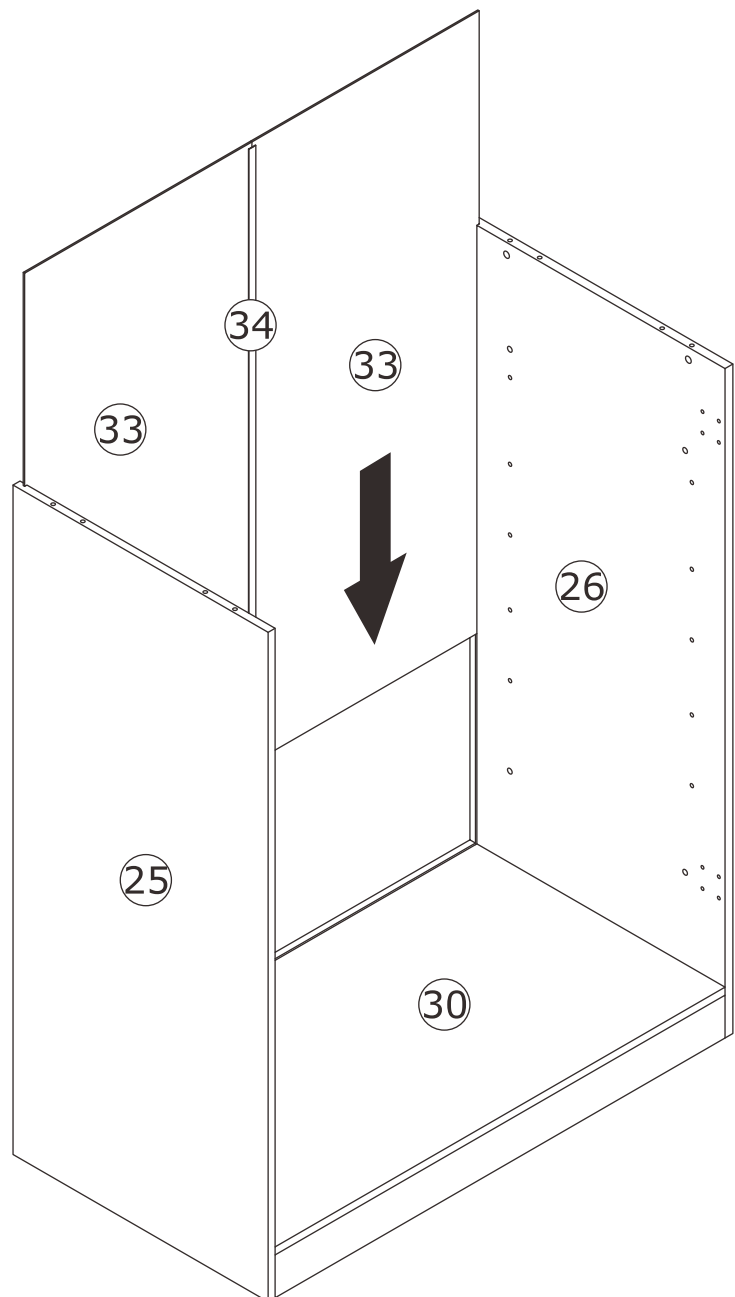

23

 A x 4




Ø6 x 35 mm

B x 4





Ø15 x 10 mm

 D x 4




Ø6 x 30 mm

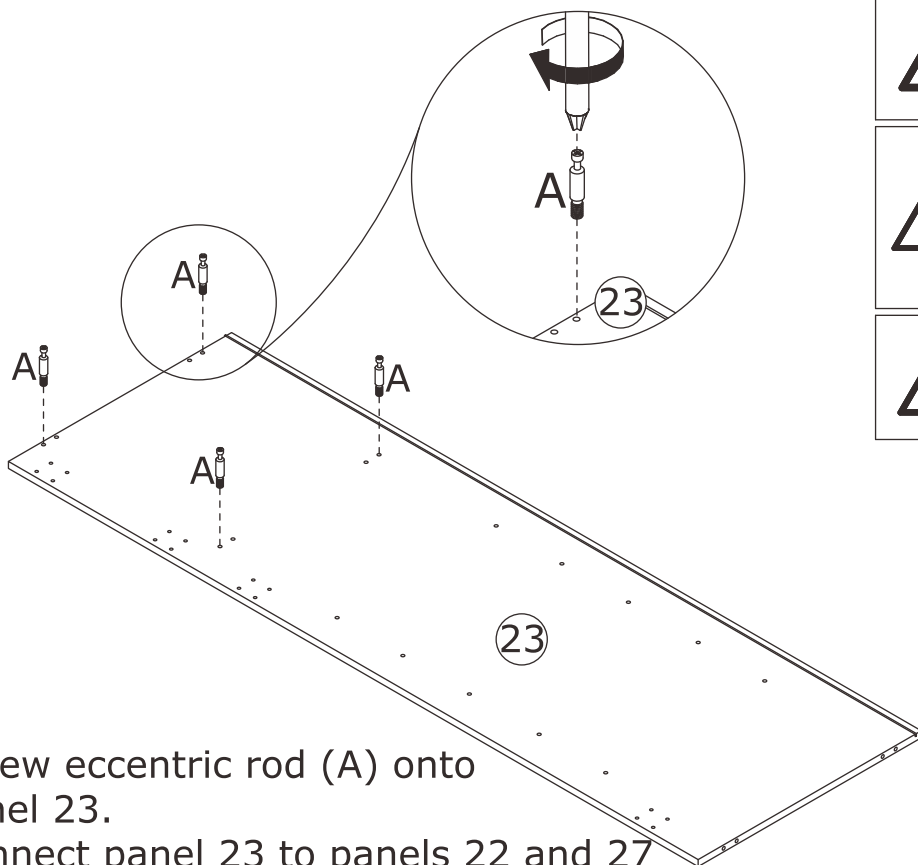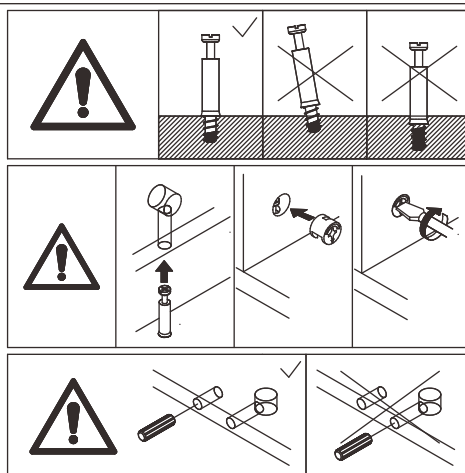


Screw eccentric rod (A) onto panel 23.

Connect panel 23 to panels 22 and 27 using wooden dowel (D), then tighten by turning cam lock (B) clockwise.

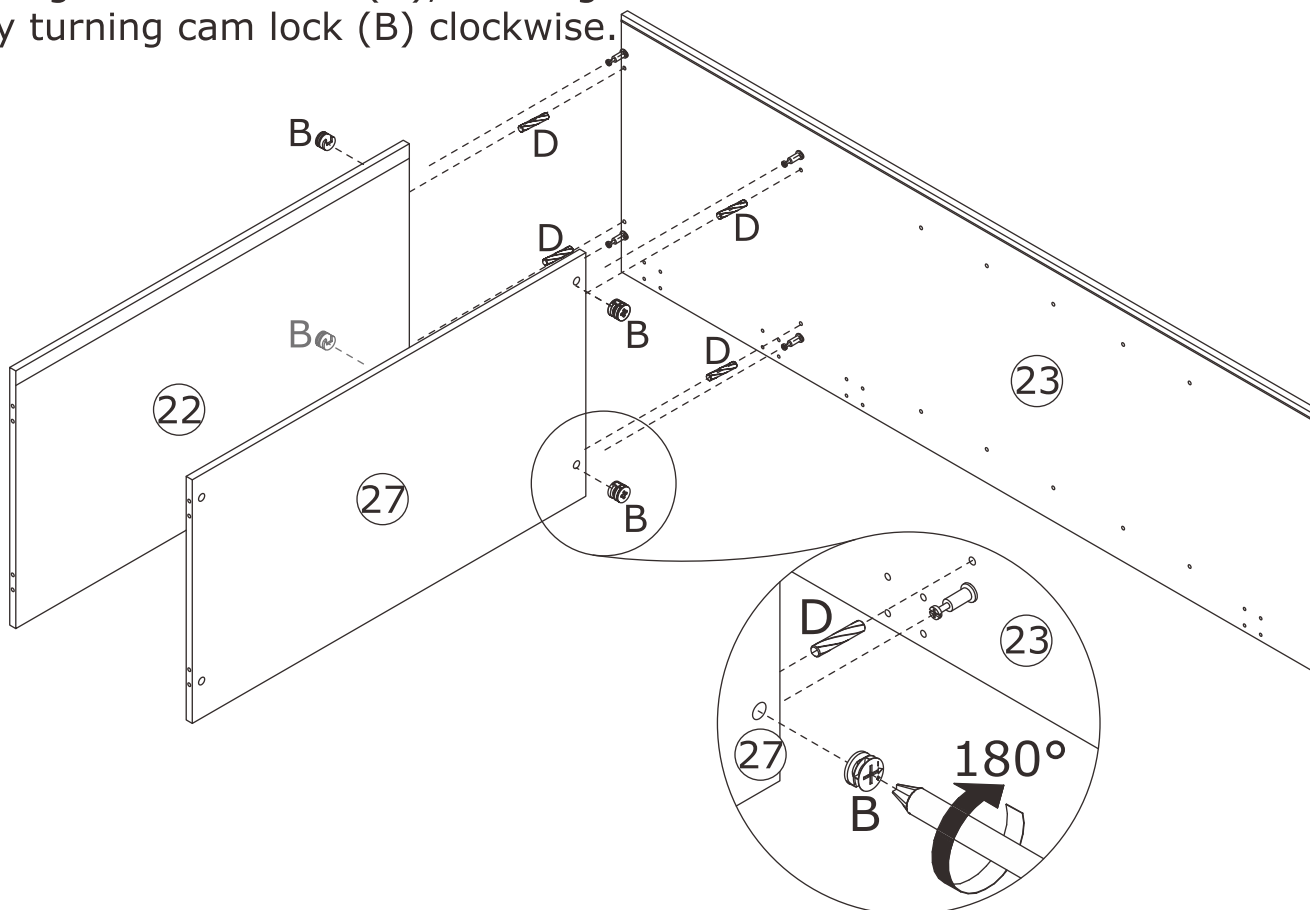

24

 A x 4




Ø6 x 35 mm

B x 4






Ø15 x 10 mm

 D x 4




Ø6 x 30 mm

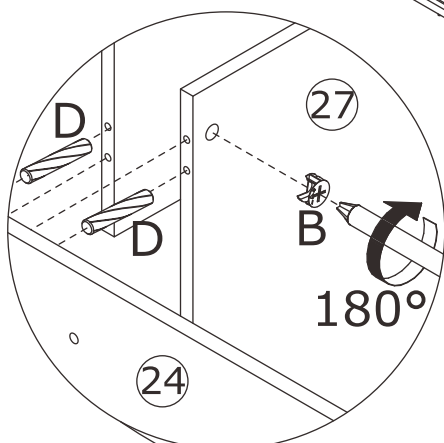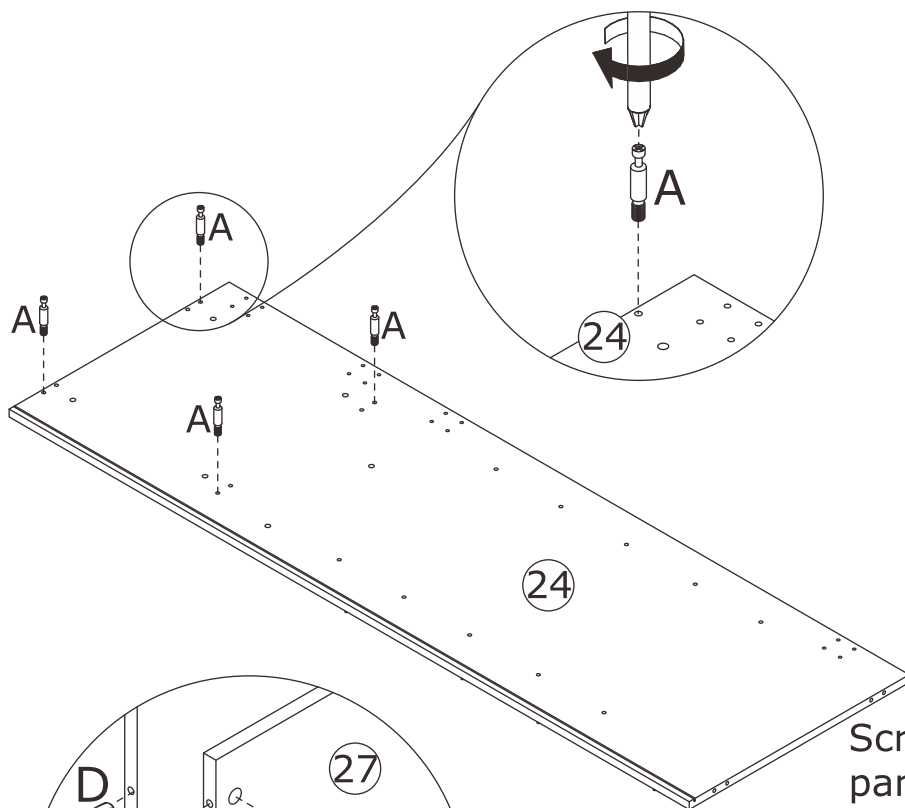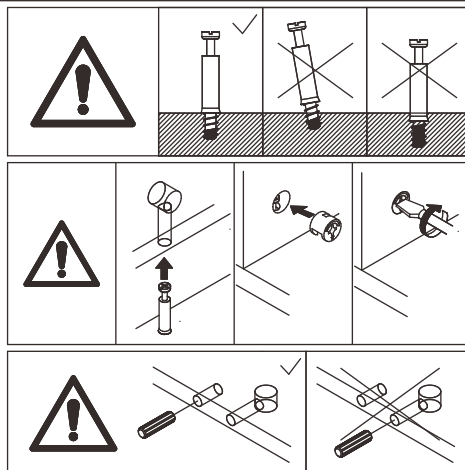


Screw eccentric rod (A) onto panel 24.


Connect panel 24 to panels 22 and 27 using wooden dowel (D), then tighten by turning cam lock (B) clockwise.

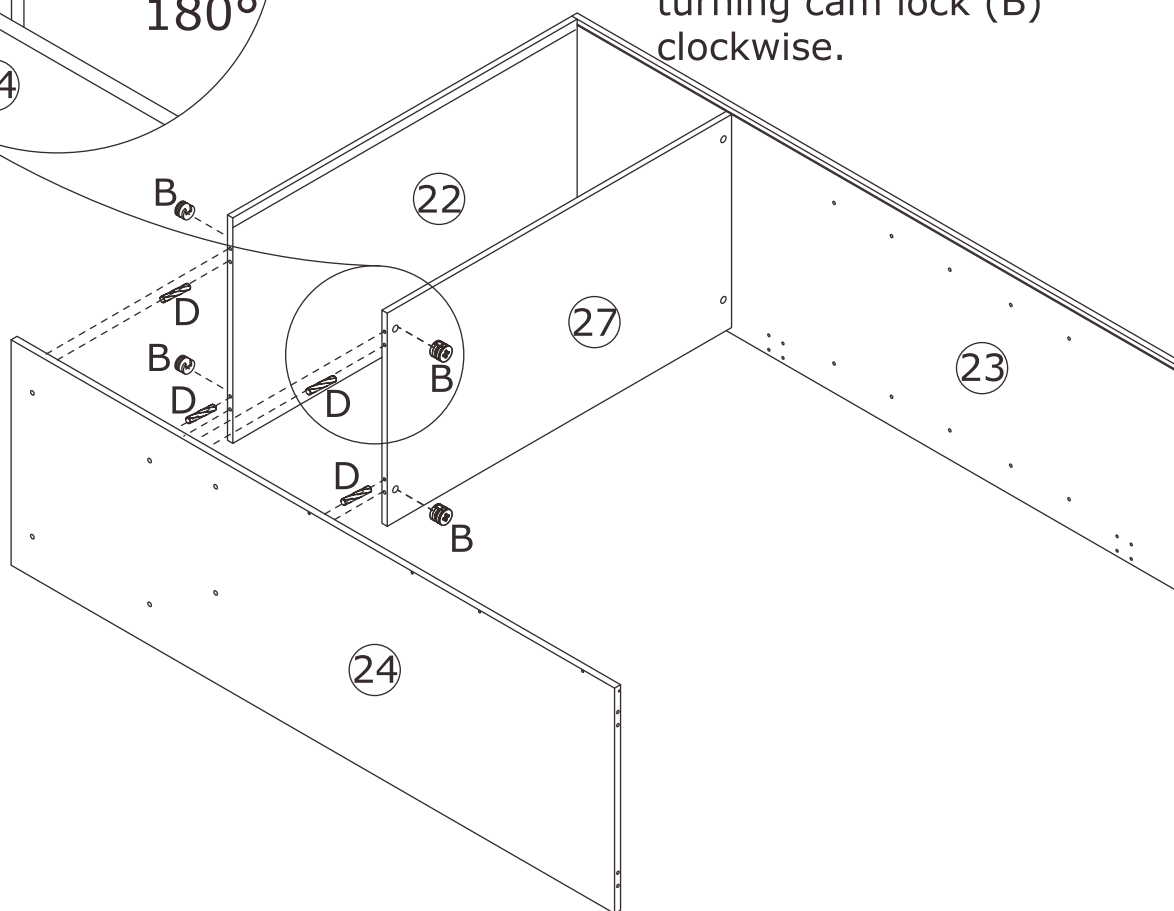

25

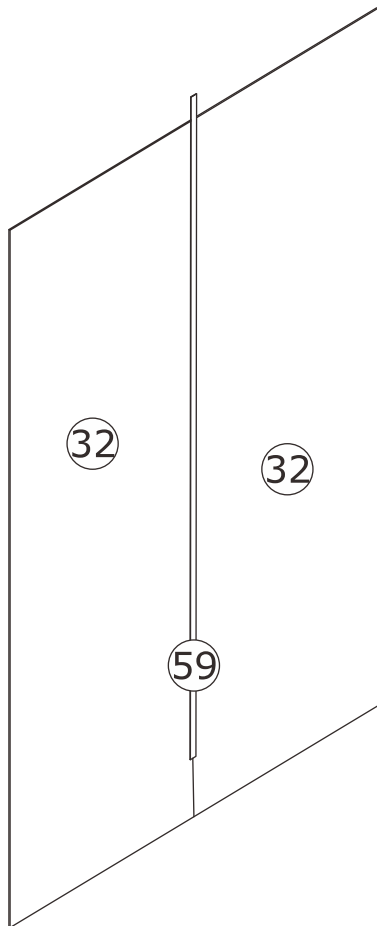


Connect two back panels 32 to strip 59.
Insert panel 32 along the grooves.

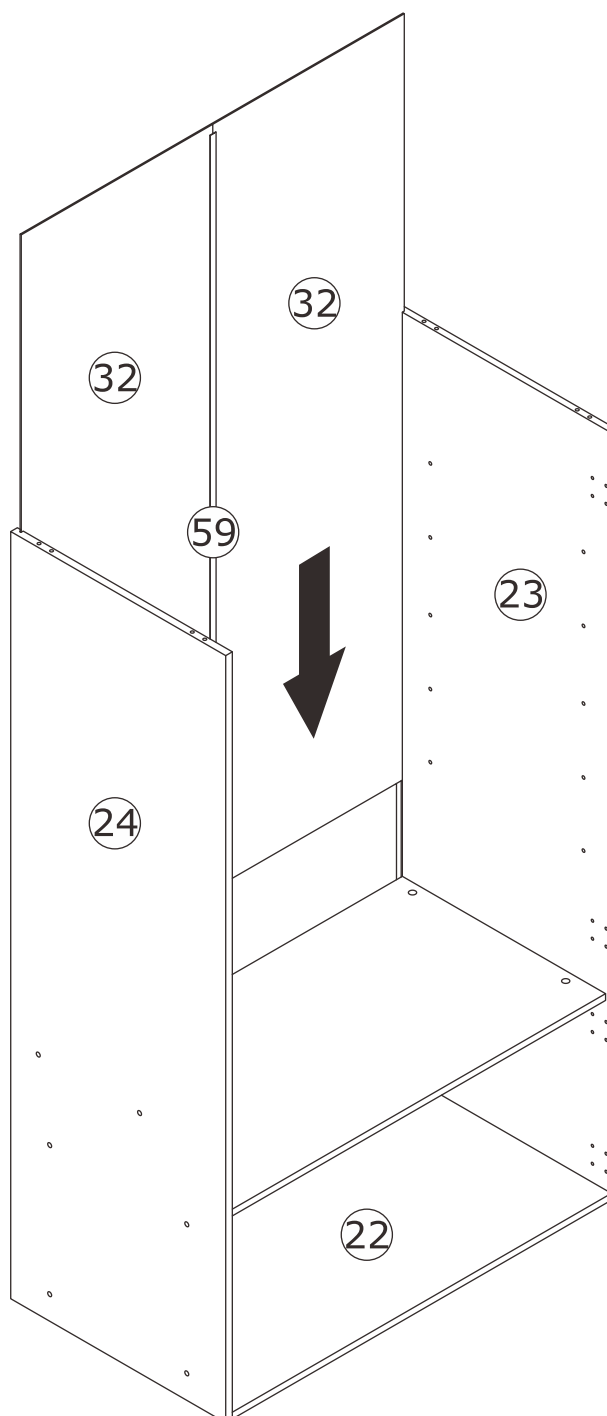


26

 D x 4







Ø6 x 30 mm

 T x 4




Ø4 x 35 mm

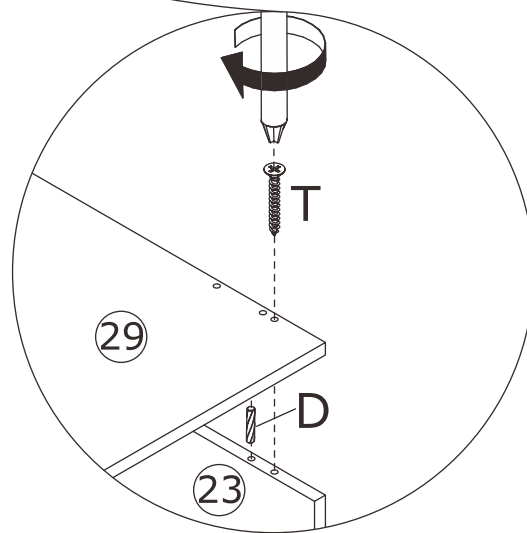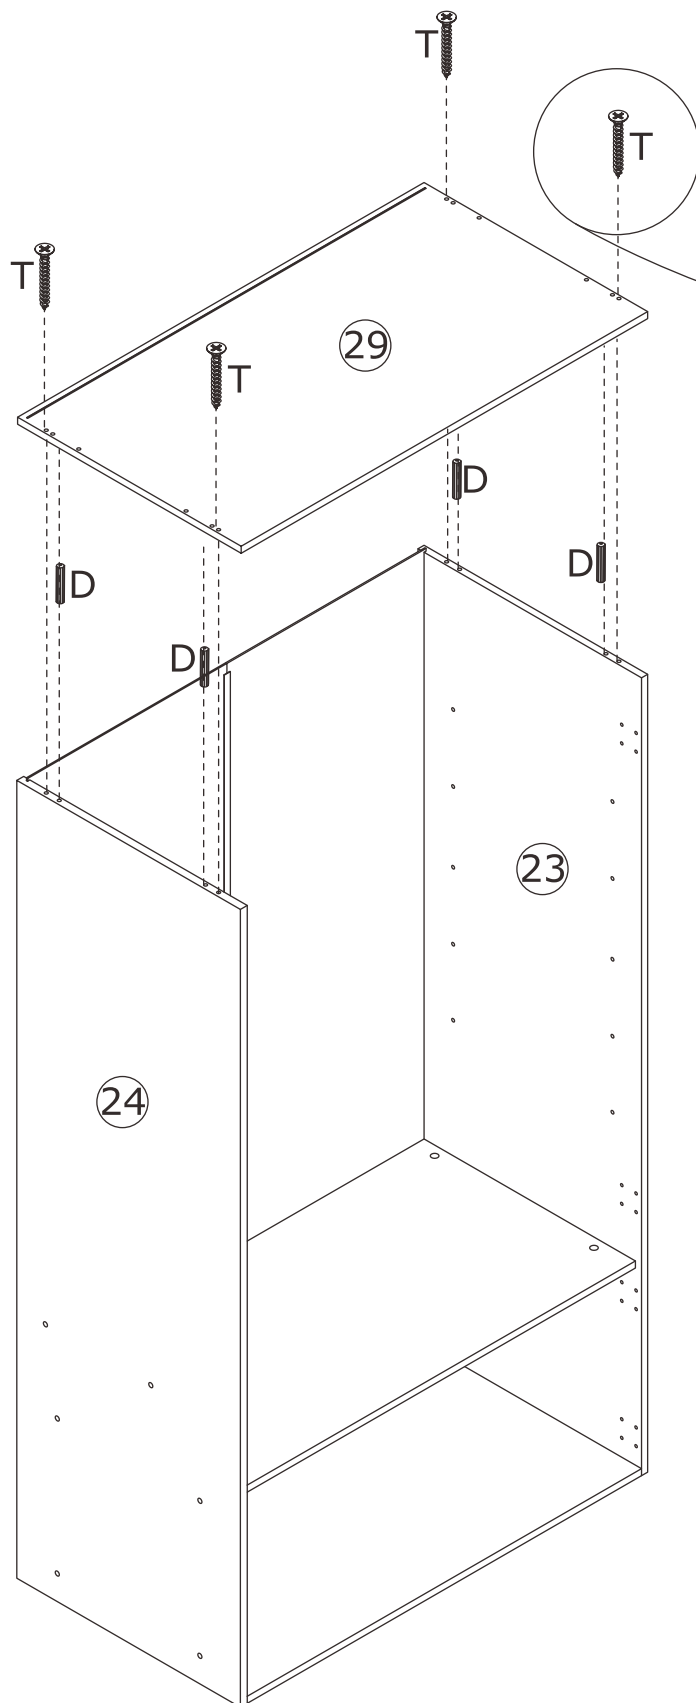  



Connect panel 29 to panels 23 and 24 using wooden dowel (D), then secure with screw (T).

27

 
A x 4



Ø6 x 35 mm

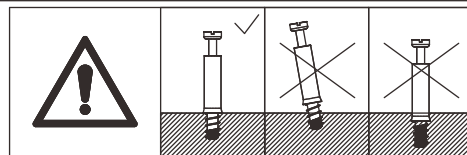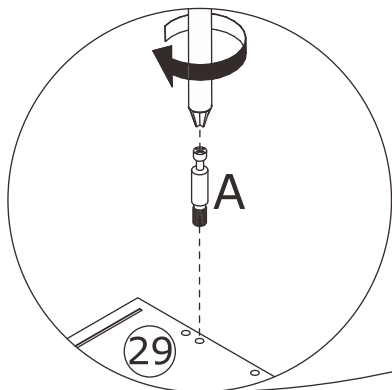

Screw eccentric rod (A) onto panel 29.

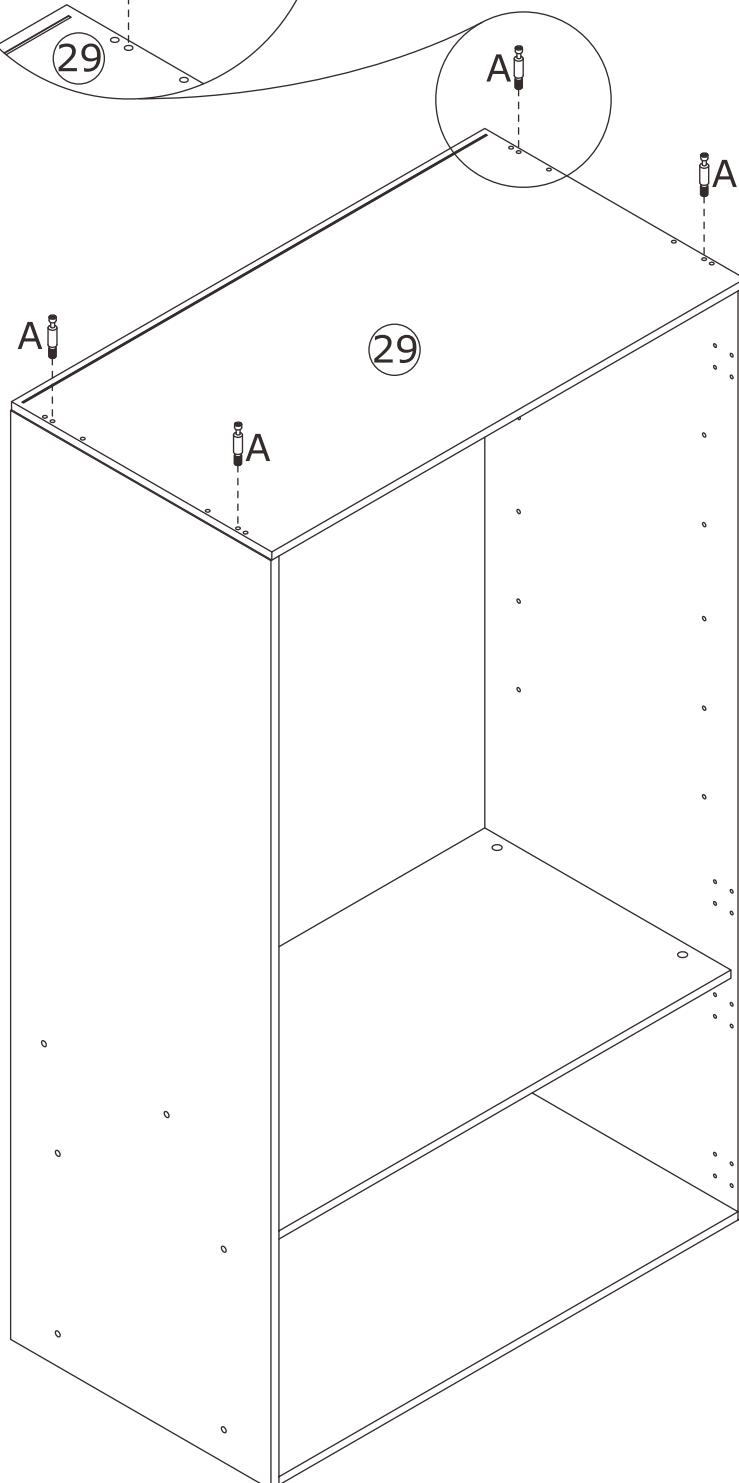


28

B x 4






Ø 15 x 10 mm

 D x 4




Ø 6 x 30 mm

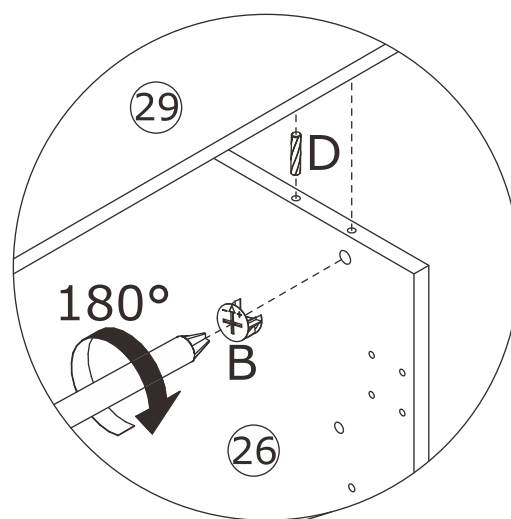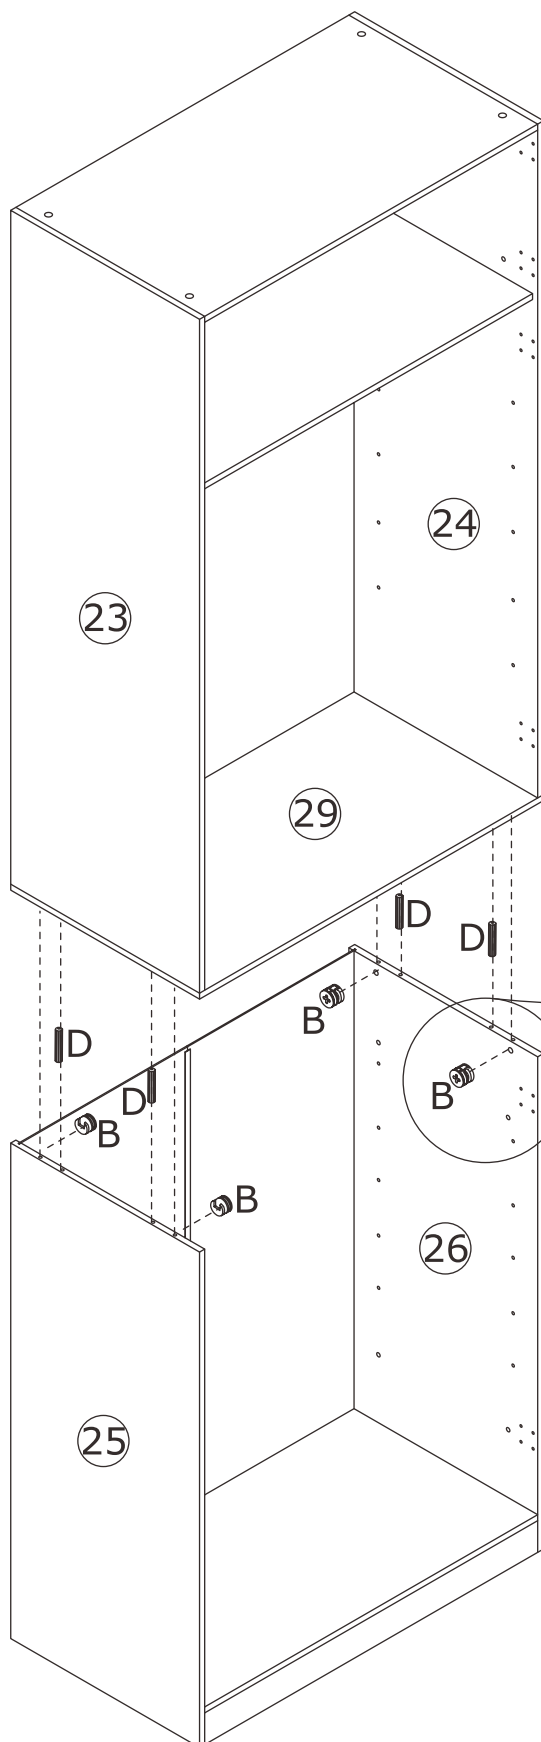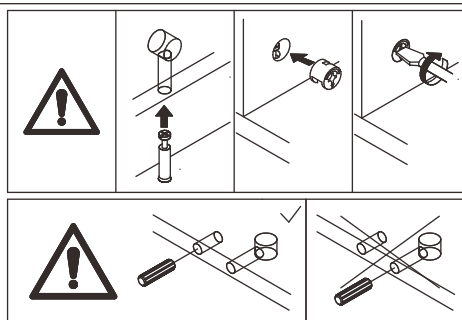

Connect panel 29 to panels 25 and 26 using wooden dowel (D), then tighten by turning cam lock (B) clockwise.

29

 A x 4




Ø 6 x 35 mm

B x 4









Ø 15 x 10 mm

 D x 4





Ø 6 x 30 mm

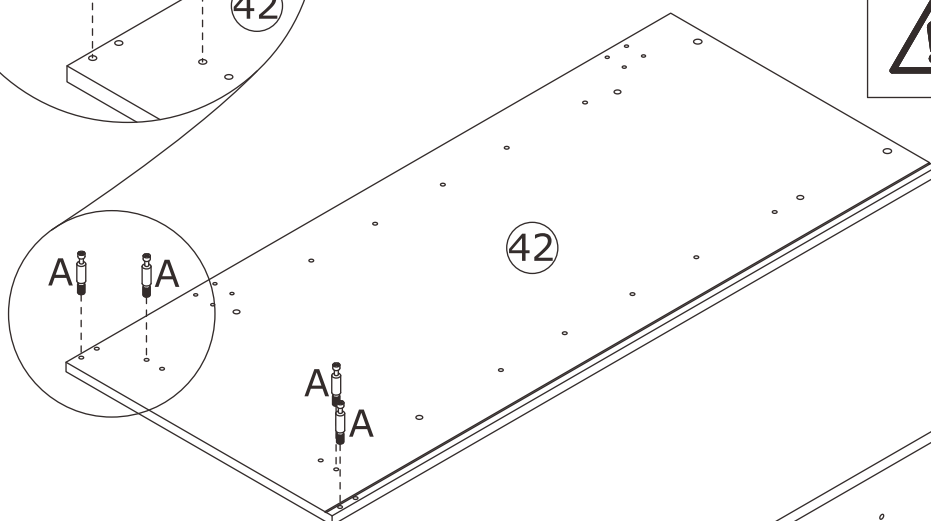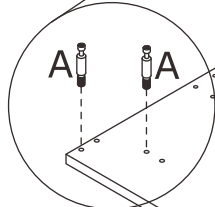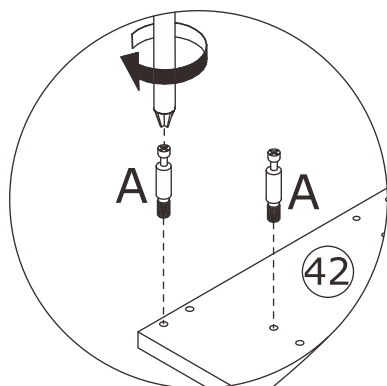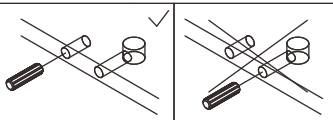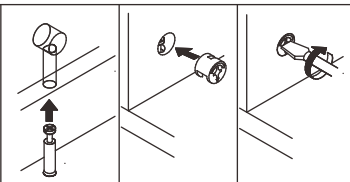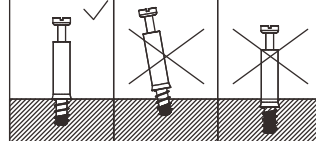


Screw eccentric rod (A) onto panel 42.

Connect panel 42 to panel 30 and 31 using wooden dowel (D), then tighten by turning cam lock (B) clockwise.

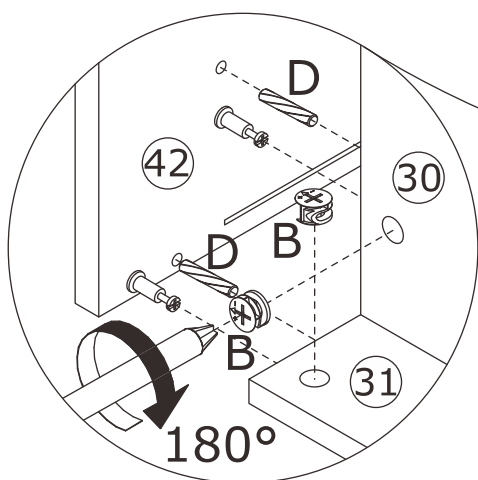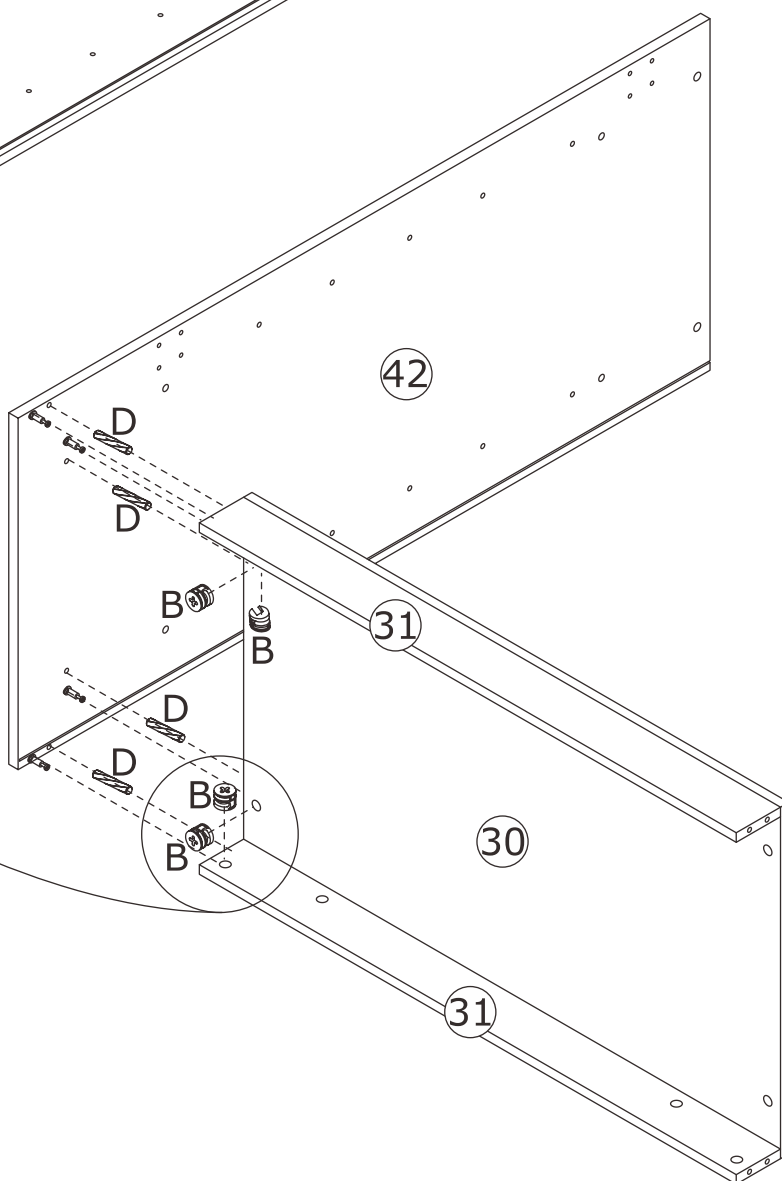

30

 A x 4




Ø 6 x 35 mm

B x 4







Ø 15 x 10 mm


 
D x 4



Ø 6 x 30 mm

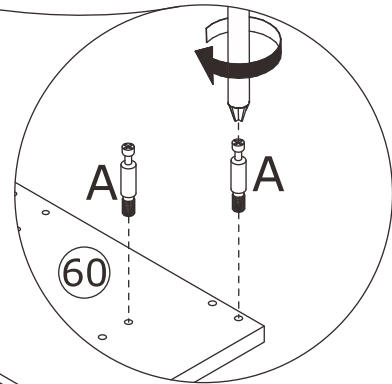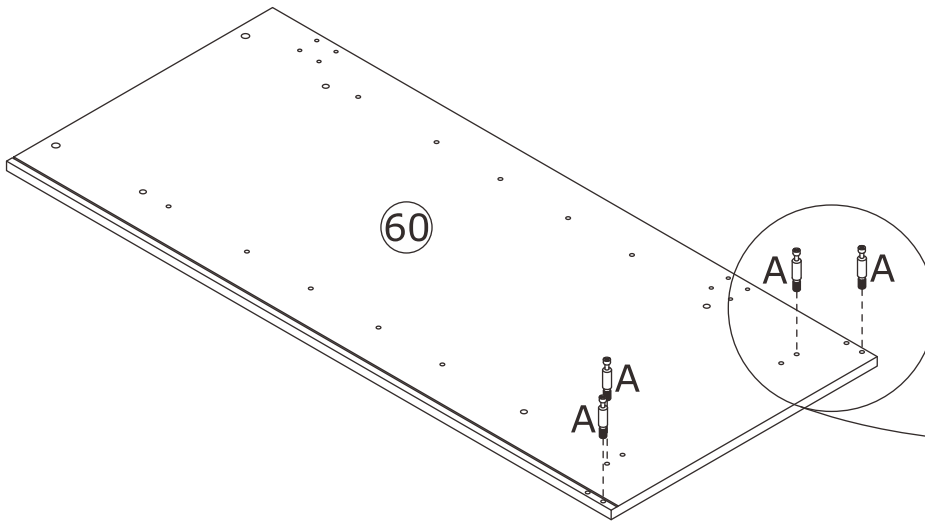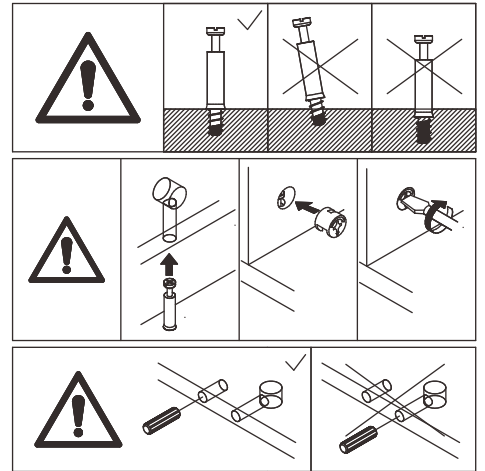
 


Screw eccentric rod (A) onto panel 60.
Connect panel 60 to panel 30 and 31 using wooden dowel (D), then tighten by turning cam lock (B) clockwise.

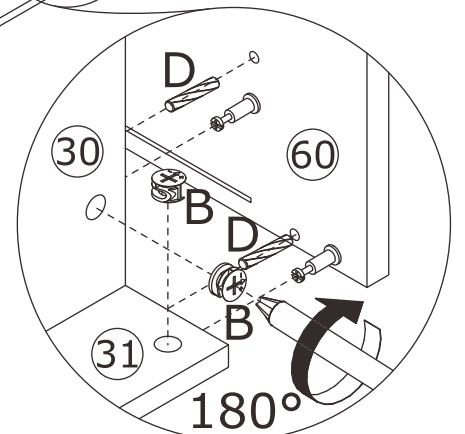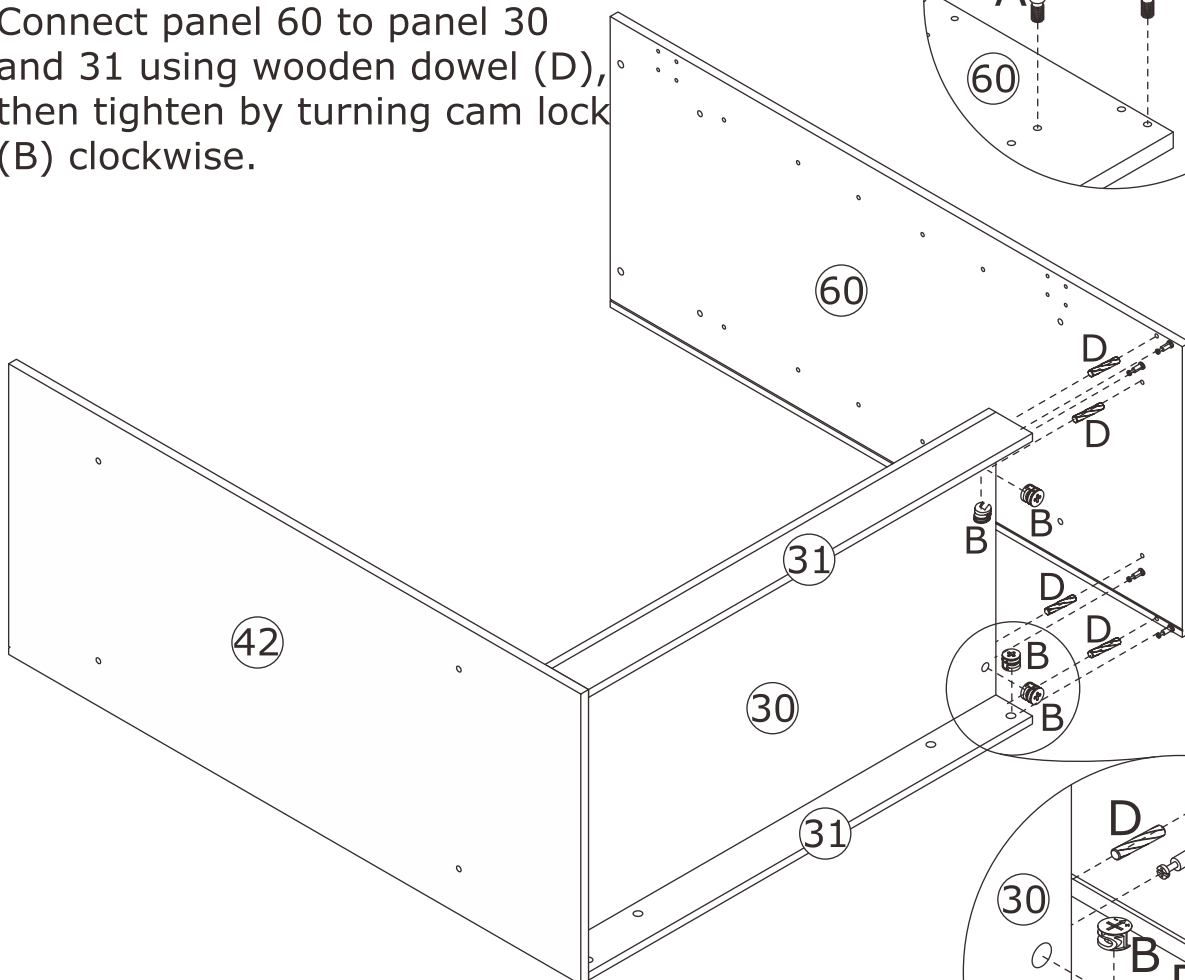


31

Connect two back panels 33 to strip 34.
Insert panel 33 along the grooves.

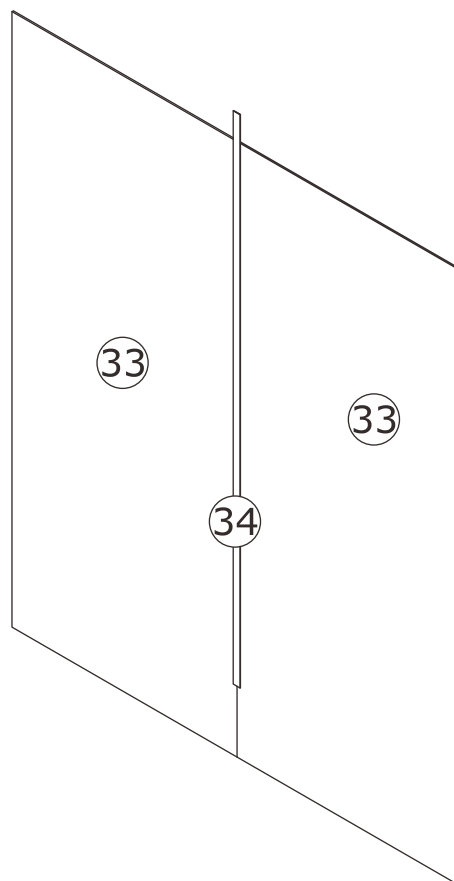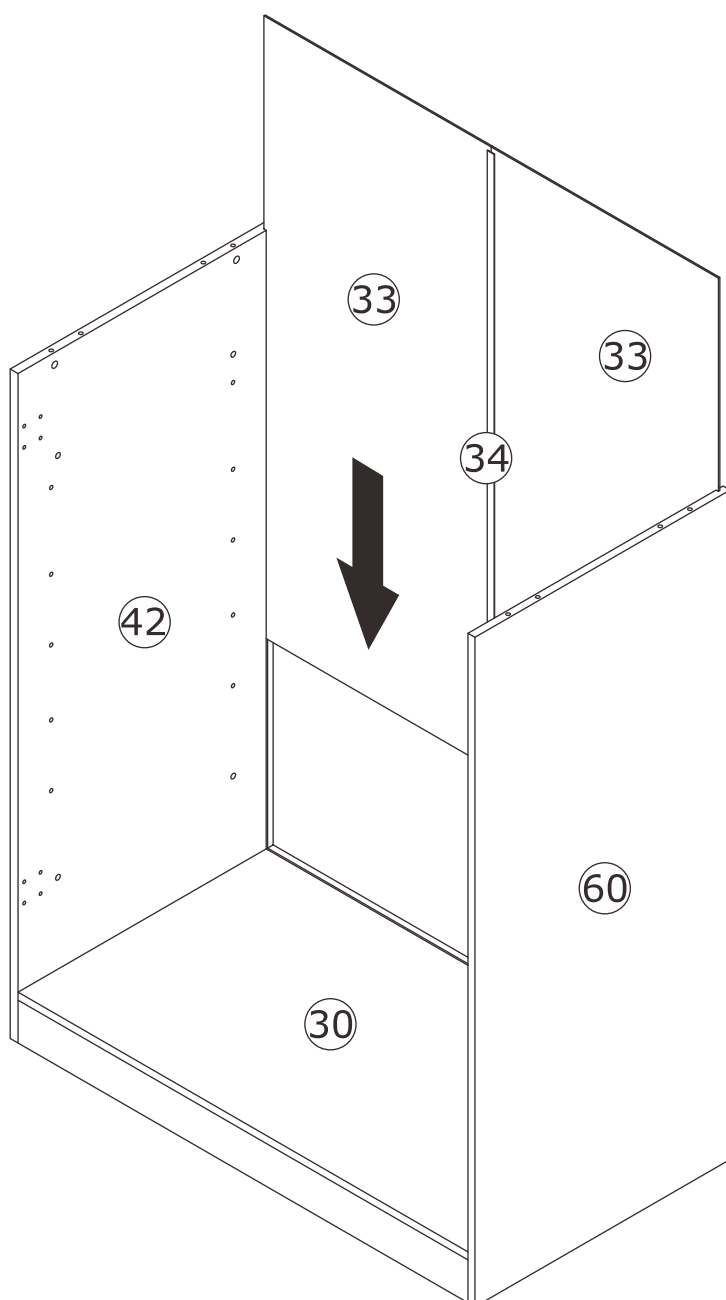

32

 A x 4




Ø 6 x 35 mm

B x 4









Ø 15 x 10 mm

 D x 4





Ø 6 x 30 mm

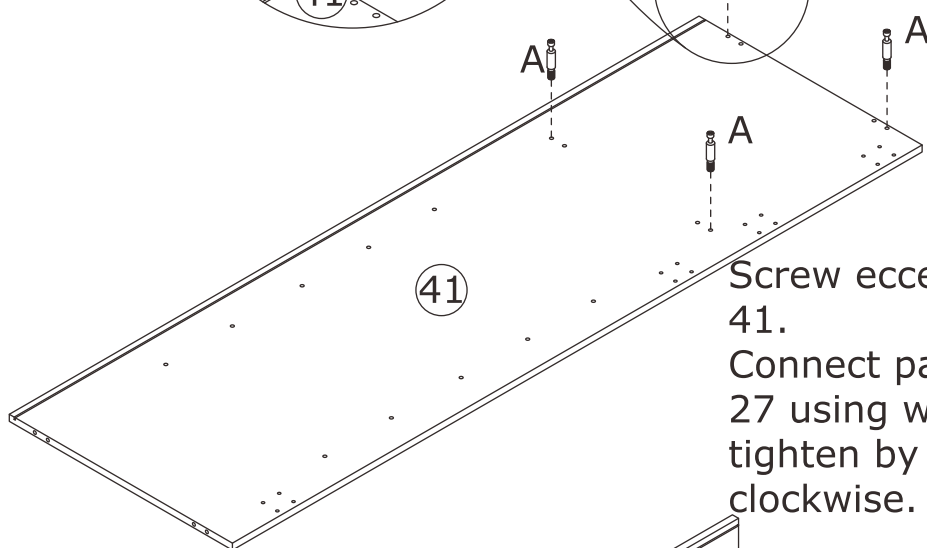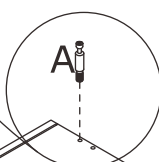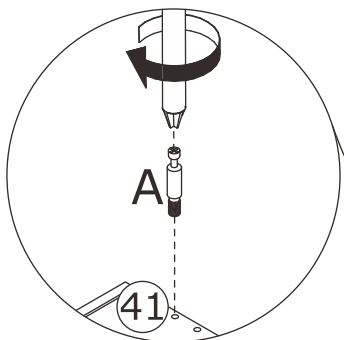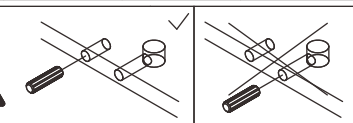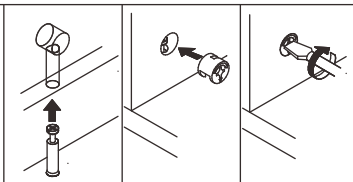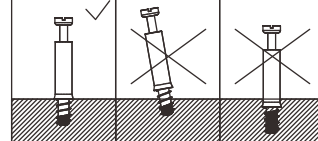


Screw eccentric rod (A) onto panel 41.

Connect panel 41 to panels 22 and 27 using wooden dowel (D), then tighten by turning cam lock (B) clockwise.

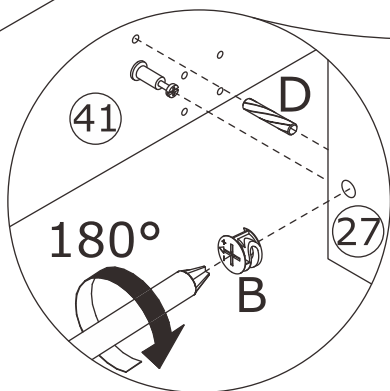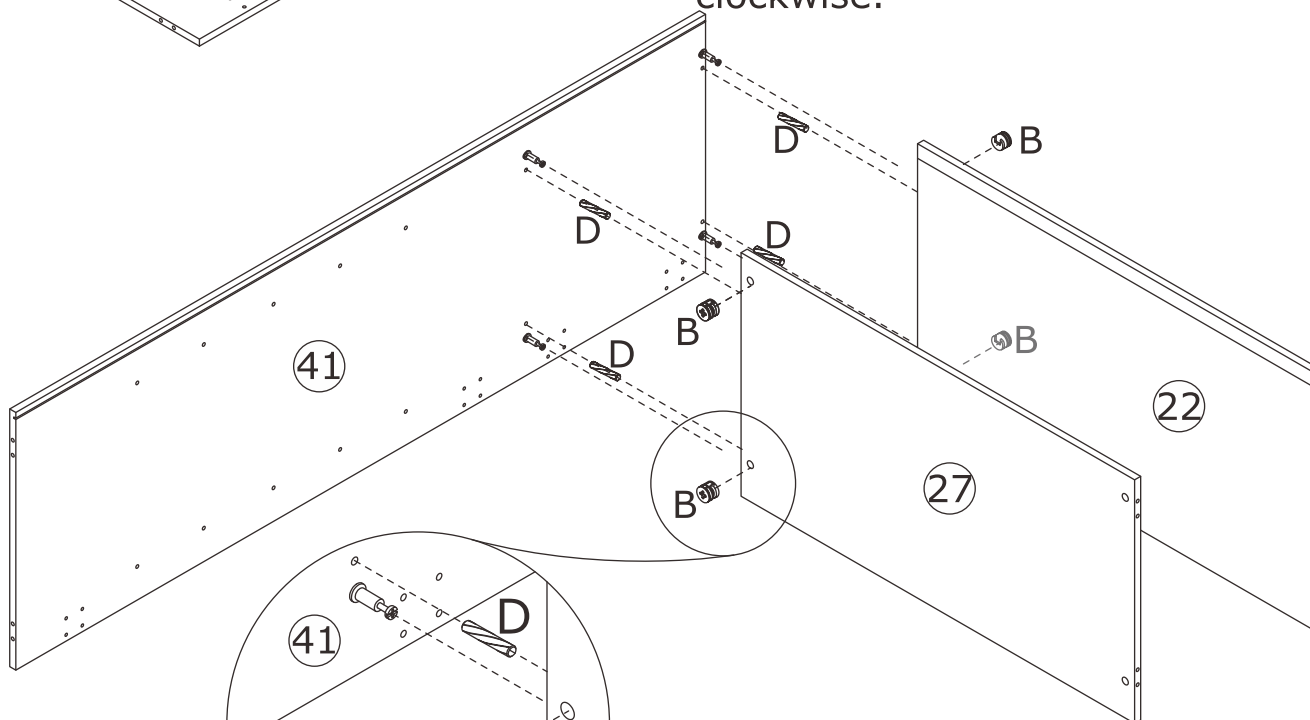

33

 A x 4




Ø 6 x 35 mm

B x 4









Ø 15 x 10 mm

 D x 4





Ø 6 x 30 mm

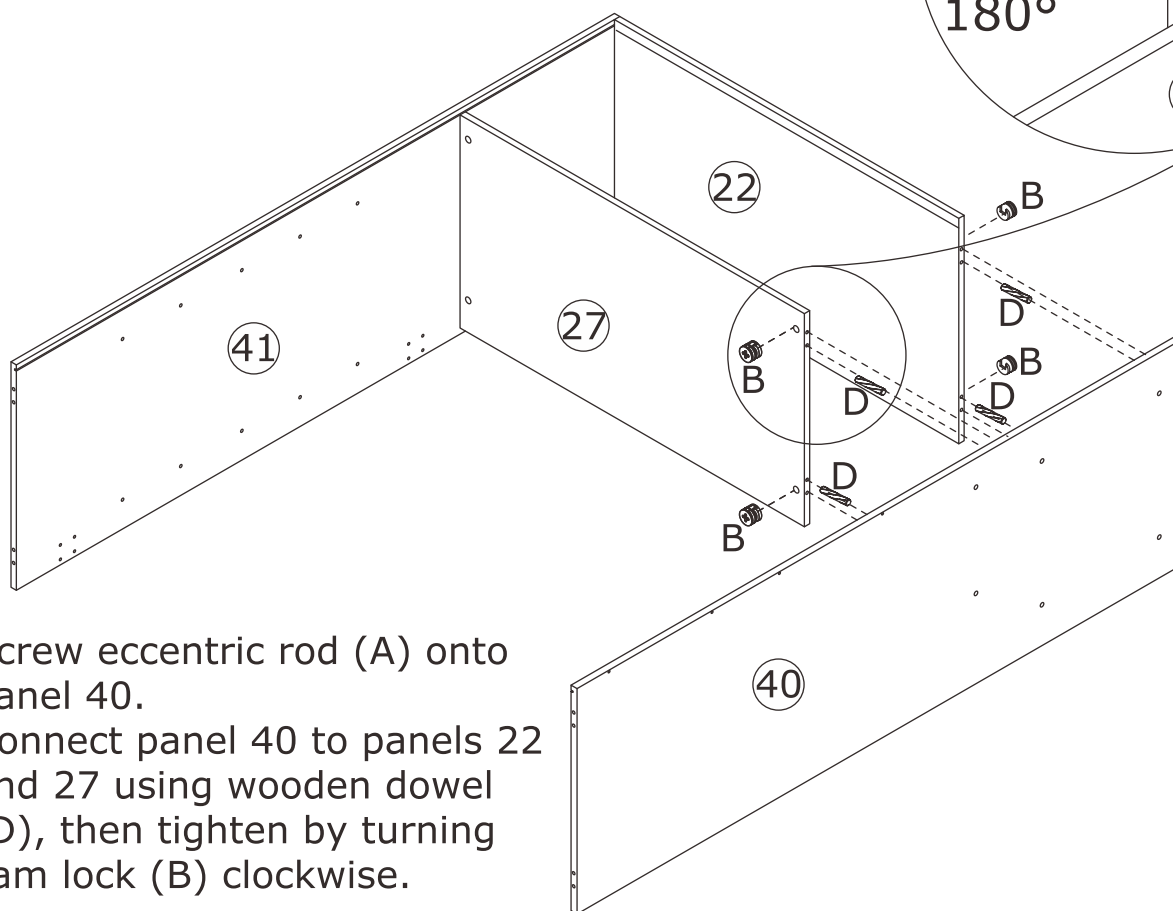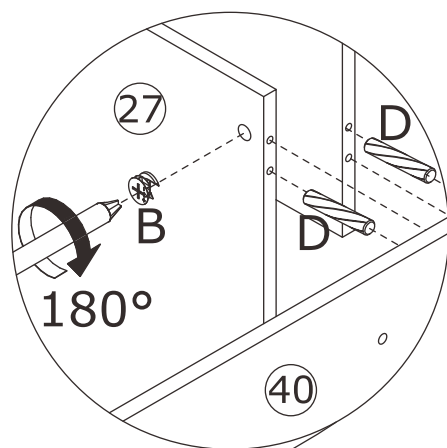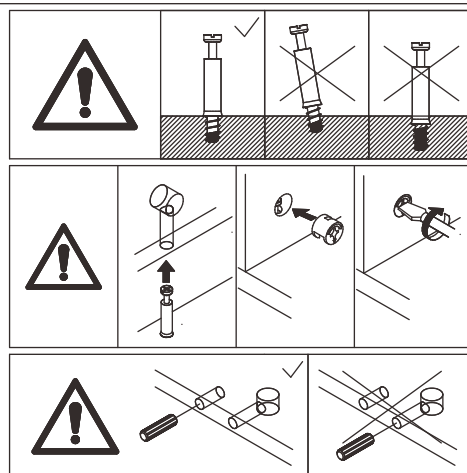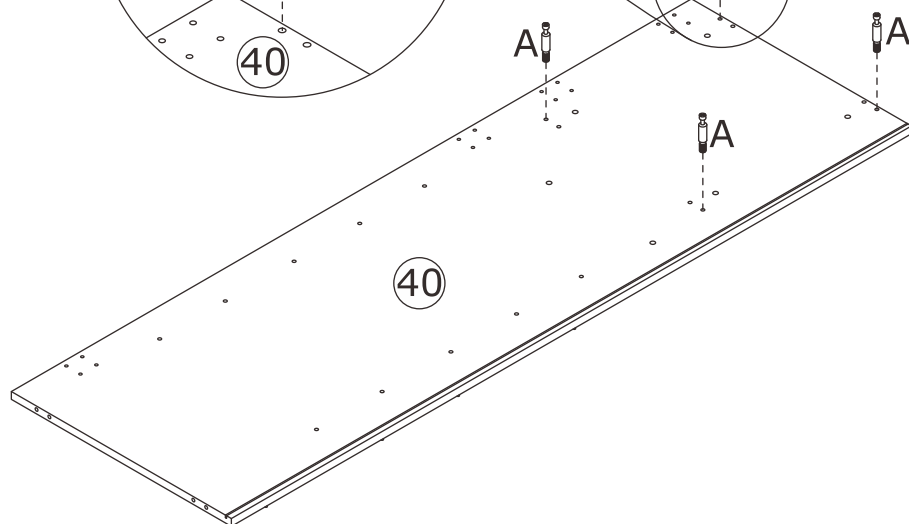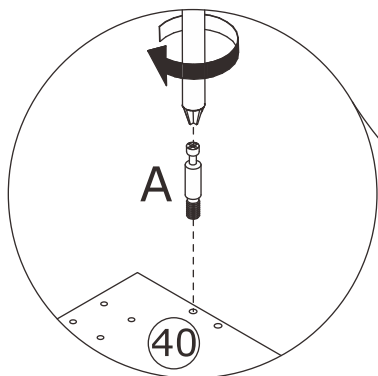 

Screw eccentric rod (A) onto panel 40.
Connect panel 40 to panels 22 and 27 using wooden dowel (D), then tighten by turning cam lock (B) clockwise.


34

Connect two back panels 32 to strip 59.
Insert panel 32 along the grooves.

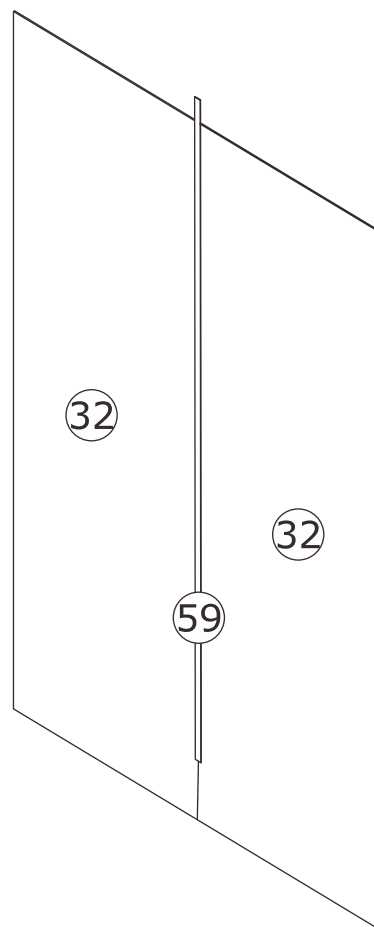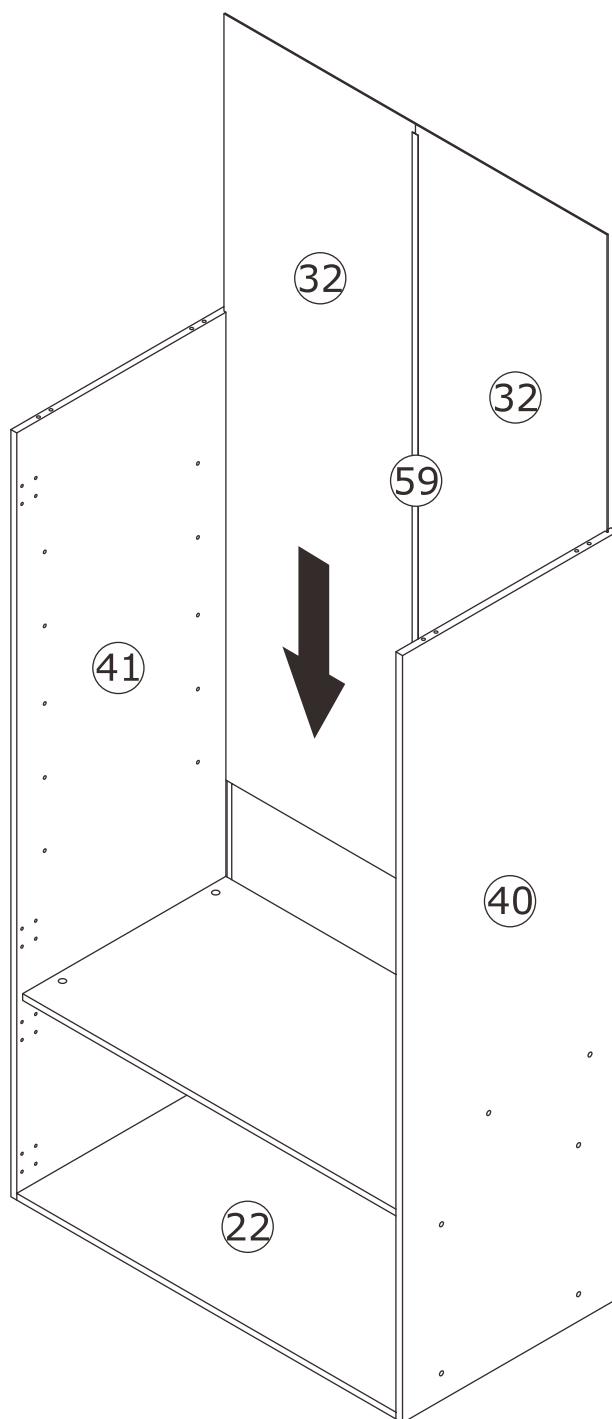


35

 D x 4







Ø6 x 30 mm

 T x 4




Ø4 x 35 mm

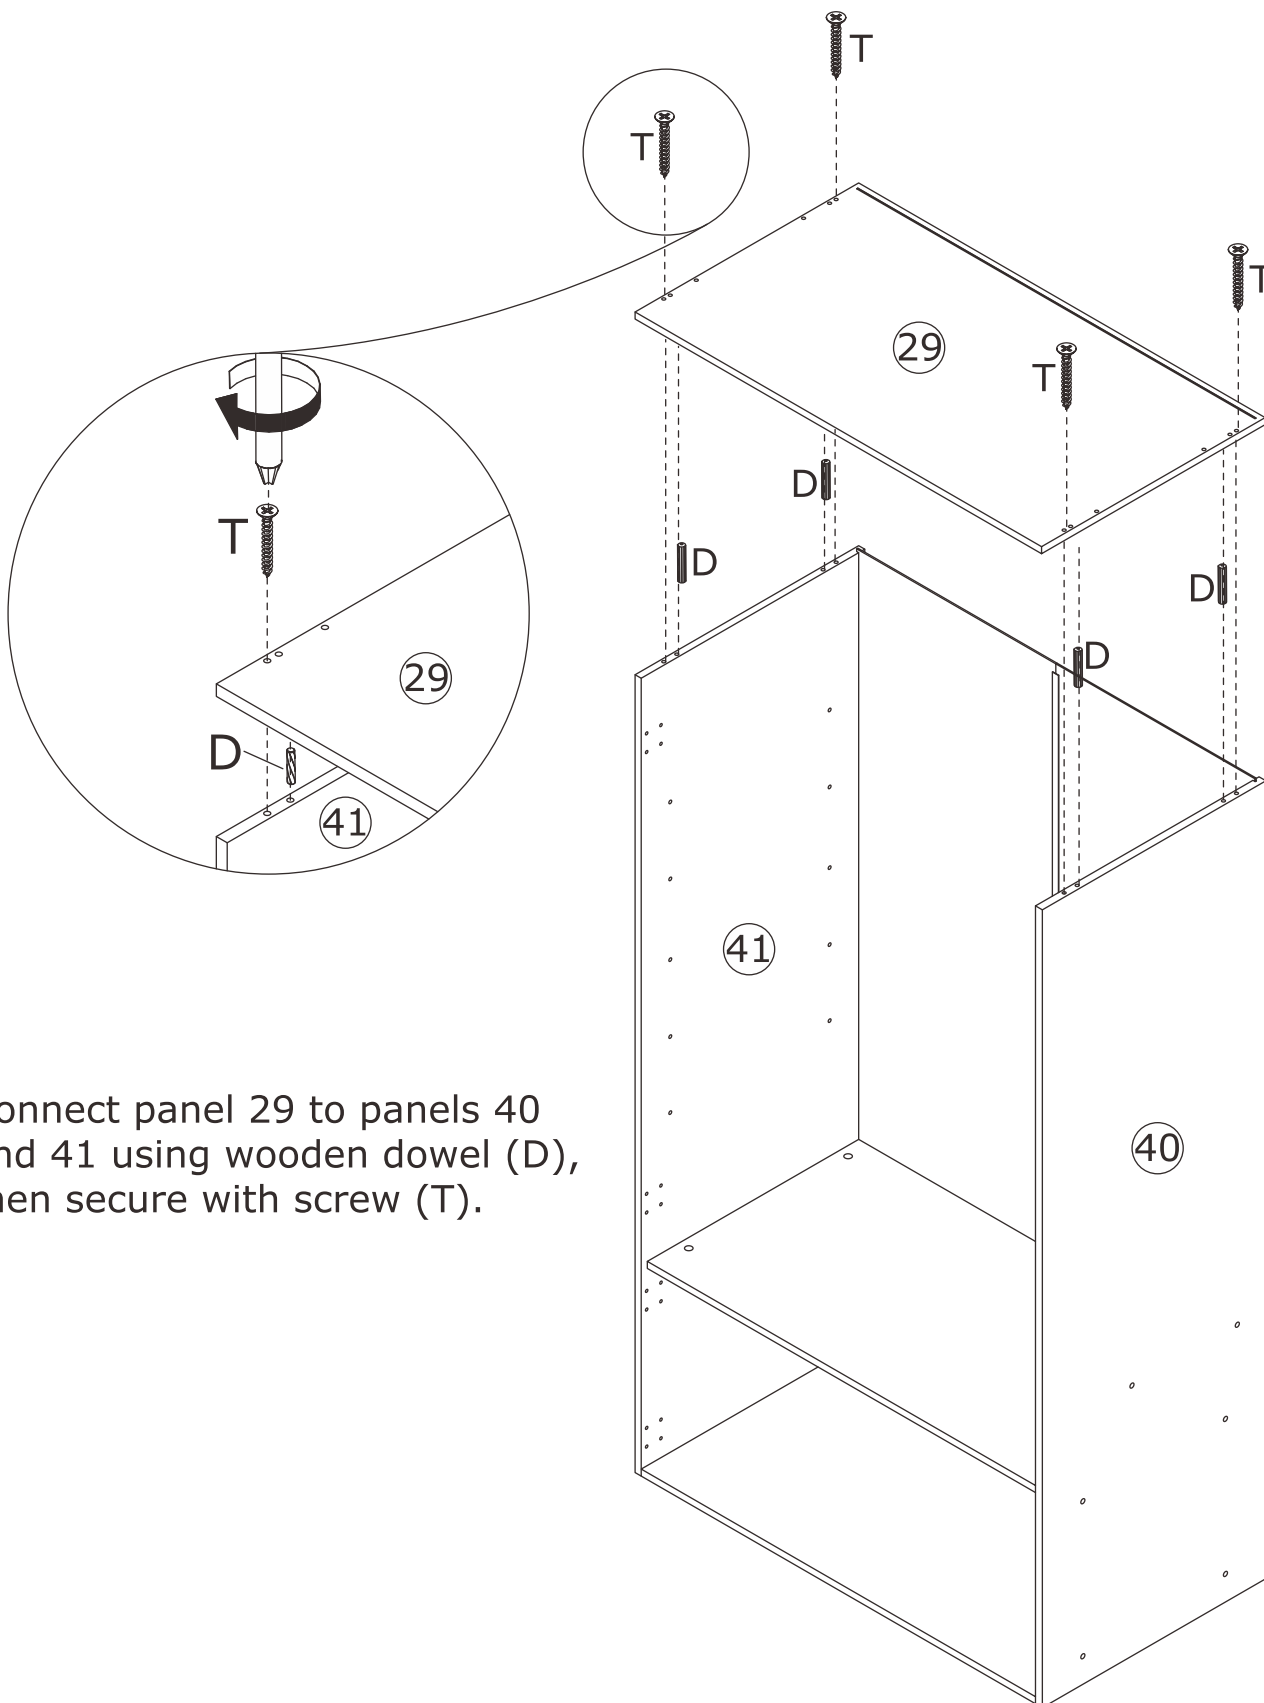   




Connect panel 29 to panels 40 and 41 using wooden dowel (D), then secure with screw (T).

36

 
A x 4



Ø6 x 35 mm

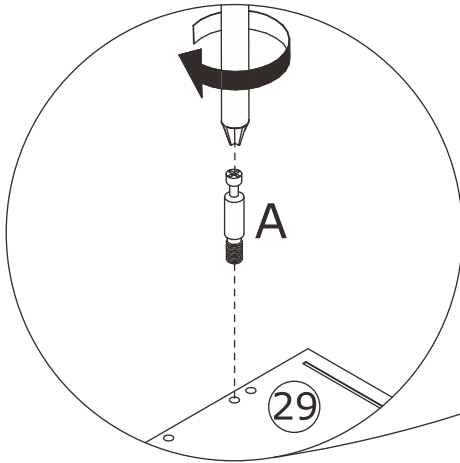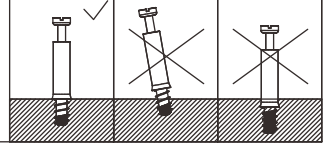 

Screw eccentric rod (A) onto panel 29.

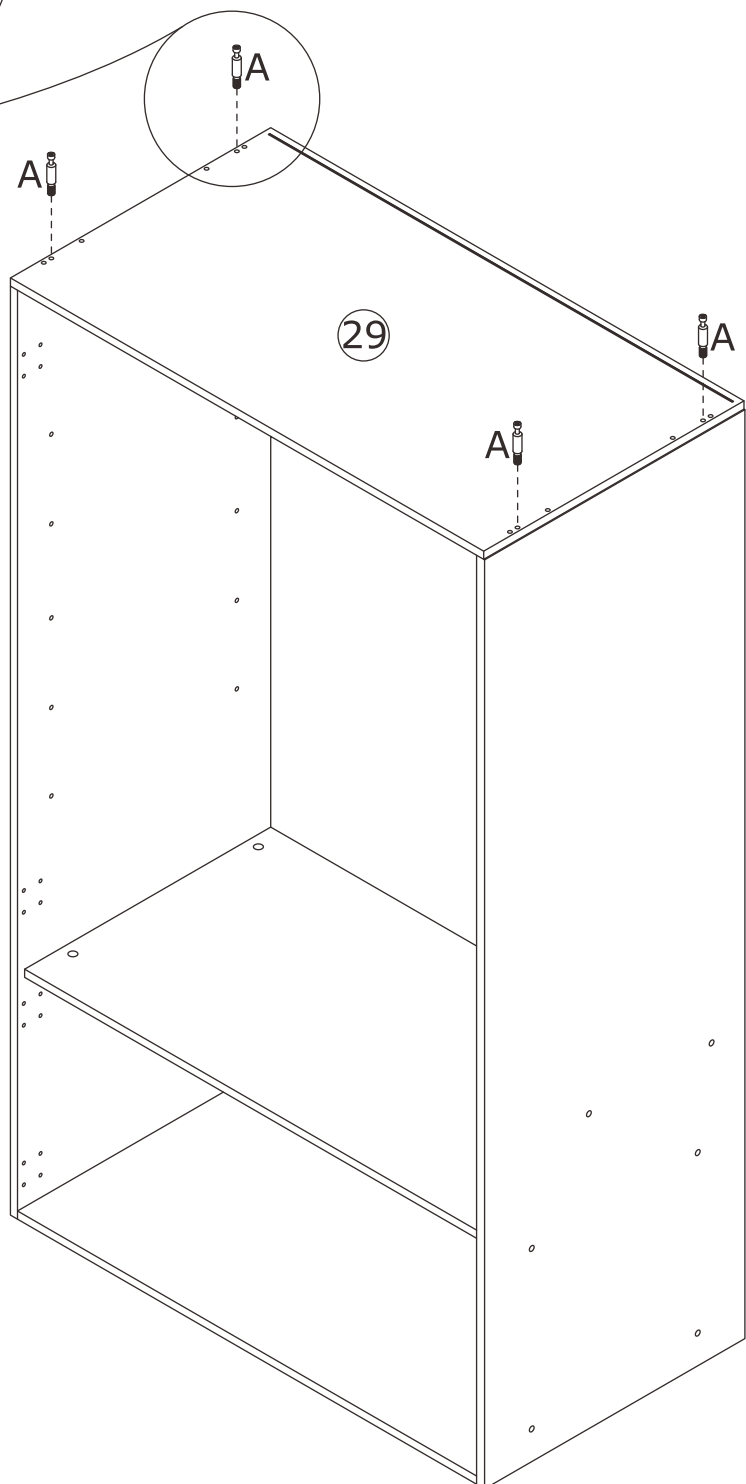


37

B x 4






Ø 15 x 10 mm

 
D x 4



Ø 6 x 30 mm

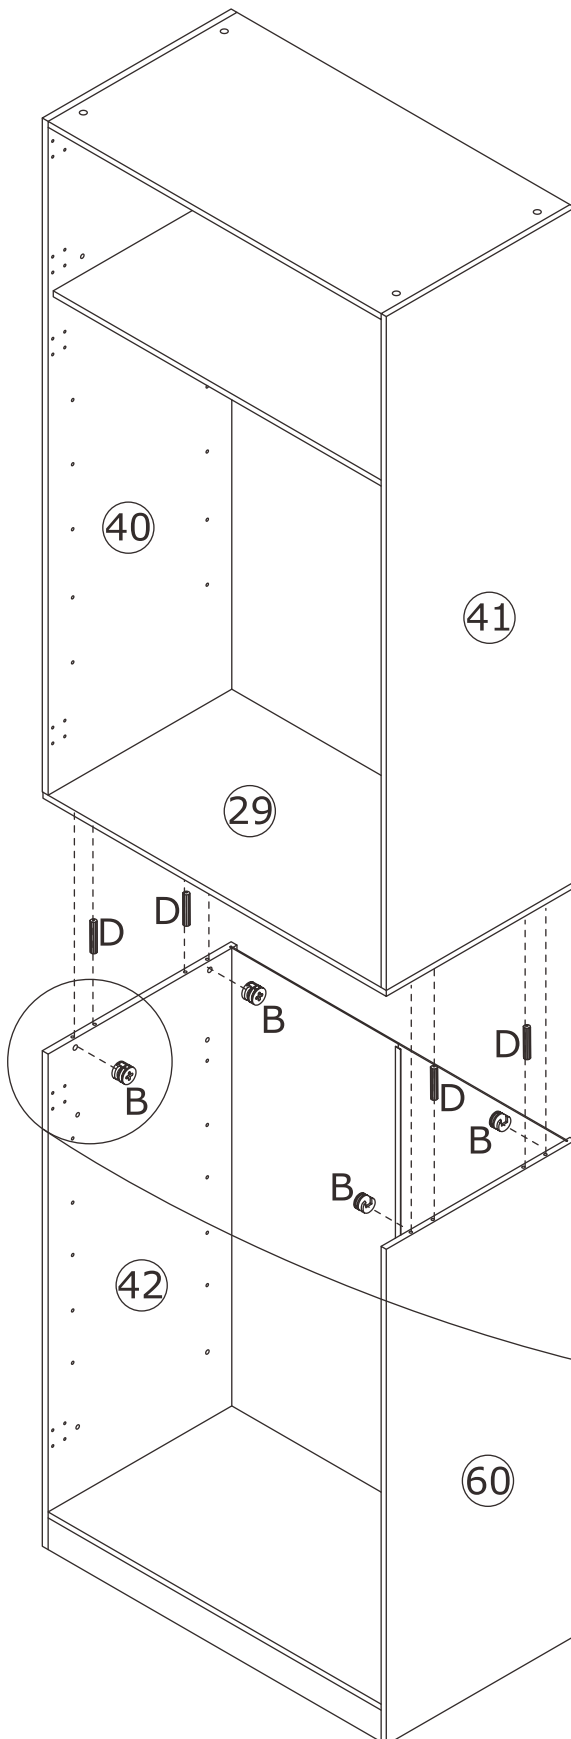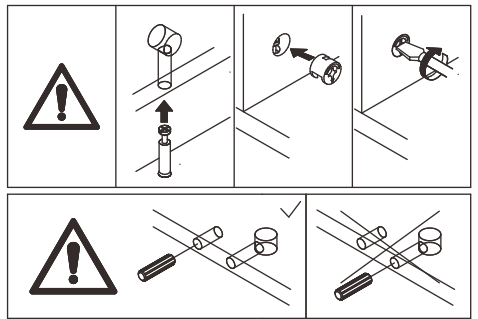
 


Connect panel 29 to panels 60 and 42 using wooden dowel (D), then tighten by turning cam lock (B) clockwise.

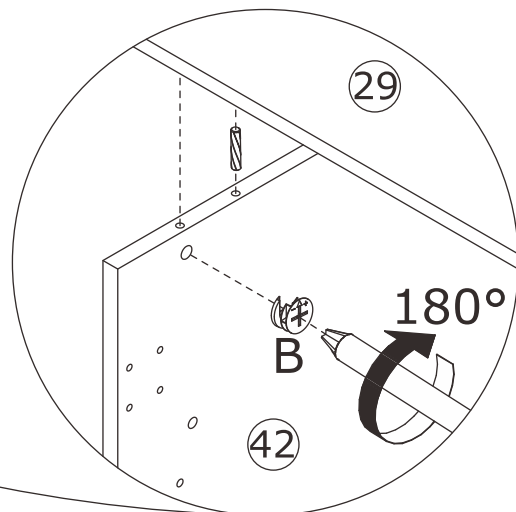


38

  K x 8





Use screw K-1 through panel 11 and 26 to tighten into nut K-2.

Use screw K-1 through panel 14 and 42 to tighten into nut K-2.

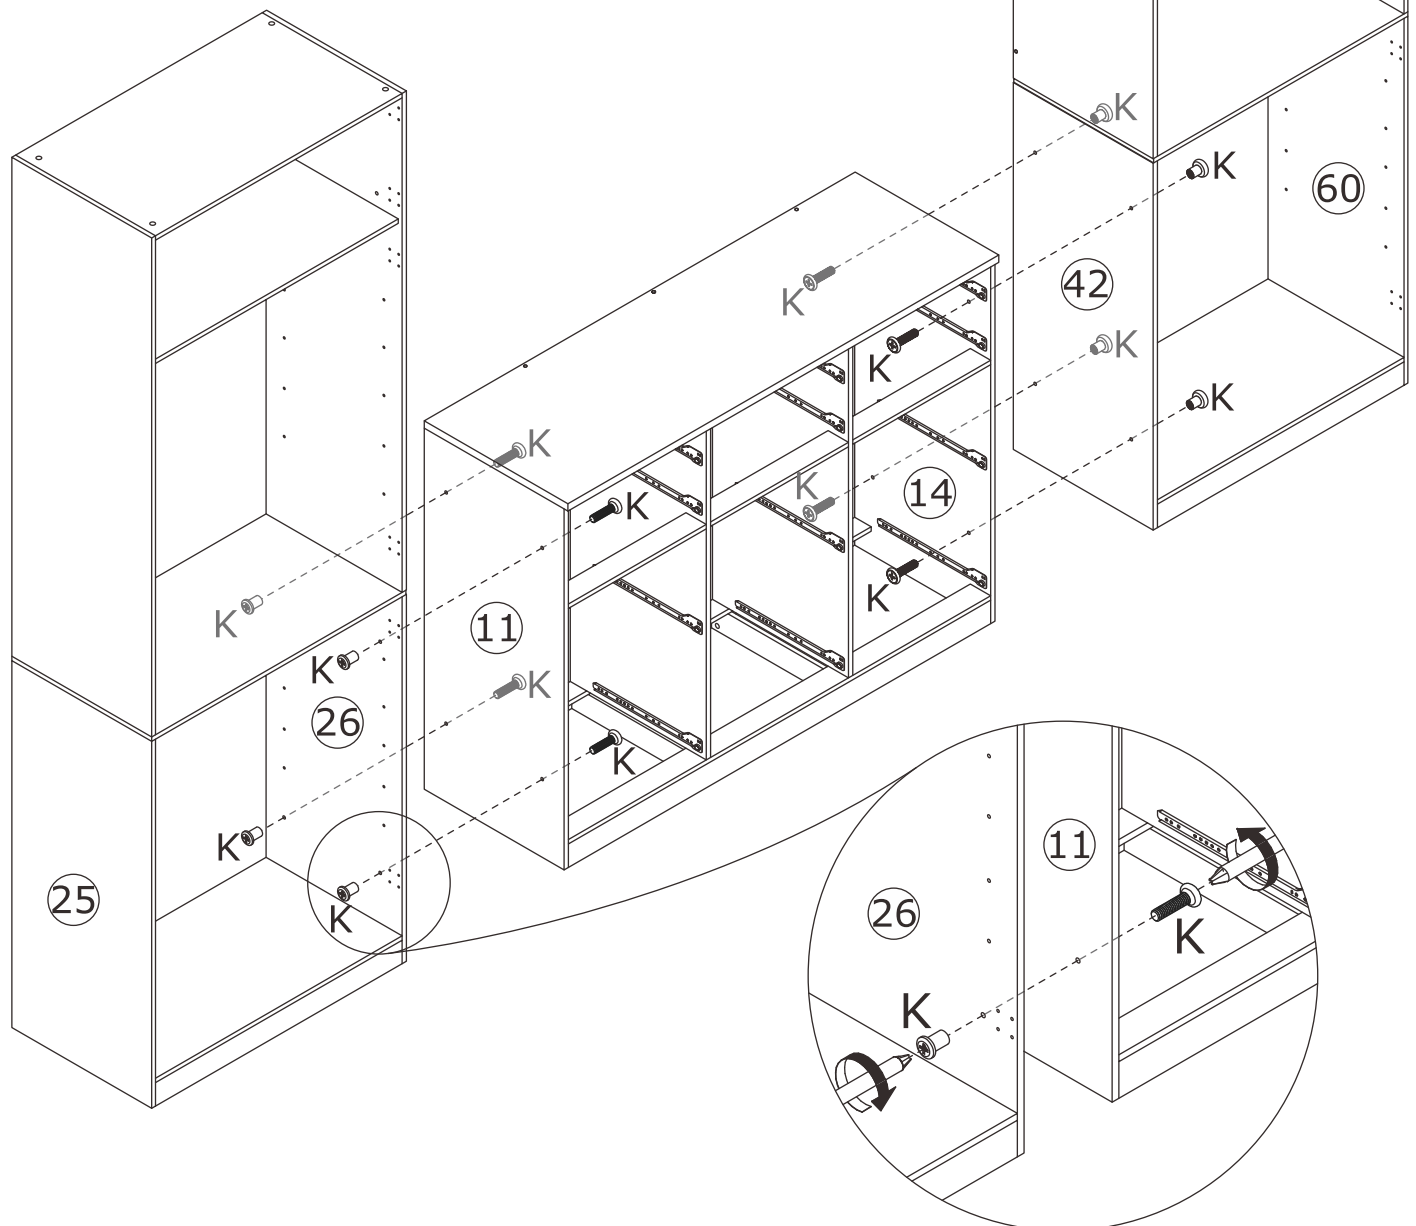

39


K x 12

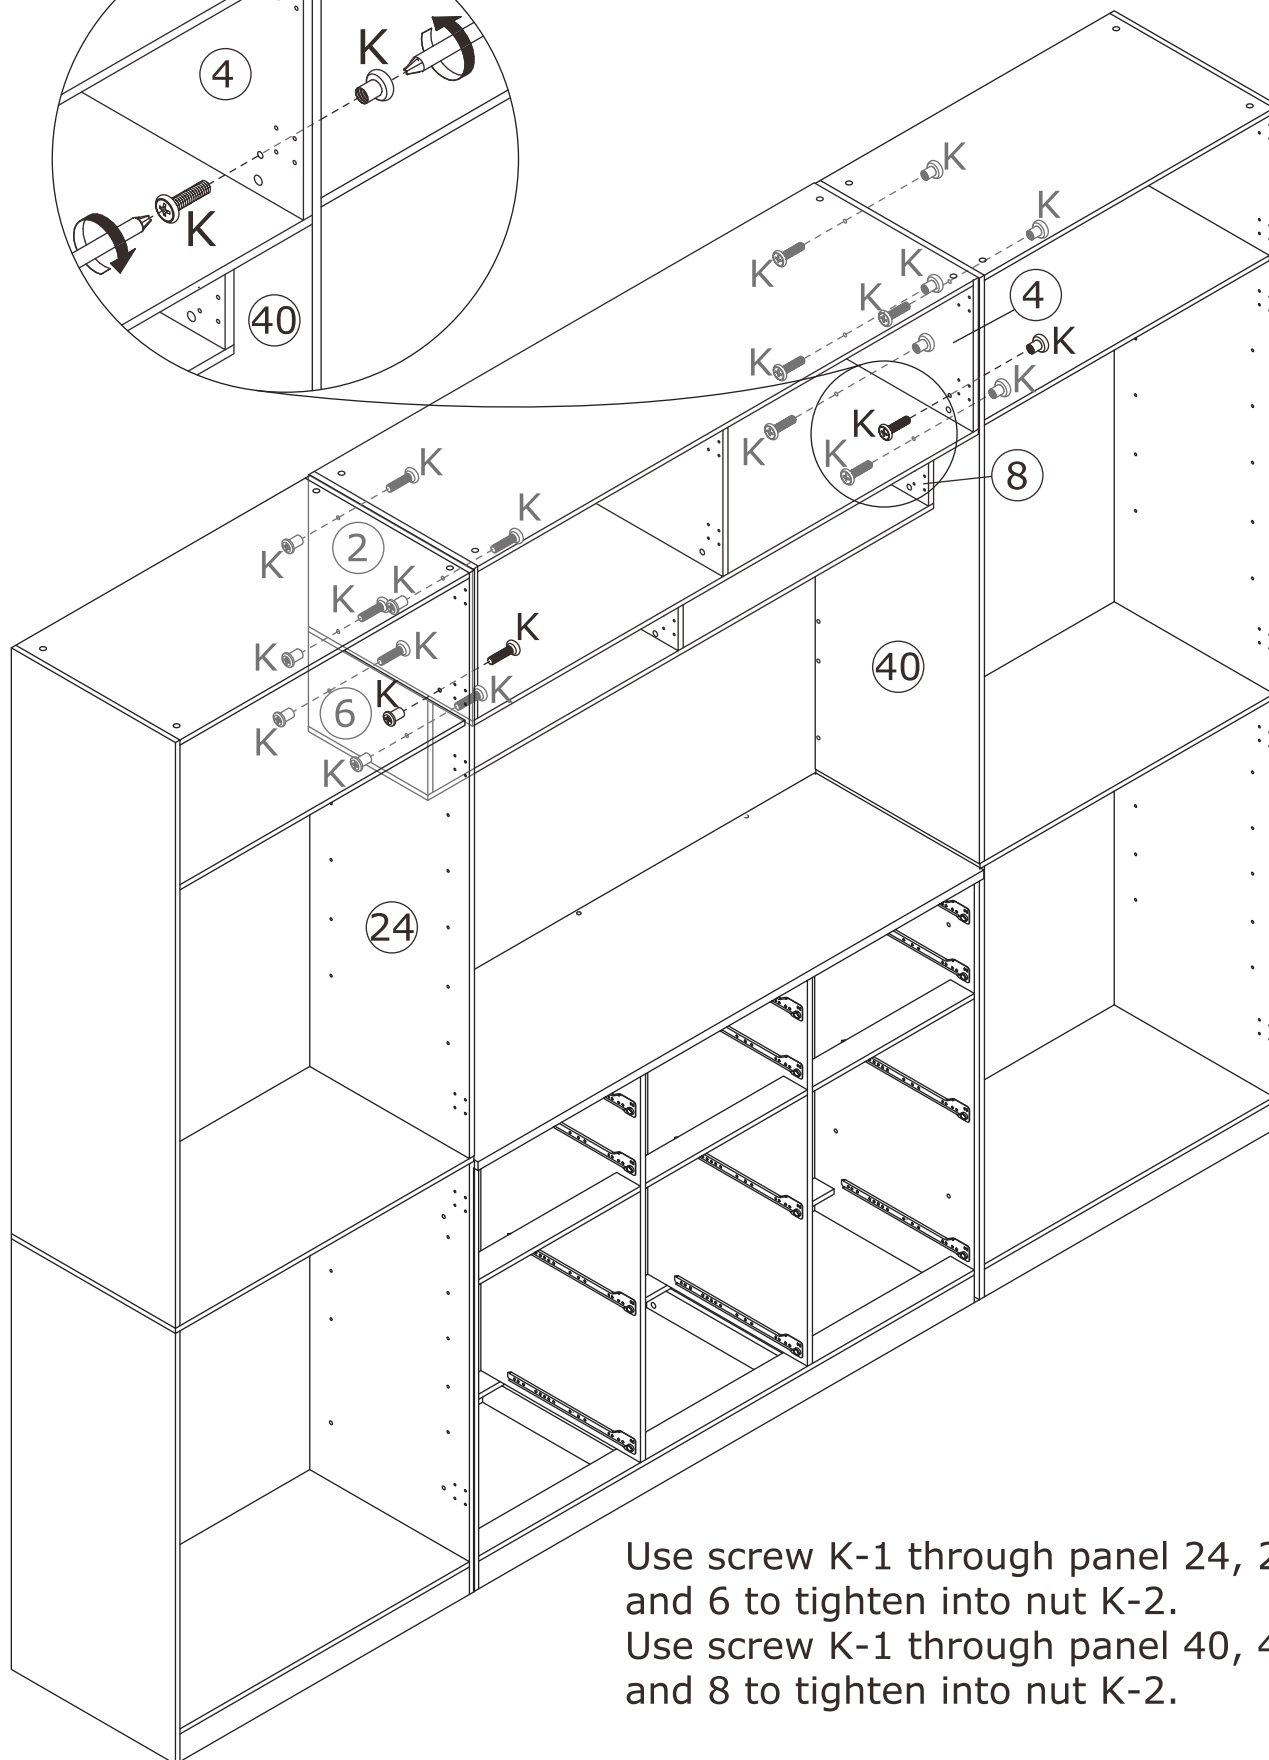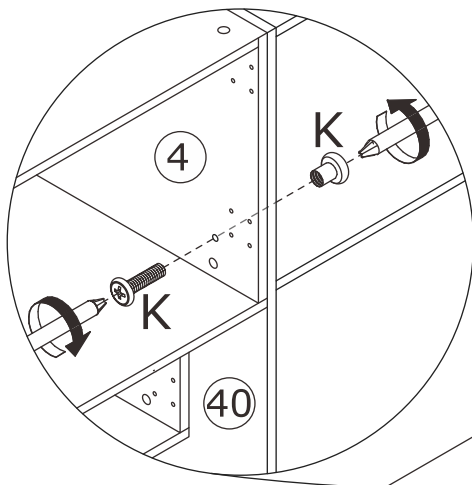


Use screw K-1 through panel 24, 2, and 6 to tighten into nut K-2.
Use screw K-1 through panel 40, 4, and 8 to tighten into nut K-2.

40

 U x 32



Insert pin (U) into panels 23, 24, 25, 26, 40, 41, 42, and 60.

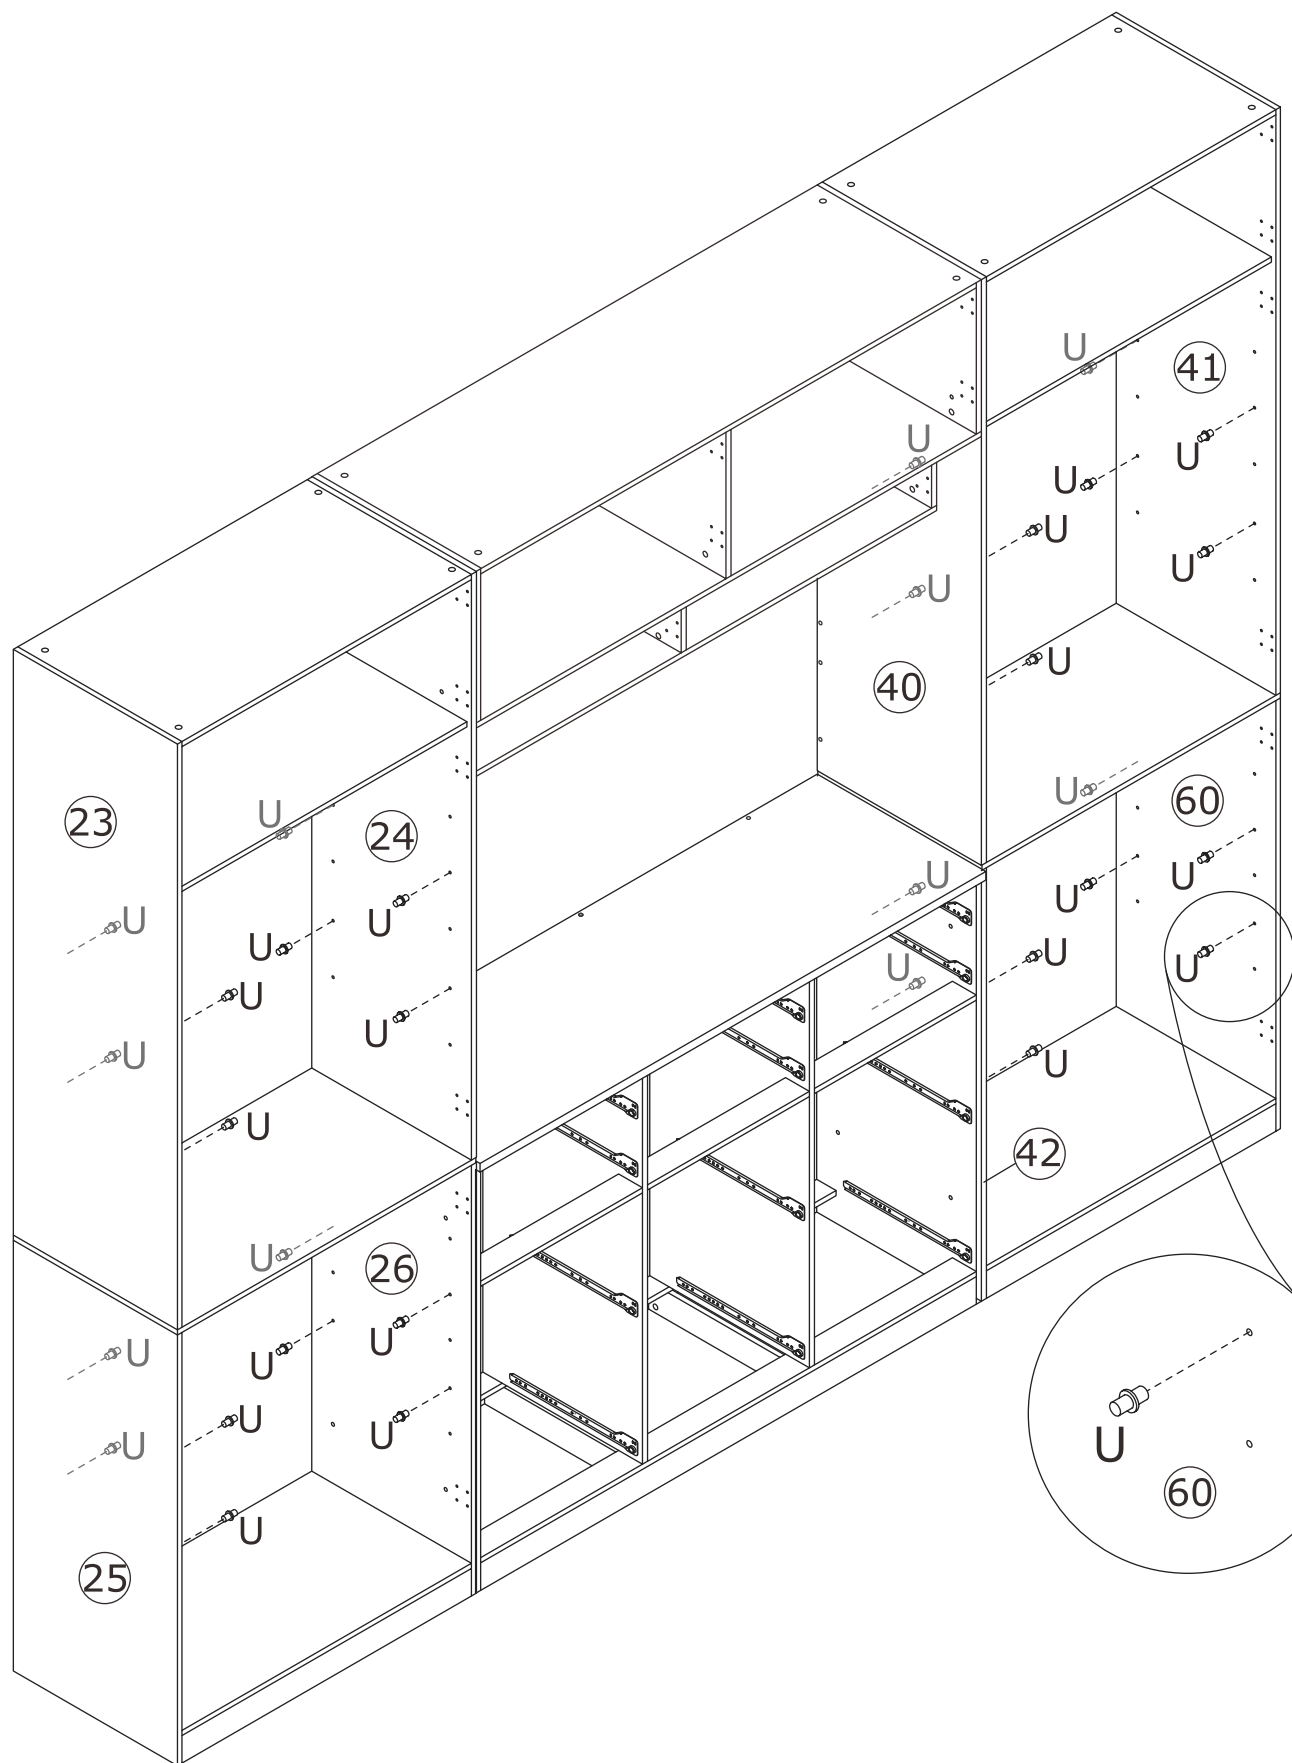

41

E x 20






Ø4 x 10 mm

G x 4




Secure the back panels to the unit using screw (E).
Secure two panels 58 using screw (G).

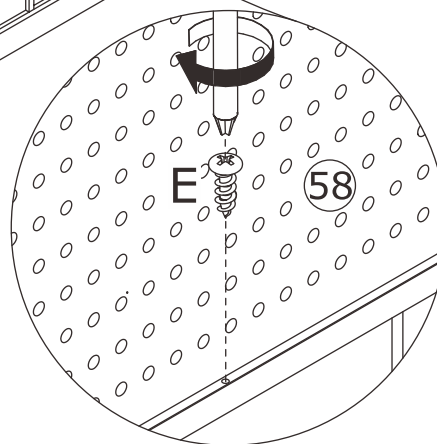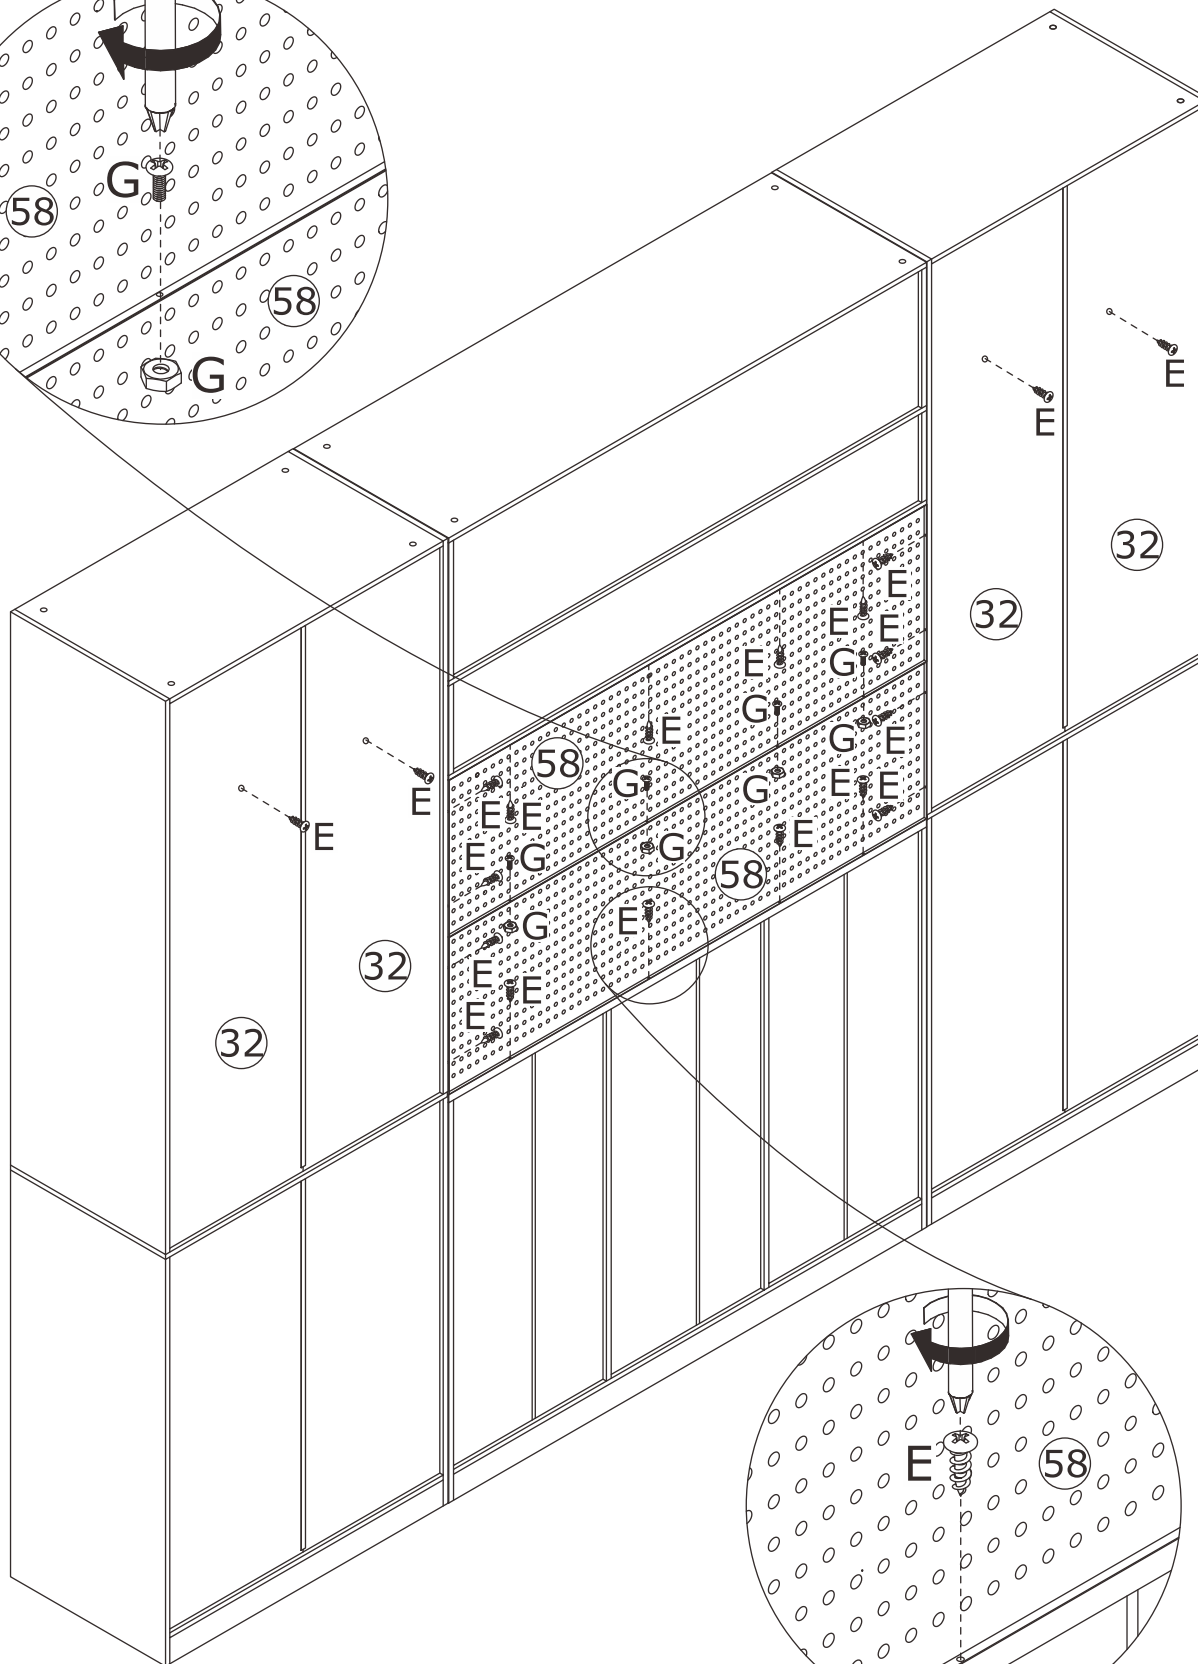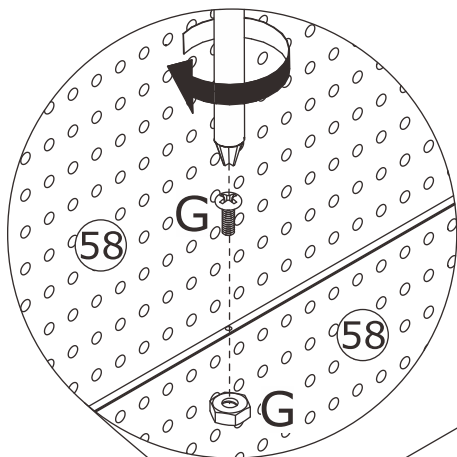

42

 
R x 62



Ø3 x 16 mm



Insert clip (R) into back slots and secure them with scrwes.

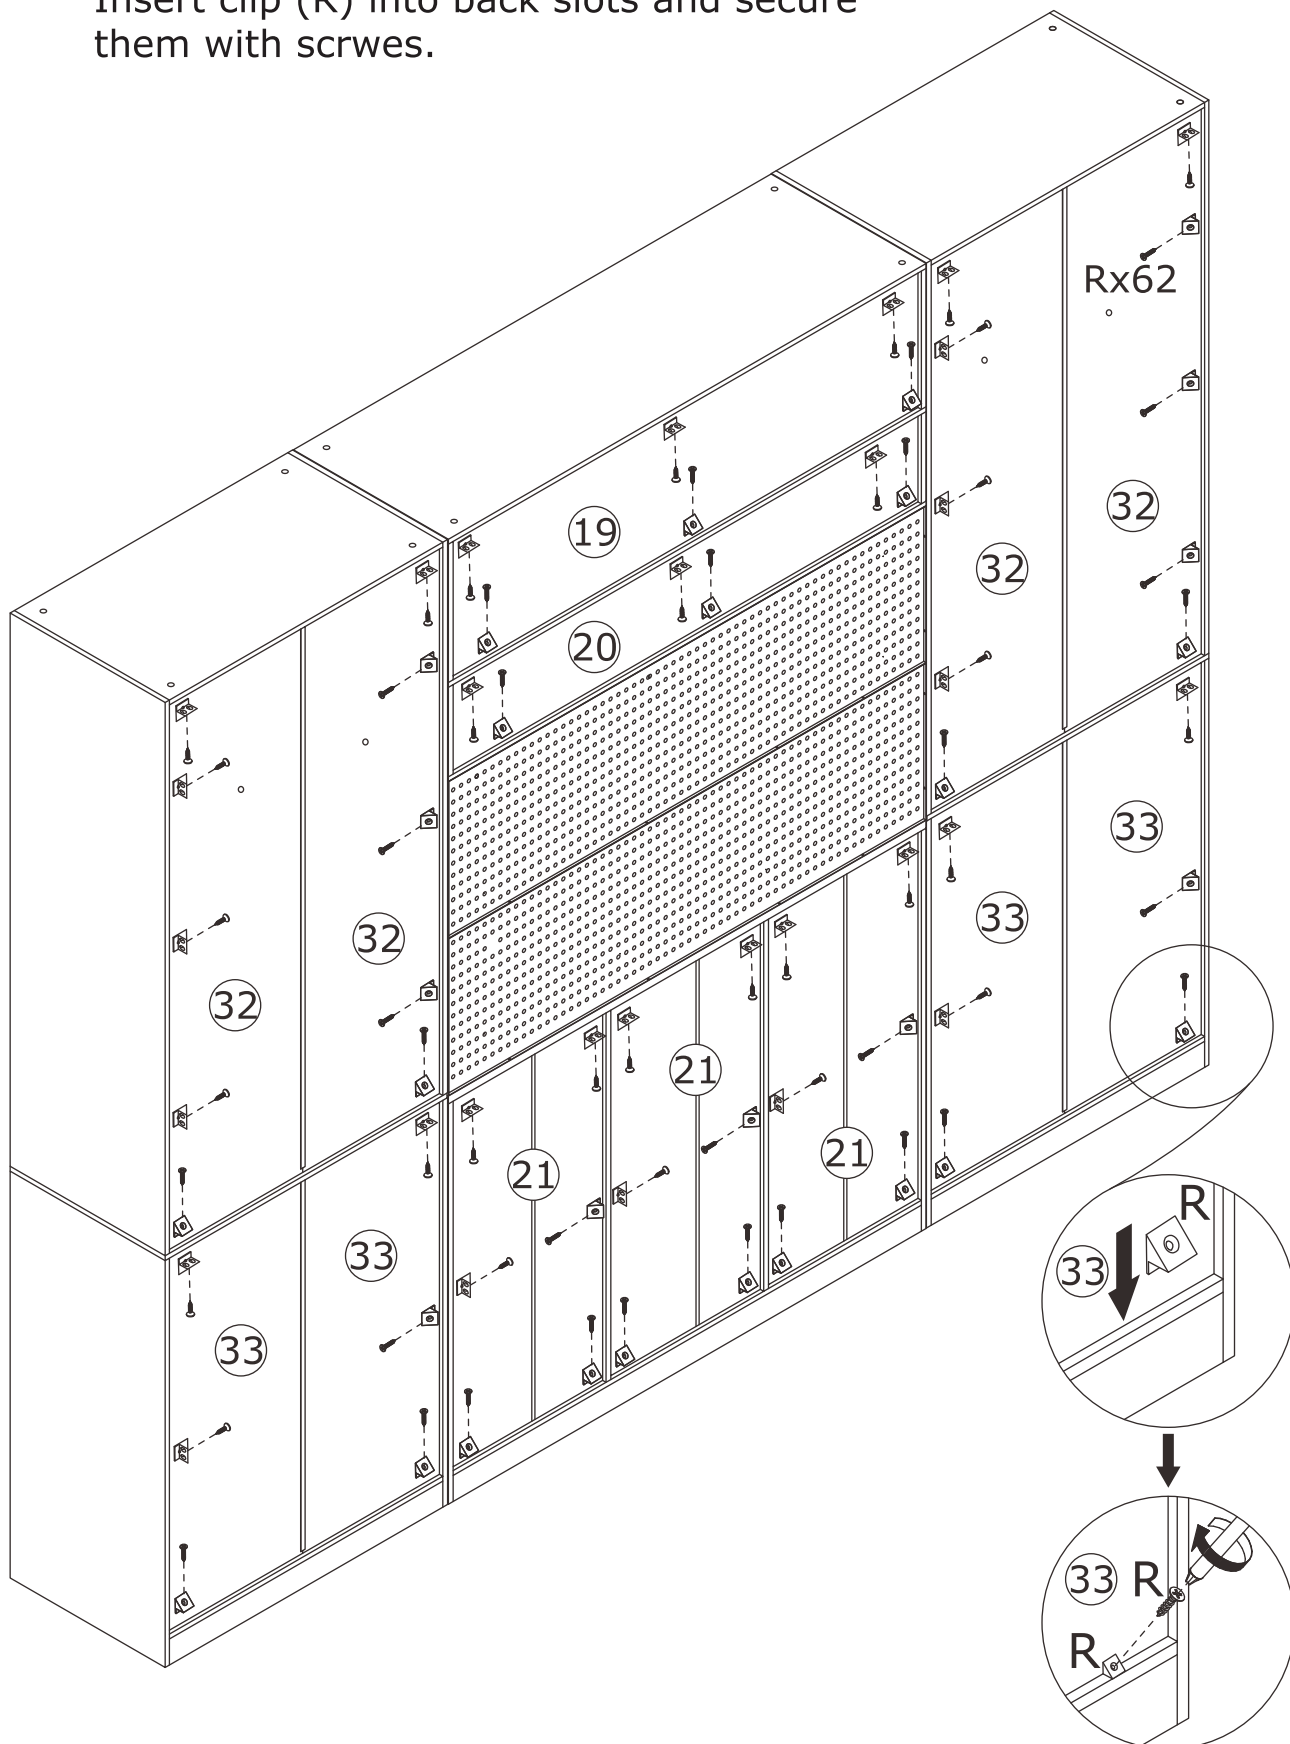


43

W x 28





Apply hole stickers as shown.
Insert adjustable shelf panel 28.

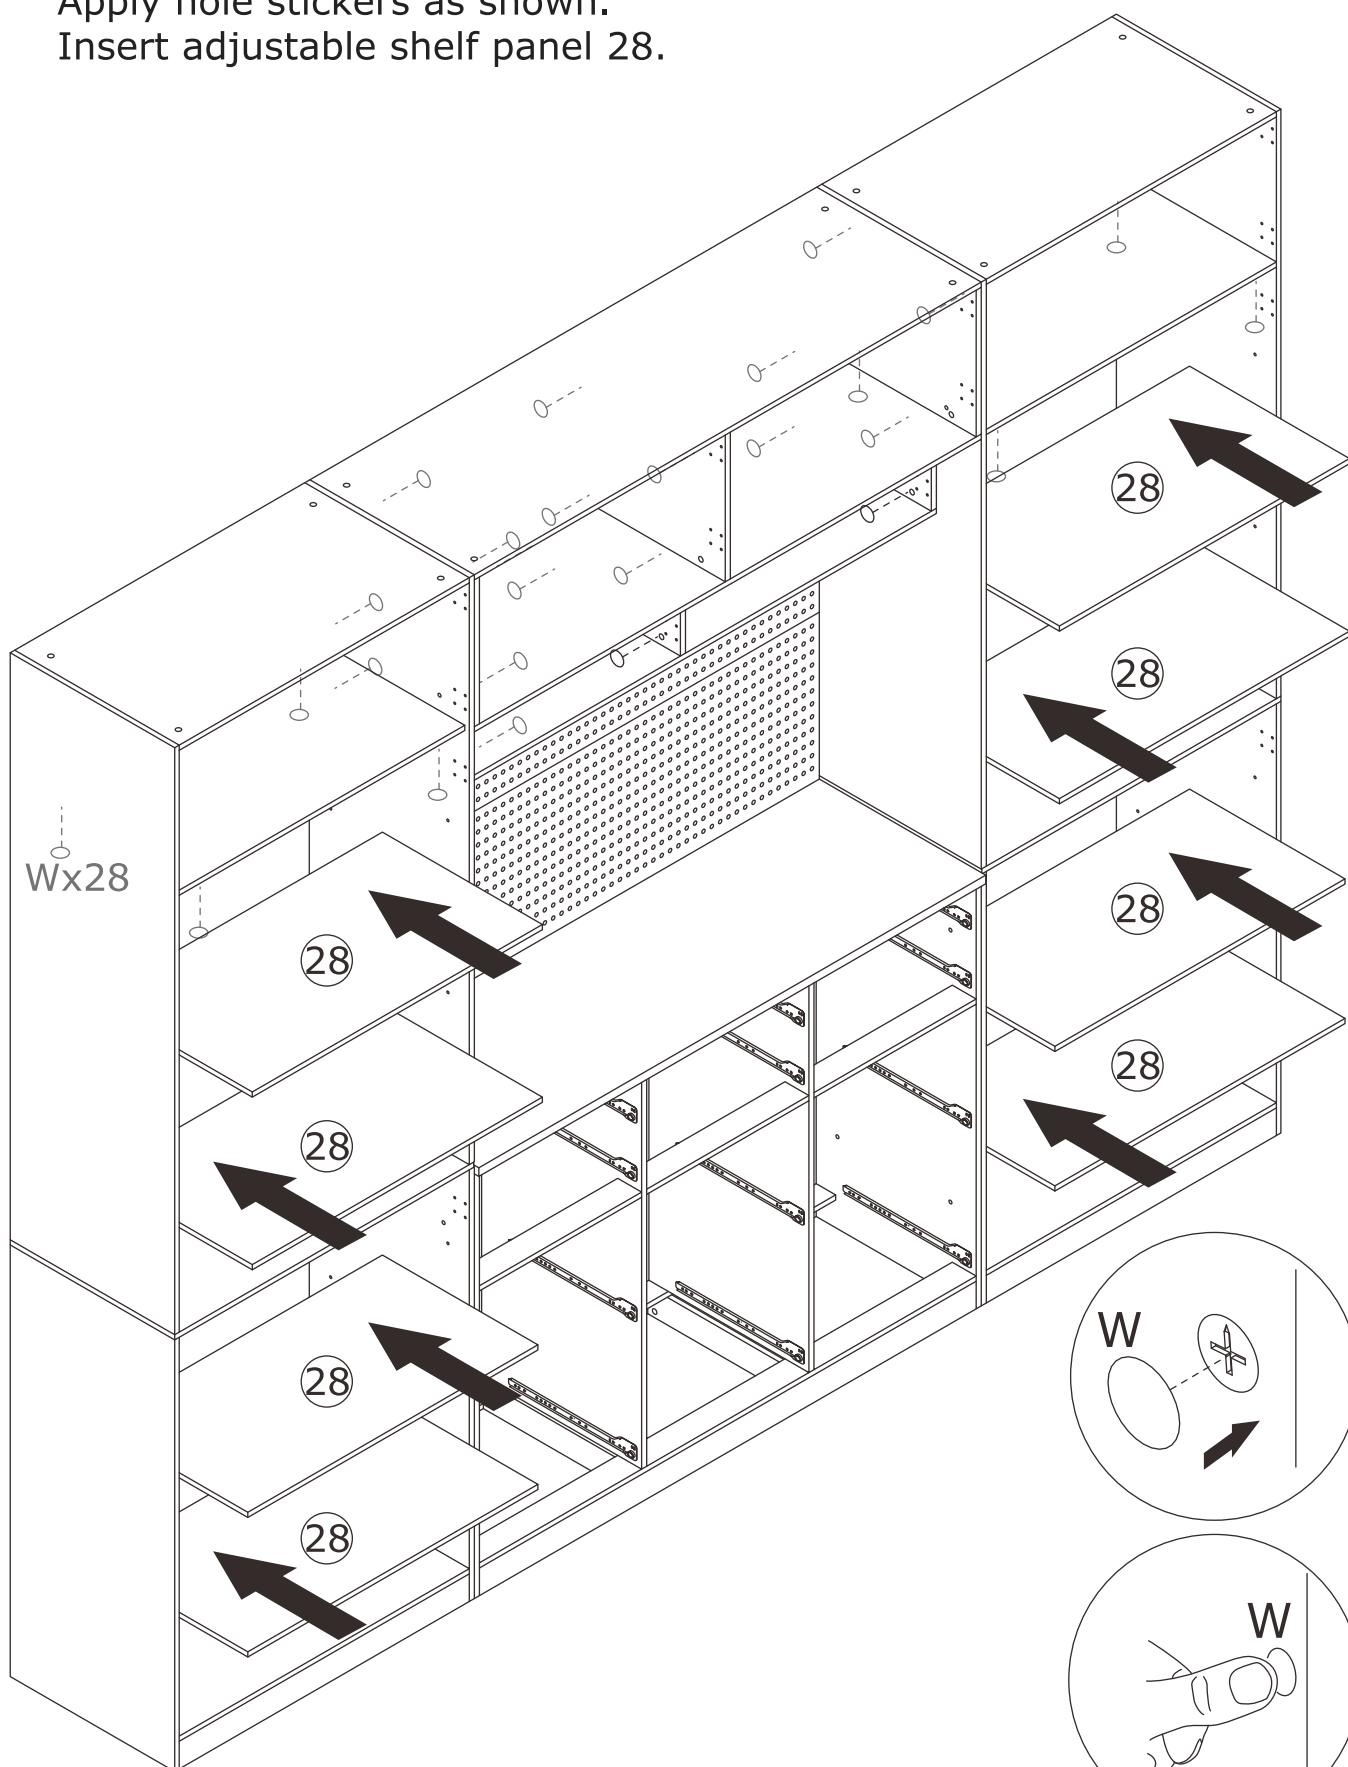



Pay attention to the difference between the middle parts of the two types of door hinges.

- The curved door hinges(F) are used on the middle door plates
- And the full coverage door hinges(V) are used on the outermost door plates

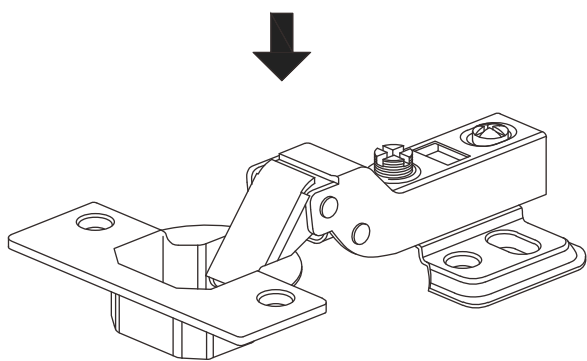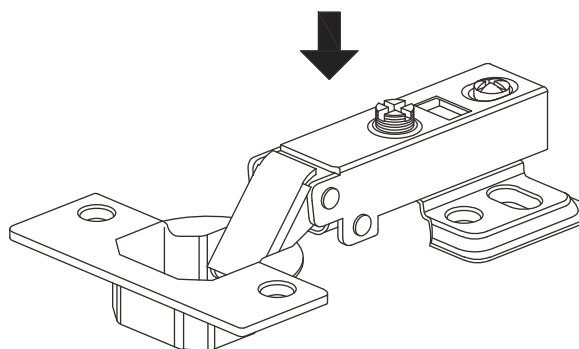
**F****V**

45

L x 16



 N x 32














Ø 4 x 18 mm

S x 64



Ø 3.5 x 12 mm

 
V x 32

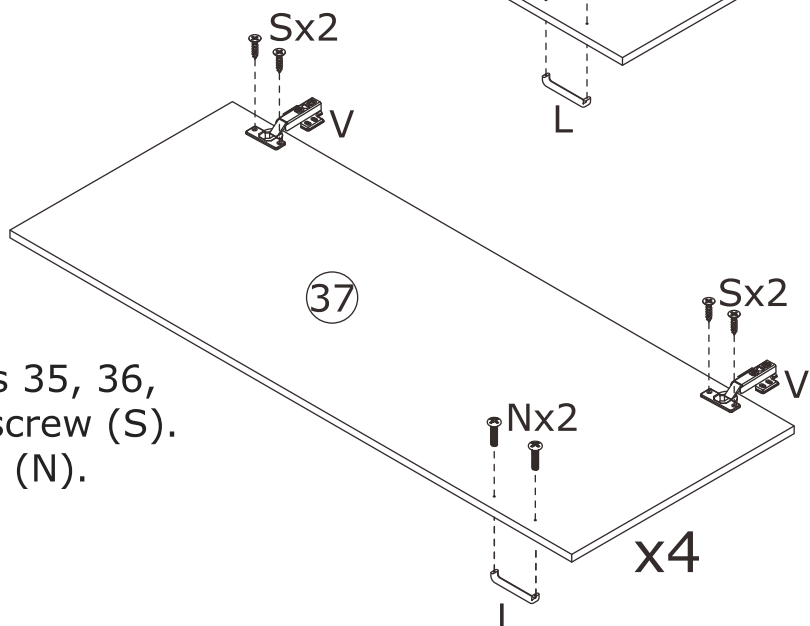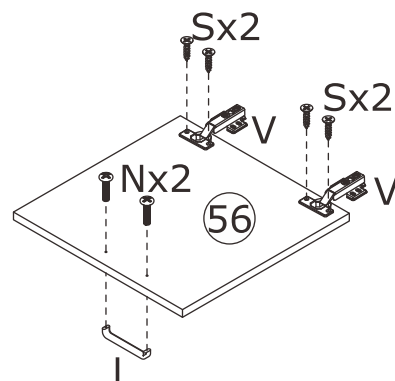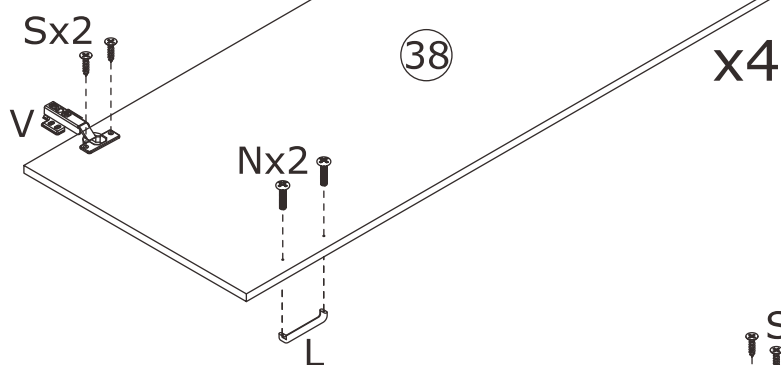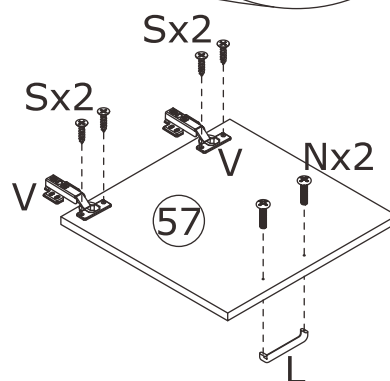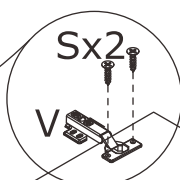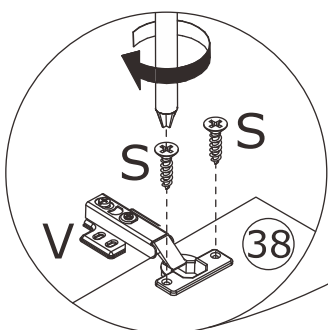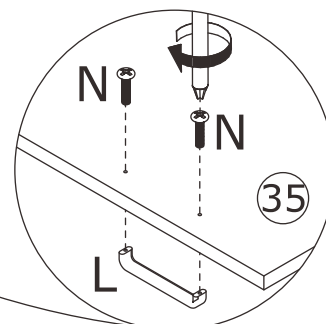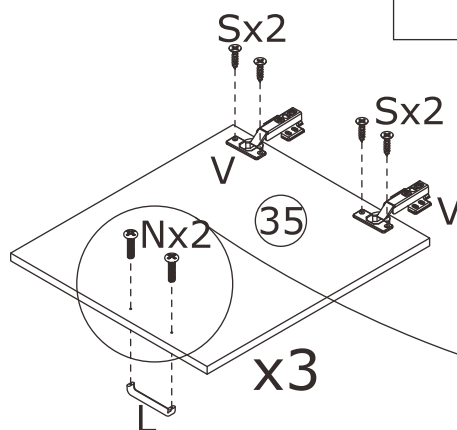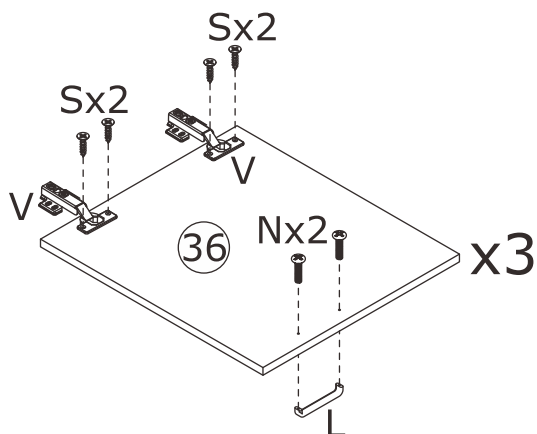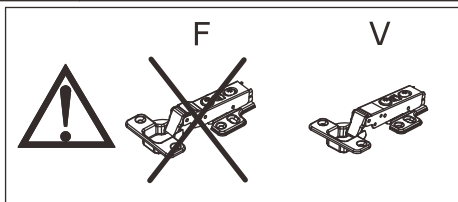

Secure hinge (V) to panels 35, 36, 37, 38, 56, and 57 using screw (S).
Fix handle (L) using screw (N).

46


 
S x 128



Ø3.5 x 12 mm




Connect all door panels to their corresponding positions as shown, by securing the hinges using screw (S).

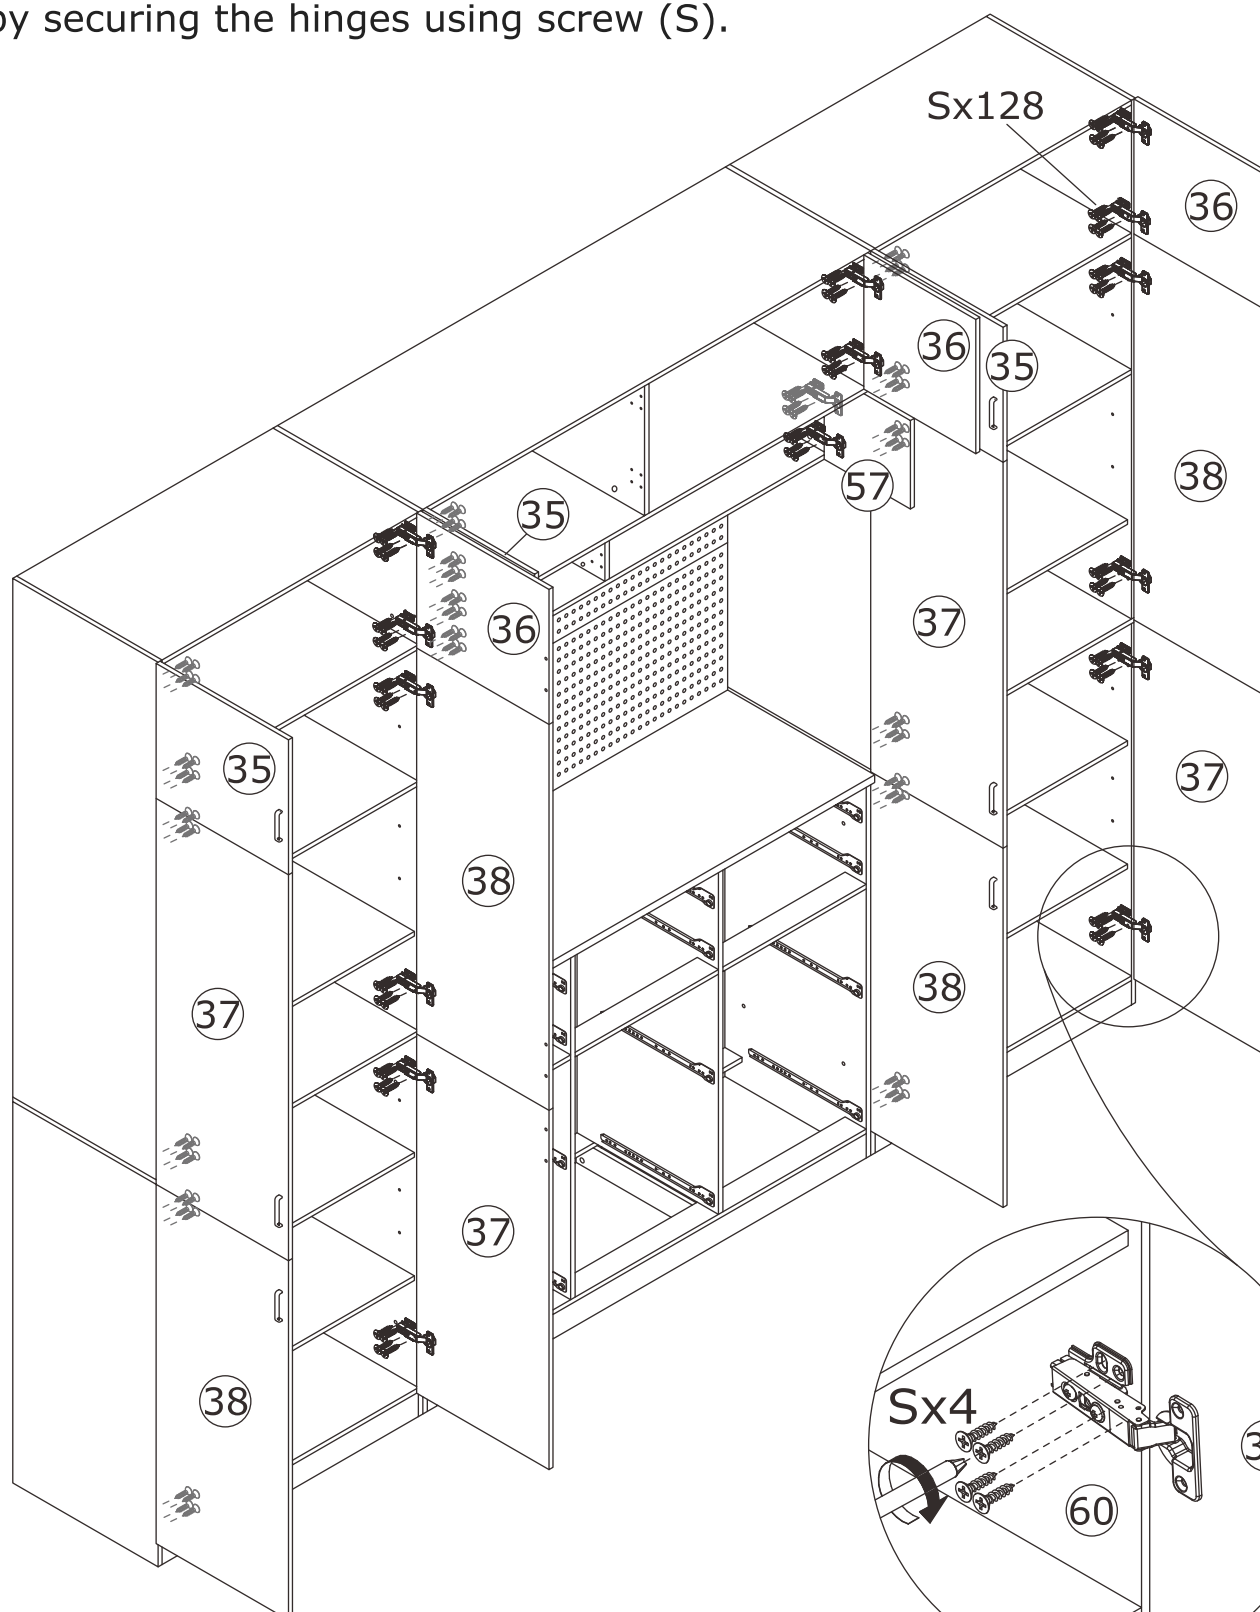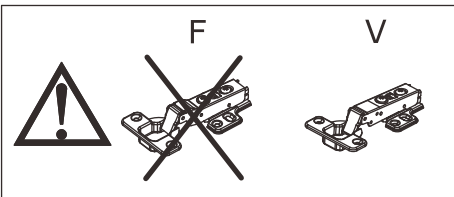

47

 
F x 8



L x 4




 N x 8



Ø 4 x 18 mm

 
S x 16











Ø 3.5 x 12 mm



 F




V

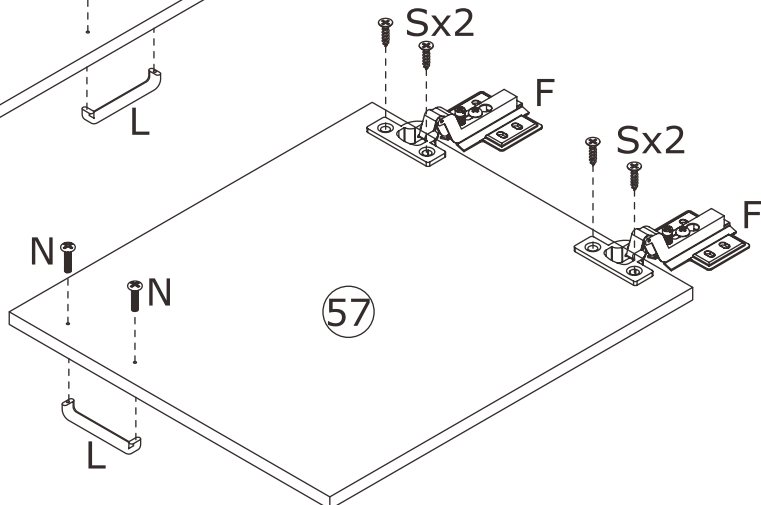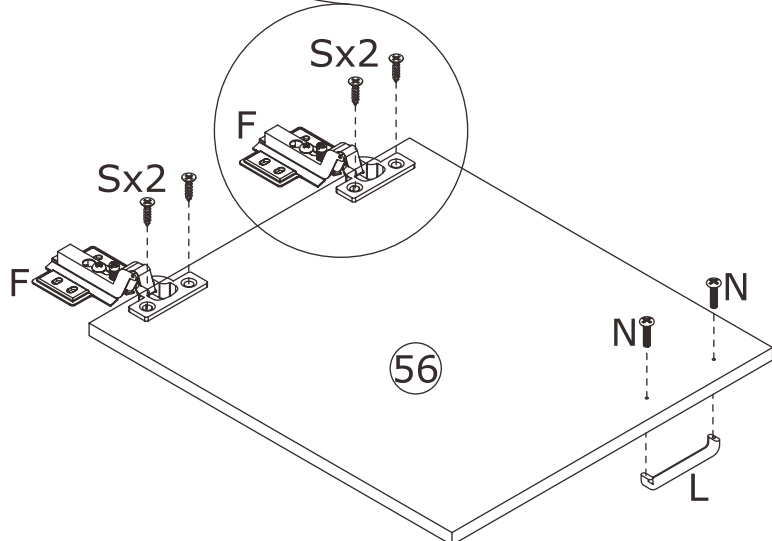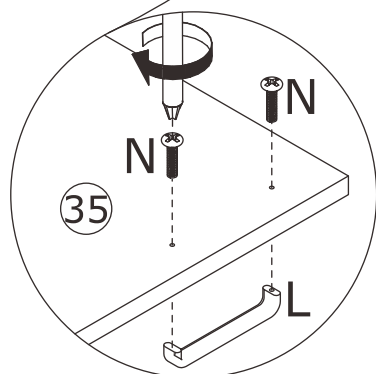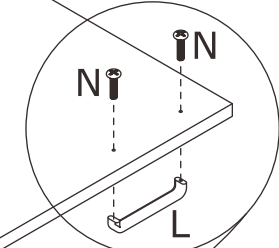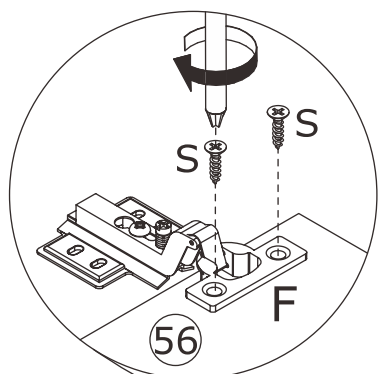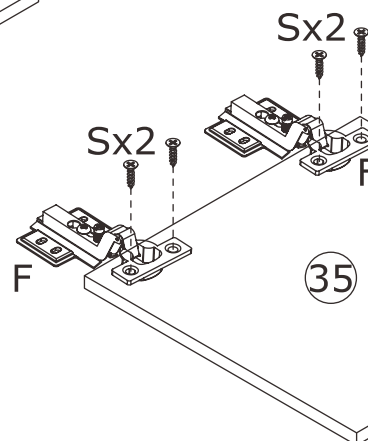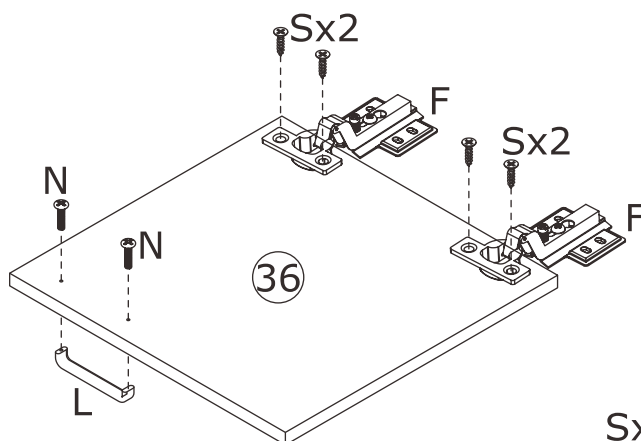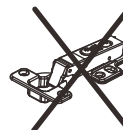

Secure hinge (F) to panels 35, 36, 56, and 57 using screw (S).
Fix handle (L) using screw (N).

48

 
S x 32





Ø 3.5 x 12 mm



 F



V

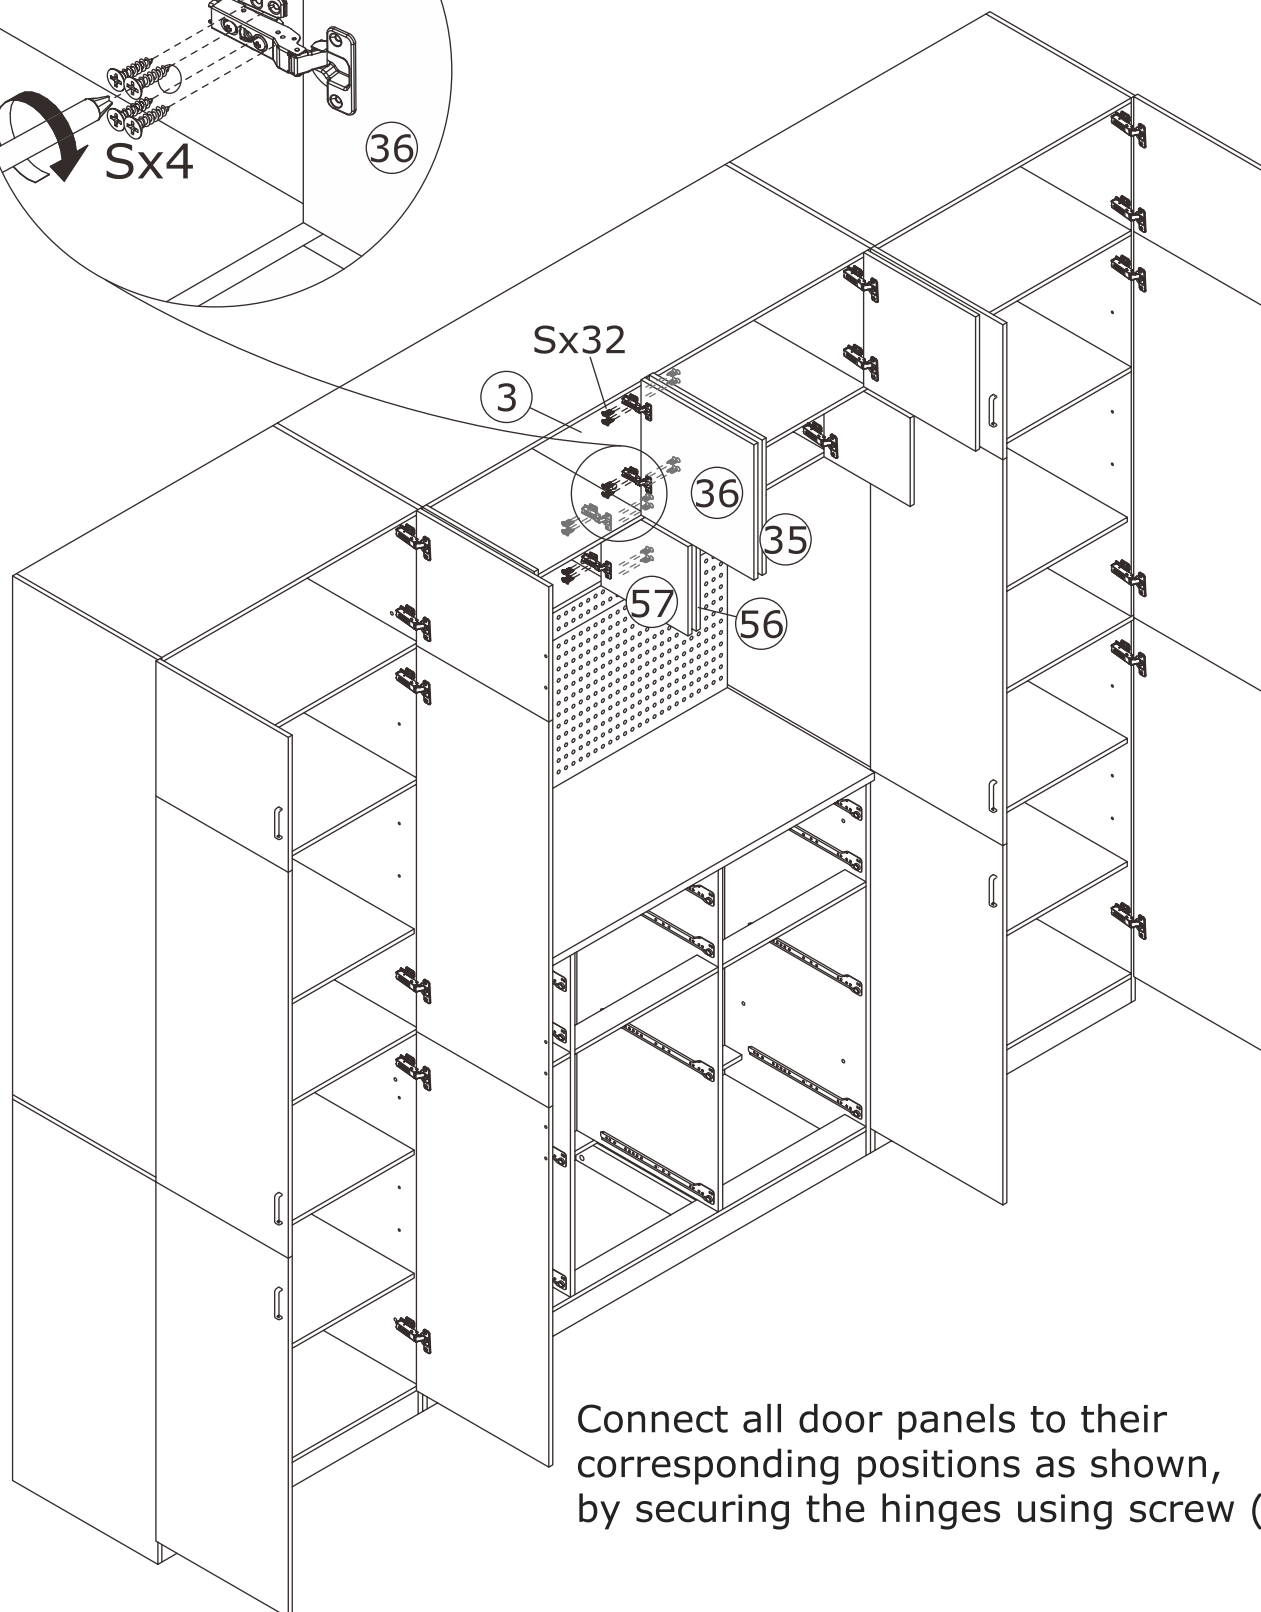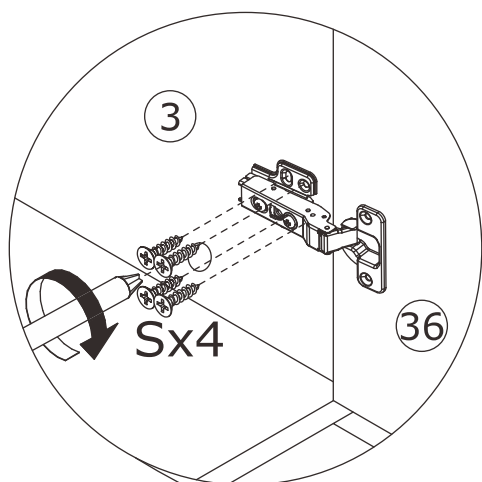


Connect all door panels to their corresponding positions as shown, by securing the hinges using screw (S).



49

T x 48

 Ø4 x 35 mm

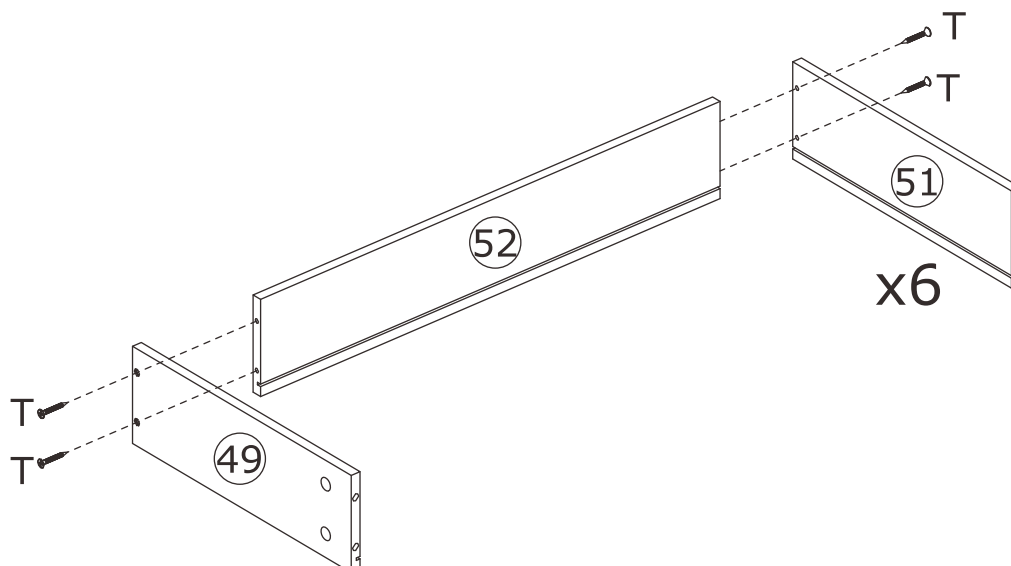


Connect panels 51 and 49 to panel 52 using screw (T).
 Connect panels 53 and 55 to panel 54 using screw (T).

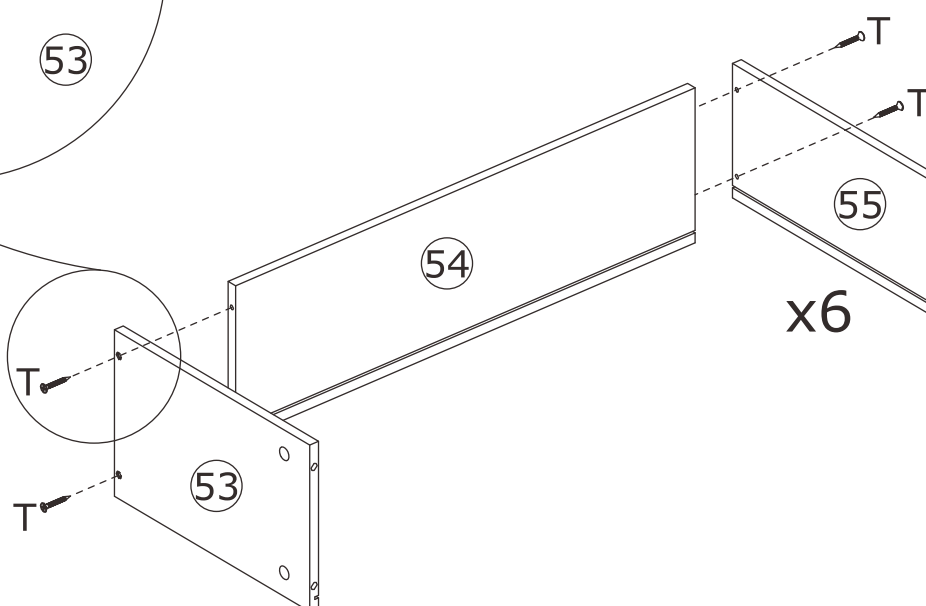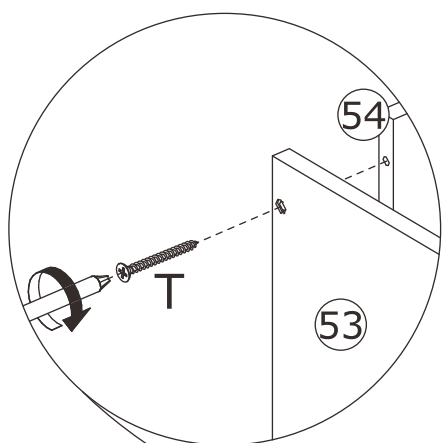

50

 A x 48




Ø6 x 35 mm











L x 12



 N x 24



Ø4 x 18 mm

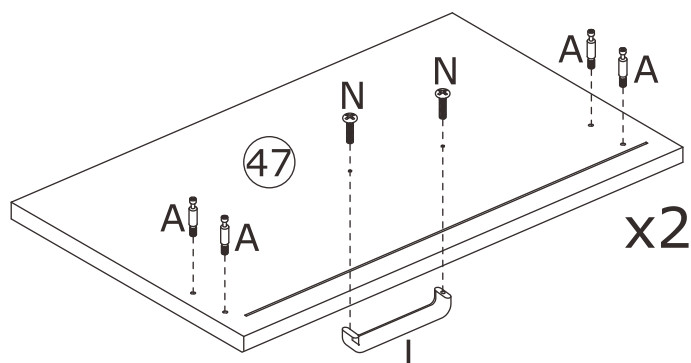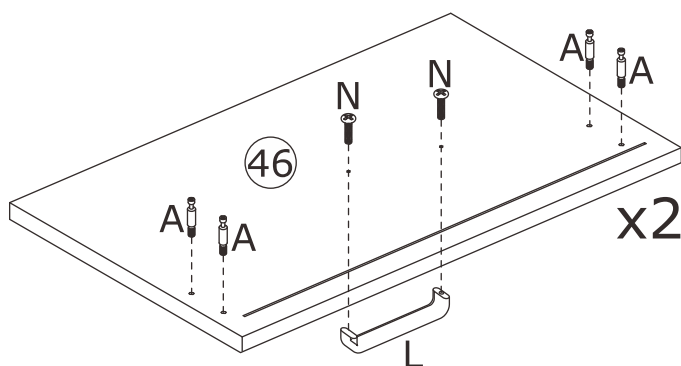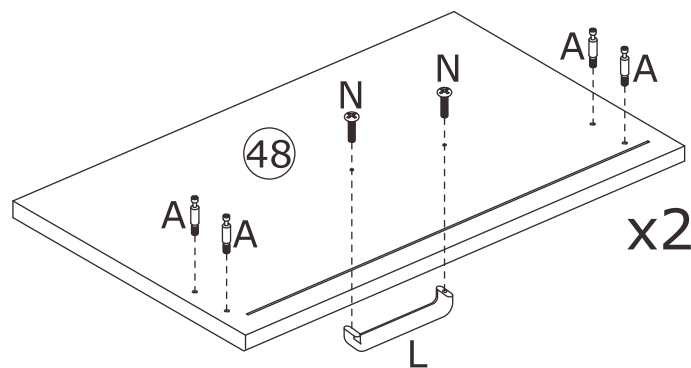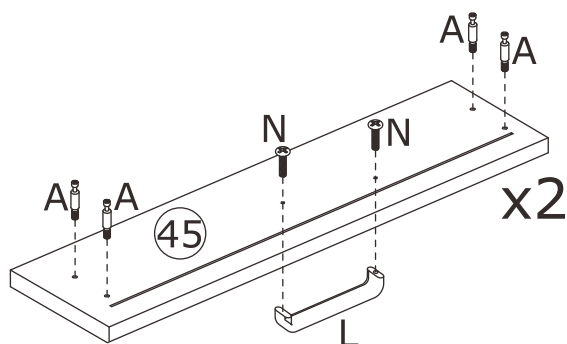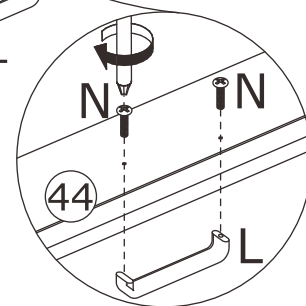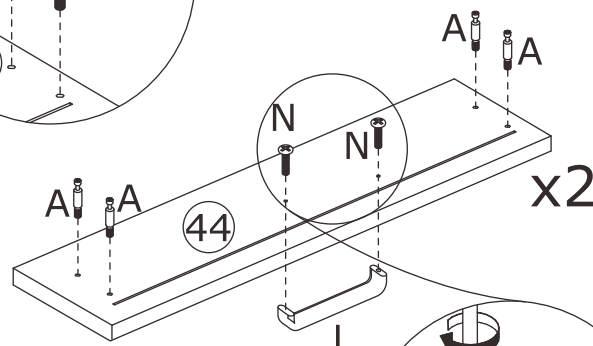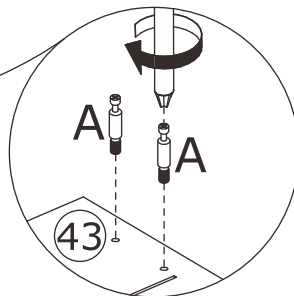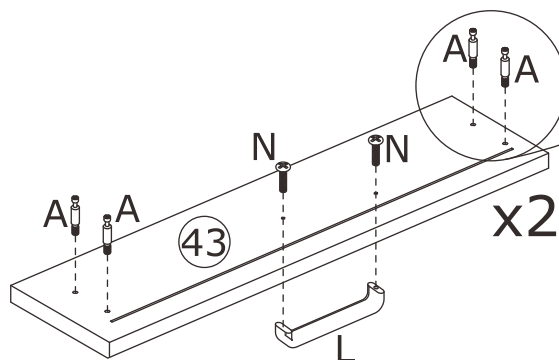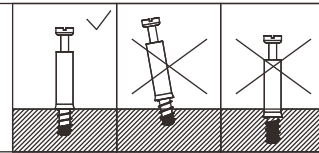 

Screw eccentric rod (A) onto panels 43, 44, 45, 48, 46, 47, and 48.



Fix handle (L) using screw (N).

51

B x 48





Ø 15 x 10 mm

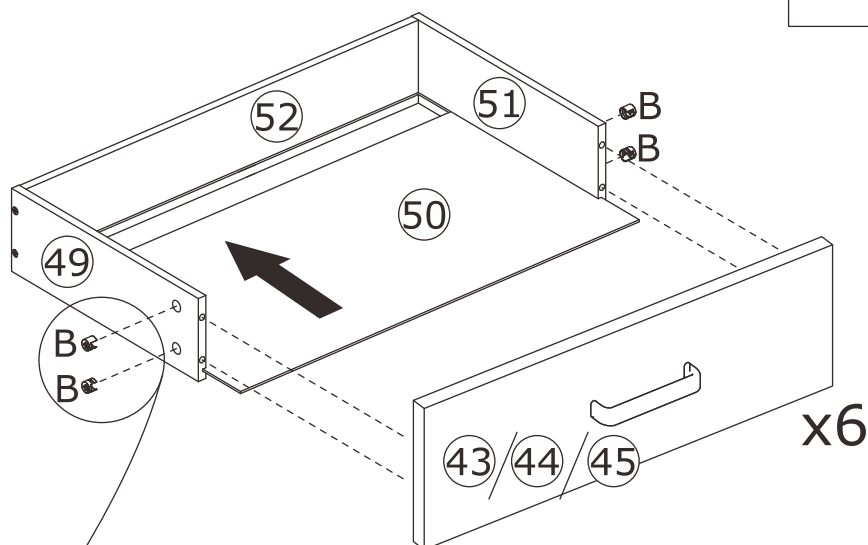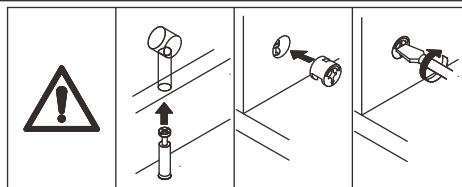

First, insert panel 50 along grooves.

Connect panels 43, 44, and 45 to panels 49 and 51, then tighten by turning cam lock (B) clockwise.

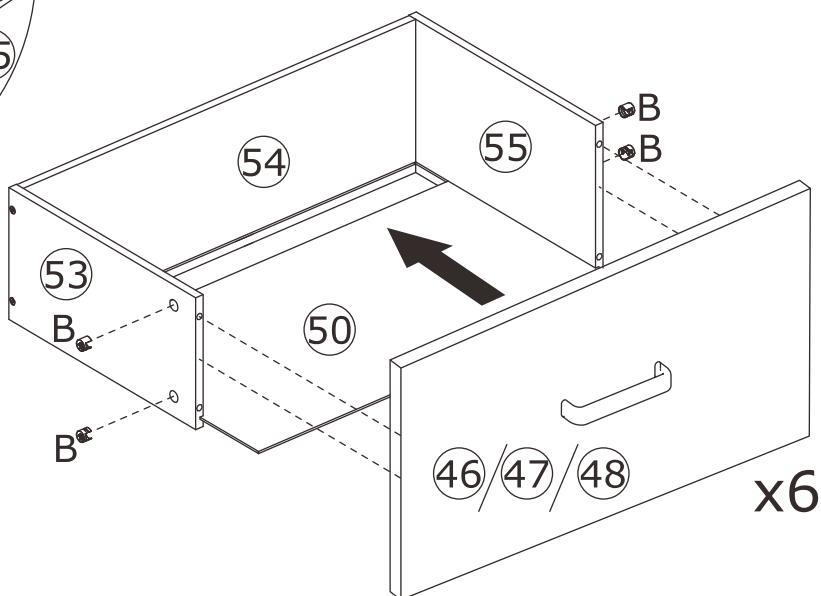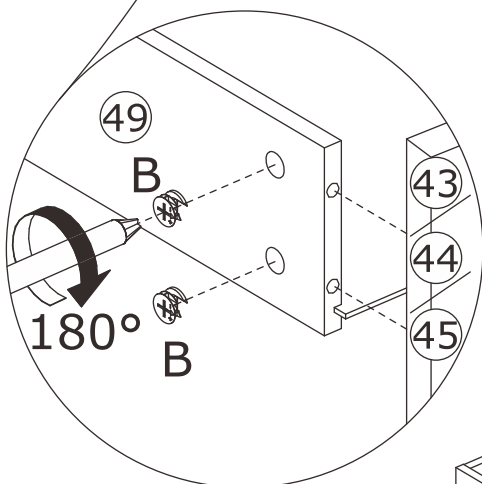

Connect panels 46, 47, and 48 to panels 53 and 55, then tighten by turning cam lock (B) clockwise.

52

C x 48



Ø 3 x 12 mm

DL x 12




 


350 mm


DR x 12




350 mm

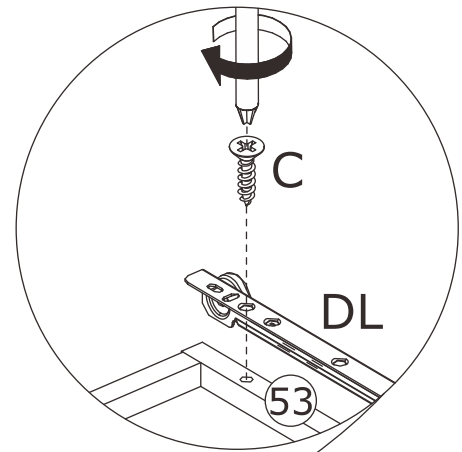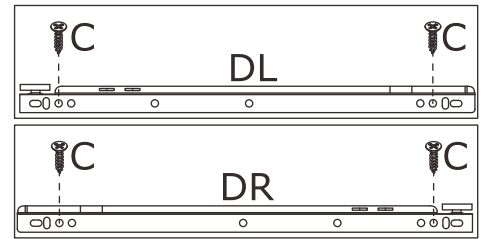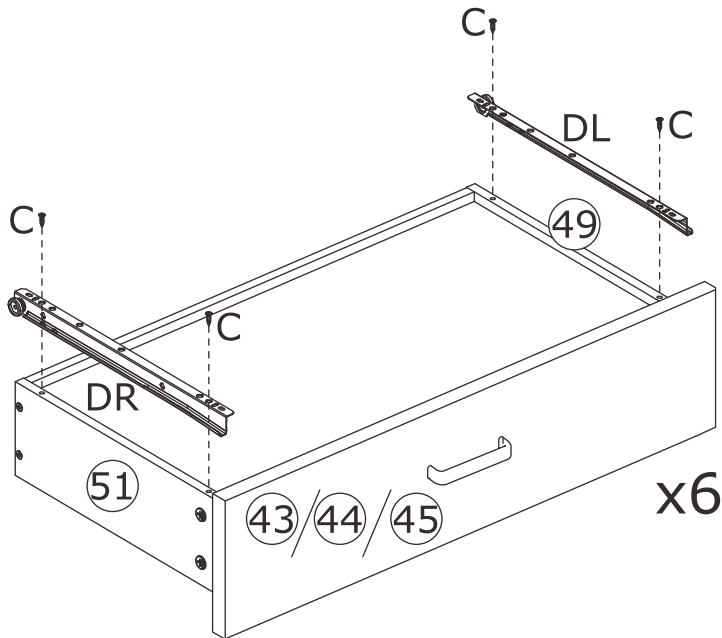

Secure guide rail (DR) to panel 51 and 55, guide rail (DL) to panel 49 and 53 using screw (C).

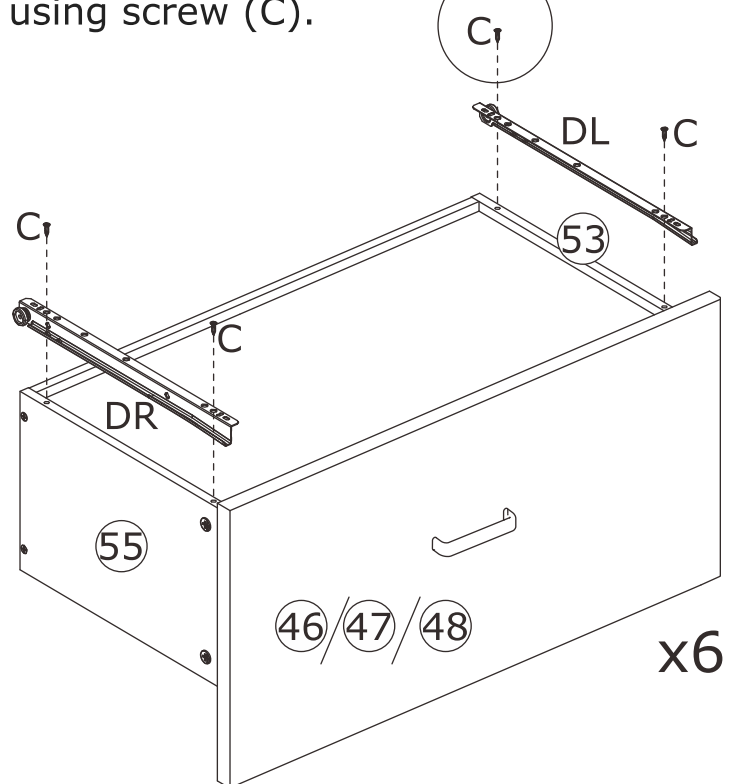

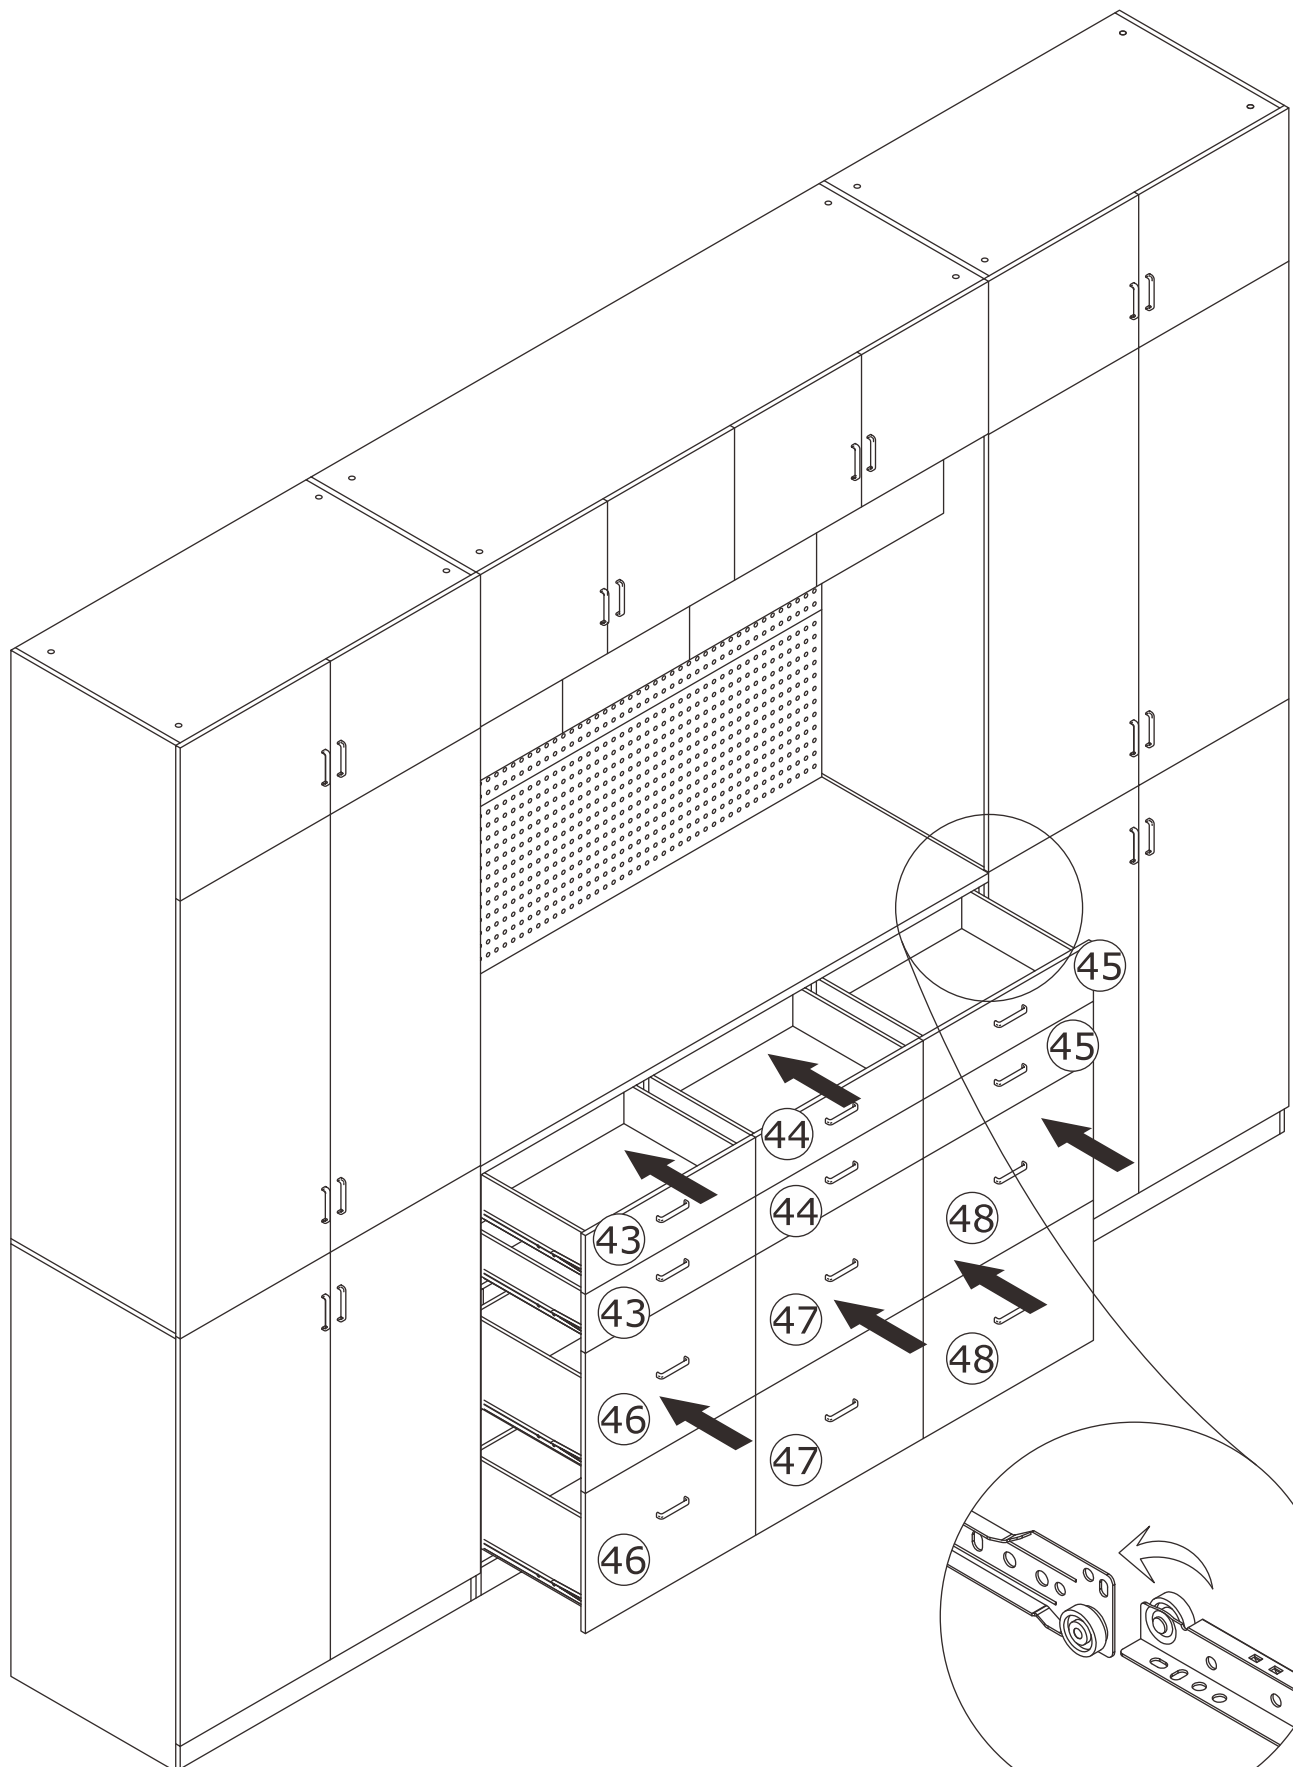


54

H x 4




Ø4 x 12 mm

 J x 4







Ø4 x 35 mm

 P x 4




Q x 4

    


Install anti-tipping device as shown.


1.

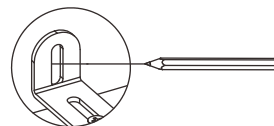



2.

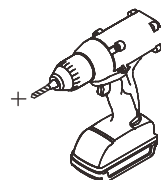

3.

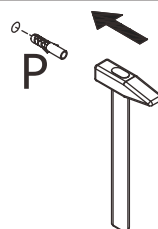

4.

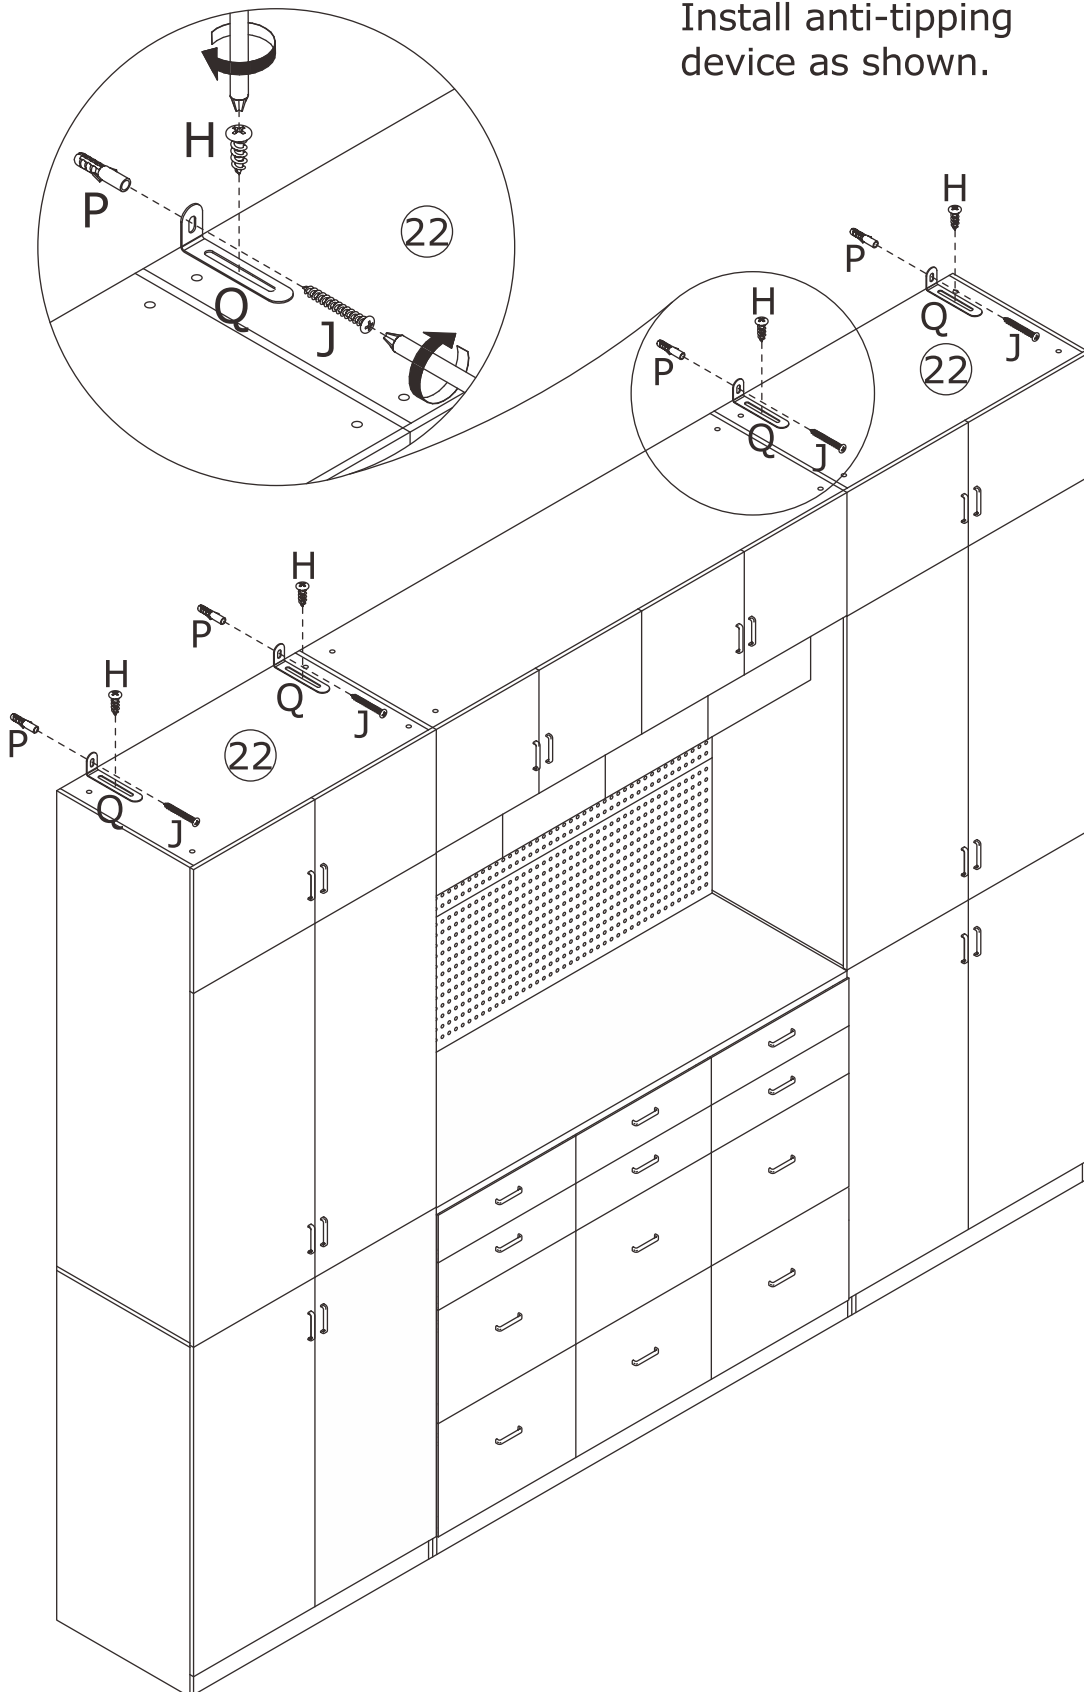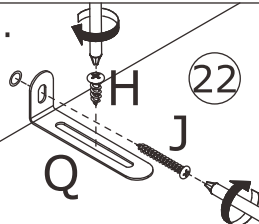

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.