Assembly Instructions

Caution: You must read this before you proceed

Care & Maintenance



Not for commercial use. For residential use only.



 Furniture may scratch floors. We recommend using furniture pads to protect your floors.



Do not put hot items directly on furniture surface.



Do not clean furniture with harsh cleansers or polish.



Do not place furniture under direct sunlight.



Do not place furniture near heating or cooling vents.



 Do not write on furniture without a padded barrier to protect the surface.



Do not place furniture outside. For indoor use only.



 Stains may be removed with mild soap solution and damp cloth.



Children should not climb or jump on the furniture.



 Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in chair seat for hardware packs and legs.

Sets often ship in multiple boxes and may arrive a day or two apart.


Club Chair



Parts List			
Label	Picture	Description	QTY
А		Backrest	1
В		Chair Seat	1
С		Front Leg	2
D		Hind Leg	2
Hardwares			
Label	Picture	Description	QTY
1	<u> </u>	Bolt (M8*110MM)	1
2	0	Washer(M8*22MM)	1
3	Q	Spring Washer(M8)	1
4		Allen Wrench	1
5		Gasket	7
6		Silicon Gasket	3

Assembly Preparation

Before Begining Assembly:

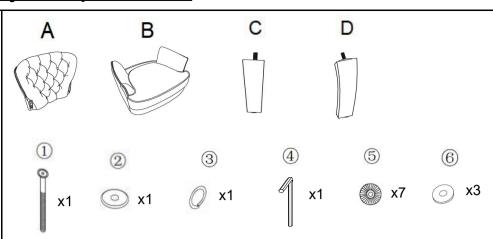



Read instructions, cover to cover-



Have 2 adults on hand for assembly-



Do not assemble on flooring or carpet-




Assemble on a clean non-marring surface (packing foam)-



Save all packaging until finished-

Assembly Steps

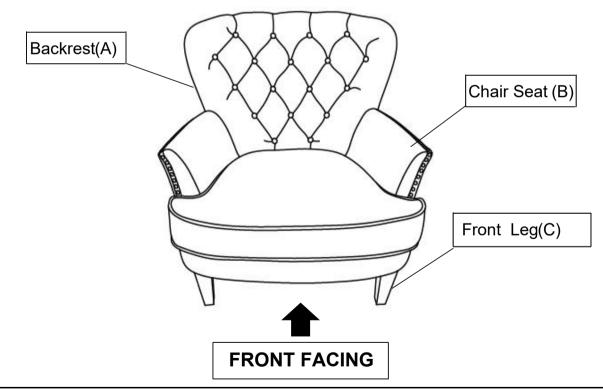


This Chair has multiple parts and may require up to 30 minutes to assemble.

To give you an overview of the Chair, the above picture is to help you put the various parts into perspective.

Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Note: It is recommended that you have an adult partner to assist during the entire assembly process.

Step 1

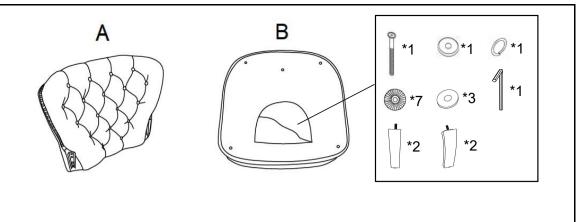


Position the Backrest(A), Chair Seat(B) on a clean, non-marring surface, as shown.

Do not place on surface that can scratch or damage the upholstery.

Take out the 4 Legs and Hardwares from the bottom of Chair Seat(B).

Step 2

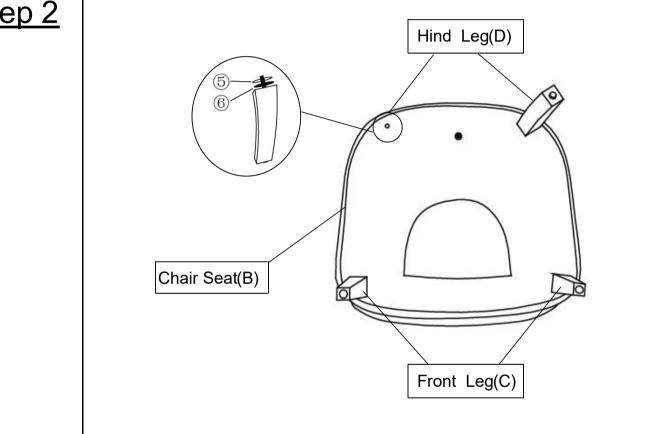

Install the first Front Leg(C) into the Chair Seat(B) by placing one Gasket(⑤) onto the threaded stem. Insert the threaded stem of the Front Legs(C) into one of the front mounting positions of the Chair Seat(B), then tighten by turning the Leg clockwise until it is completely secure.

Repeat this process with the another Front Leg(C).

Install the Hind Leg(D) into the Chair Seat(B) by placing one Gasket(5) and one Silicon Gasket (6) onto the threaded stem.


Insert the threaded stem of the Hind Leg(D) into one of the back mounting positions of the Chair Seat(B), then tighten by turning the Leg clockwise until it is completely secure.

Repeat this process with the another Hind Leg(D).

Note: The use of the Gaskets are OPTIONAL and are especially useful to help alleviate slight wobbles.

Some Legs may need more than one whilst some Legs may not need any.

Step 3

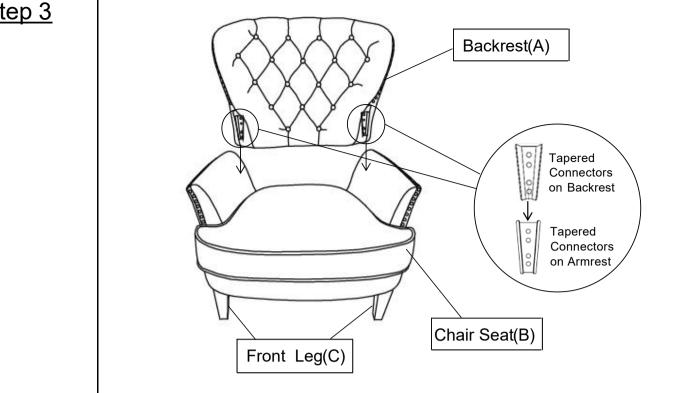

With assistance from an adult partner, lift the Backrest(A) up.


Align the Tapered Connectors on the Backrest(A) and the Chair Seat(B).

Push down on the Backrest (A) until it is fully locked into the Tapered Connectors.

Note: Make sure the Tapered Connectors on the Backrest(A) fully lock into the Tapered Connectors on the Chair Seat(B).

Note: If the bottom of the Backrest (A) completely touches the Chair Seat (B) edge, and it feels secure, not loose, when pushing the Backrest(A) backwards, then the Backrest(A) is fully locked in position.


Step 4

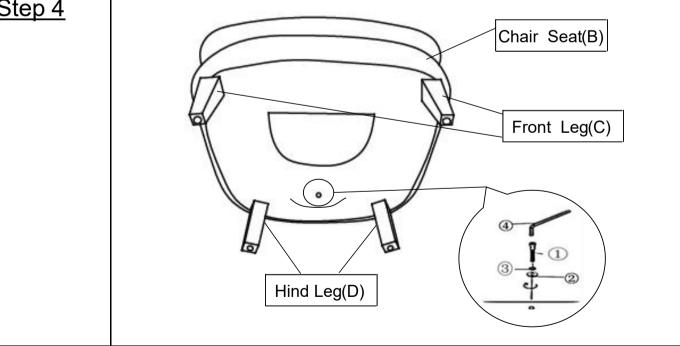

Put the Club Chair facedown as pictured above.

Lock Chair Seat(B) to Backrest(A) using a Bolt(1) a spring washer(3) a Washer(2) with the Allen Wrench(4). Tighten the Screw fully.

Step 5

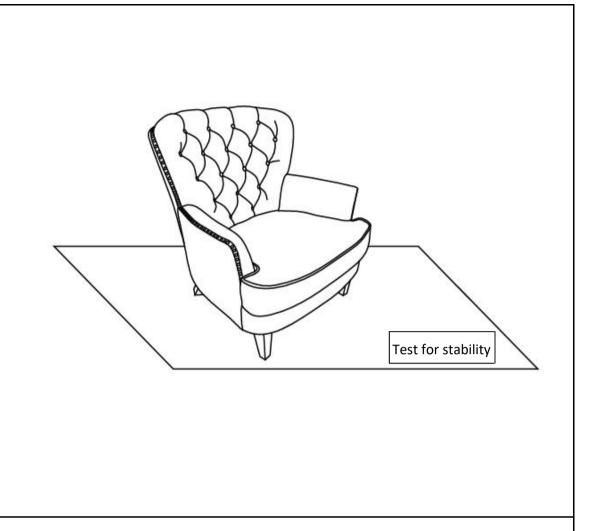

Your Club Chair is ready for use. This Club Chair can only be used on a flat, level surface.