




REMOTE CONTROL INSTRUCTIONS

Master switch on

Cut off the power supply, after 10s switch it on again, at the same time, within 5s continuously press switch button 5 times will clear code.

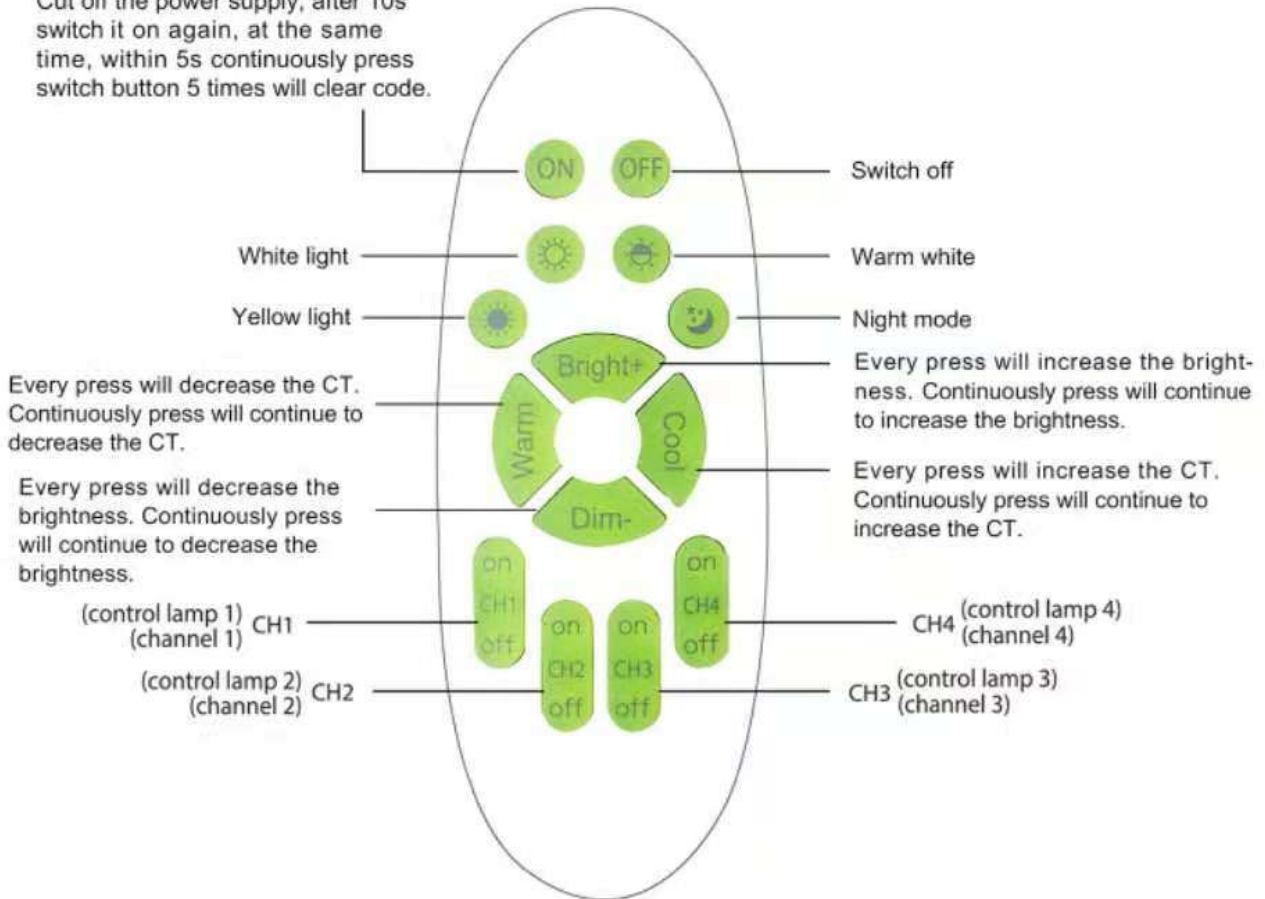

1. There are four channels (grouping control switch)of every remote controller: CH1,CH2,CH3,CH4, one remote controller can control several lights which have set the same channel.

2. The factory default channel of the lights is " CH1" , please turn on the power after installation, then you can control the lights by the remote controller, if you need to change the lights' channel, please re-turn on the power after cutting off the lights' power ten seconds. Then press the opening key **ON** of the lights five times as soon as(in five seconds) turning on the lights, the lights will shine, that is to say the lights complete the code-cleaning when the shining is over, the remote controller can' t control the lights at that time, you need to check the code once again to control the lights.

3. After accomplishment of the code-cleaning, please cut off the power once again for two seconds, then re-turn on it, then press any one of the four channels after turning on the power(in five seconds), the lights will shine when you press the channel switch, if the shining is over, that is to say the lights accomplish the code-checking, the remote controller can control the lights normally at that time.