 


Kitchen Island Cart

Assembly Instructions - Please keep for future reference

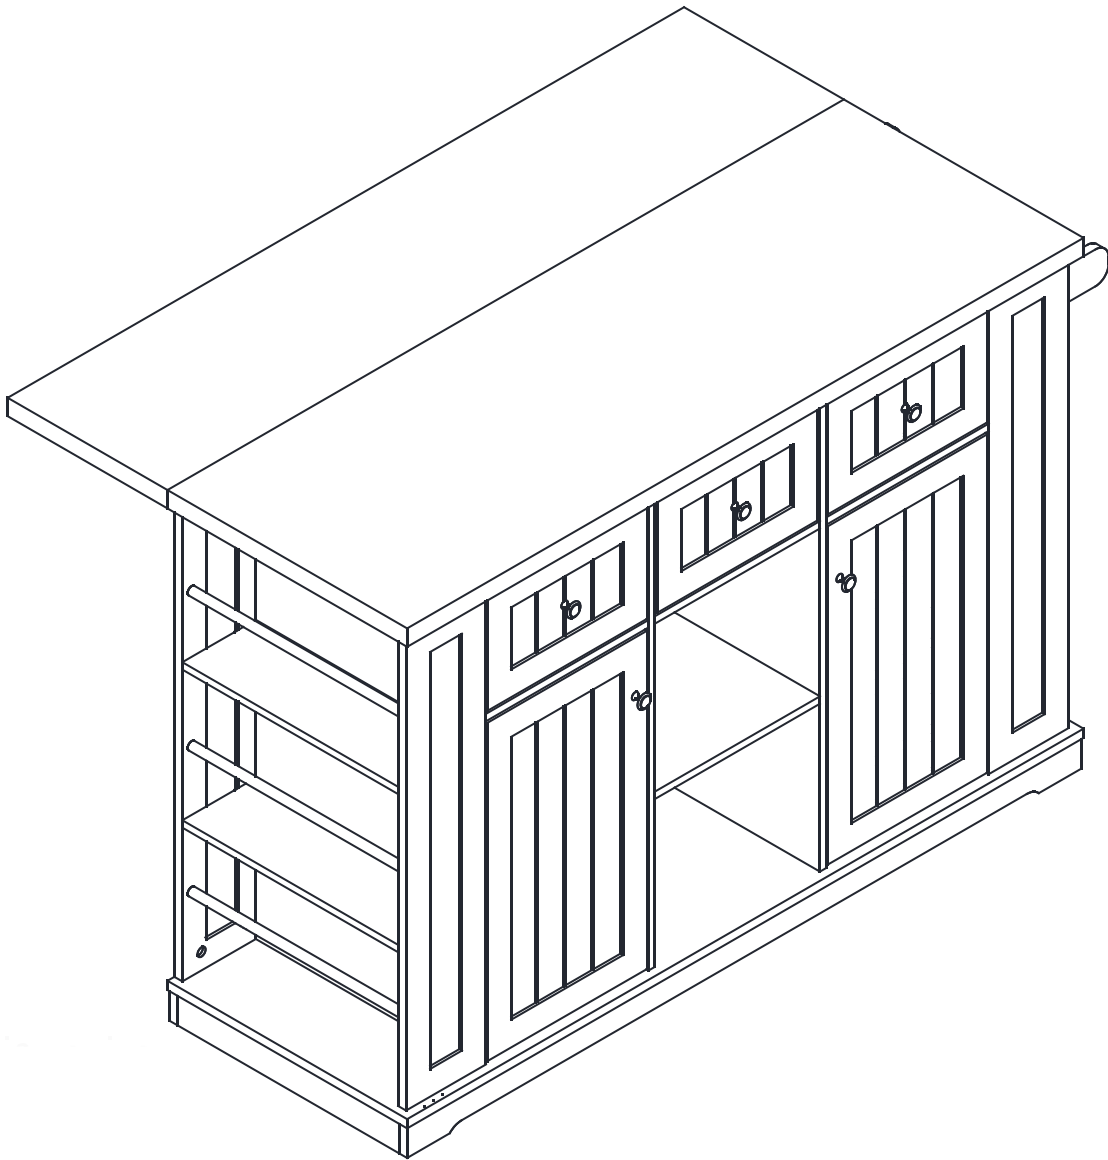

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING

In order to help prevent overturning – please follow these instructions

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Components - Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases, more fittings may be supplied than required.

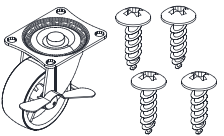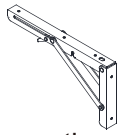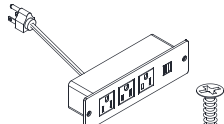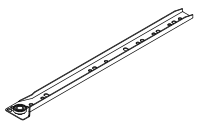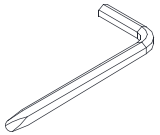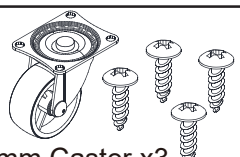(A)  Cam Bolt x 98	(B)  6*30mm Dowel x 72	(C)  Cam lock x 98	(D)  4*25mm Screw x 32
(E)  nut x 2	(F)  4*12mm Locking caster x2	(G)  6*30mm Screw x 2	(H)  3.5*12mm Screw x 26
(I)  Connecting rods x2	(J)  Shelf support pin x 13	(K)  3.5*14mm Straight bend hinge x 4set	(L)  4*20mm Handle x 2SET
(M)  3*16mm Door stopper x 2SET	(N)  4*12mm Handle x 3SET	(O)  3.5*12mm socket x 1	(CL)  300mm runner x 3
(CR)  300mm runner x 3	(DR)  300mm runner x 3	(DL)  300mm runner x 3	(P)  Allen key x 1
(Q)  3*12mm Magnetic sheet x 2SET	(R)  4*12mm Caster x3	(S)  6*25mm Screw x4	(T)  m6 nut x 4
(U)  6mm gasket x8	(V)  3.5*14mm Screw x4	(W)  Iron pipe spring x 4	

 Tools required

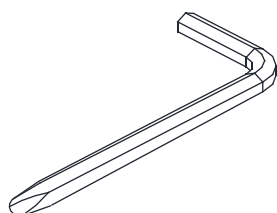

Phillips screwdriver
(medium & large)

 
Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

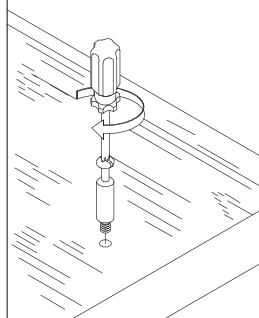

Step 2

Push the male camlock into the entry hole.

 2

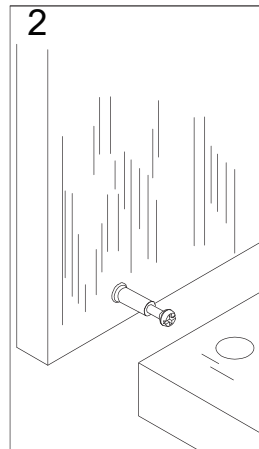


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

 3

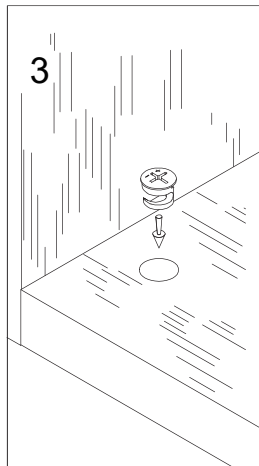


Step 4

Turn the female camlock clockwise with a screwdriver.



You should feel a click when the camlock is locked in place.

The joint is now secure.














 
4

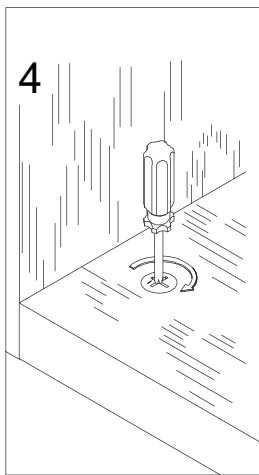
















Assembly Instructions

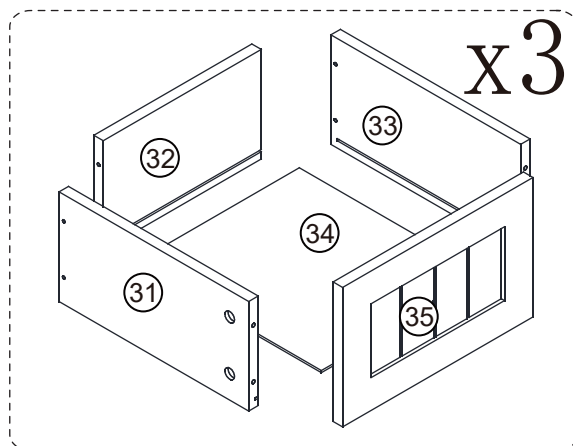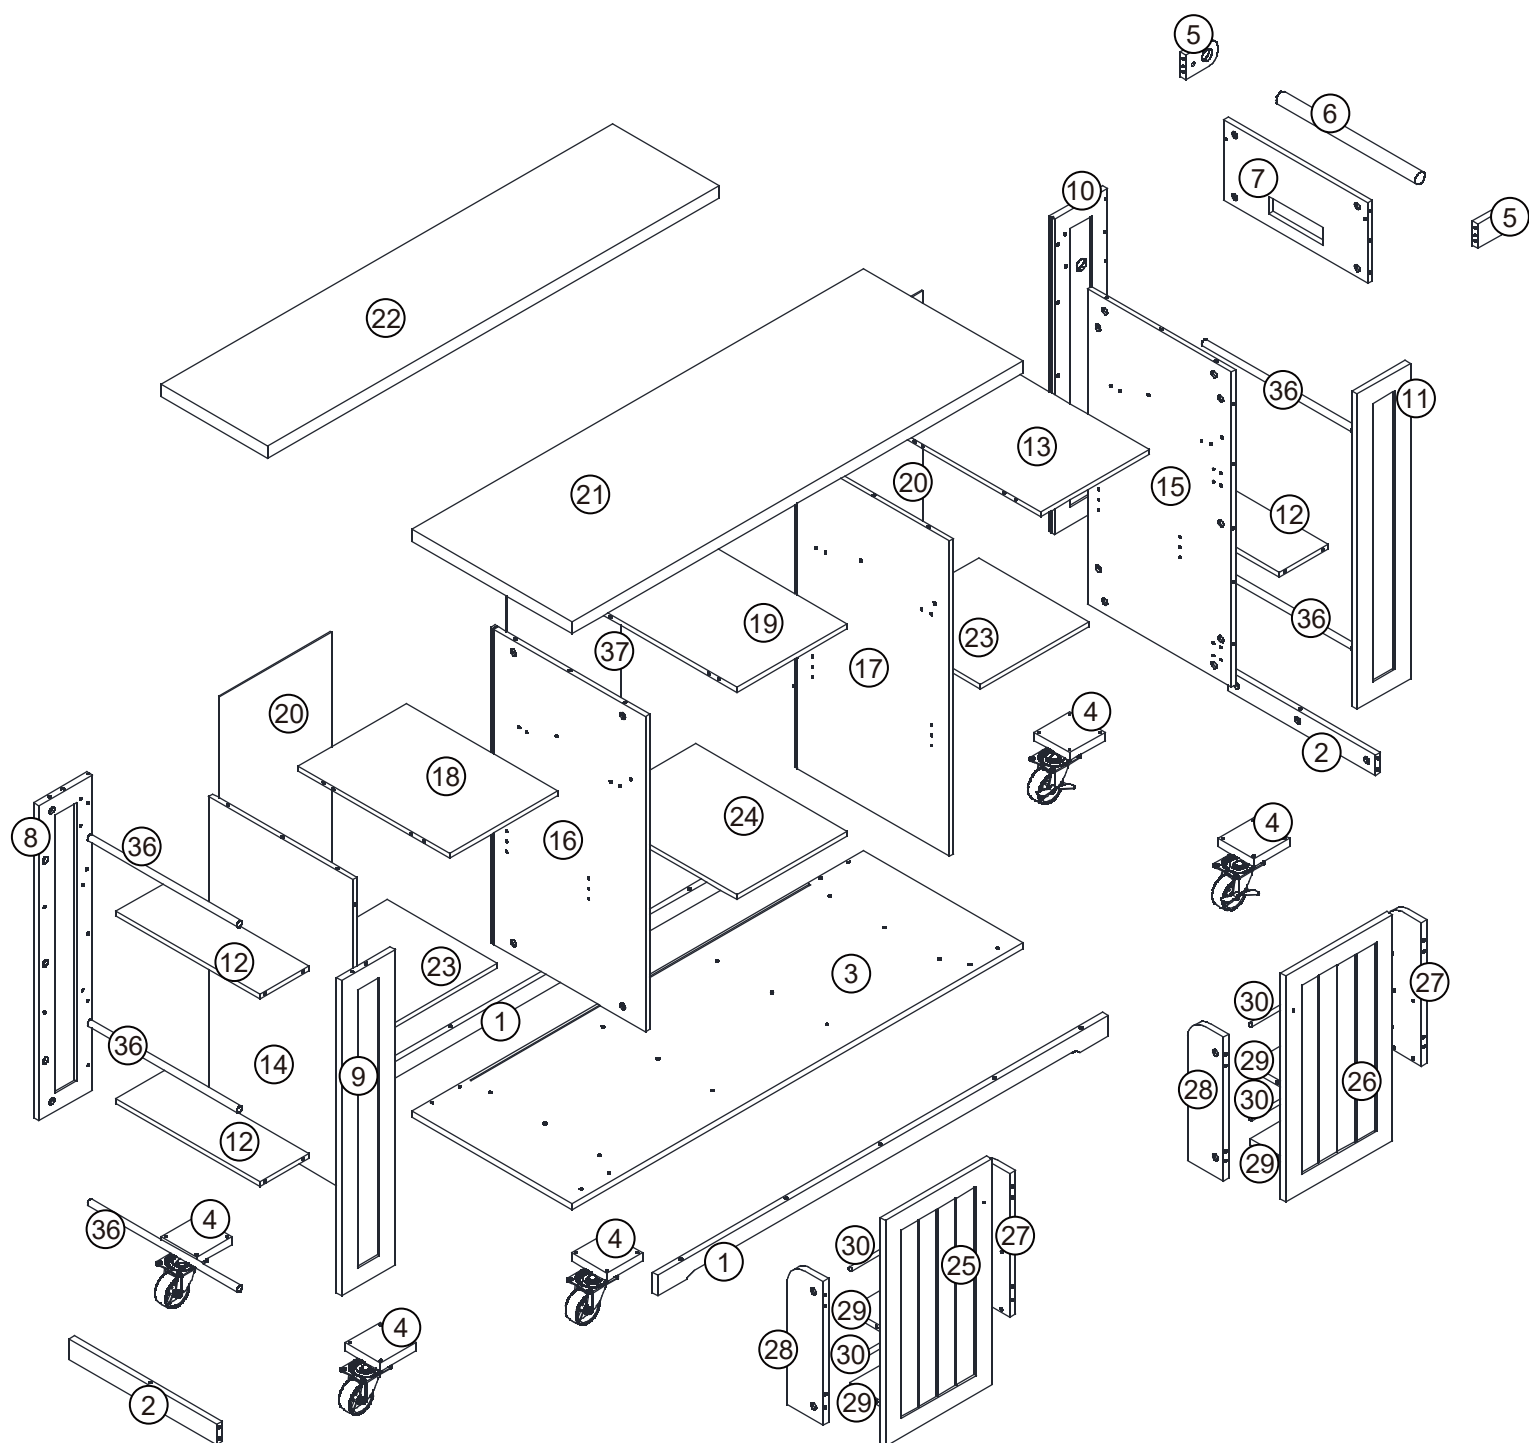  

Assembly Instructions

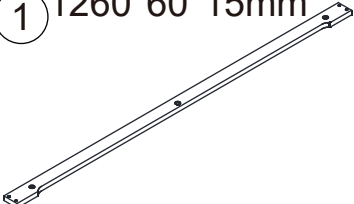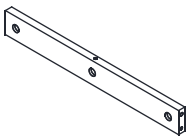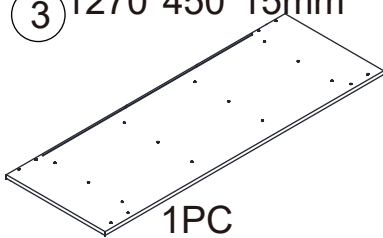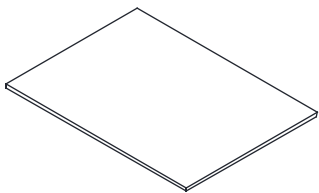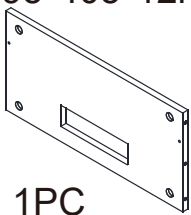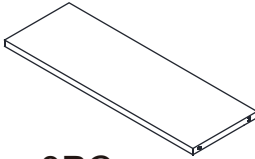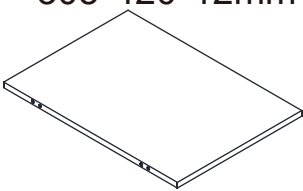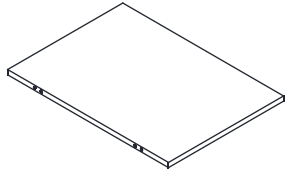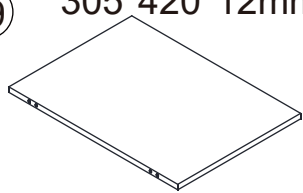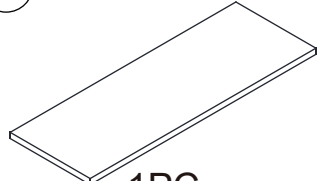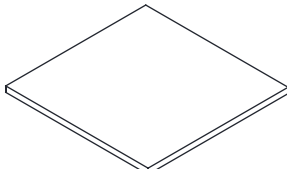             
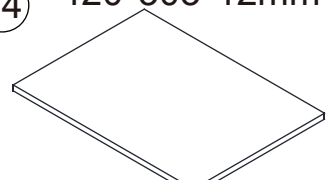 
① 1260*60*15mm  2PC	② 410*60*15mm  2PC	③ 1270*450*15mm  1PC
③④ 298*265*3mm  3PC	⑦ 195*405*12mm  1PC	⑫ 405*135*12mm  3PC
⑬ 305*420*12mm  1PC	⑭ 767*405*12mm  1PC	⑮ 767*405*12mm  1PC
⑯ 767*442*12mm  1PC	⑰ 767*442*12mm  1PC	⑱ 305*420*12mm  1PC
⑲ 305*420*12mm  1PC	⑳ 780*303*3mm  2PC	㉑ 1270*450*25mm  1PC
㉒ 1270*300*25mm  1PC	㉓ 299*303*12mm  2PC	㉔ 420*303*12mm  1PC
③⑦ 780*313*3mm  1PC		

               Assembly Instructions

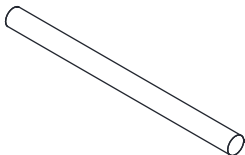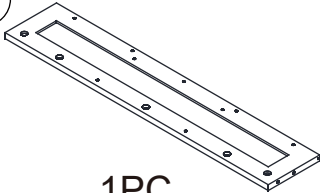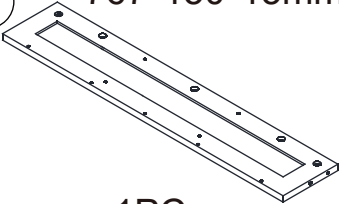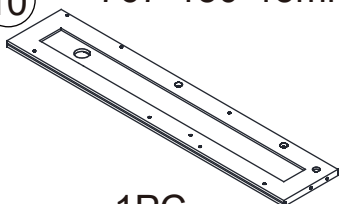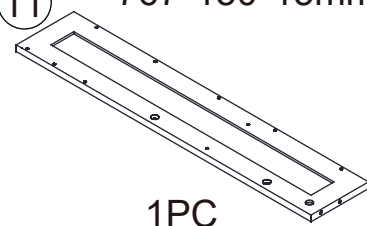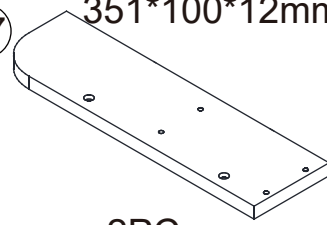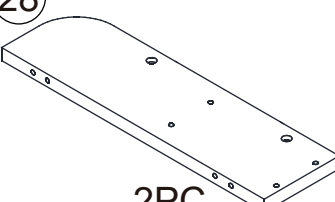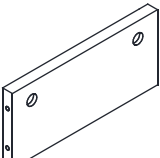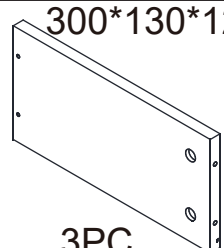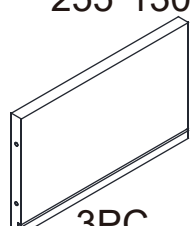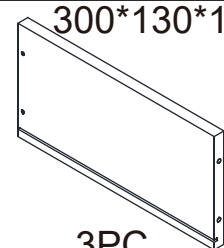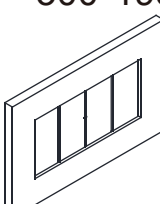
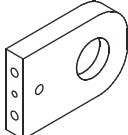
④ 100*100*20mm  5PC	⑥ 24*372mm  1PC	⑧ 767*150*15mm  1PC
⑨ 767*150*15mm  1PC	⑩ 767*150*15mm  1PC	⑪ 767*150*15mm  1PC
⑫ 553*299*15mm  1PC	⑬ 553*299*15mm  1PC	⑭ 351*100*12mm  2PC
⑮ 351*100*12mm  2PC	⑯ 220*100*12mm  4PC	⑰ 10*232mm  4PC
⑱ 300*130*12mm  3PC	⑲ 255*130*12mm  3PC	⑳ 300*130*12mm  3PC
㉑ 300*195*15mm  3PC	㉒ 15*413mm  5PC	㉓ 90*60*15mm  2PC

Assembly Instructions

 
 
Step 1

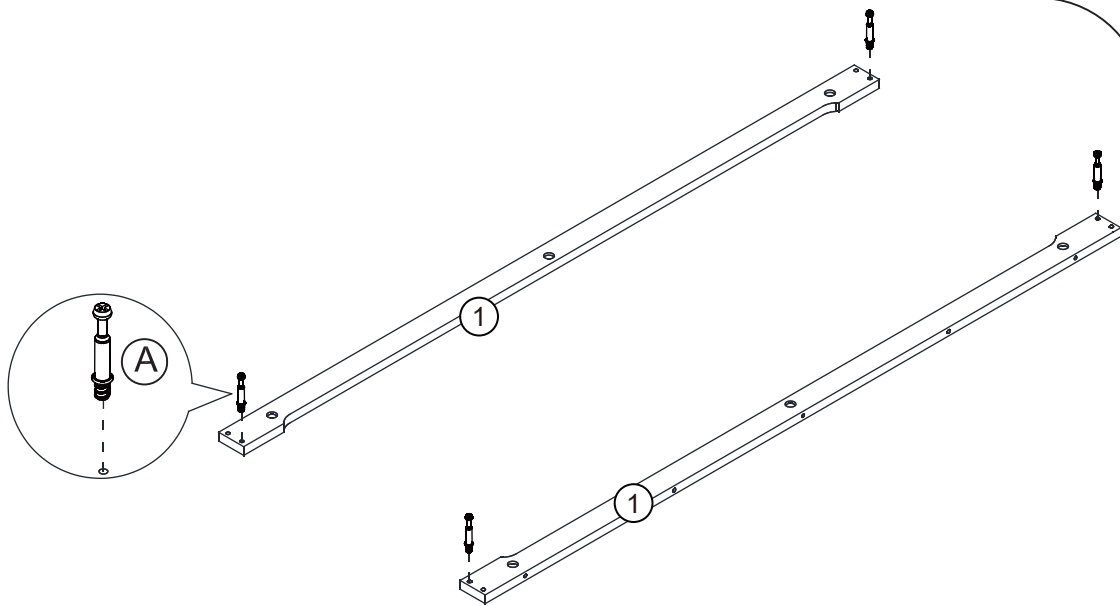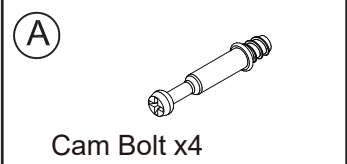

  Step 2

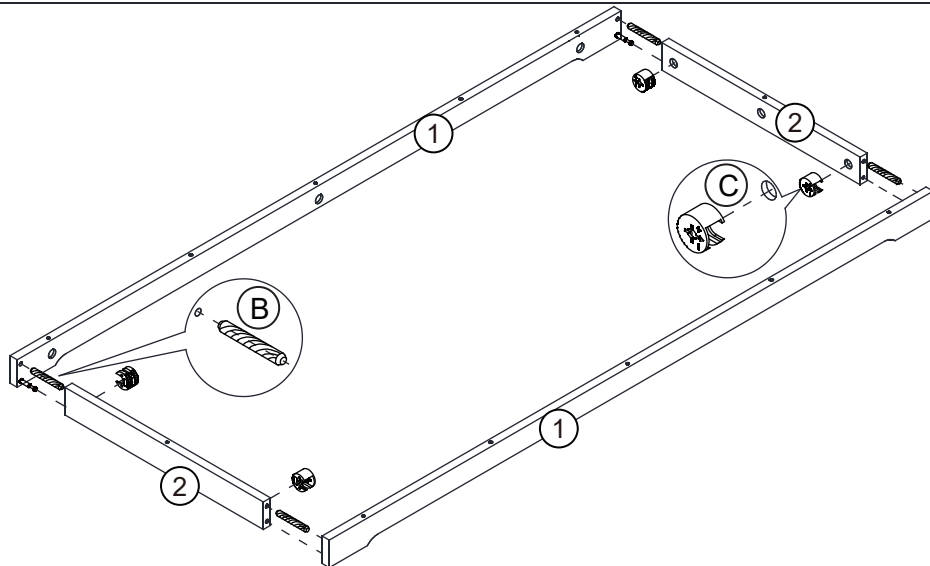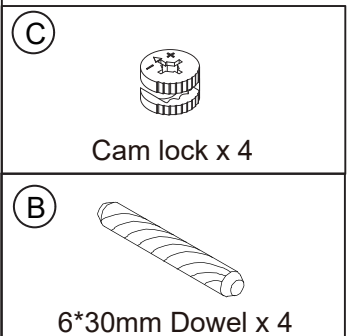


  Step 3

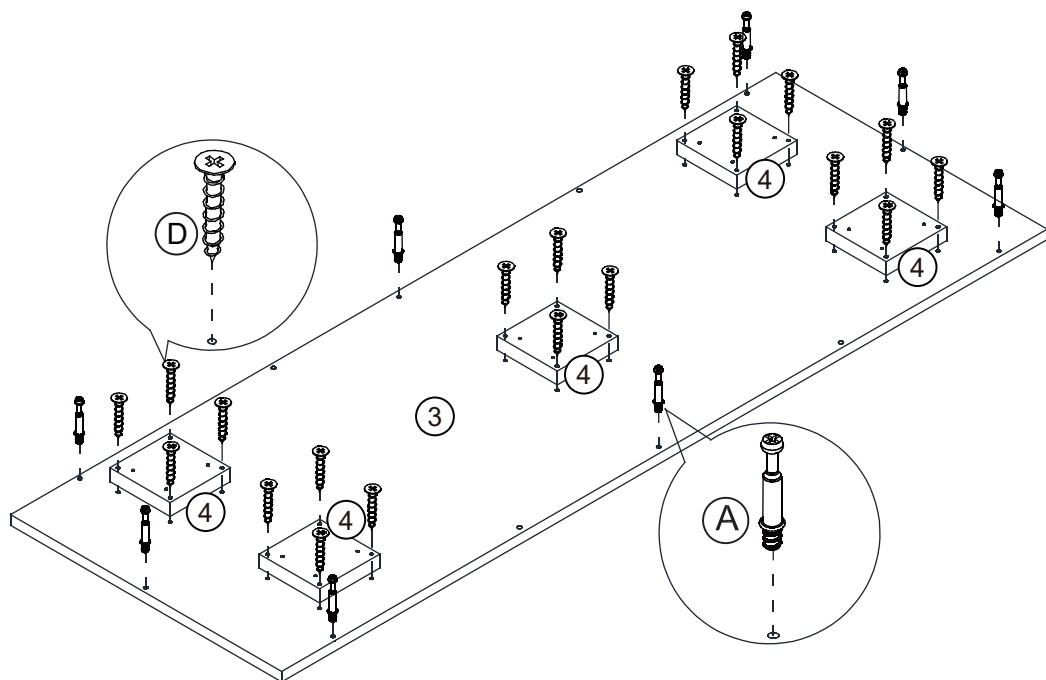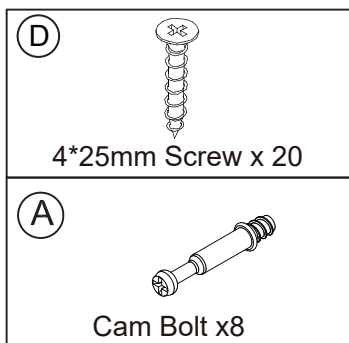


Assembly Instructions

 Step 4

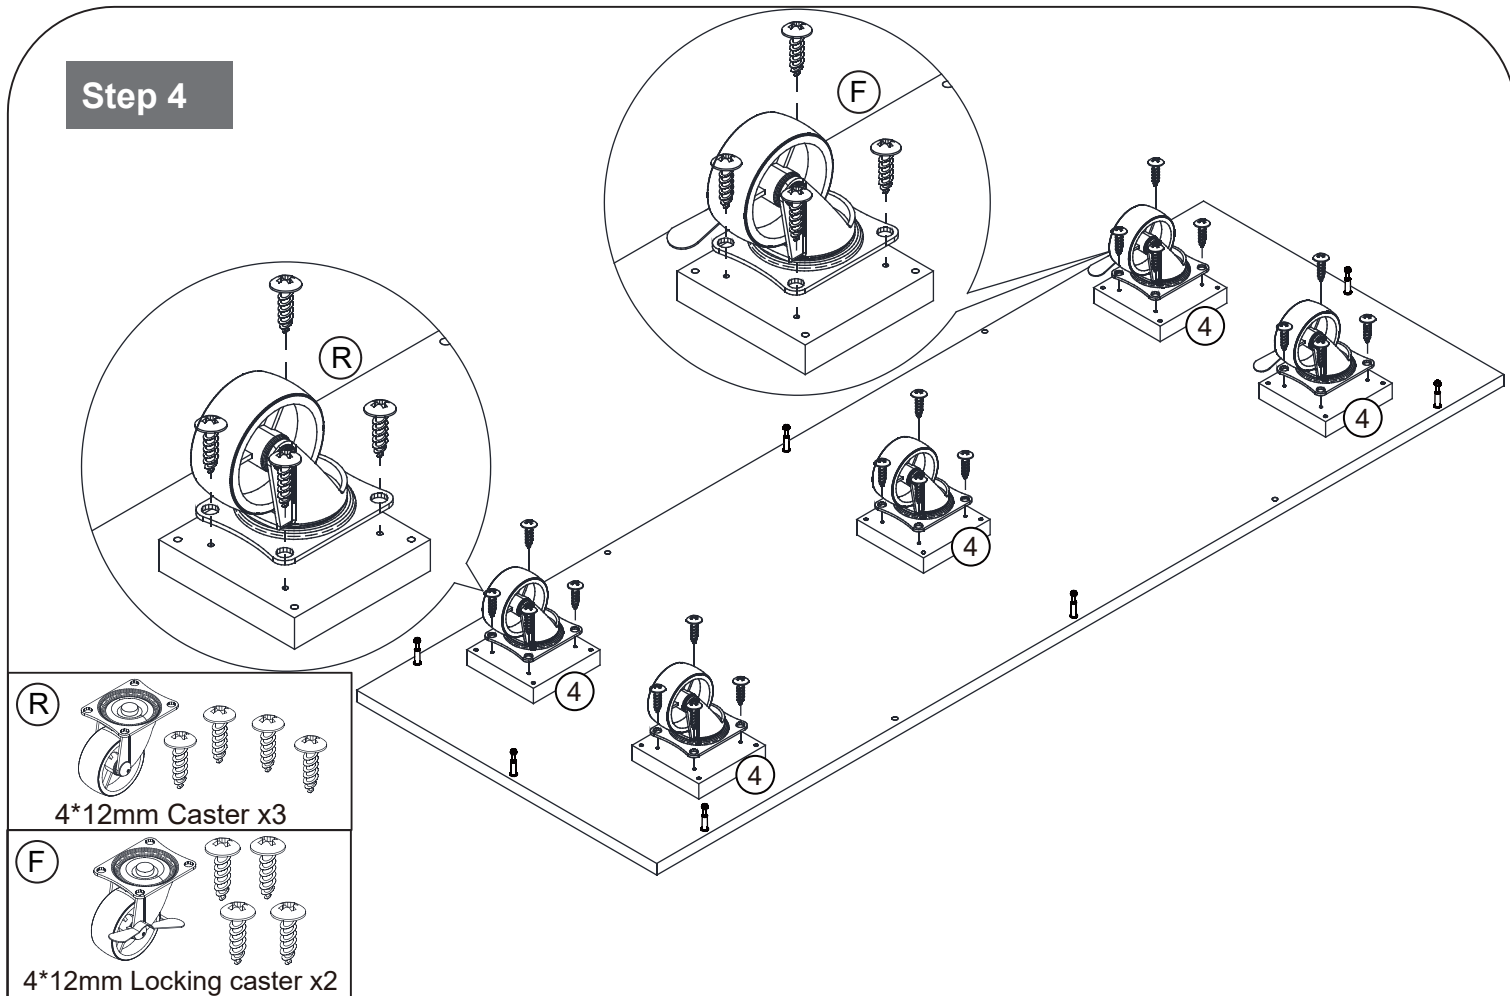


 Step 5

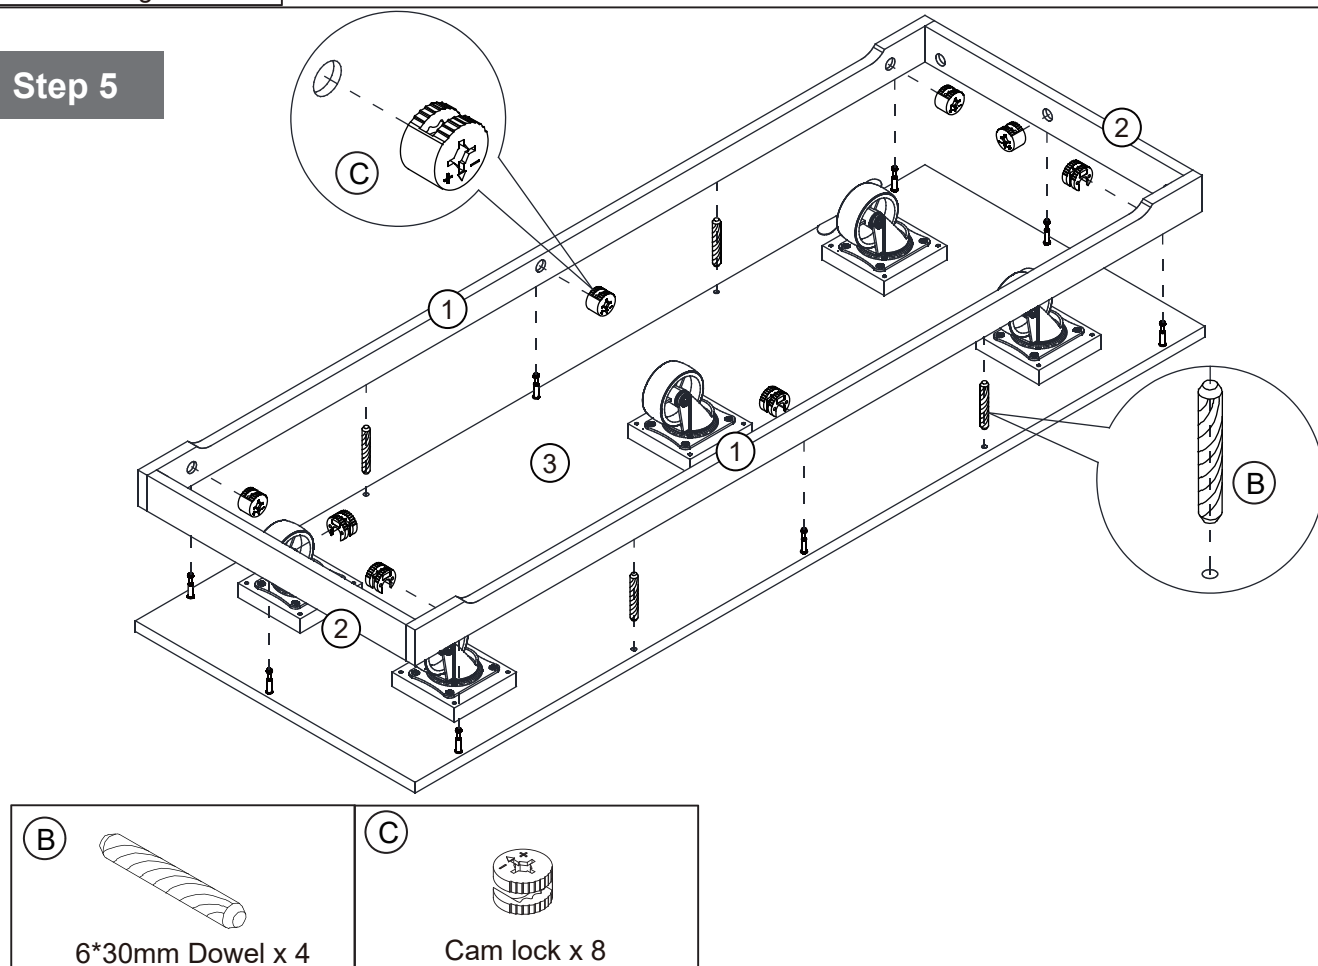


Assembly Instructions

 
Step 6

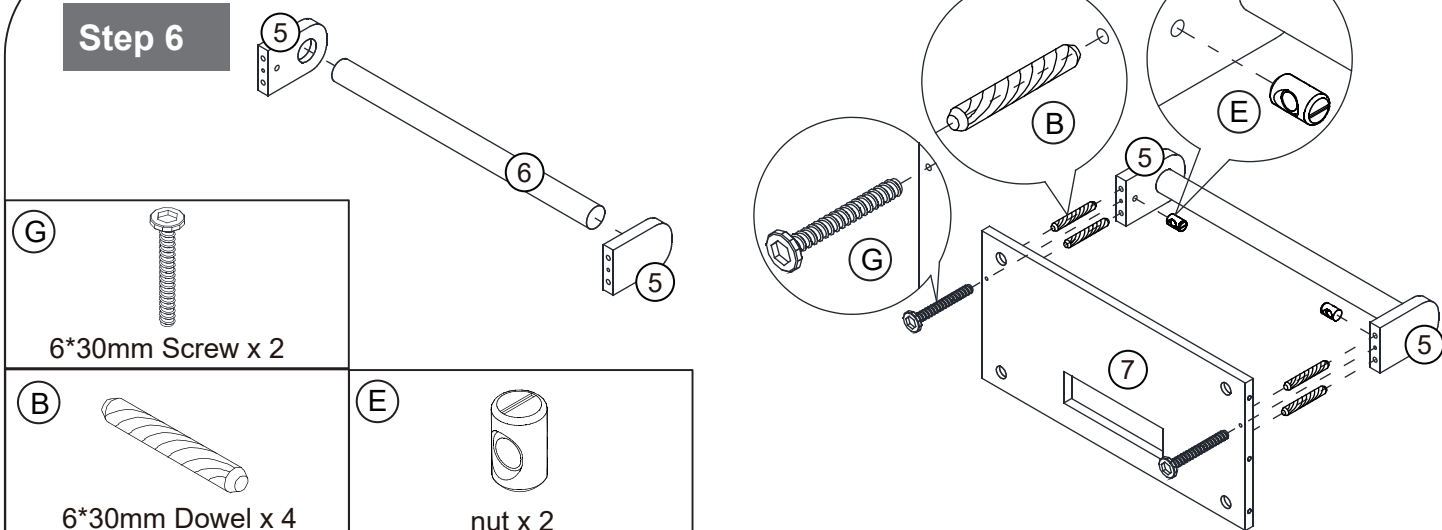

 Step 7

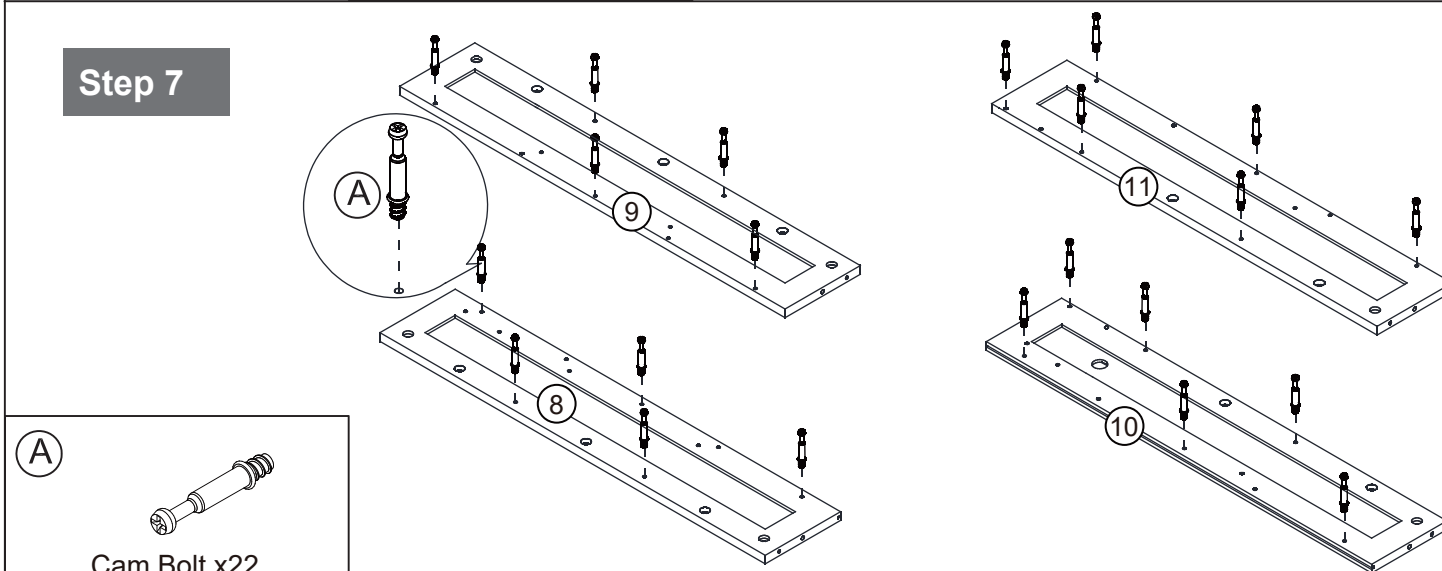



 
Step 8

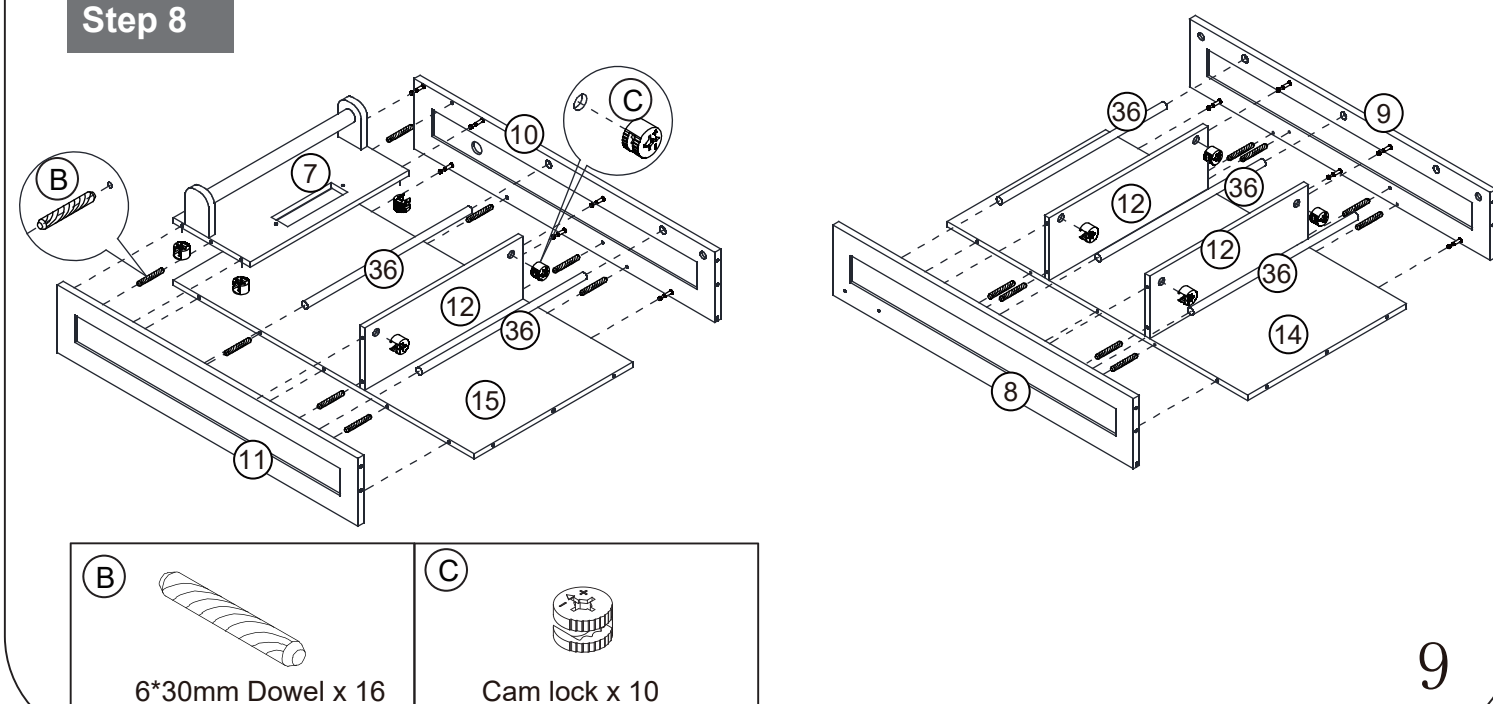


Assembly Instructions

  
 
Step 9

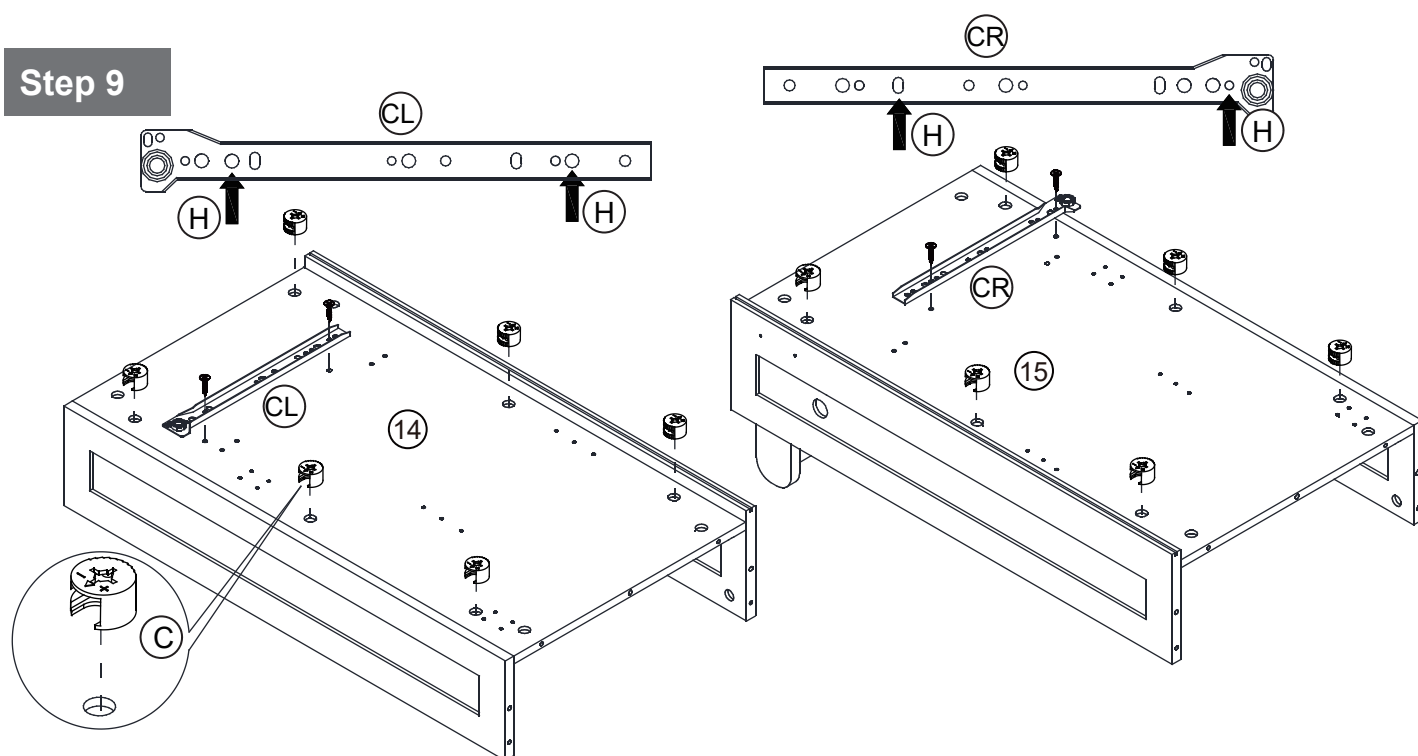

CL	CR	C	H
			
300mm runner x 1	300mm runner x 1	Cam lock x 12	3.5*12mm Screw x 4

  
 
Step 10

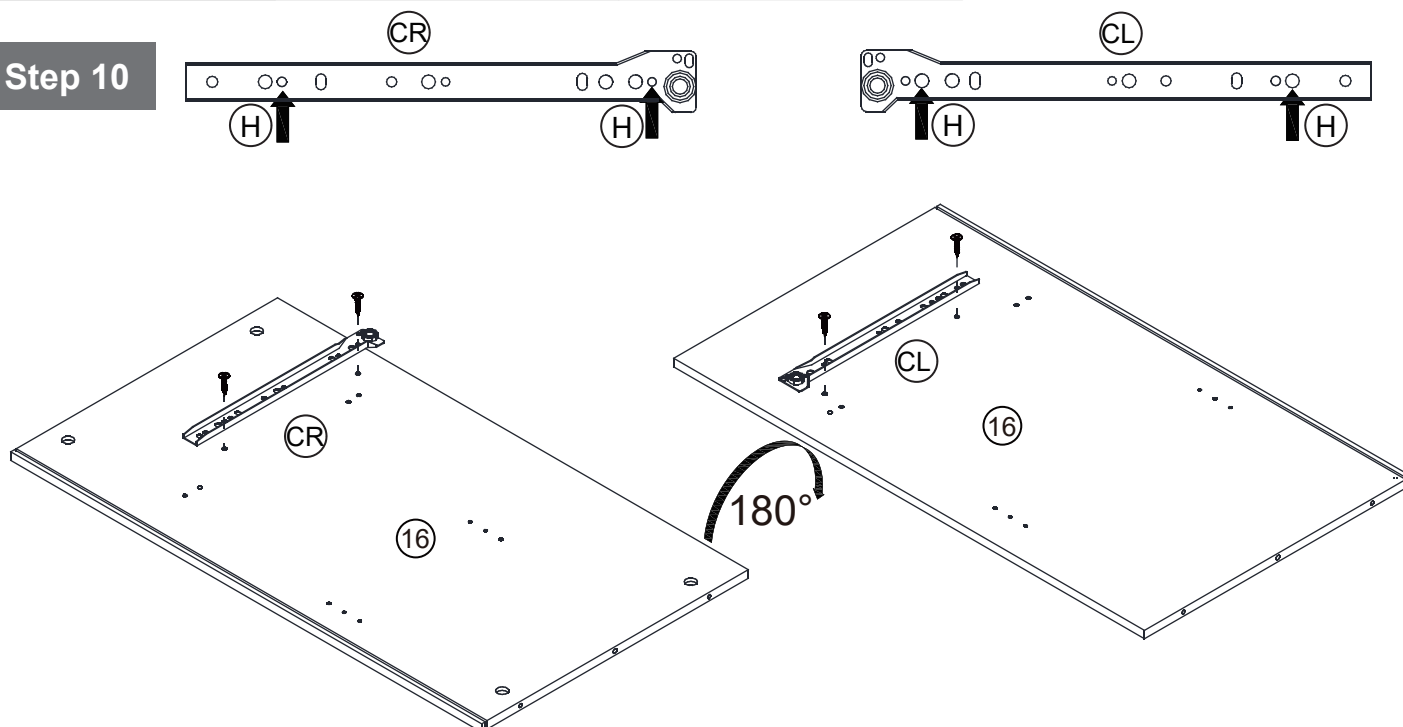


CL	CR	H
		
300mm runner x 1	300mm runner x 1	3.5*12mm Screw x 4

Assembly Instructions

  Step 11

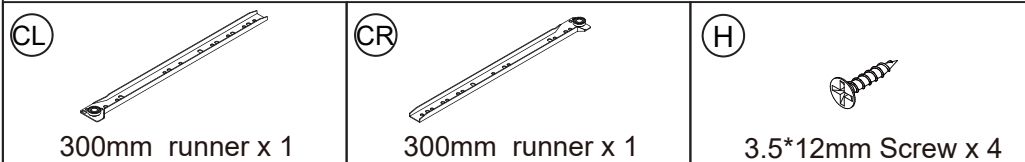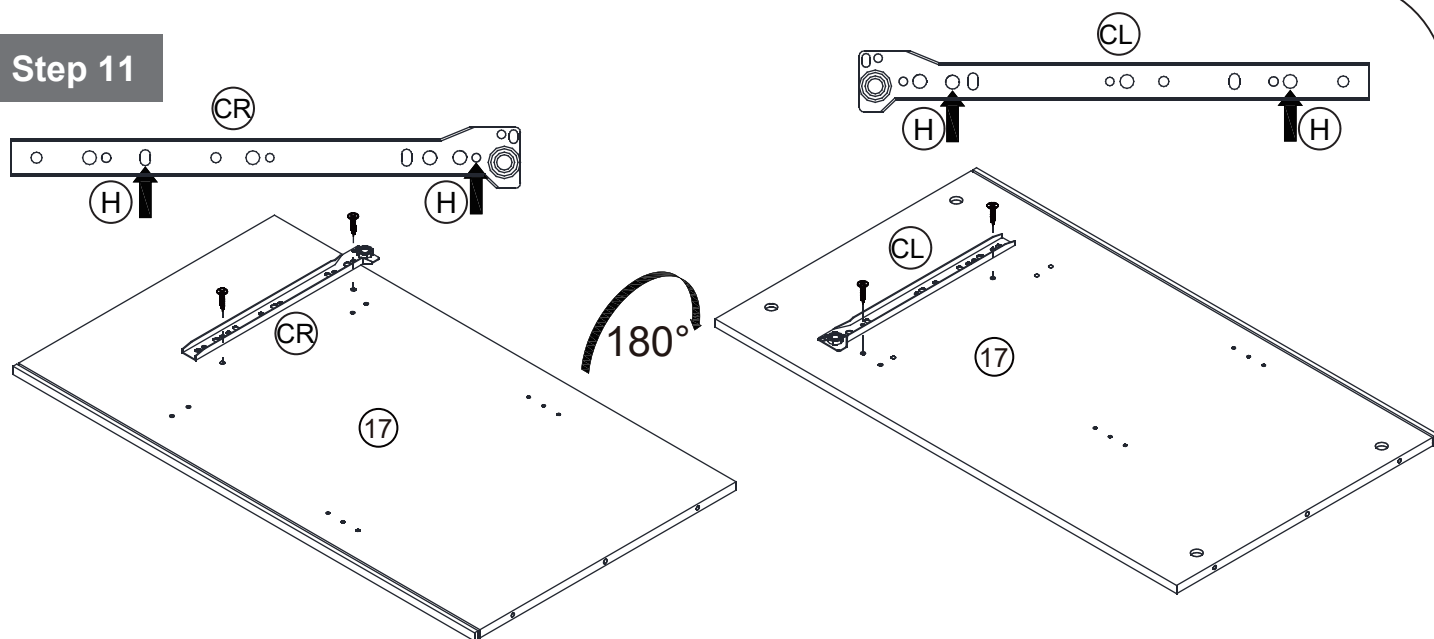


 Step 12

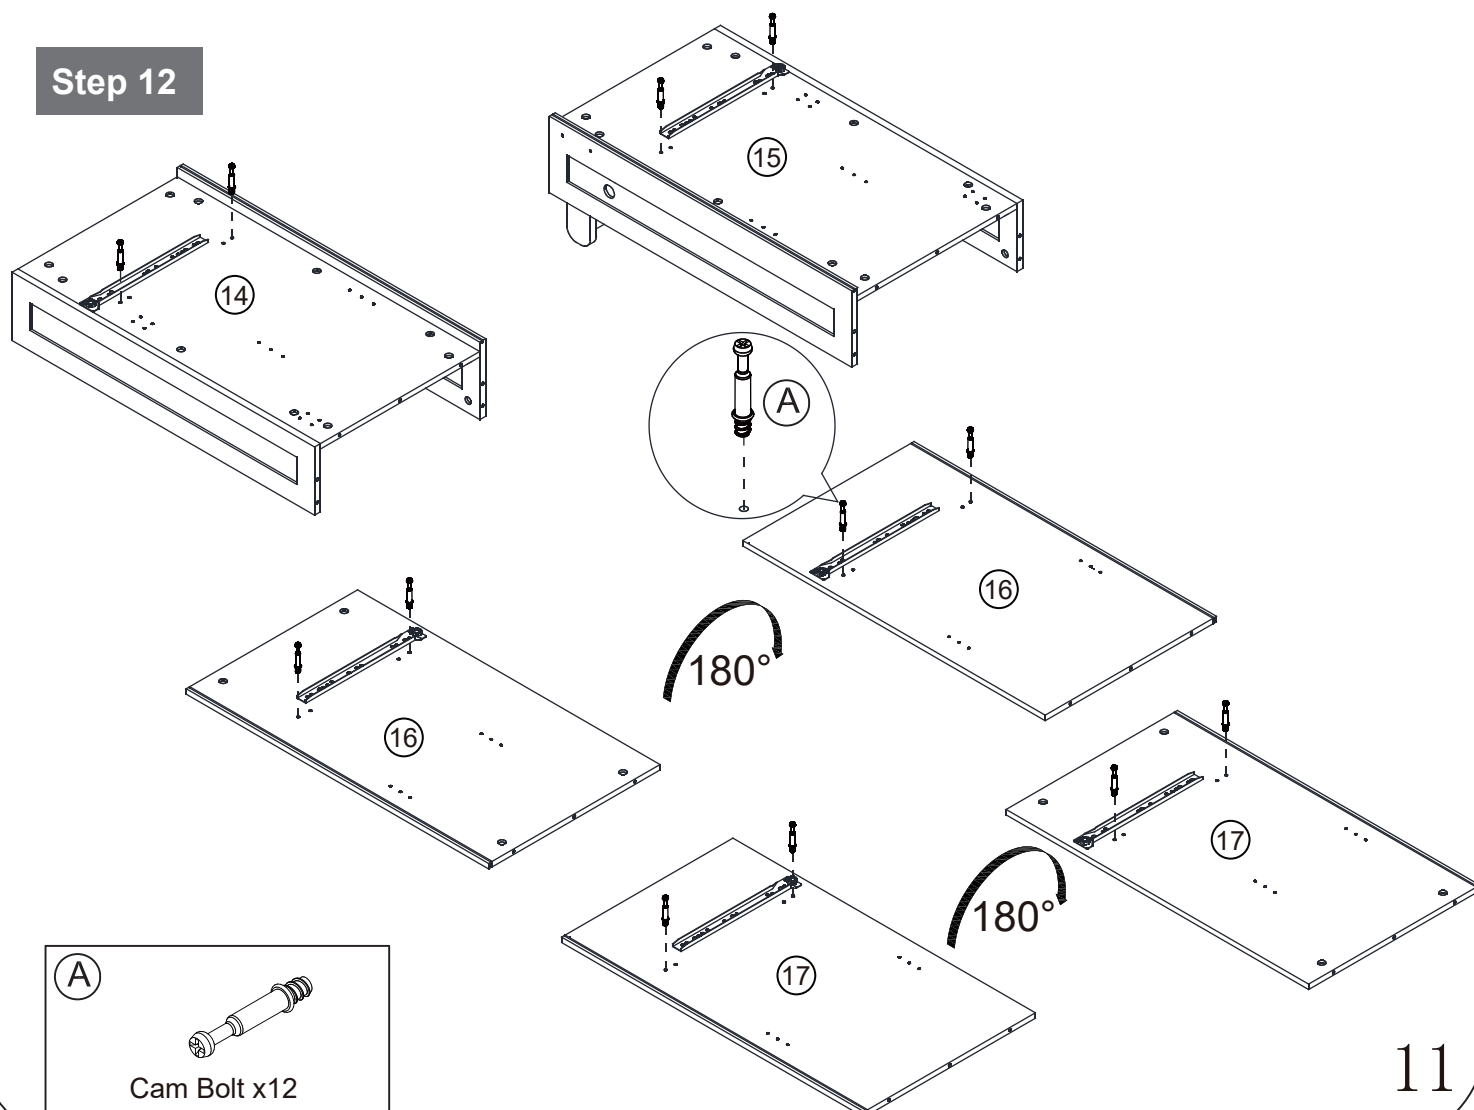


Assembly Instructions

 Step 13

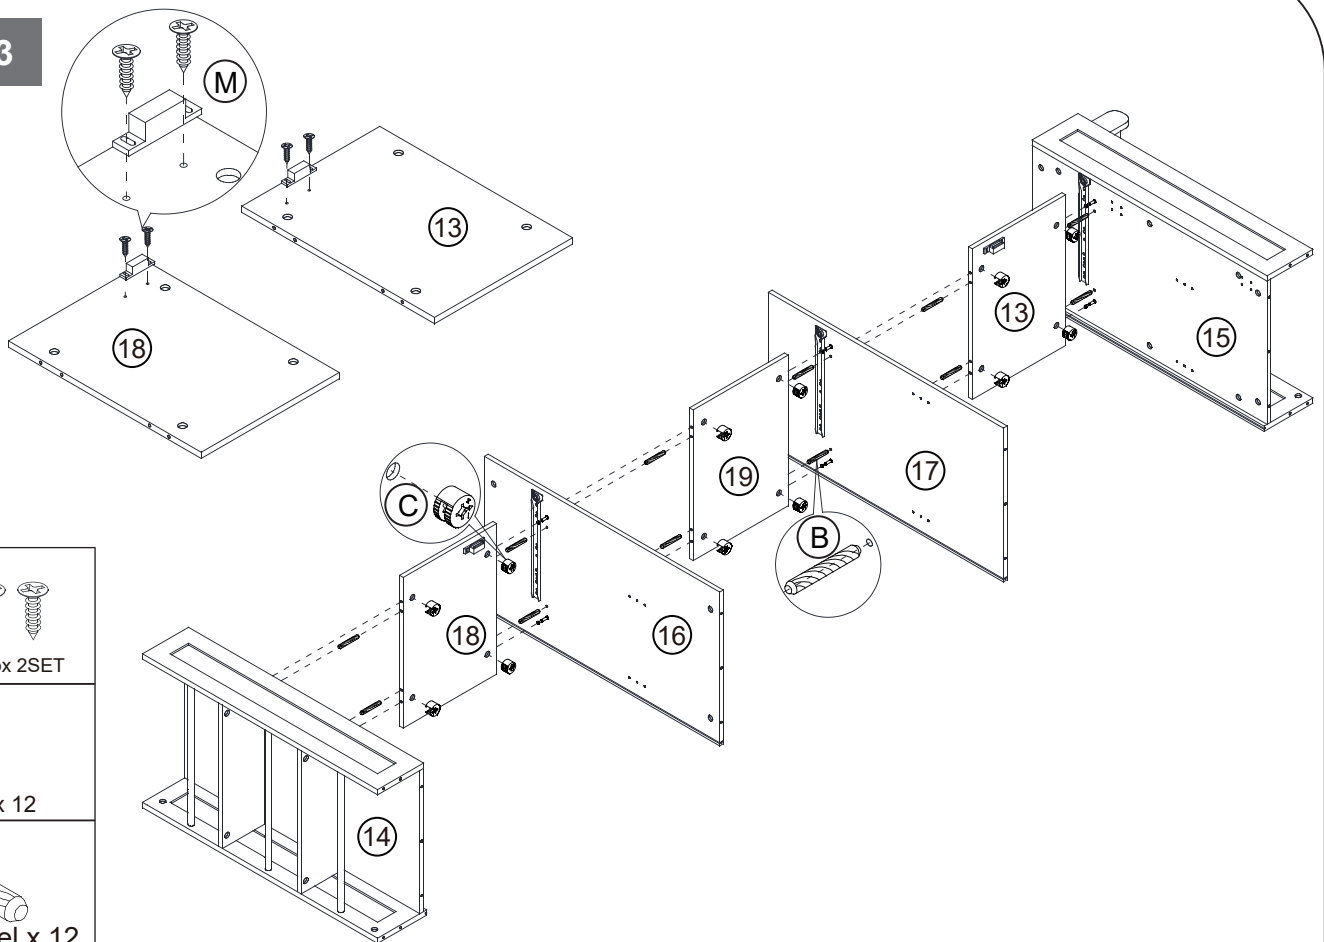


 Step 14

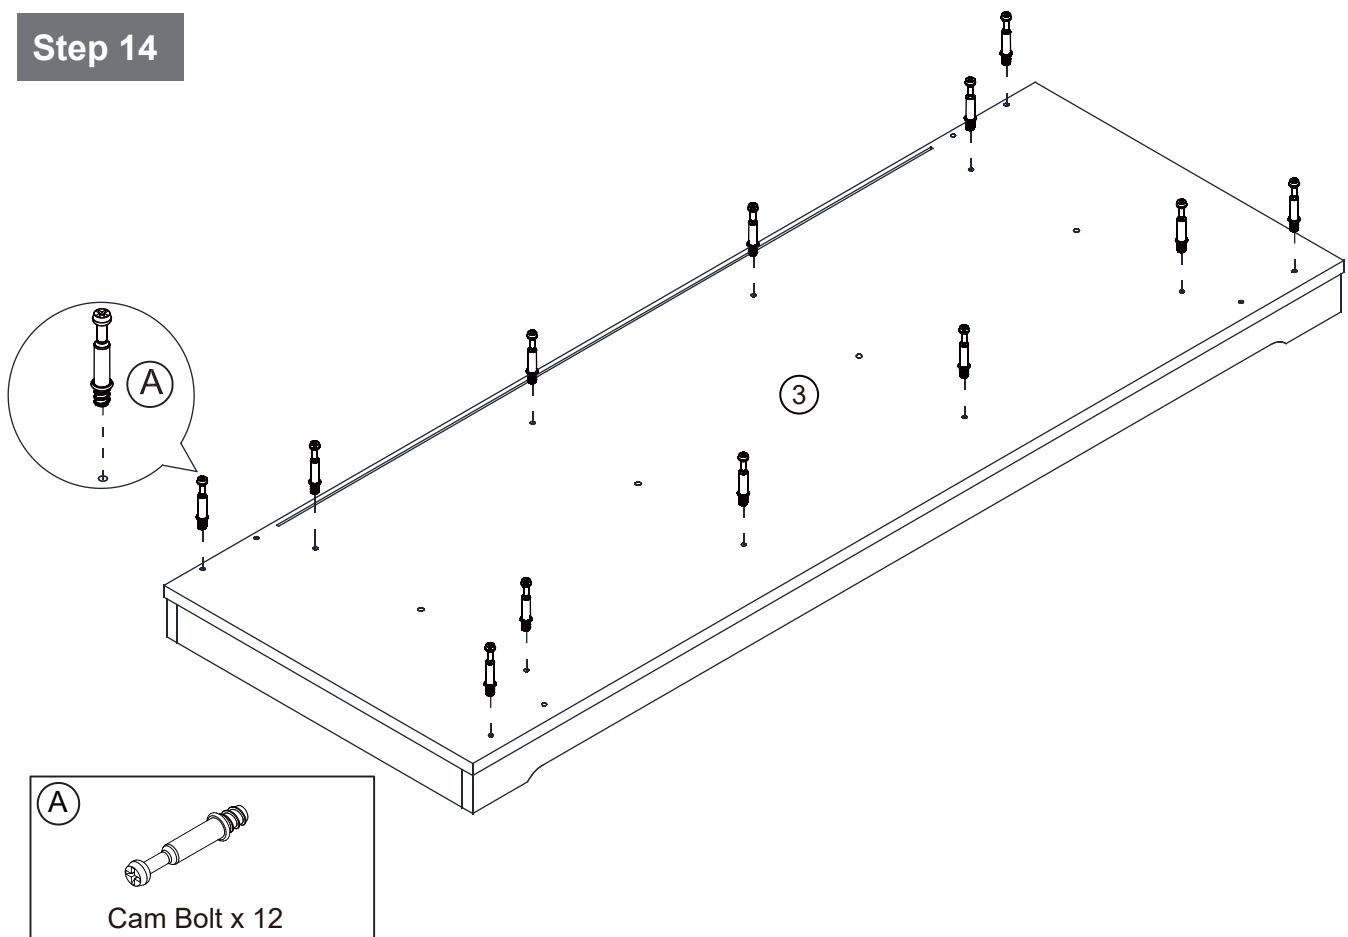

Assembly Instructions

 Step 15

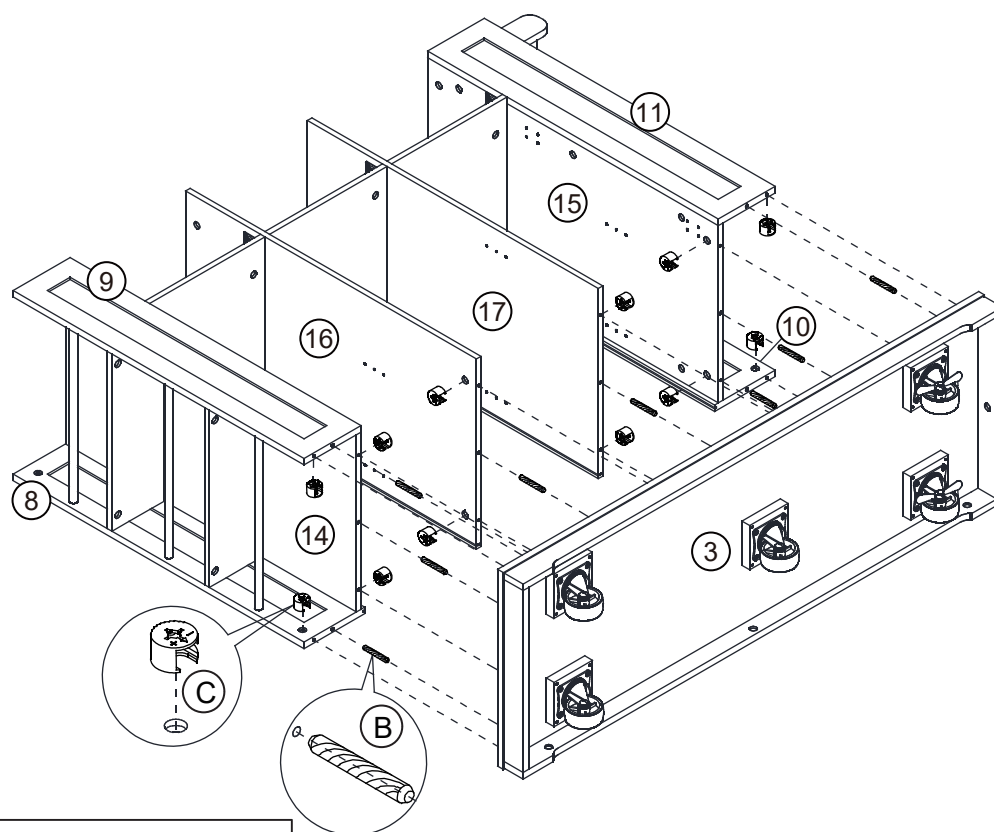

(B)



 
6*30mm Dowel x 8

(C)




Cam lock x 12

Step 16

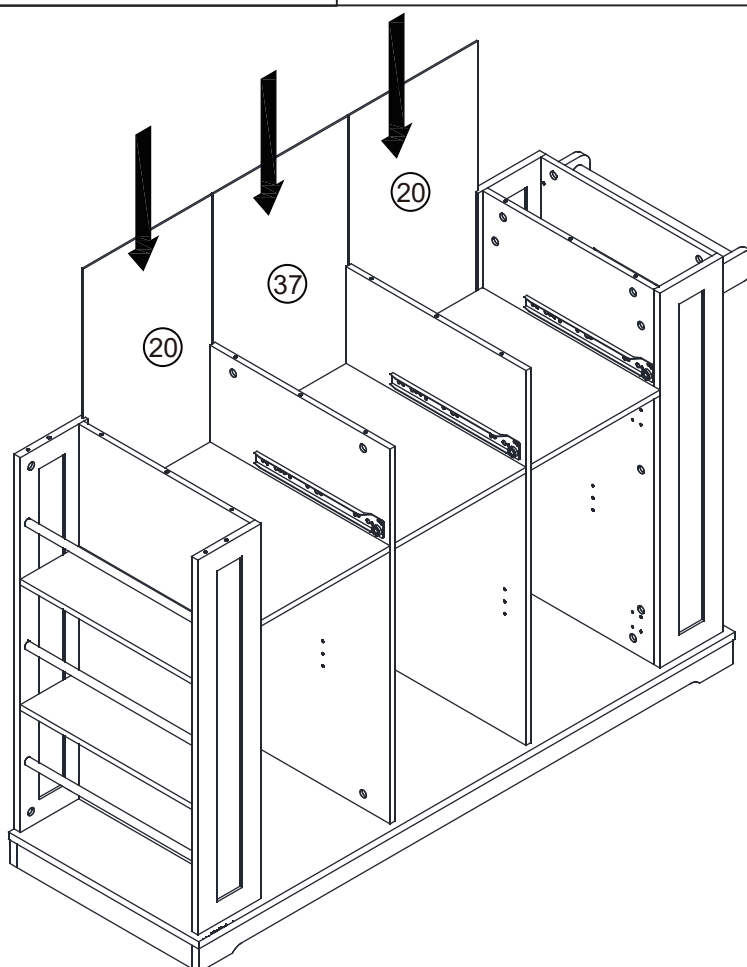


Assembly Instructions

 Step 17

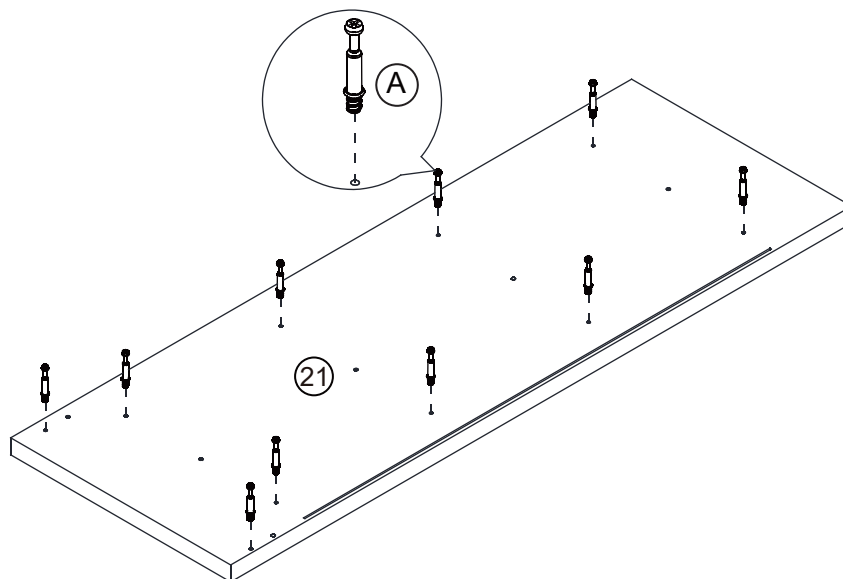


(A)

 

Cam Bolt x 10

 Step 18

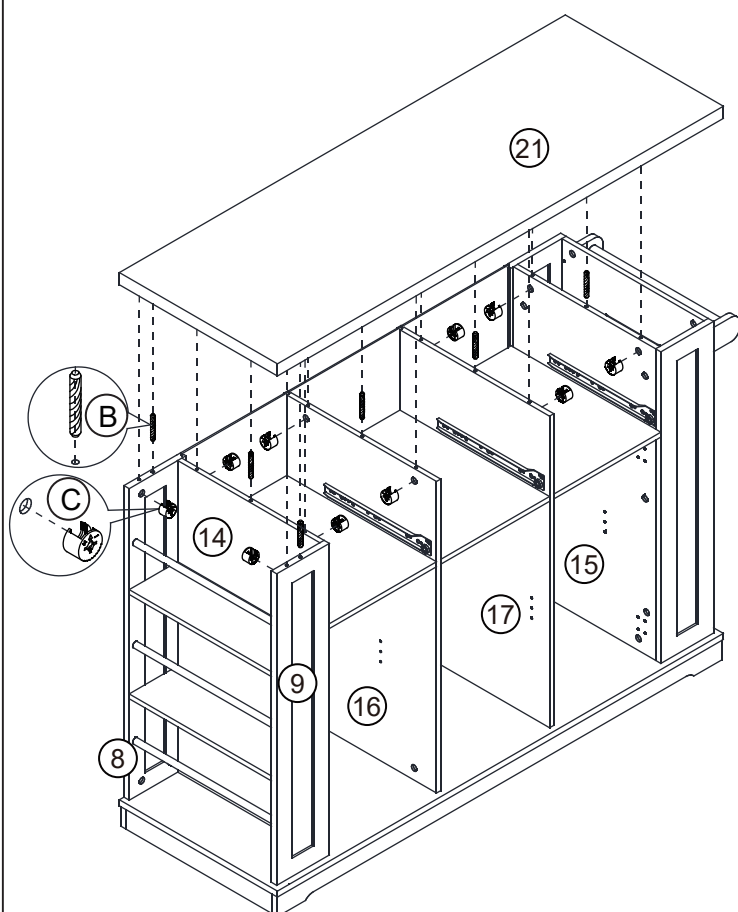

(T)

 


m6 nut x 4


(U)



6mm gasket x8

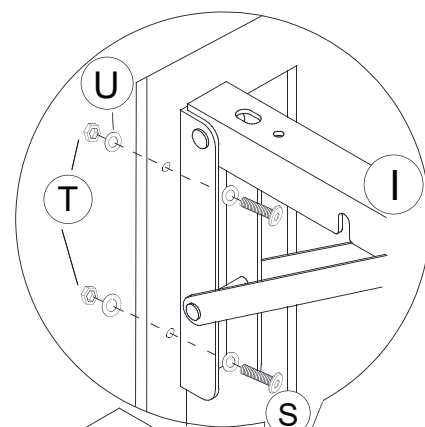

(B)

 


6*30mm Dowel x 6

(C)




Cam lock x 10

 (I)



Connecting rods x2

 
(S)



6*25mm Screw x4

Assembly Instructions

 Step 19

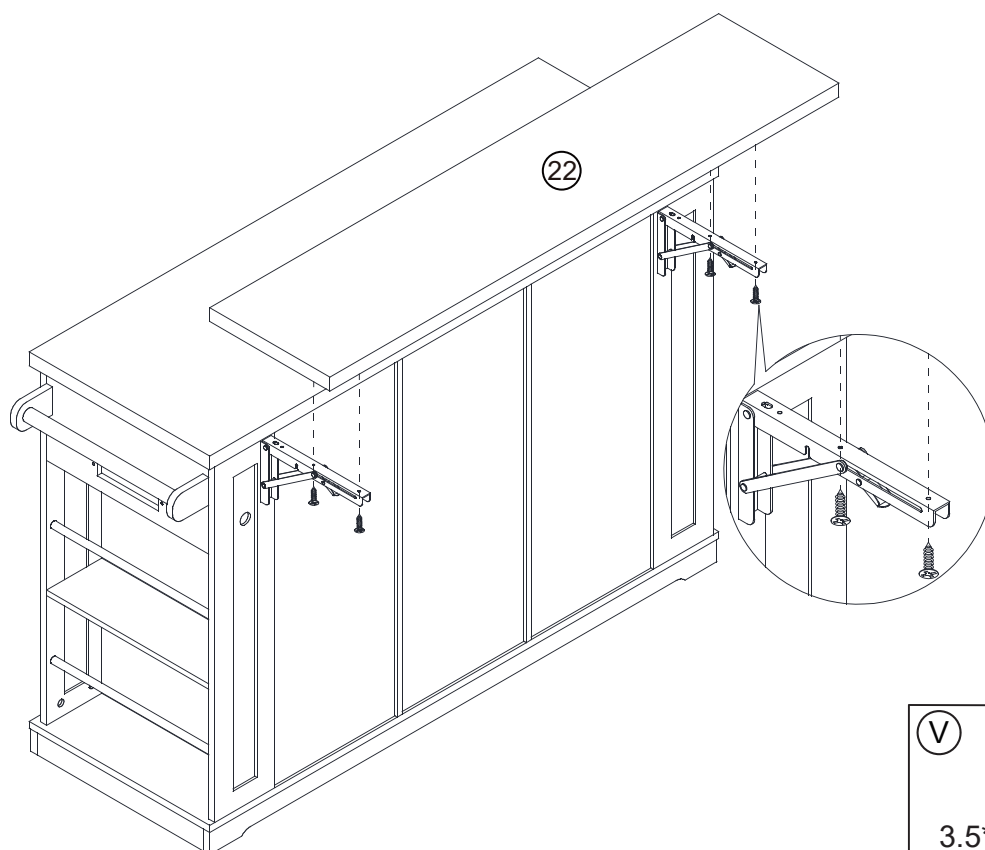


(V)




3.5*14mm Screw x4

 
Step 20

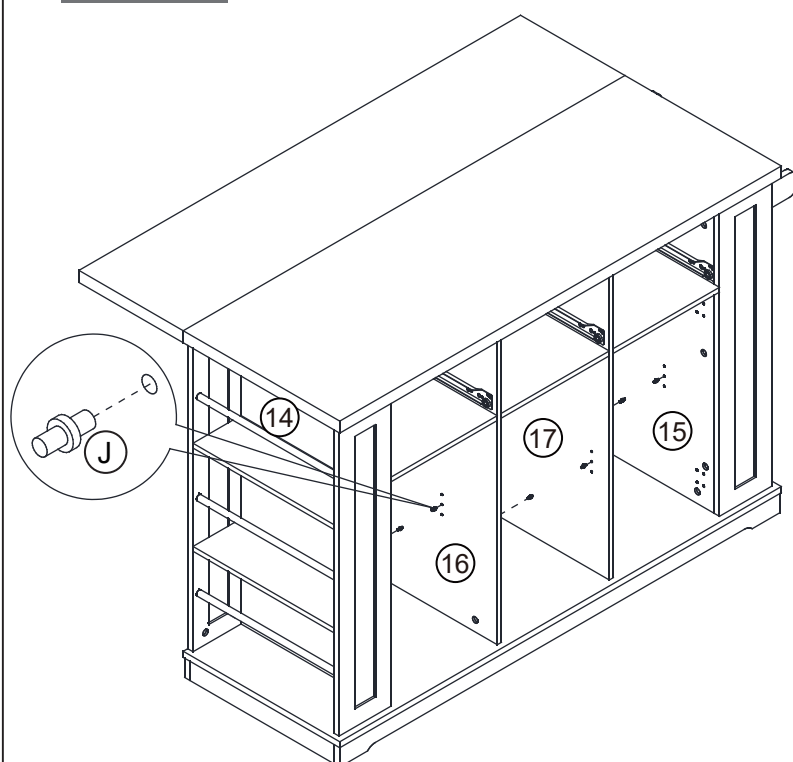

(J)


 


Shelf support pin x 12





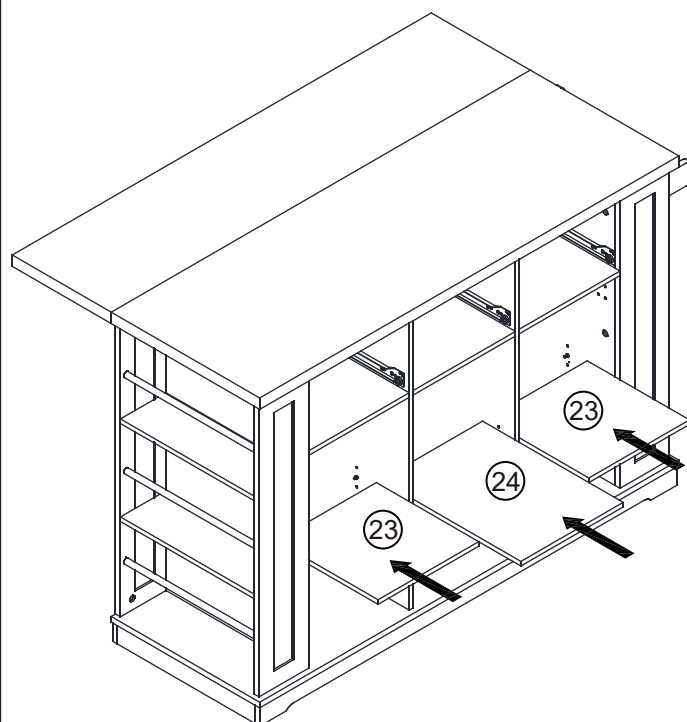 


Assembly Instructions

  Step 21

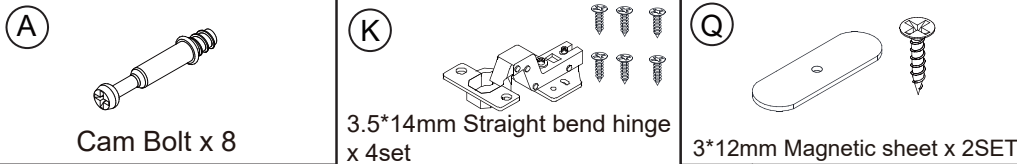
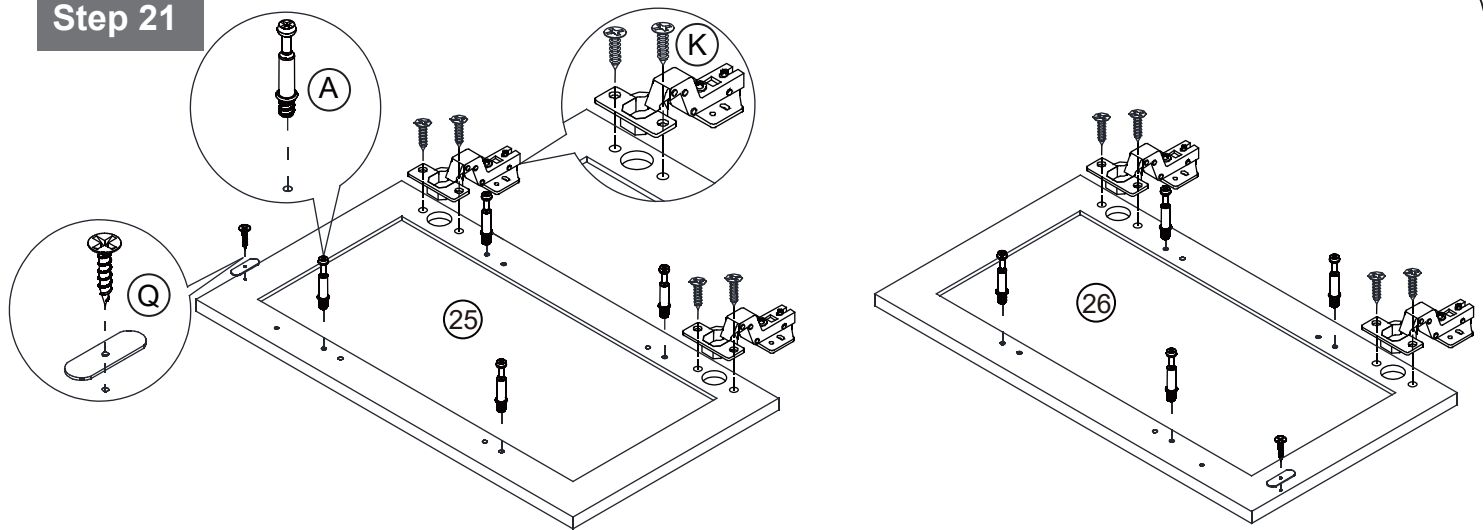


     Step 22

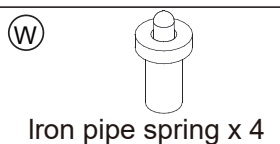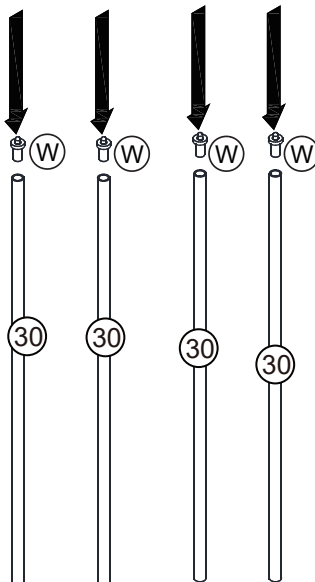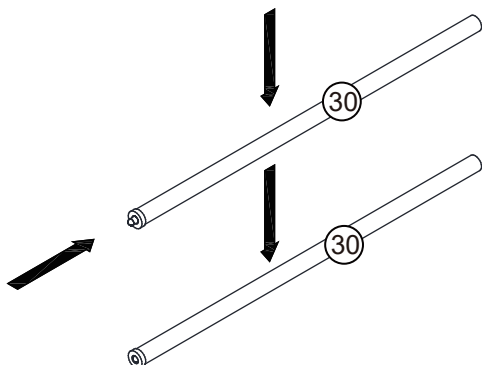
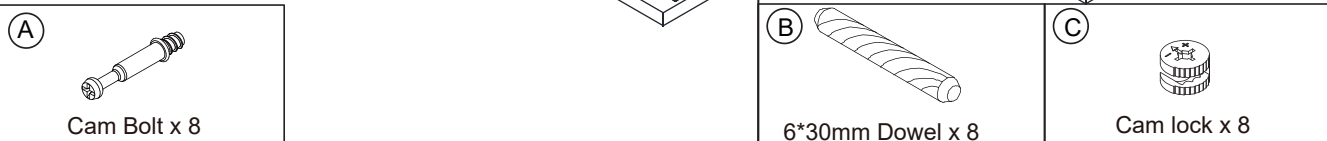
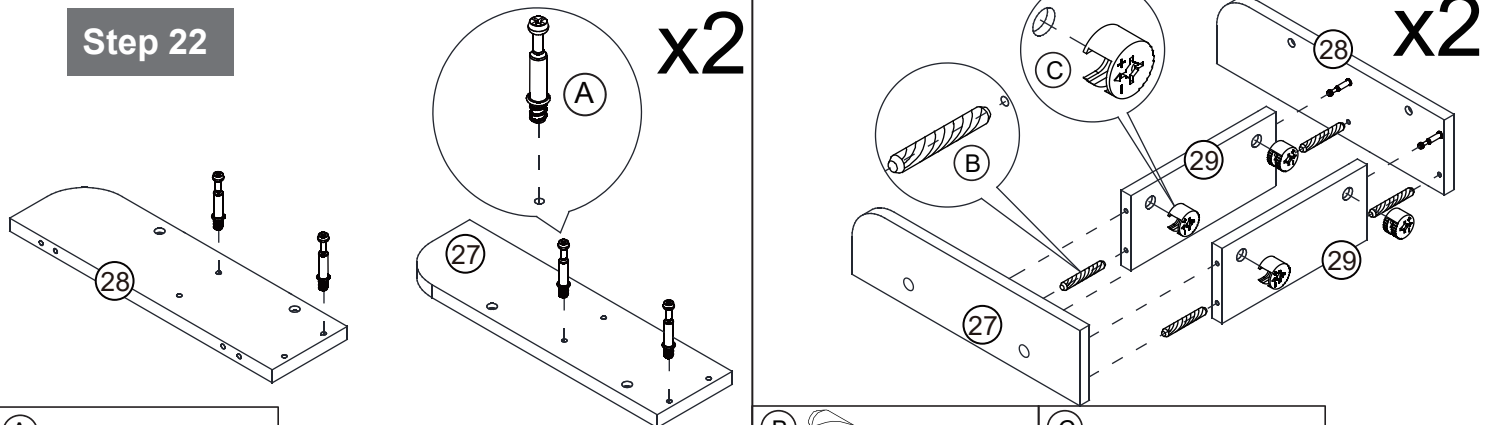


Assembly Instructions

  Step 23

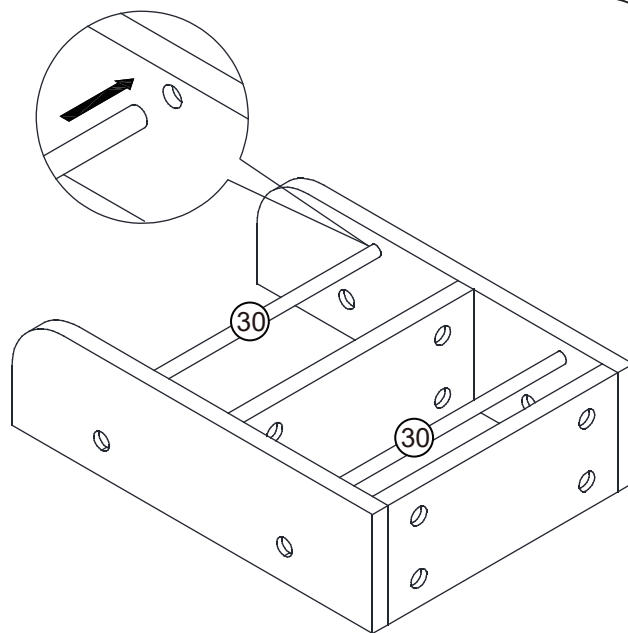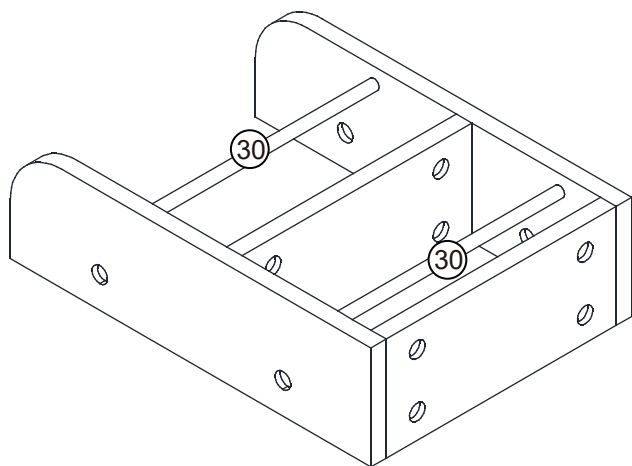


   Step 24

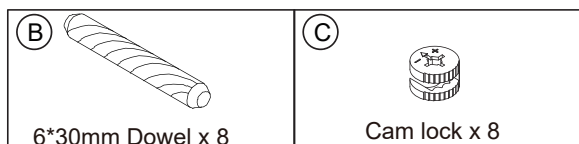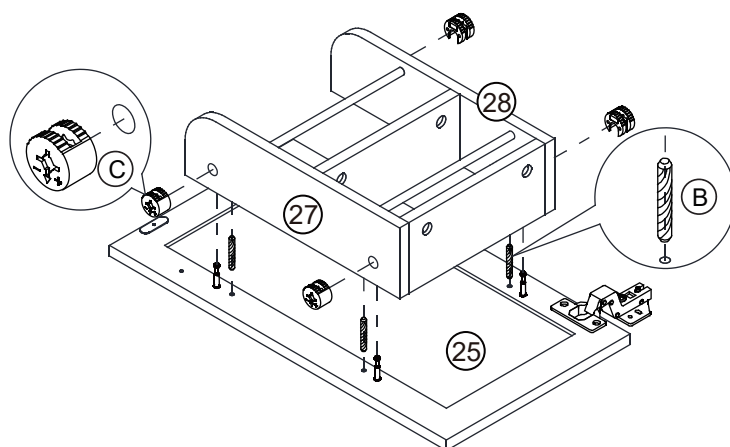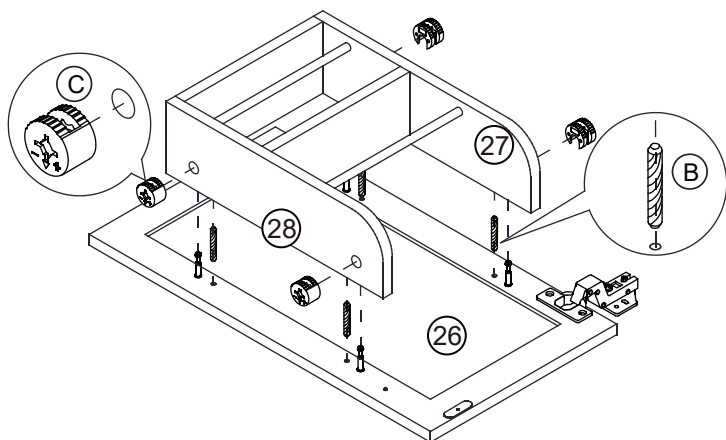


Assembly Instructions



 
Step 25

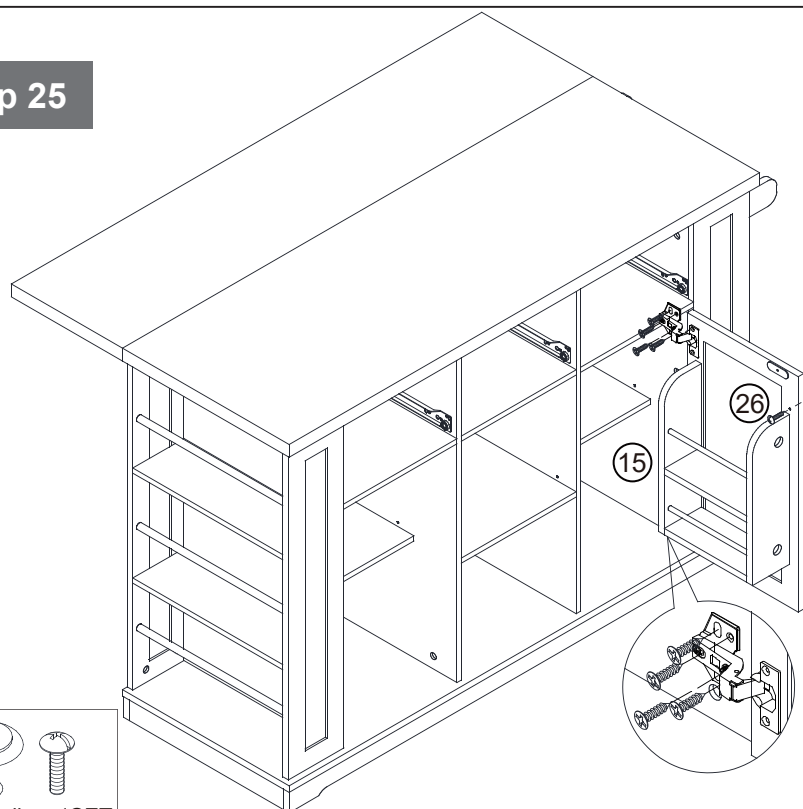


 
If the door can't close, please adjust the hinges.

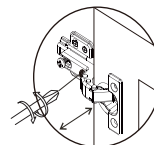

   This is used to adjust the door panel in the up and down direction.



  This is used to adjust the door panel in the front and back direction: Loosen the screw first, and then tighten screw after adjusting the door panel to the proper position.


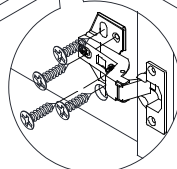
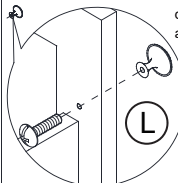


L



4*20mm Handle x 1SET

   Step 26

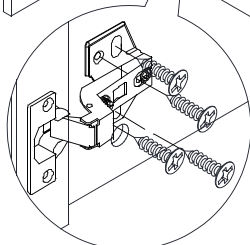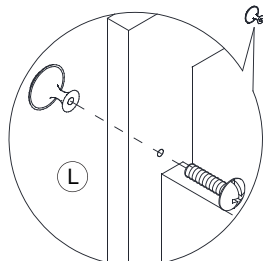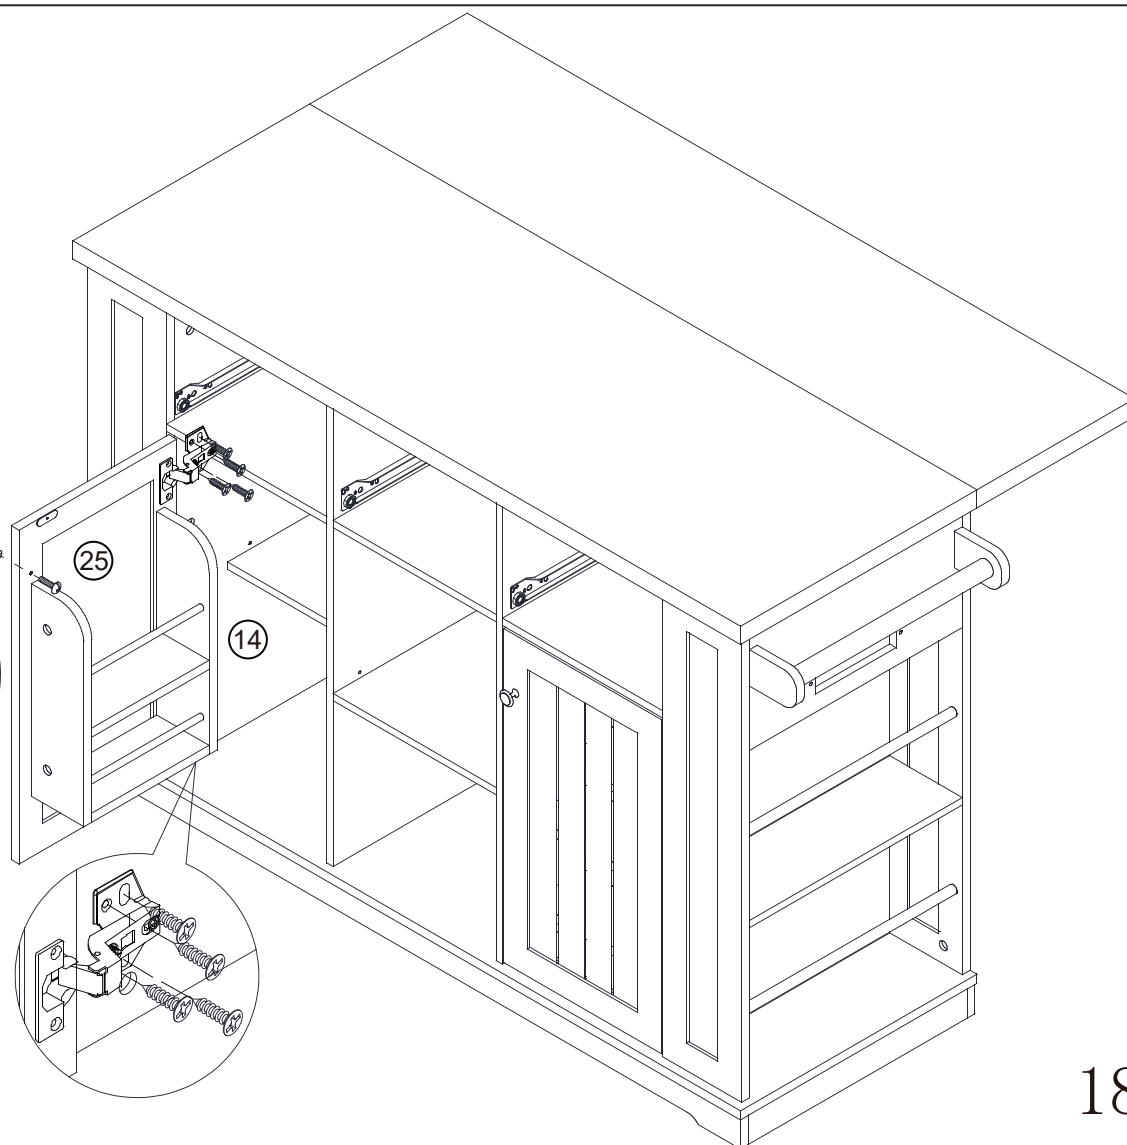


L




4*20mm Handle x 1SET

Assembly Instructions


 
Step 27

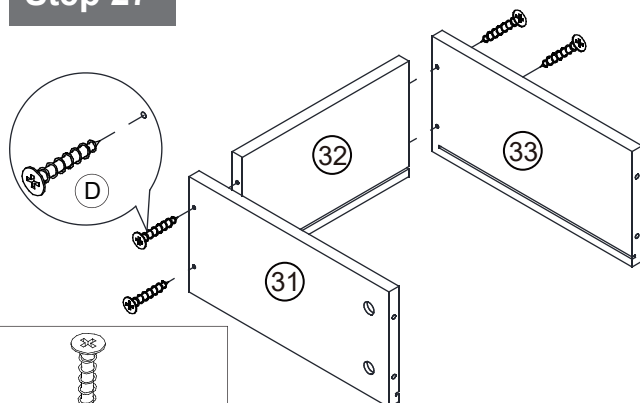

 (D)
4*25mm Screw x 12

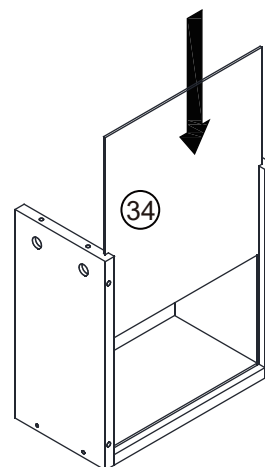

x3

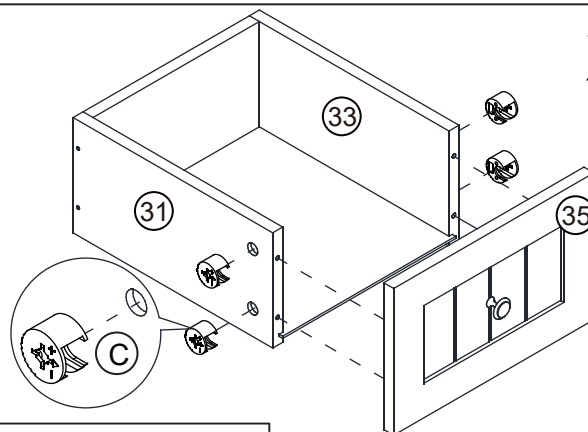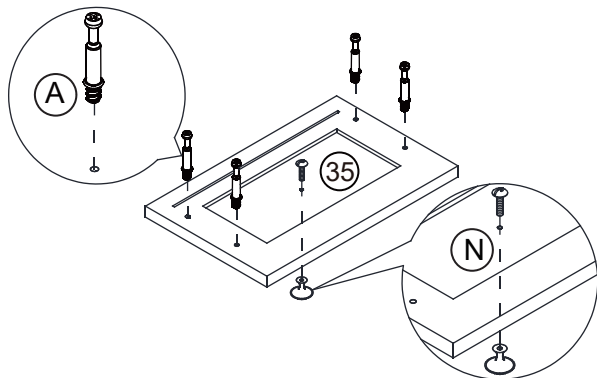  

x3

(A)
Cam Bolt x 12

(N)
4*12mm Handle x 3SET

 
(C)
Cam lock x 12

Step 28

(H)
3.5*12mm Screw x 12

(DL)
300mm runner x 3


(DR)
300mm runner x 3

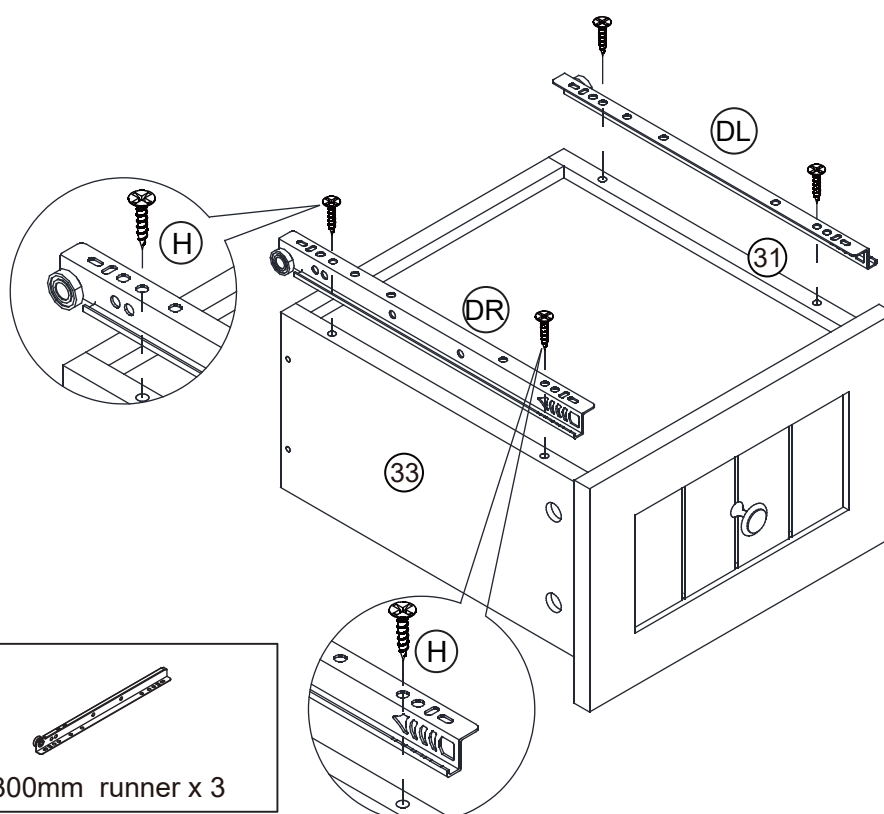


x3

Assembly Instructions

 Step 29

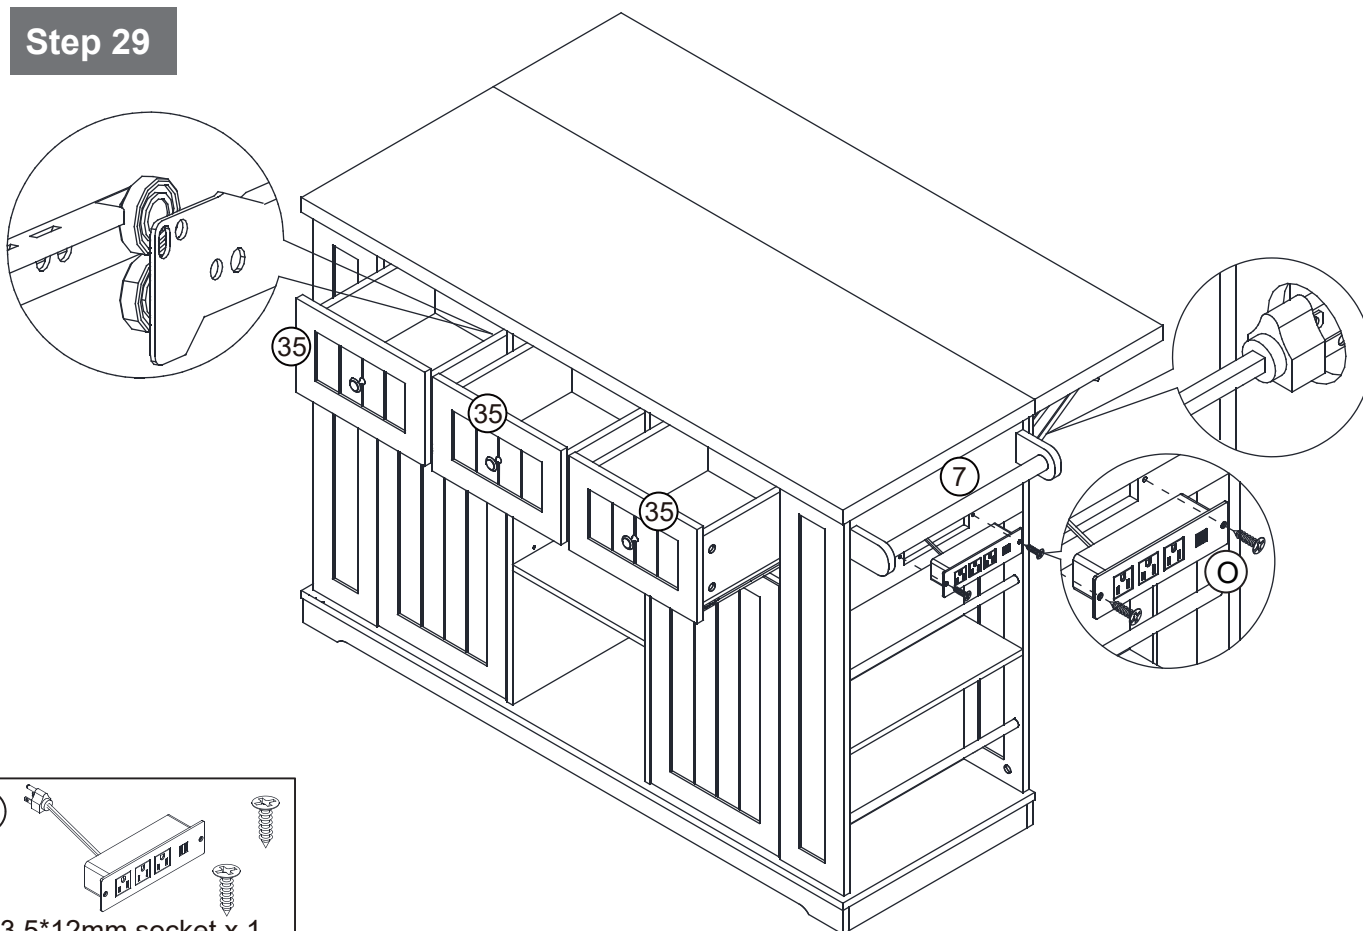


 Step 30

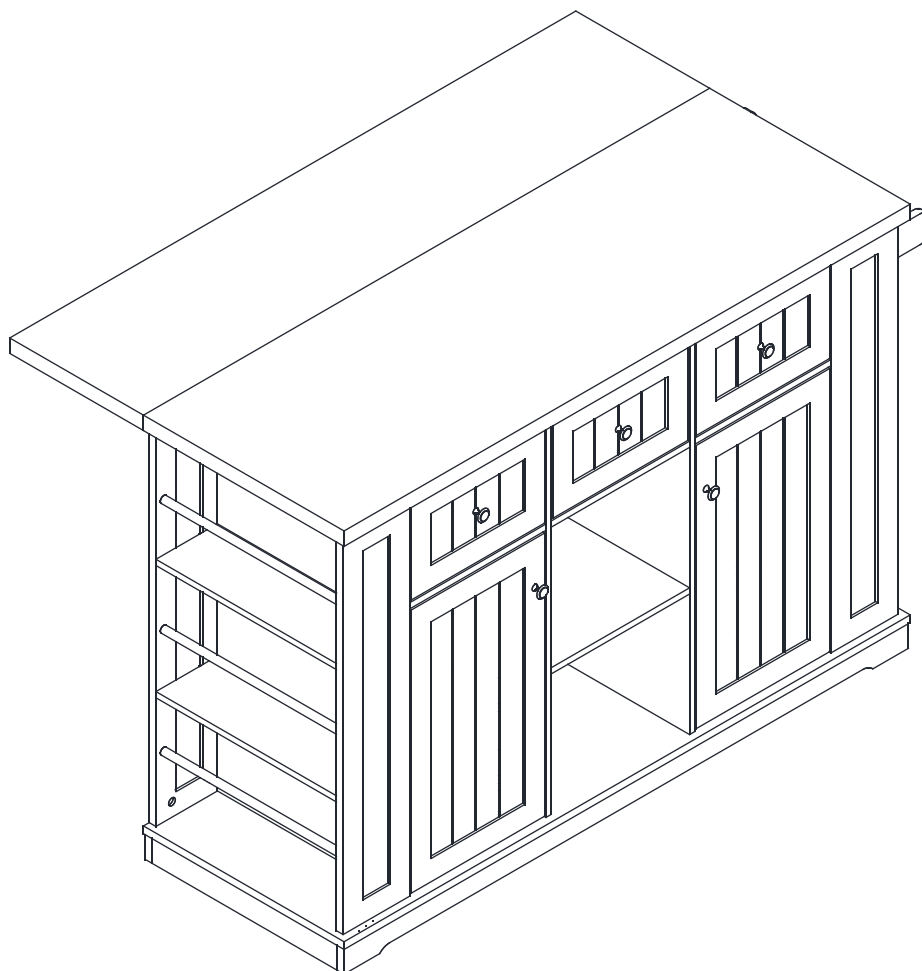

Assembly Instructions

 Step 31

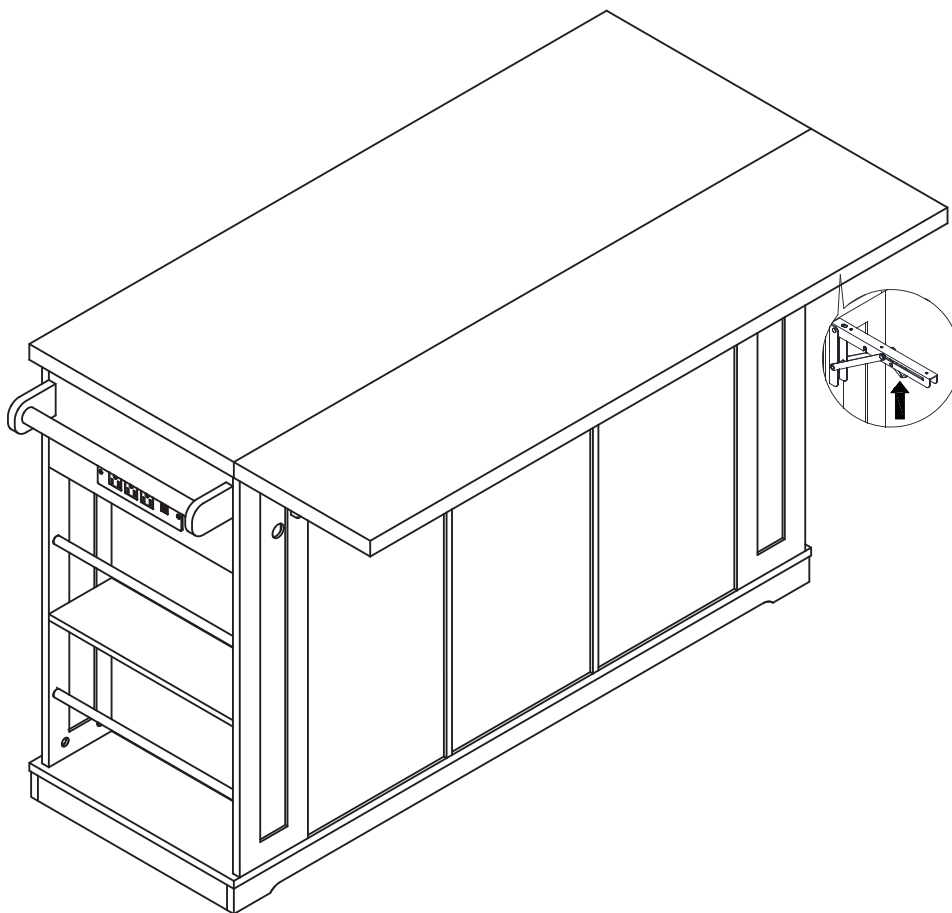

Step 32

