

Unpacking Steps

Prepare Tools & Space

Clear a spacious, flat area for unpacking.

Use scissors or a box cutter (avoid sharp tools that may scratch the product).

Remove Protective Materials

Take out foam pads, cardboard inserts, and plastic wraps layer by layer.

Keep packaging materials temporarily in case of returns.

For large items, lift the product with two people by holding the sturdy base (not fabric or decorative parts).

Important Safety & Maintenance Tips

Proper Usage

Sit gently to protect the internal structure.

Sit properly on the seat cushion. Avoid leaning heavily on armrests or backrest edges.

Avoid

Exposure to direct sunlight for prolonged periods.

Use in damp or humid environments to prevent mold.

Cleaning & Care


If the cover is removable, follow care label instructions for washing.

Do not bleach or tumble dry at high temperatures.

Use a vacuum cleaner for regular dust removal.

USER MANUAL


Swivel Accent Chair

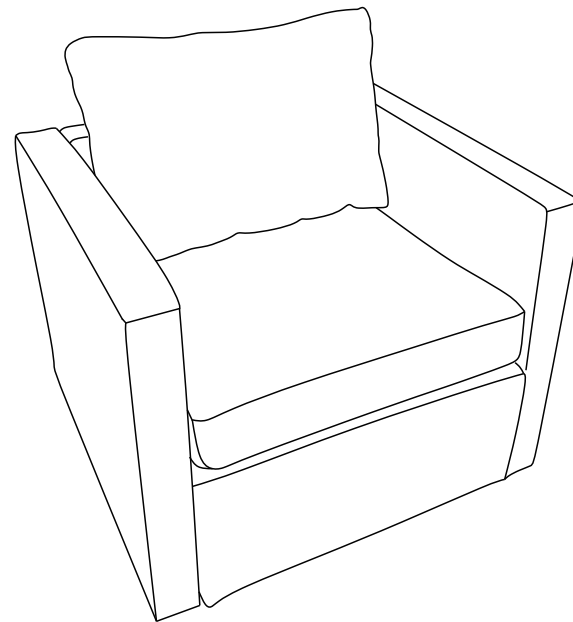


Please check the following accessories after unpacking. If any item is missing, contact customer service.

The following items are included as standard accessories with this product.

 
List of accessories



A x1

 


B x2

 


C x1



 
D x1



E x1

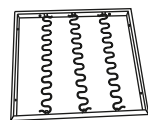

F x1

 

G x1



H x16




I x16




J x1

1

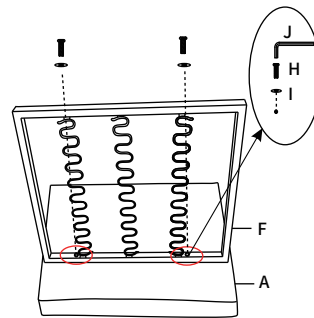


Note: Installation with spring side down and non-woven fabric facing up.


2

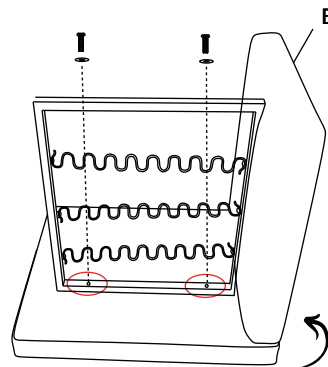


3

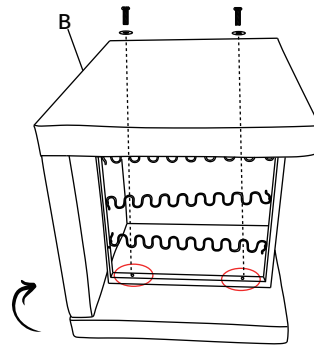

4

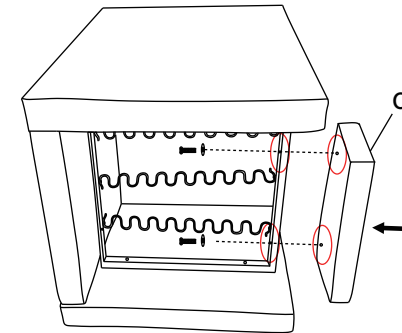

5

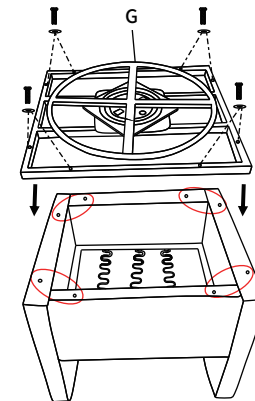

6

