 



Instructions for use

Remarks: ① Before using this product for frying, brush a little oil in the pan to prevent the bottom from sticking. ② Remove the lid when water comes to a boil or when cooking hot pot.

1. Open the lid and add an appropriate amount of water to the electric pot (as shown in the figure; the amount of water cannot exceed the maximum water level line. After the lid is closed, insert the power cord tail connector into the three-pin earless socket of the pot body handle and securely insert it to the end to avoid poor contact (Picture 2)

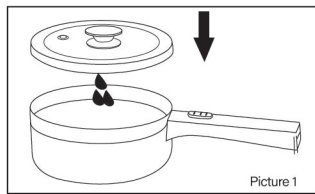


 Picture 1

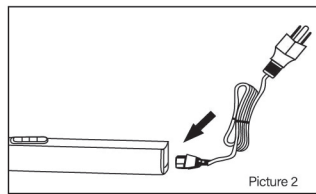


Picture 2

 3. Turn on the power: Push the switch button to the second position, the indicator light will turn on, and the pot will start to heat up. Cook on low (I) or High (II) heat position. (Figure 3) If you need to stop cooking, turn the switch button to "OFF" and unplug when not in use. (as shown in Figure 4)

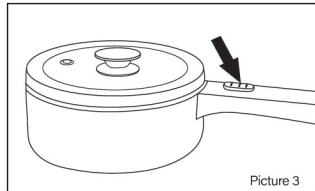

Picture 3

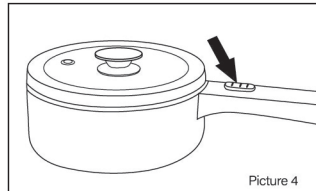 


Picture 4

5. When using a steamer to steam eggs, add an appropriate amount of water to the pot; the amount of water added should not exceed the maximum water level.


6. Put the eggs into the groove of the steamer and cover the pot (as shown in Picture 5).

7. Turn on the power by adjusting the switch button on the second position. The indicator light will turn on and the product will start to heat up (as shown in Picture 6);

 8. After the cooking is finished, set the switch button to the "OFF" position to stop heating.

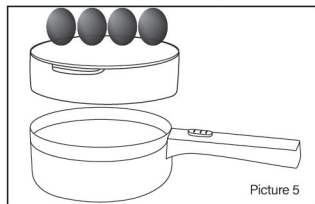


Picture 5

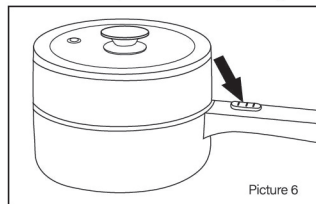 

Picture 6

 TAYAMA®

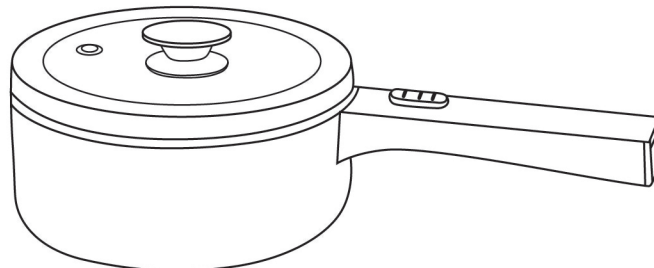

User Manual

Multi-Function Electric Cooking Pot

Model: THP-150

Please read all instructions carefully before operating the appliance and keep for future reference.

Before First Use

Before using the Electric Cooking Pot for the first time, wash the components and accessories except the Main Unit and power cord using a dish cloth or nonabrasive sponge with warm, soapy water. Rinse the components with clean water and dry thoroughly. Avoid getting water on the control settings or electrical outlets, and never immerse the pot in water.

Product model	Rated voltage	Rated frequency	Rated capacity	Rated power
THP-150	120V	60Hz	1.5L	700W

Important Safeguards

When using electrical appliances, basic safety precautions should always be followed, including:

1. This appliance has been designed for use with a 120V electrical outlet only. DO NOT USE any other electrical outlet.
2. UNPLUG FROM OUTLET when not in use and before cleaning. ALLOW TO COOL before handling components.
3. The water level cannot exceed the maximum water level or be lower than the minimum water level, improper usage MAY RESULT IN scalding injury and damage to property.
4. DO NOT MOVE the product while it is in operation to prevent personal injury, fire, or electric shock.
5. DO NOT PLACE on or near hot surfaces, such as a hot gas or electric burner or in a heated oven.
6. DO NOT LET Power Cord hang over edge of table or touch hot surfaces.
7. ALWAYS USE the appliance on a flat, level heat-resistant table top or counter top to avoid damaging the surface of a table, add a protective silicon mat or pot holder if needed.
8. TO PREVENT scratching the coating of the inner pot, please only use wooden or plastic cooking utensils
9. DO NOT OPERATE any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. If damage occurs, contact customer service.
10. To protect the coating of the inner pot, always add water (liquid ingredients) or oil before cooking.
11. NEVER USE harsh and abrasive chemicals or hard brushes and stainless steel wire ball to clean the appliance.

12. DO NOT INSERT any metal objects into any gaps or openings in the inner pot or base to prevent the risk of electric shock, personal injury, fire, and damage to property.

13. The plug must be completely inserted into the socket to prevent poor contact from overheating and burning the components, causing short-circuit or fire hazards.

14. NEVER OPERATE the unit near any flammable materials, such as dish towels, paper towels, curtains, plastic or paper plates to prevent fire.

15. The unit generates high heat and steam during operation. All necessary precautions MUST BE TAKEN TO AVOID fire, burns, and other personal injury during operation.

16. Always plug the Power Cord directly into the wall outlet. NEVER USE this Unit with an extension cord of any kind. A short power-supply cord (or detachable power-supply cord) is provided to reduce the risk of becoming entangled in or tripping over a longer cord.

17. This appliance IS NOT INTENDED for use by persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge unless they are under the supervision of a responsible person or have been given proper instruction in using the appliance. This appliance is not intended for use by children.



Caution

Hot surfaces: This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of personal injury, fires, and damage to property.

Electric Power

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a dedicated electrical circuit.

SAVE THESE INSTRUCTIONS - FOR HOUSEHOLD USE ONLY

Cleaning and Maintenance

1. Before cleaning, the power cord must be unplugged.
2. The outside of the product must be wiped clean with a damp cloth.
3. The appliance must not be immersed in water.
4. The connector must be removed before the appliance is cleaned; the appliance socket must be wiped dry before the appliance is used again.
5. After using for a period of time, there will be scale in the inner tank. Pour white vinegar and water into the inner tank in a ratio of 1:2 and boil, rinse and repeat as needed then wipe with a sponge or wash cloth.
6. Do not scrub the inner tank with a metal brush or other rough washing utensils, so as not to damage the inner tank.
7. Handle with care during use to avoid collision and damage to the product.
8. If not used for a long time, it should be cleaned and stored in a ventilated and dry environment.